 
 
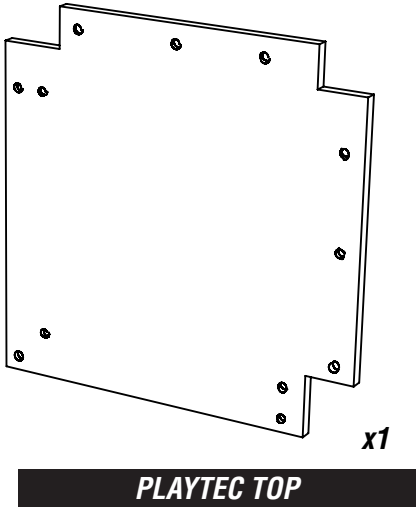 


NUR162 - MESSY PLAY CORNER TABLE

 
Installation Instructions

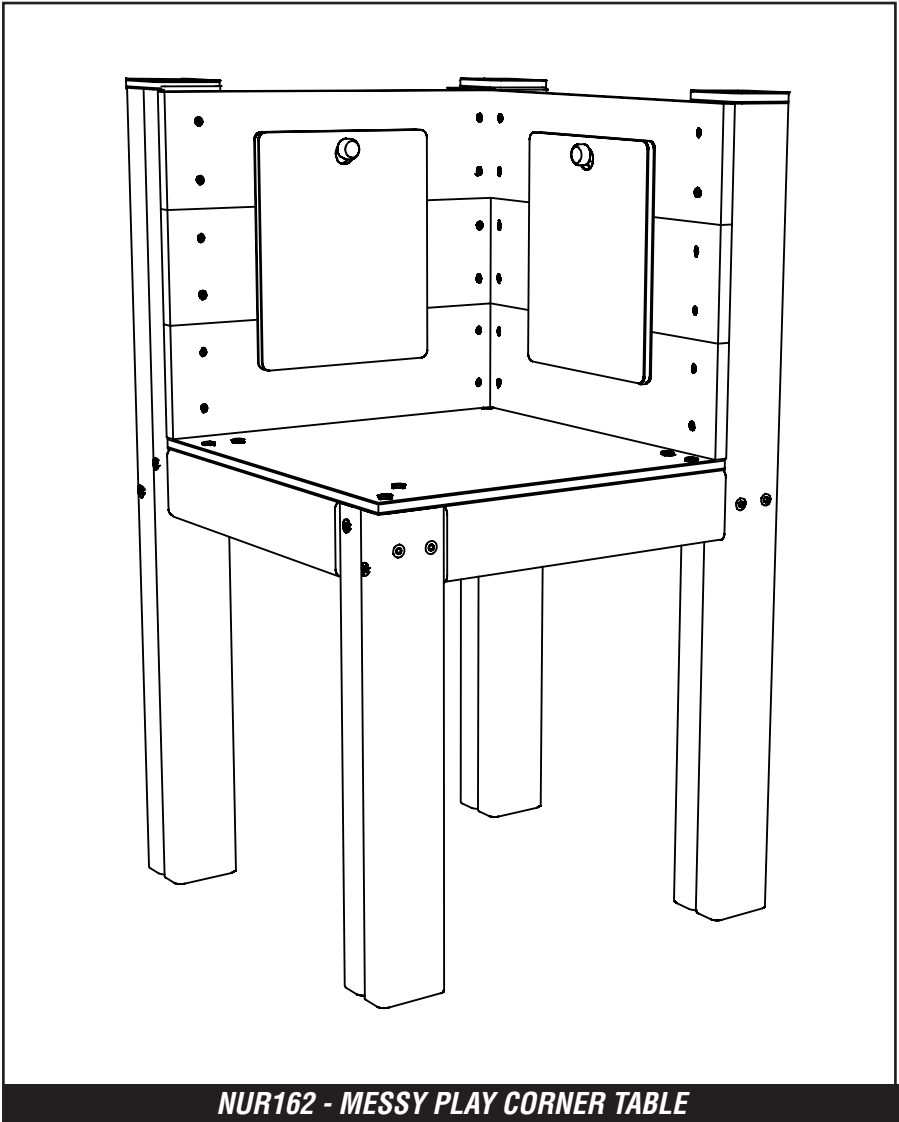


PLAYTEC TOP

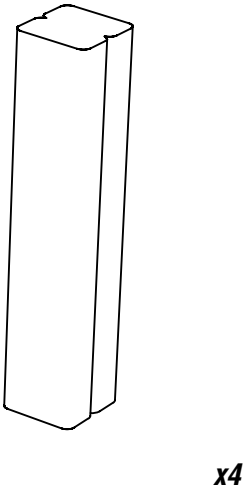


161-F

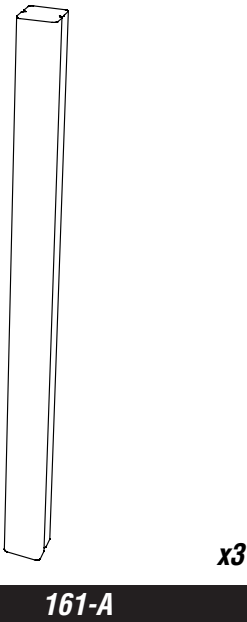

161-A

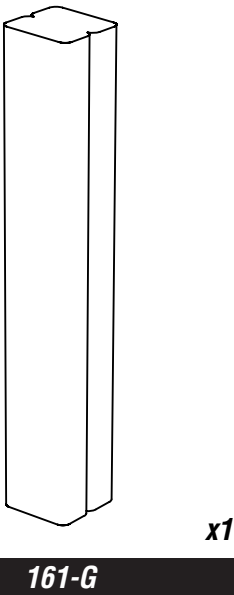 

161-G

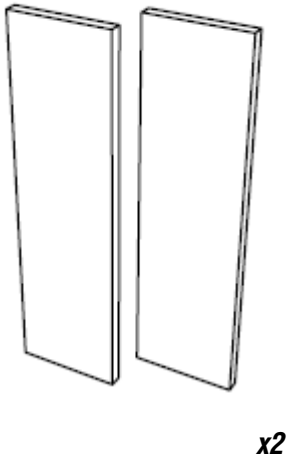 

NUR162 - C

PARTS REQUIRED




x1

NUR162 - B




x1

 NUR162 - D

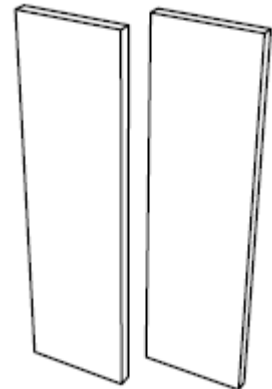


x2

 NUR162 - E

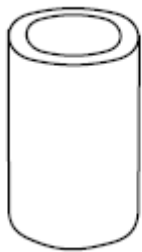

x2

 25MM PLASTIC WASHER

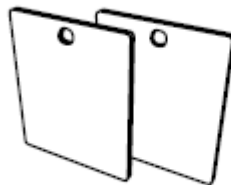

x2

CHALK BOARDS



 
x16

M8X180 SCREWS




x12

M8XM80 SCREWS




x2

 M8X60 BOLT




x40

 M6X60 SCREW

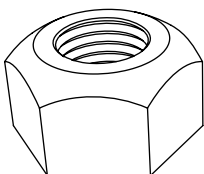

x2


 
NYLOC

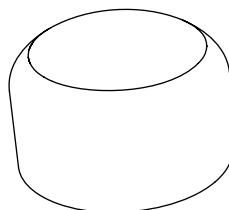

x4

END CAP

  
FOUNDATION DETAILS

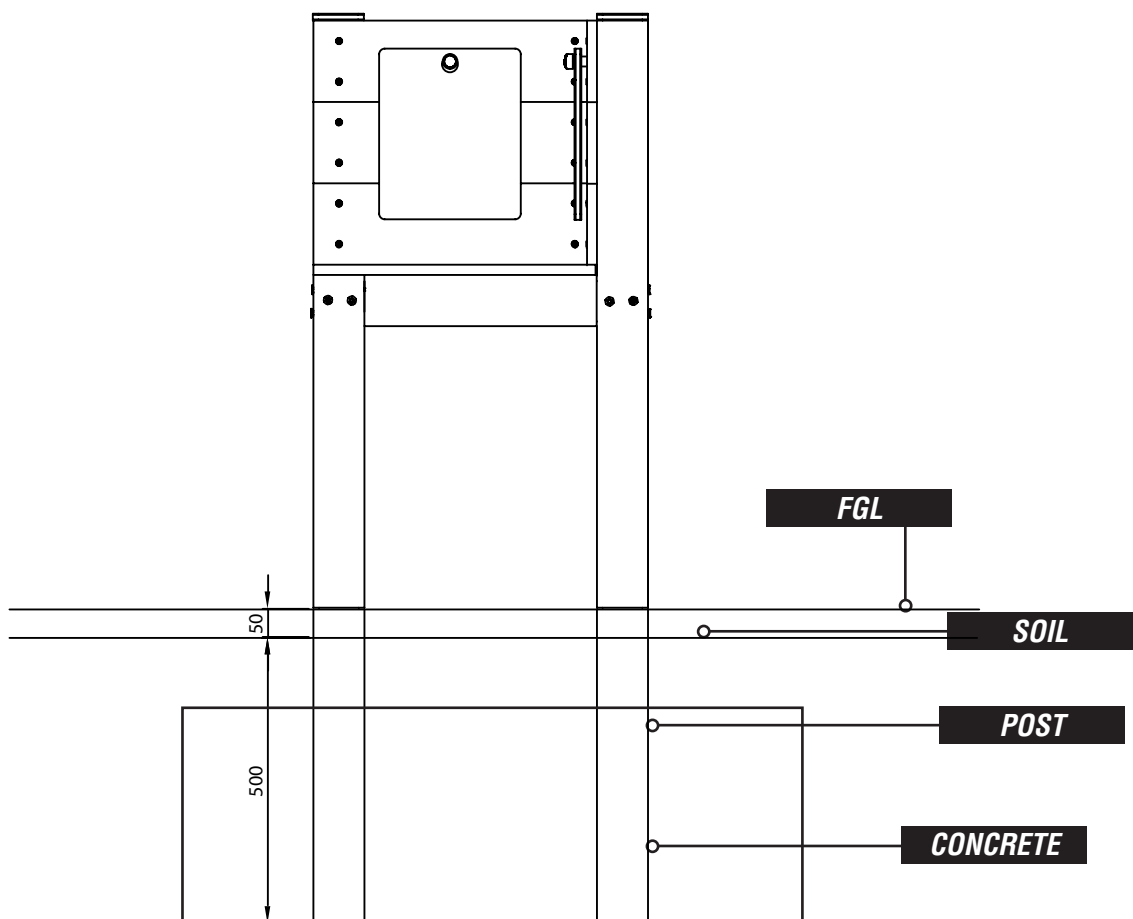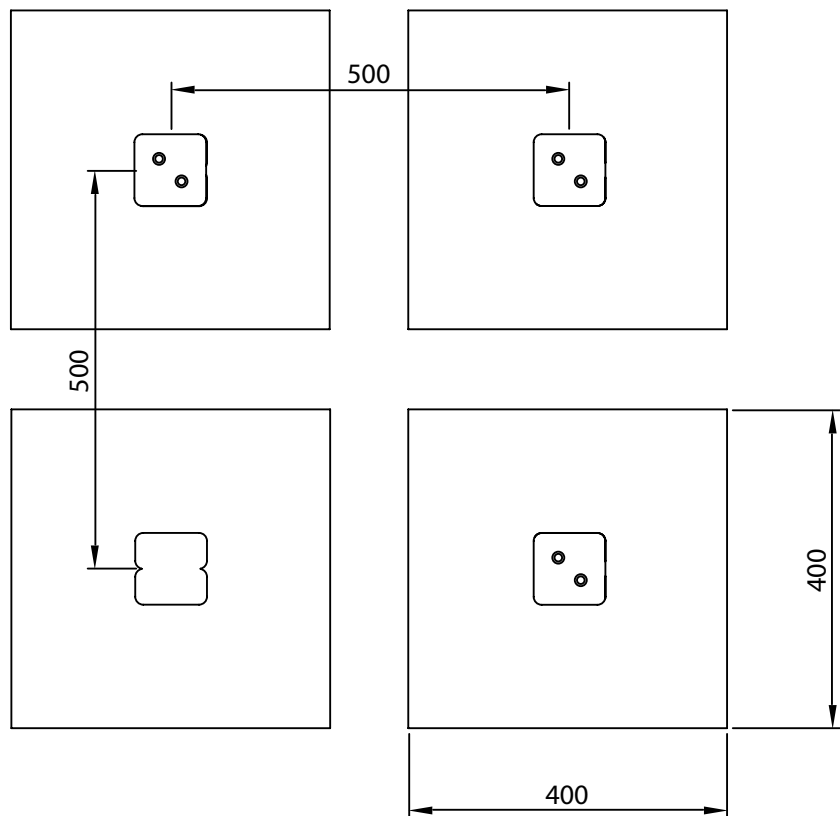

INSTALLATION INSTRUCTIONS


1 INSTALL UPRIGHTS INTO THE GROUND

 USING - NUR162 -A X3 / NUR161- G X1 / M8X150 SCREWS X 16

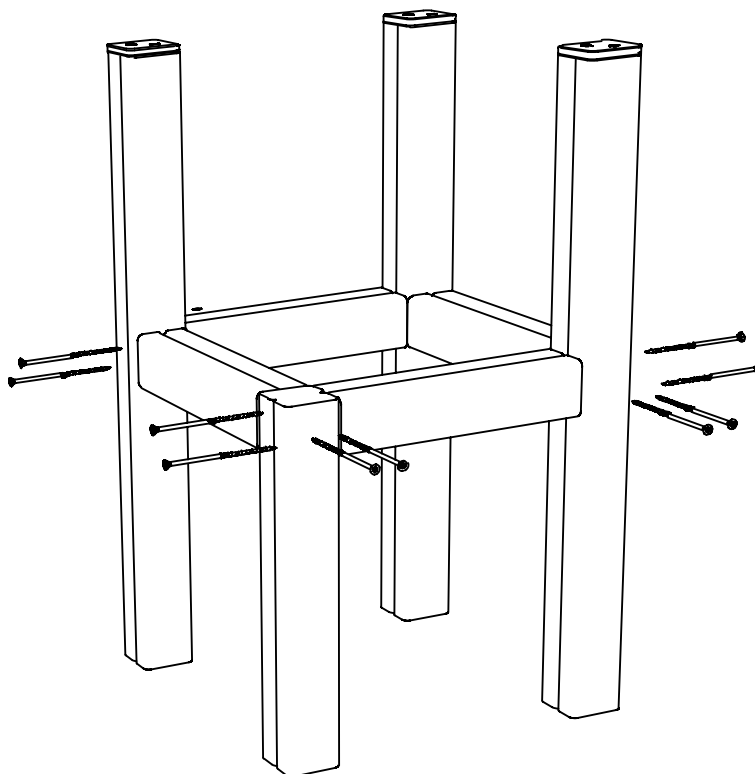

2 ATTACH PLAYTEC TOP PLATE TO FRAME

 USING - M8X80 SCREWS X12

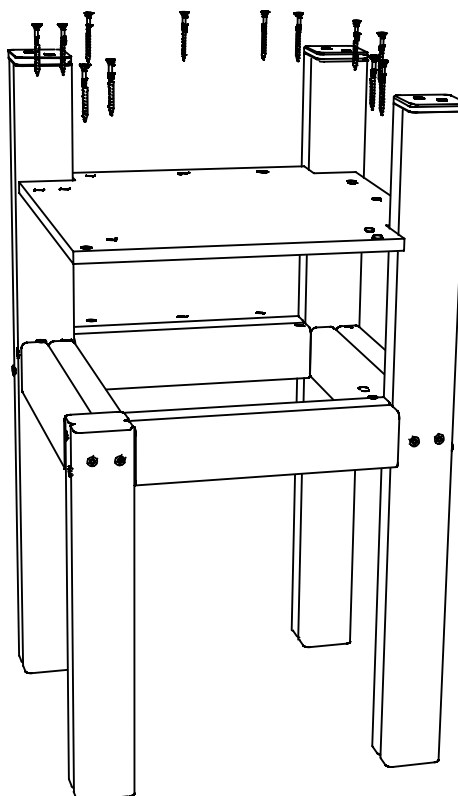


274.M12X230 X4

INSTALLATION INSTRUCTIONS

3

FIX WOOD PANNELS TO FRAME

 
USING - M8X60 SCREWS X18

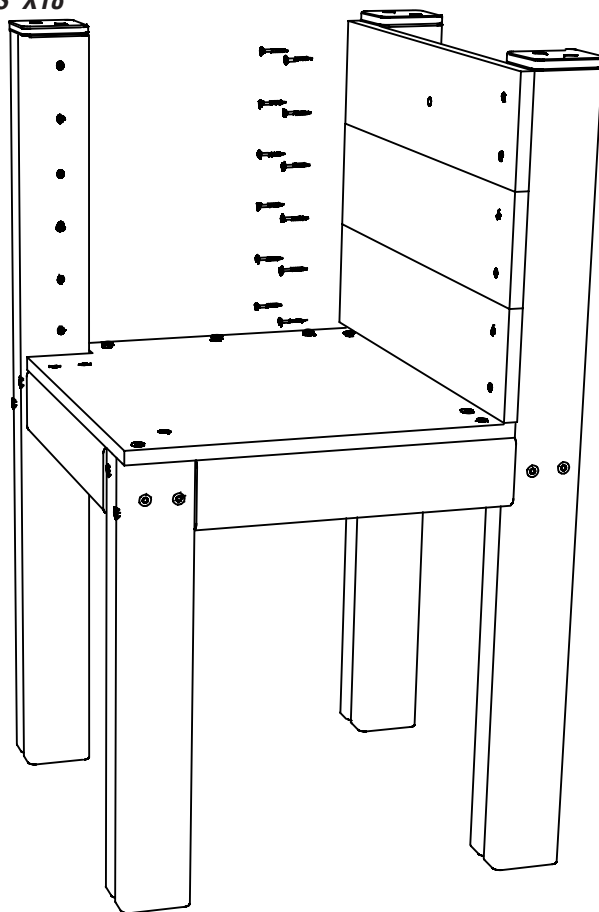

4

BRACE BACK OF FRAME AND SCREW INTO UPRIGHT

 USING - M8X80 SCREWS X5 / NUR162 - H X1

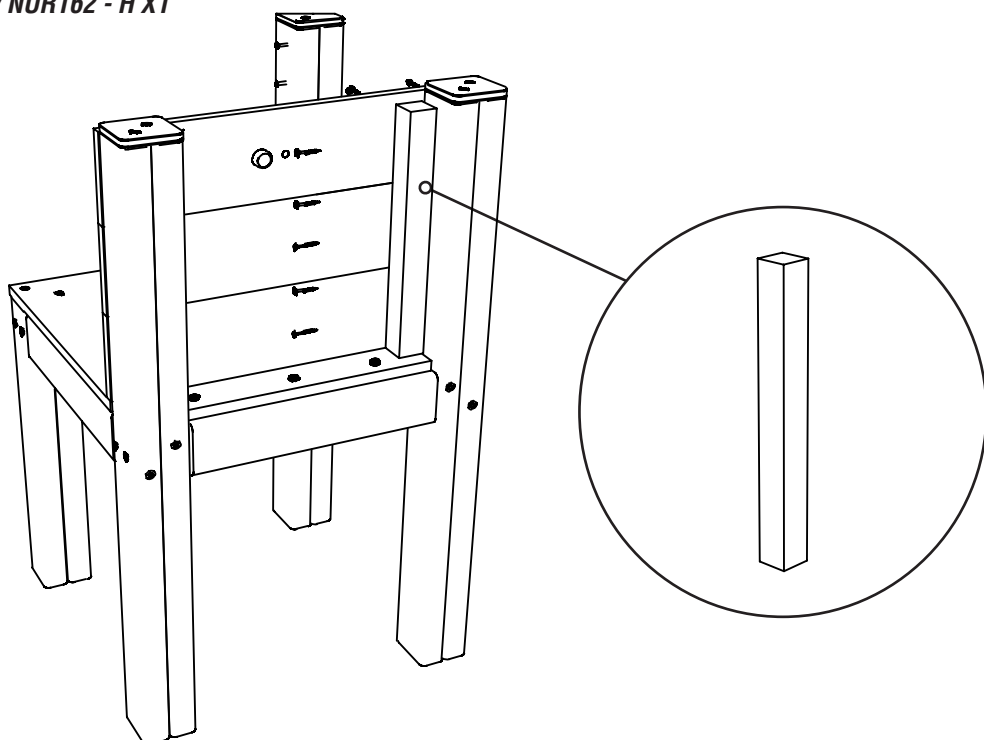


INSTALLATION INSTRUCTIONS

5

REPEAT ON OTHER SIDE WITH WOOD PANNELS AND BRACE

 
USING - M8X80 SCREWS X5 / M8X60 SCREWS X12 / NUR162 - H X1

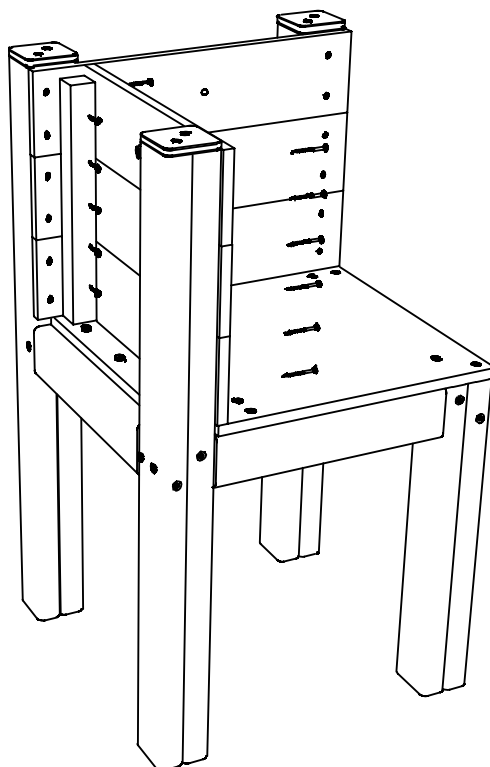

6

ATTACH CHALK BOARDS

 USING - END CAPS X4 / BOLTS X2/ NYLOC X2/ 25MM PLASTIC WASHER X 2

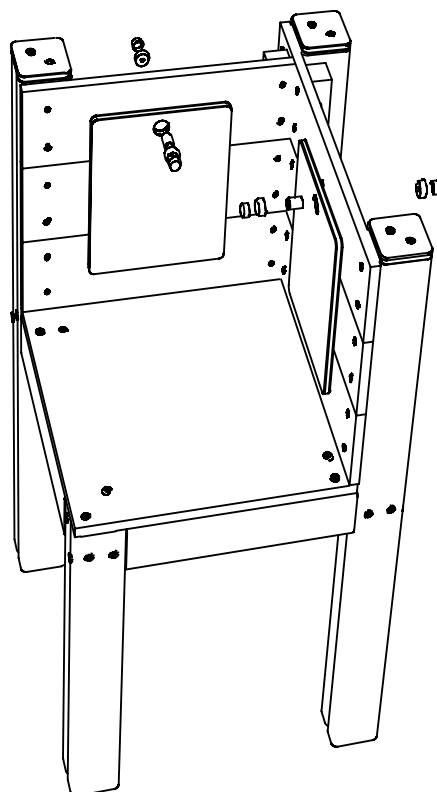

ADDITIONAL DIMENSIONS

