 


PAINTING STATION - DOUBLE

Installation Instructions

**creative
play**

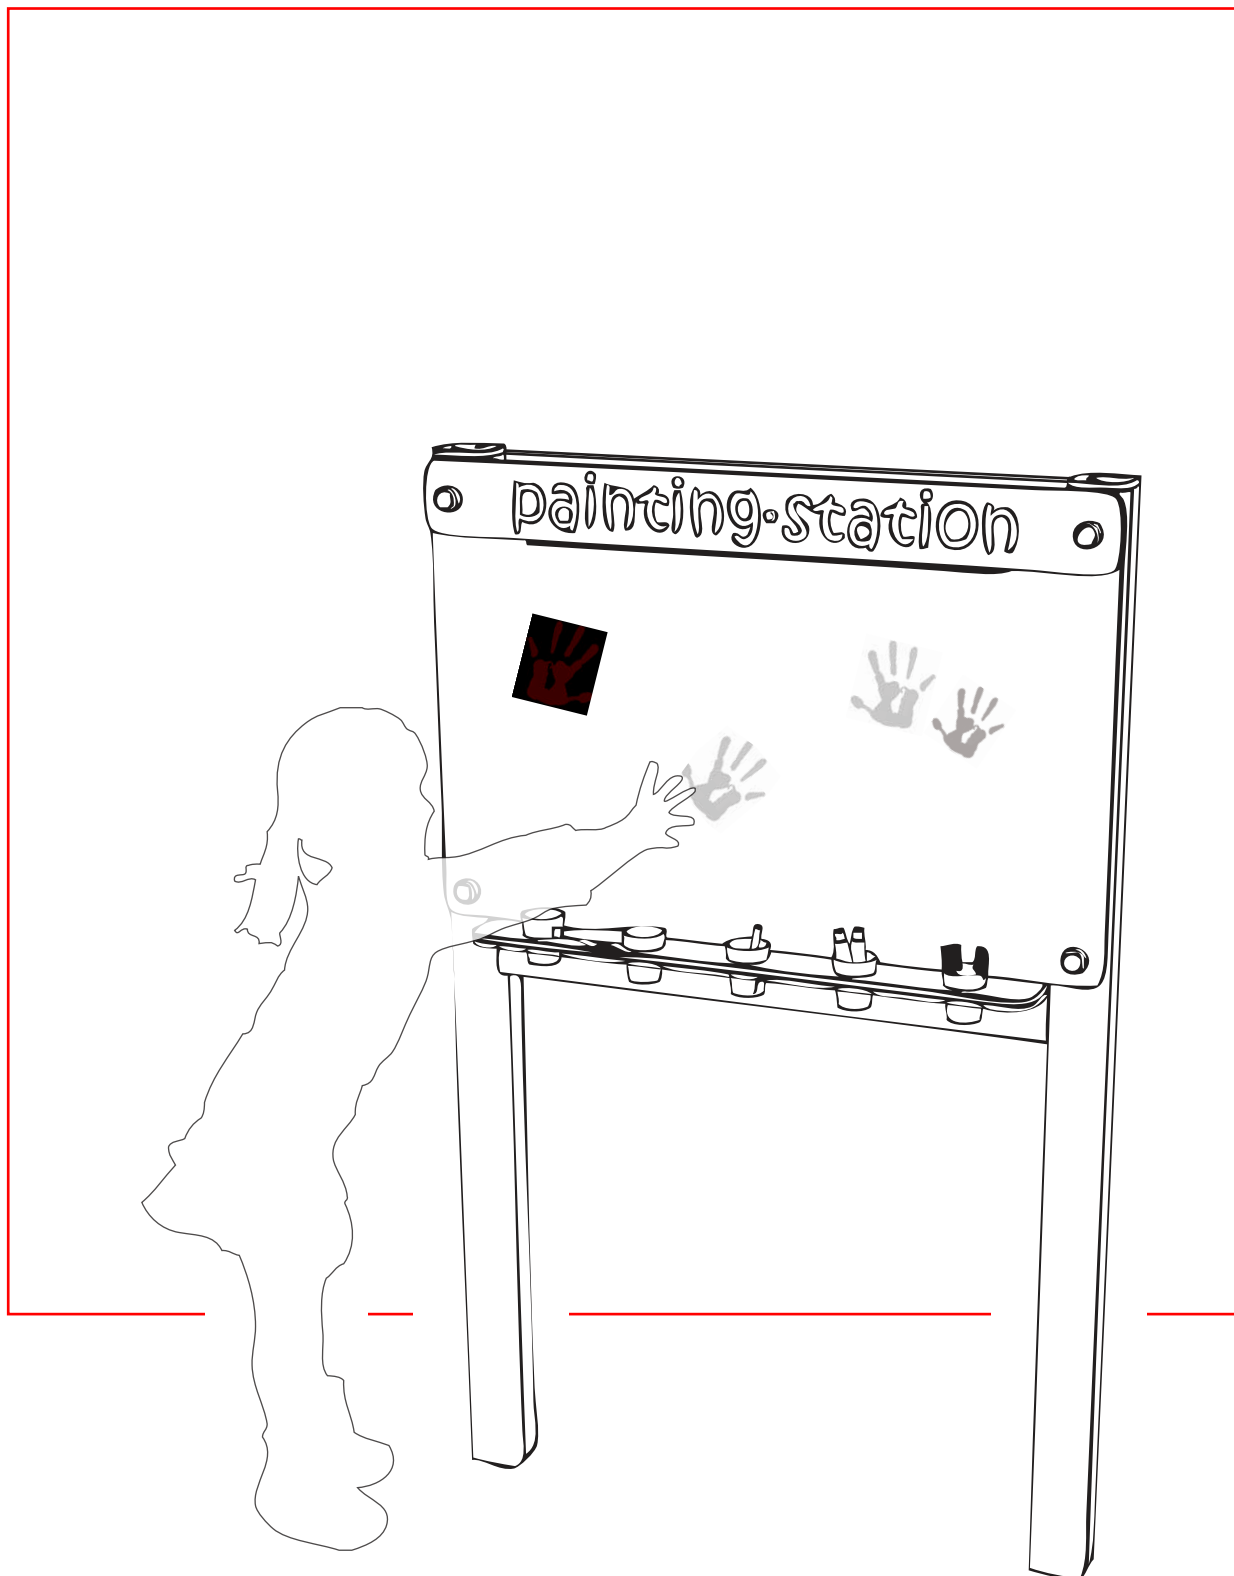

 
PARTS required



x2 PB121a 120 X 90 TIMBER




x1 PB121b 120 X 90 TIMBER

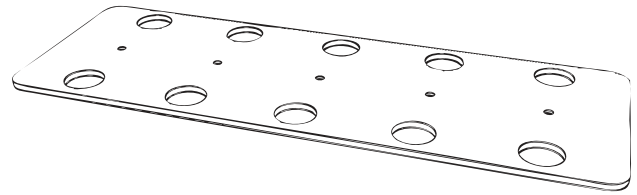

x1 PLAYTEC SHELF



 x2 PLAYTEC PAPER HOLDER - TOPS

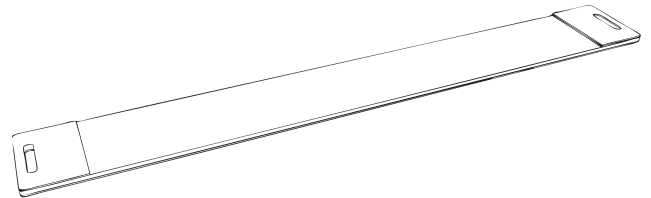

x1 PLAYTEC PAPER HOLDER - BOTTOM - recessed



 
x2 PLAYTEC BRACKET




x2 PLAYTEC SIGN



x4 PLAYTEC SPACERS



x10 NON SPILL PAINT POTS

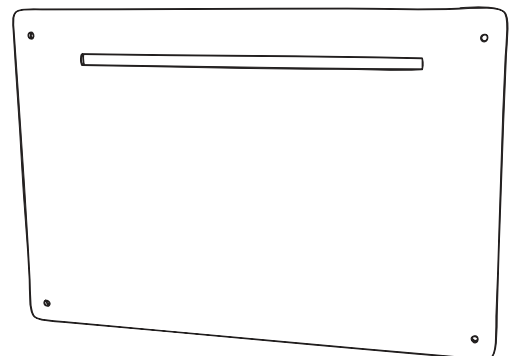 


x2 CLEAR ACRYLIC BOARD

PARTS required



x2 160mm HEX BOLT

 x2 190mm HEX BOLT




x9 FM80 'Brass wood screws'


x4 FM180 'Brass wood screws'



 x2 N1 Torktainers



x2 3B Torktainers

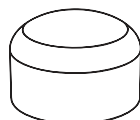 

x8 COVERED ENDS

 
 


x4 M12 'NYLOC'

TOOLS required



Foundation Details

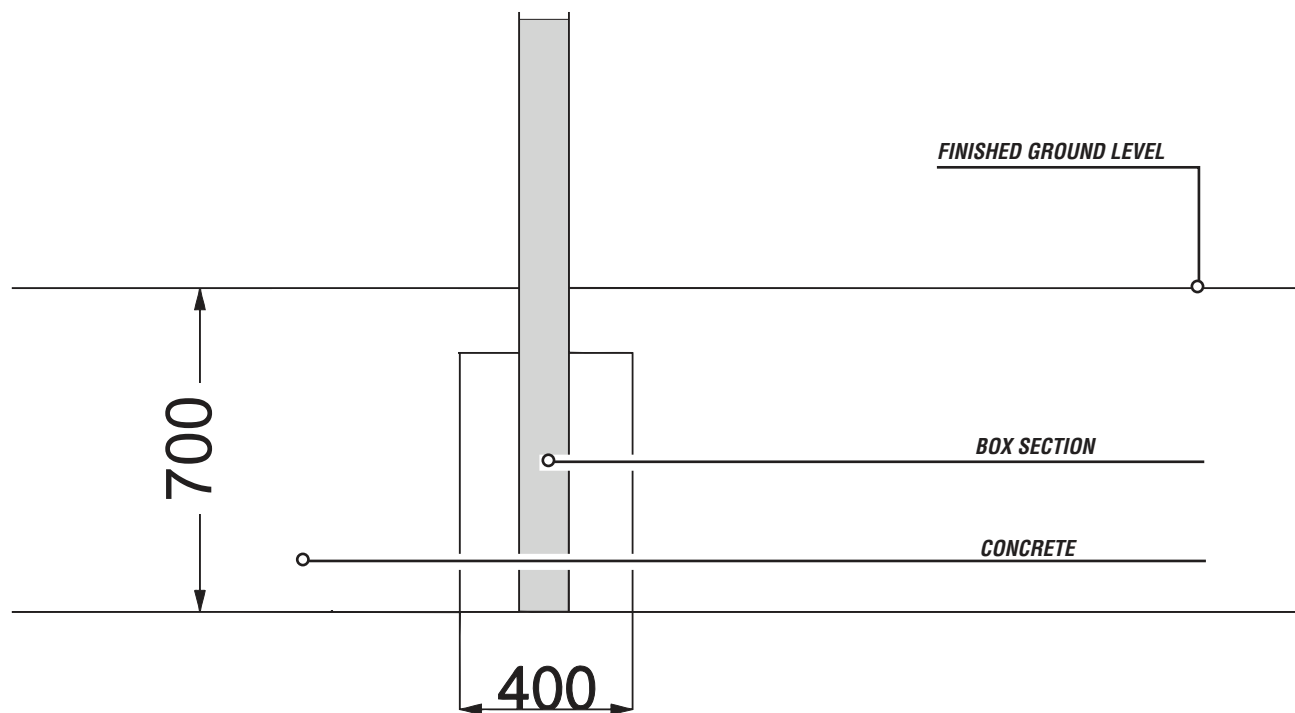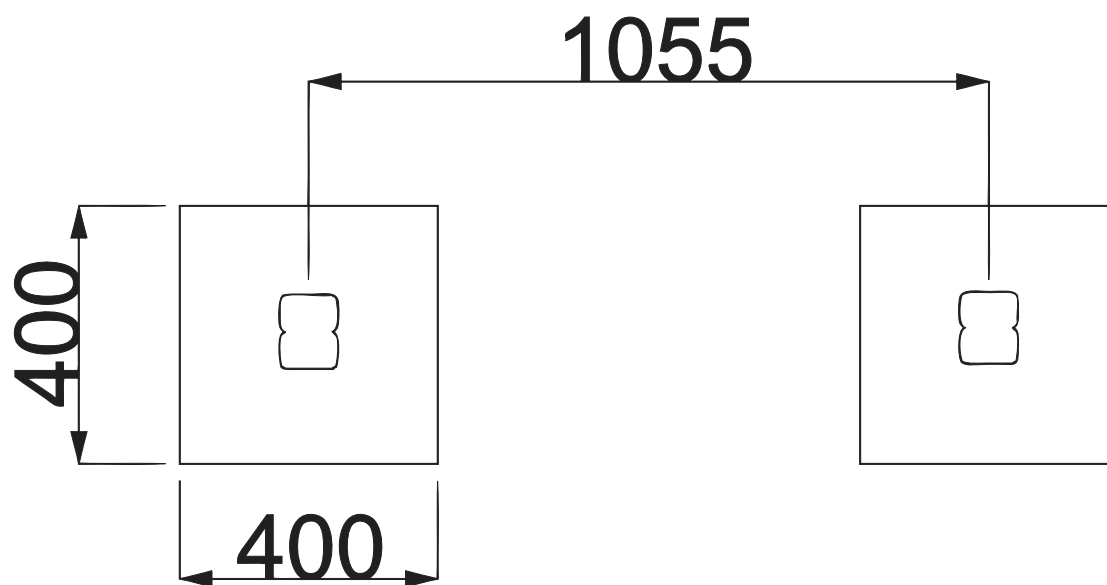


Installation Instructions

1

Attach PLAYTEC PAPER HOLDER in between UPRIGHTS

Using PLAYTEC BRACKETS slid through top and bottom sections (A) and PLACTEC SPACERS (B) to fix to timber uprights using 4 x FM80 BRASS WOOD SCREWS (C)

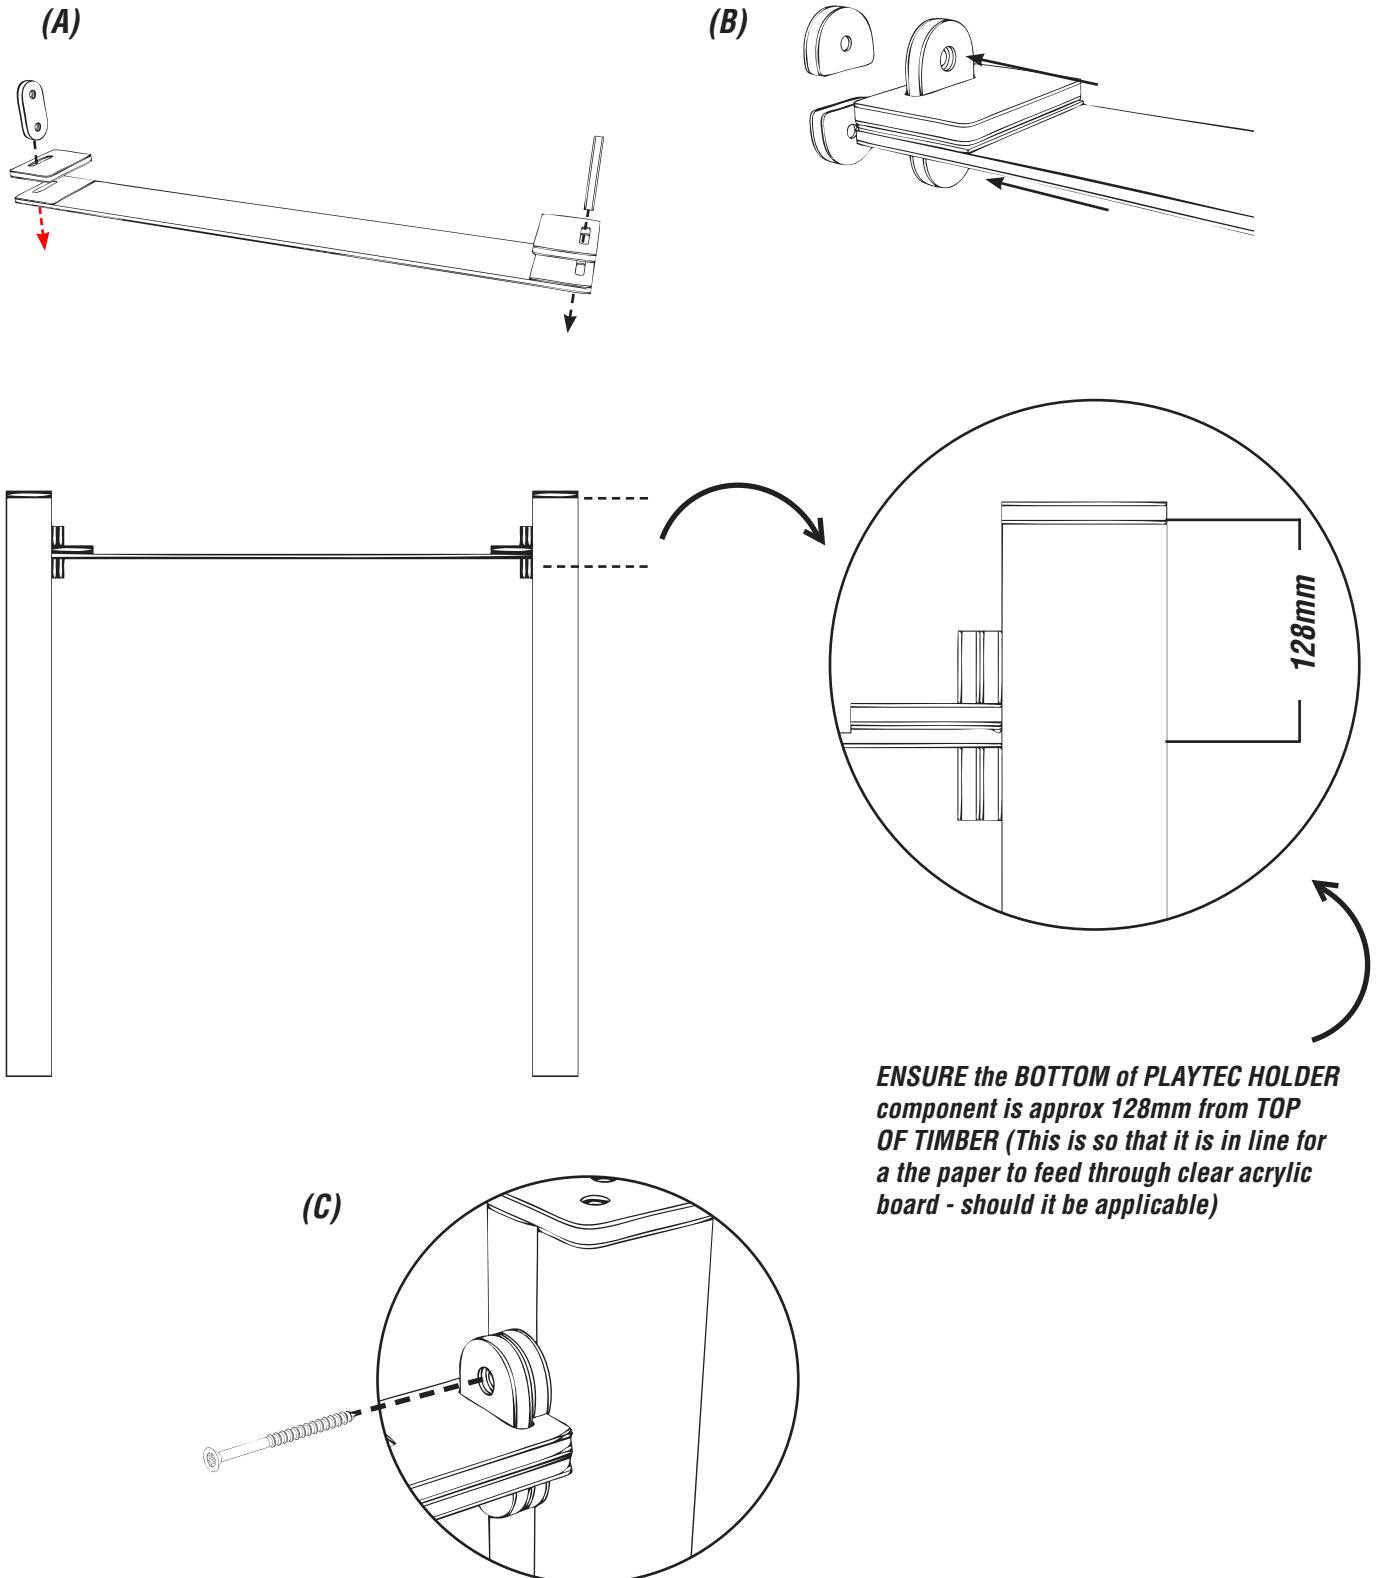


Installation Instructions

2

Attach 2 X CLEAR ACRYLIC and 2 X PLAYTEC SIGN to timber


USING (IN ORDER FROM FRONT) 4 X COVERED END, 4 X HEX BOLTS (2 X 190mm TOP / 2 X 160mm BOTTOM)
4 X M12 NYLOC, 4 X COVERED END

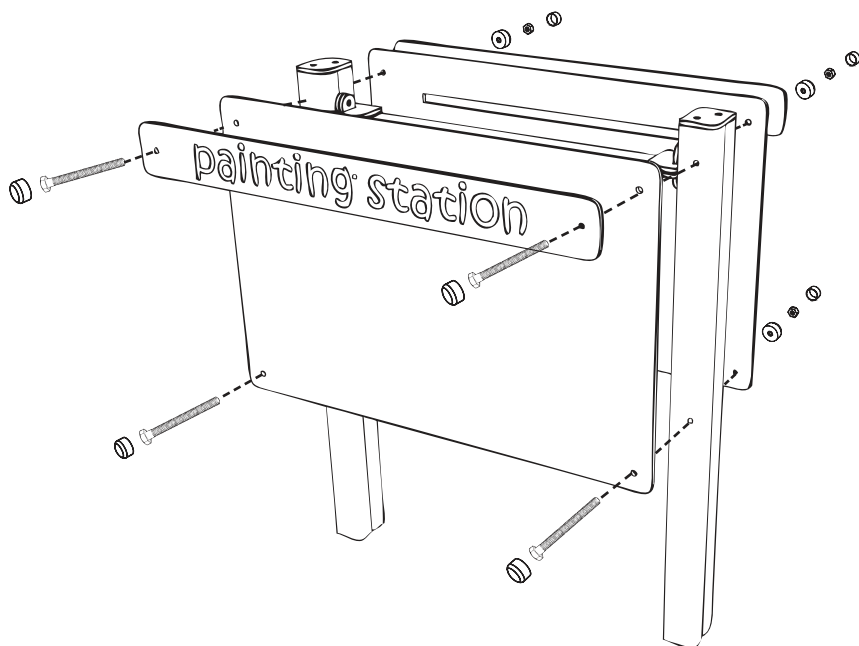

Once boards are fixed - TORKTAINER the SIGN and CLEAR ACRYLIC BOARD together using 1 x 3B / 1 X N1 TORKTAINER - REPEAT FOR OTHER SIDE.

3

Attach PLAYTEC SHELF to "PB121b" timber and secure between uprights

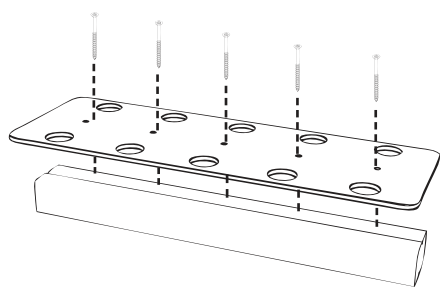


Screw PLAYTEC SHELF using 5x FM80 BRASS WOOD SCREWS

Place this shelf inbetween both uprights DIRECTLY BELOW CLEAR ACRYLIC BOARD

ENSURE - This shelf is right up to the acrylic board and there is no gap inbetween
ALSO ENSURE THAT SHELF IS CENTRAL

Fix this shelf in place using FM180 BRASS WOOD SCREWS

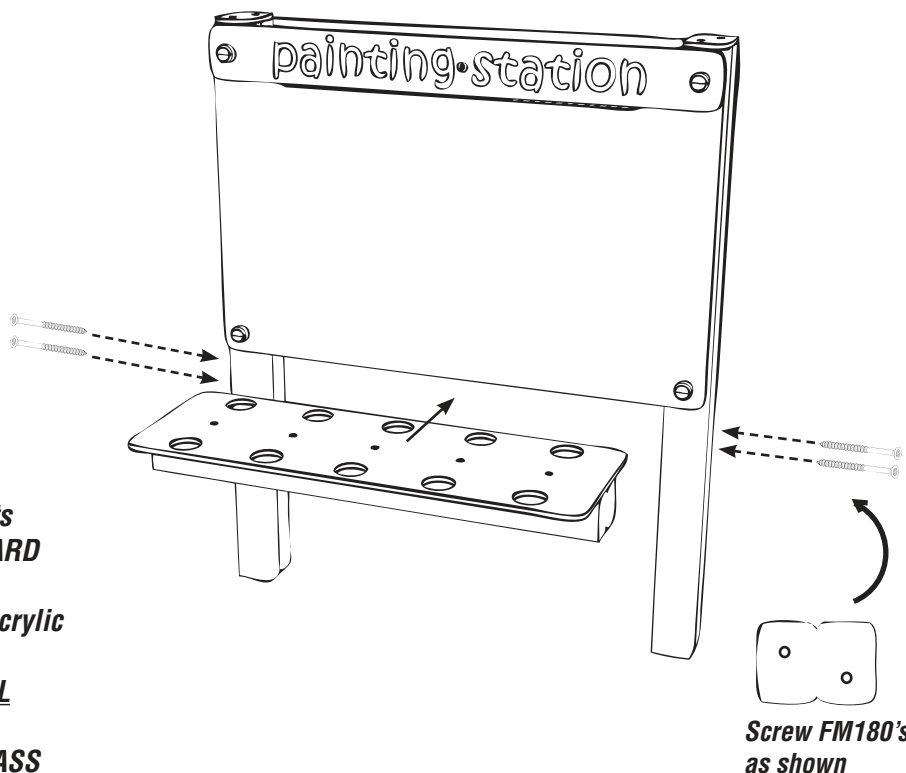

Screw FM180's as shown

Additional Dimensions

