
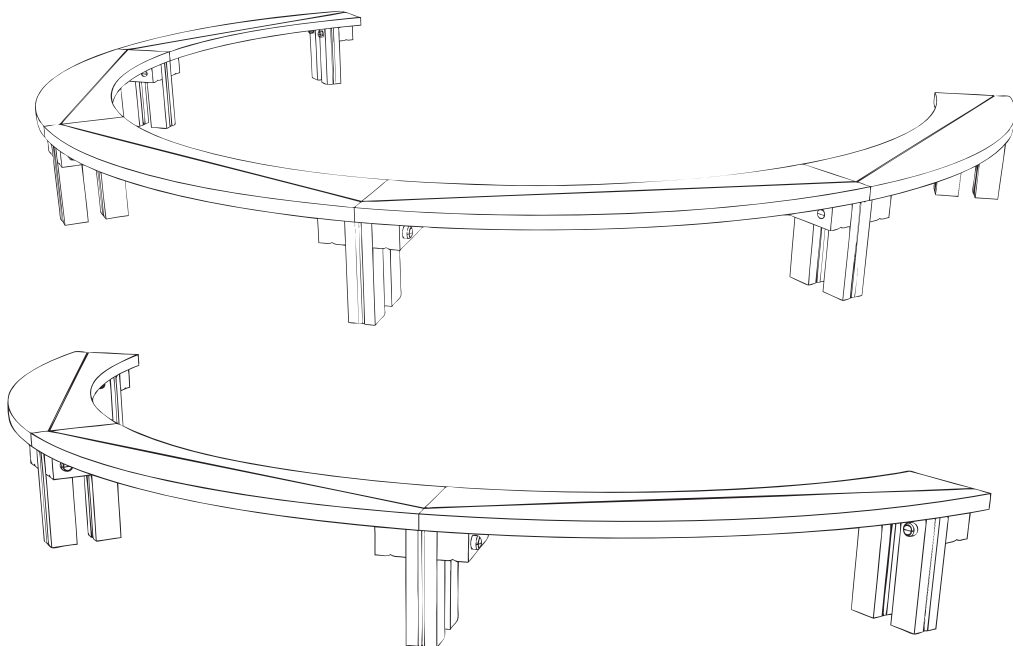


CURVED Modular Seating Assembly Instructions


**creative
play**

4 **PIECE**


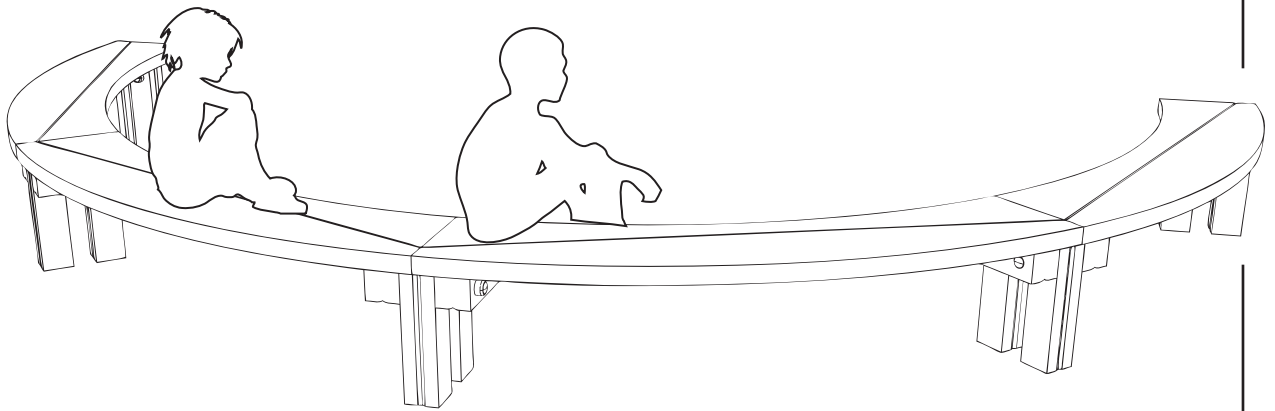


PARTS required


T1 QTY 4 (220mm x 47mm)

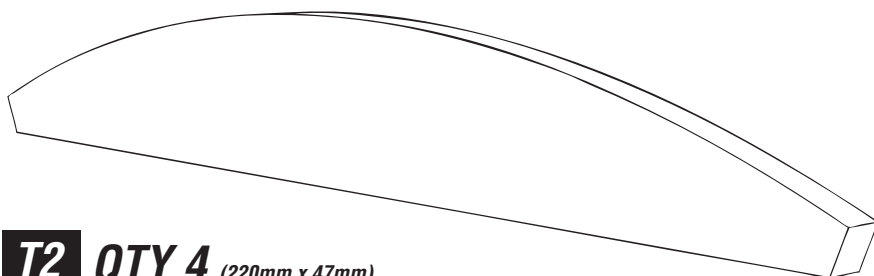


T2 QTY 4 (220mm x 47mm)

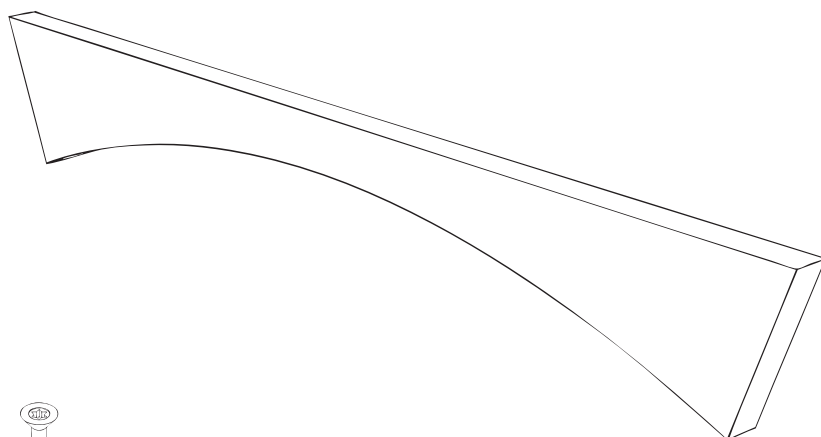

x40 (120mm brass screws)


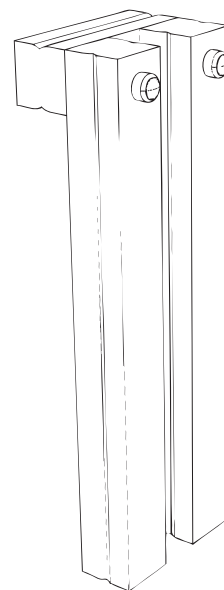


QTY 2 (single support)


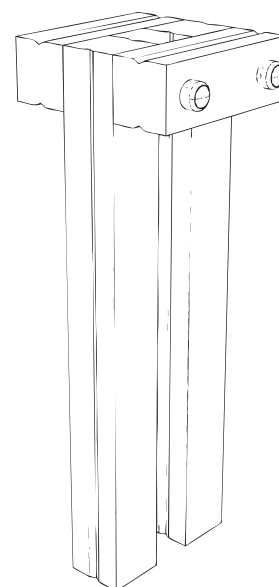


QTY 3 (double support)

TOOLS required

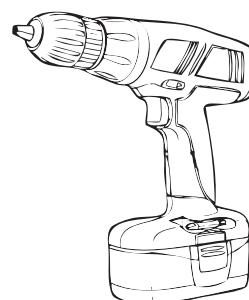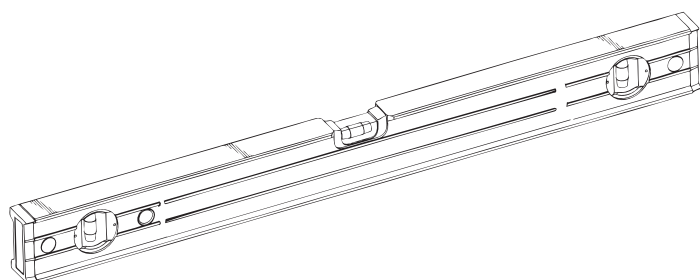


Foundation Details

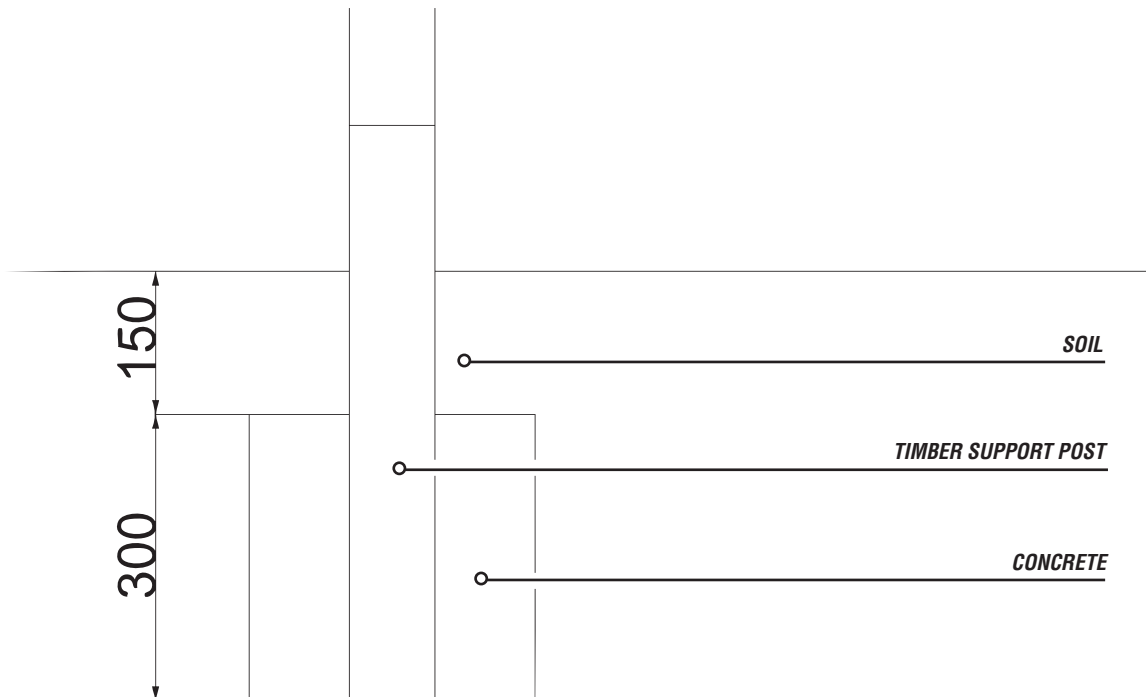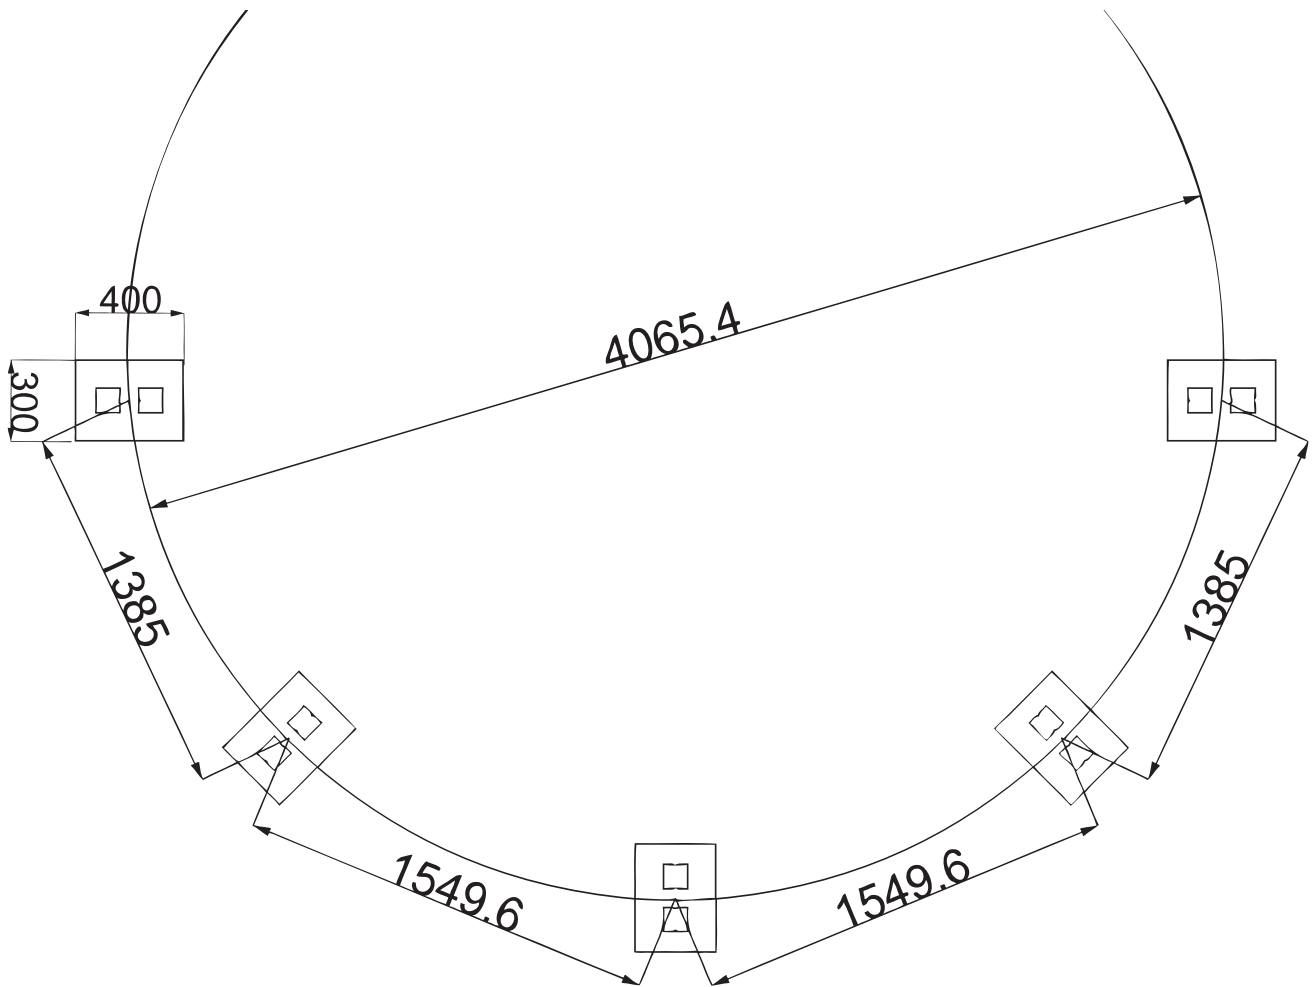

Assembly Instructions

1


4 PIECE CURVED Modular Seating

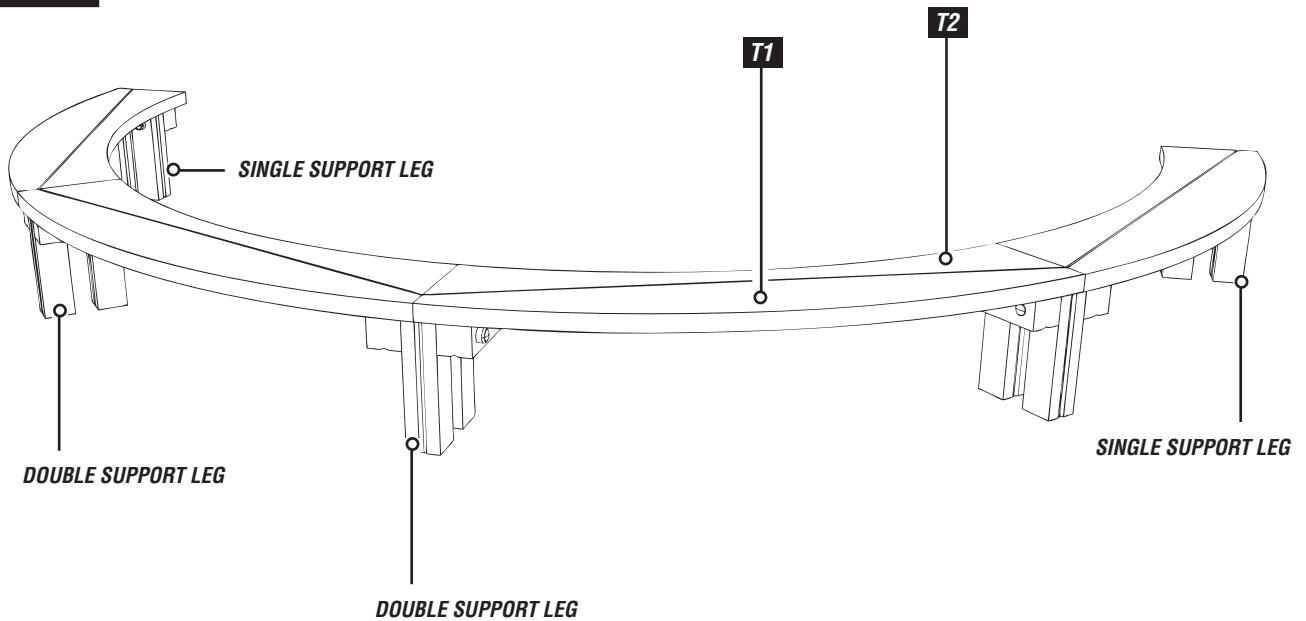

2

Attach bench slats (T1 & T2 timbers) to the support assemblies

Using 120mm brass screws

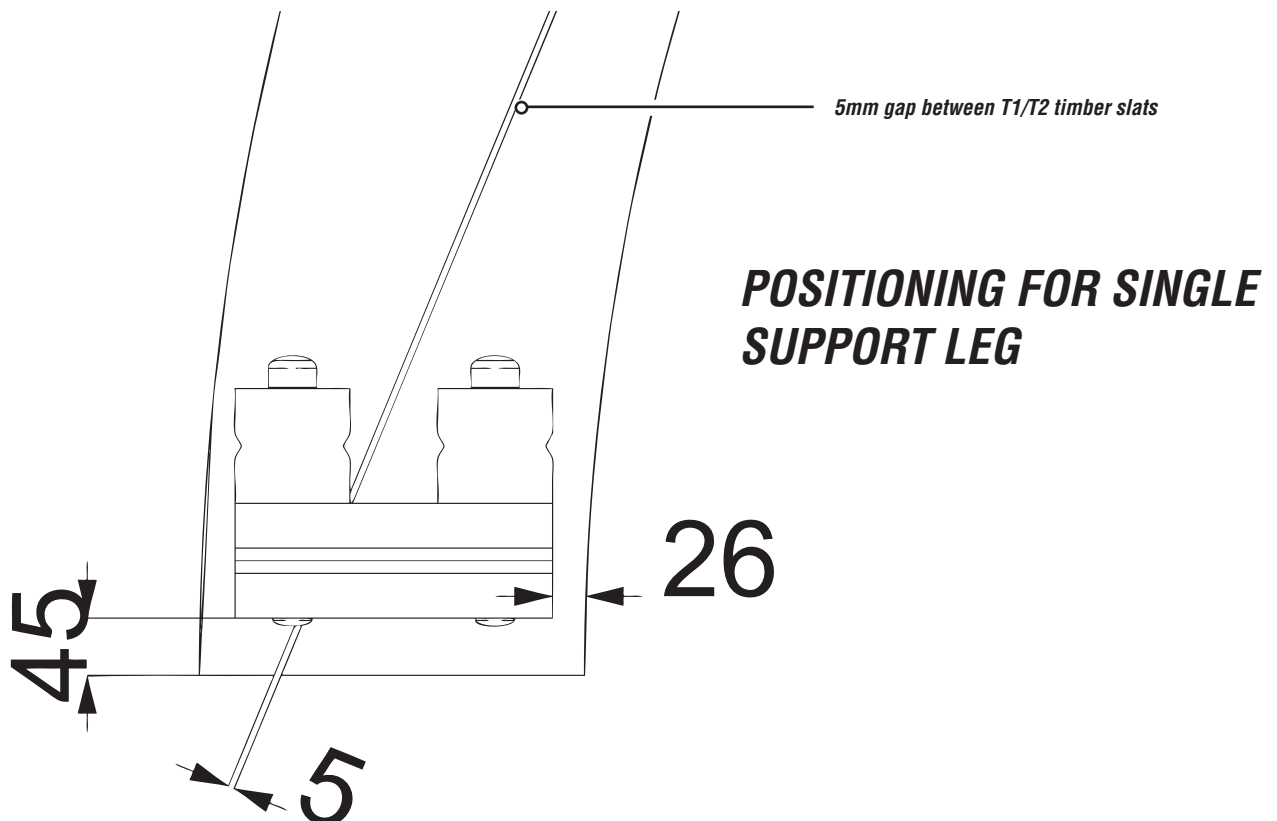

Assembly Instructions



3

Attach bench slats (T1 & T2 timbers) to the support assemblies *Continued....*

POSITIONING FOR DOUBLE SUPPORT LEG

28

5mm gap between T1 timber slats

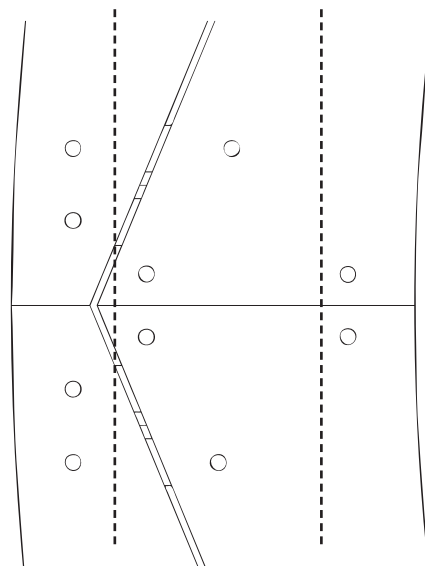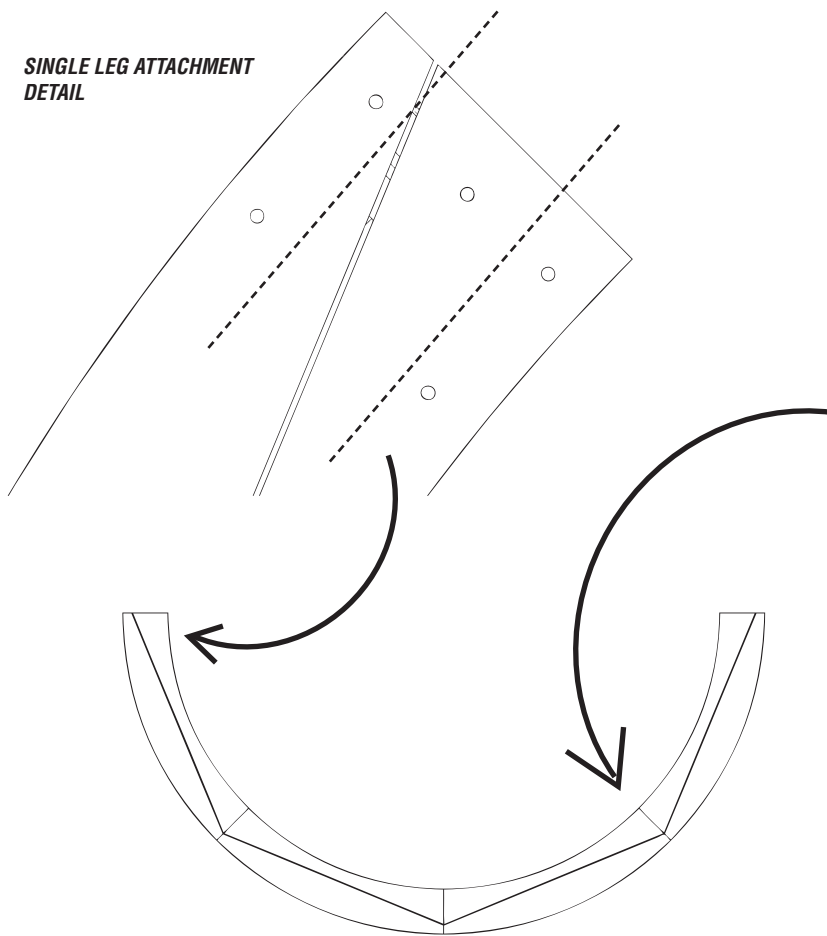

***IMPOTANT - DASHED LINE SHOWS BOLT LOCATIONS FOR BENCH SUPPORTS - ensure the screws for the SLATS are postioned either side**

Assembly Instructions

4 Additional dimensions

