

OCTAGONAL




Modular Seating

Assembly Instructions

**creative
play**


2

PIECE

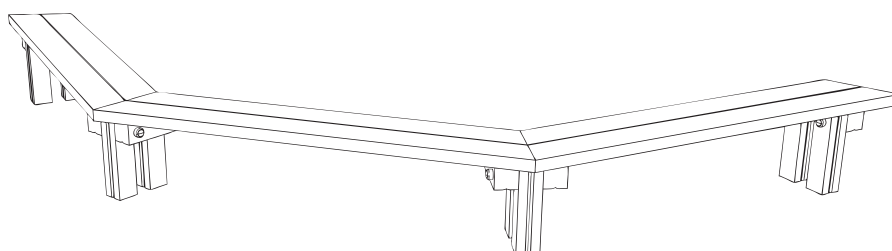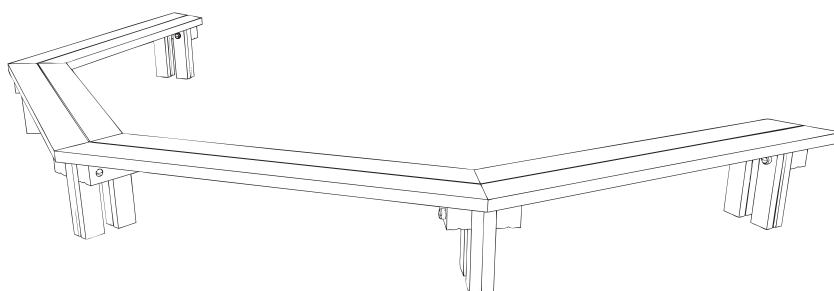
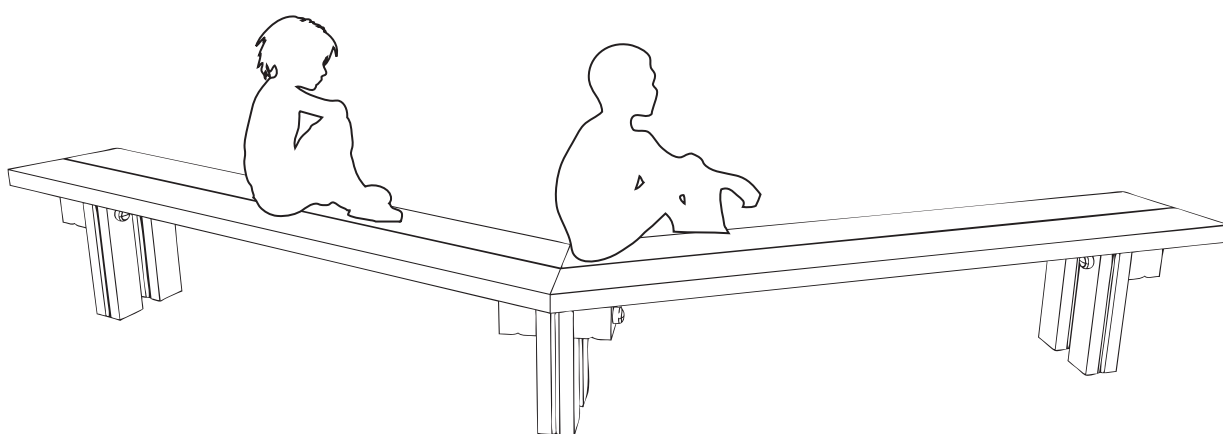


PARTS required


T1 QTY 2 (147mm x 47mm)

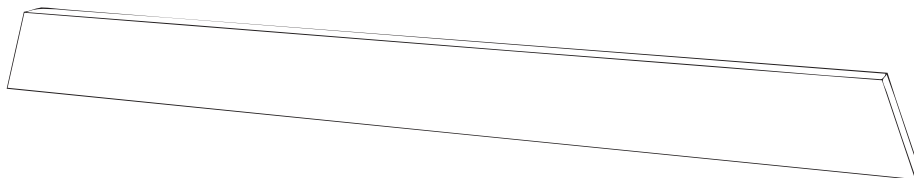

T2 QTY 2 (147mm x 47mm)

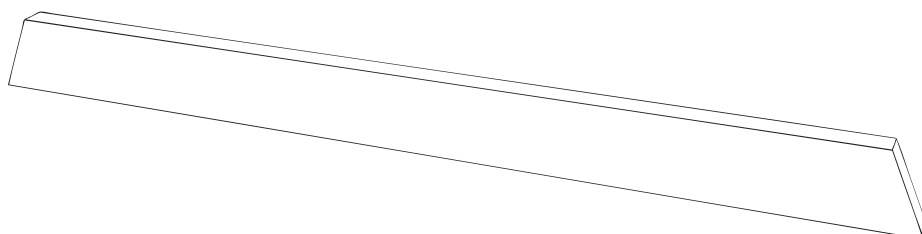

x16 (120mm brass screws)


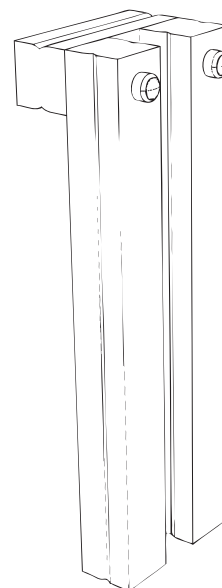


QTY 2 (single support)




QTY 1 (double support)

TOOLS required

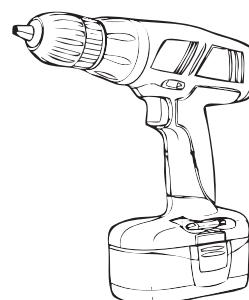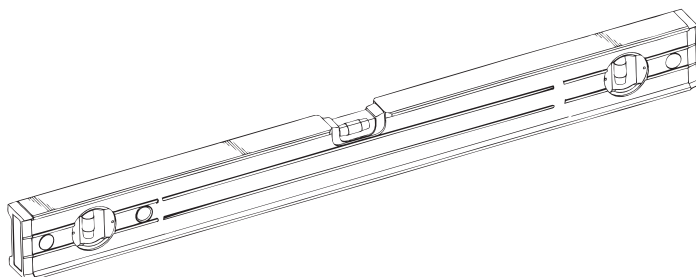


Foundation Details

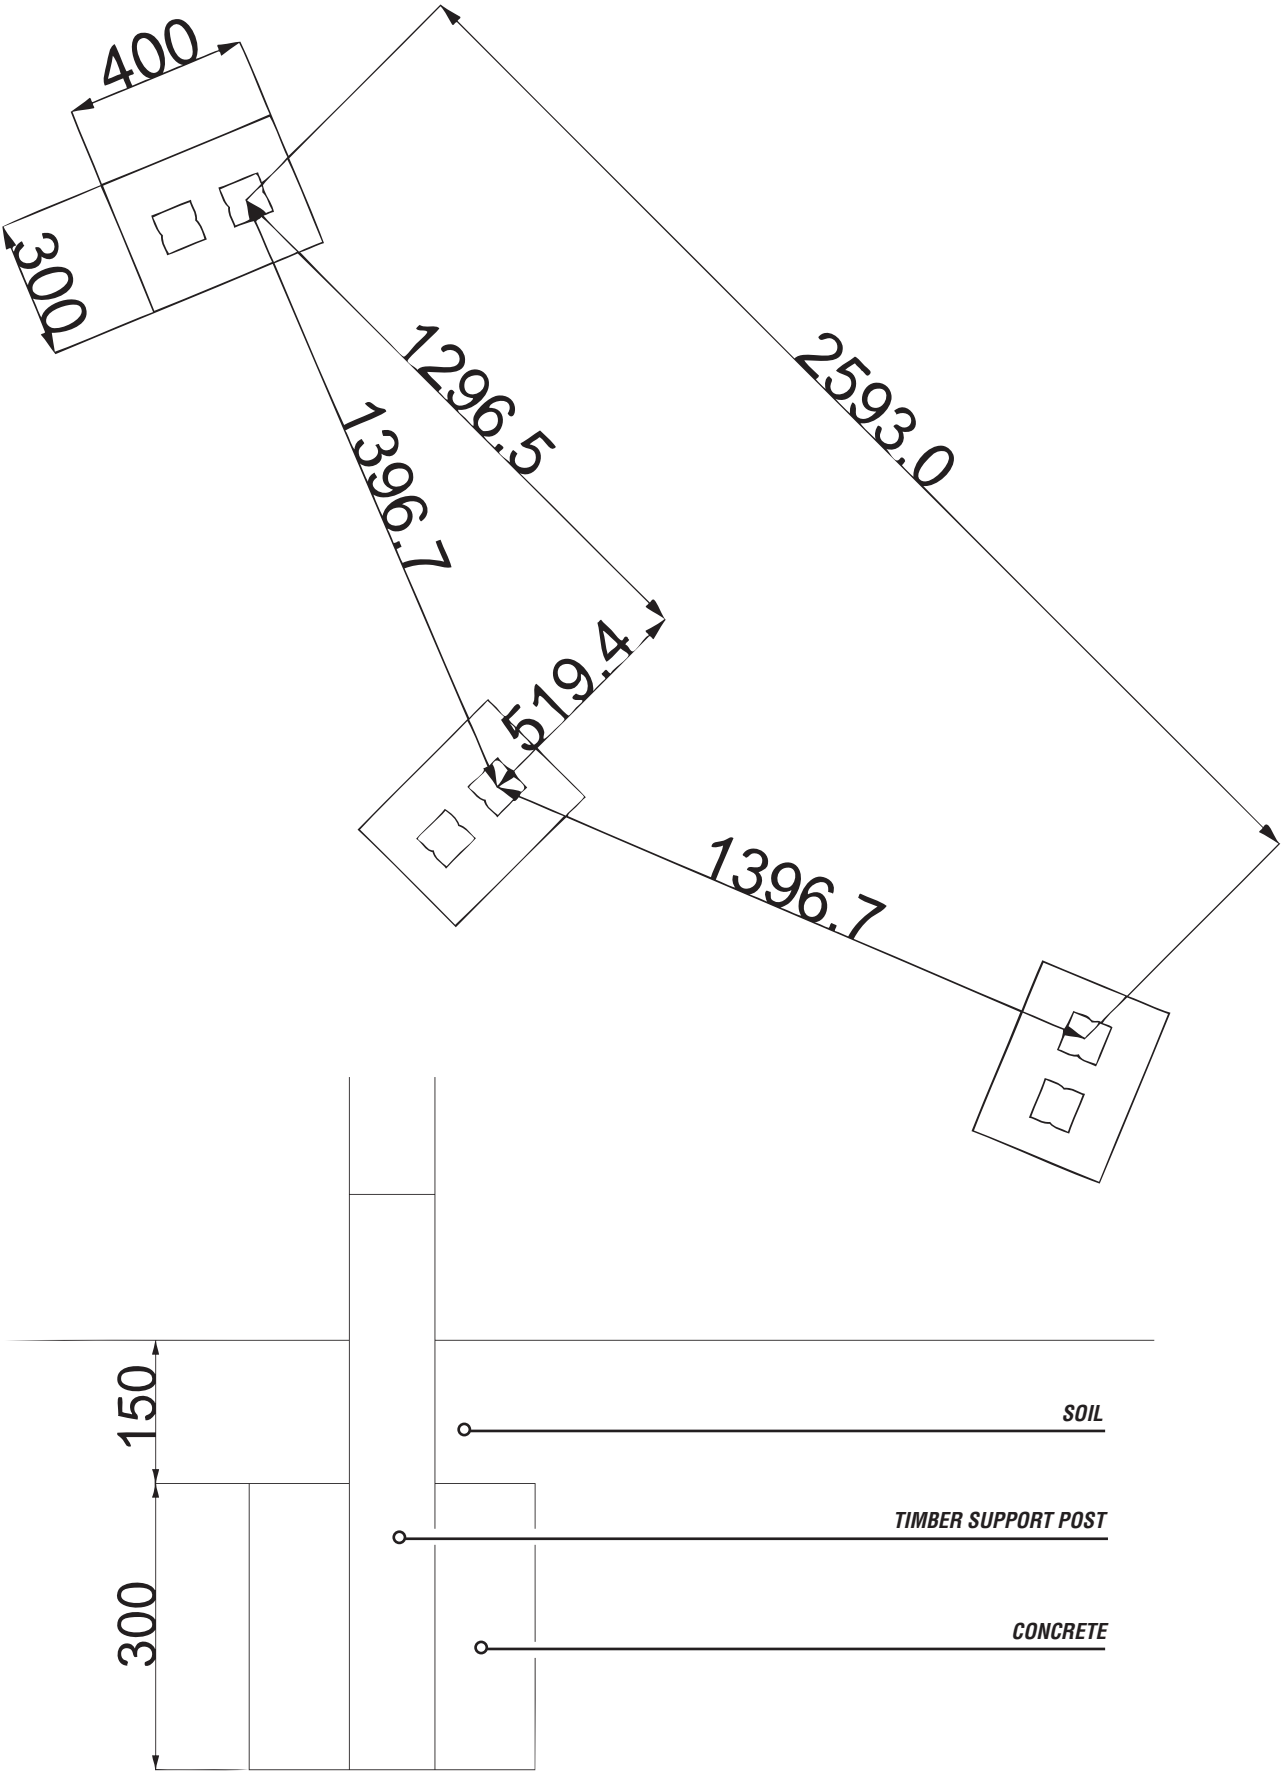

Assembly Instructions

1


2 PIECE Octagonal Modular Seating

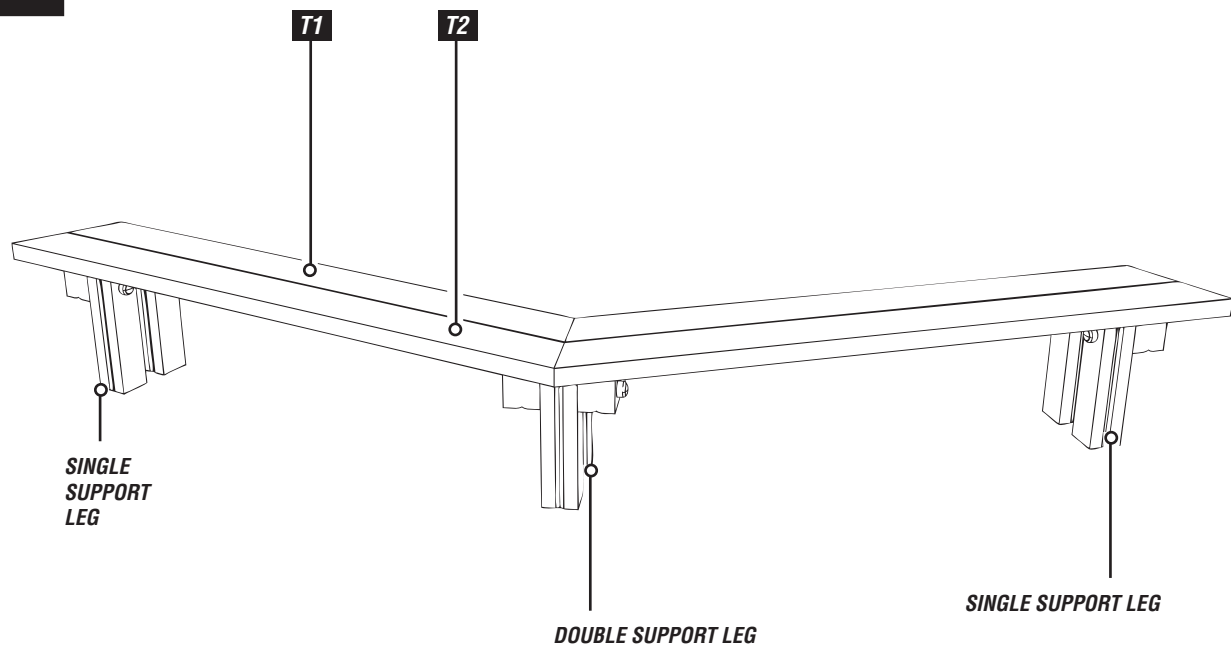

2

Attach bench slats (T1 & T2 timbers) to the support assemblies

Using 120mm brass screws (4 x 120mm brass screws for each T1 /T2 timber)

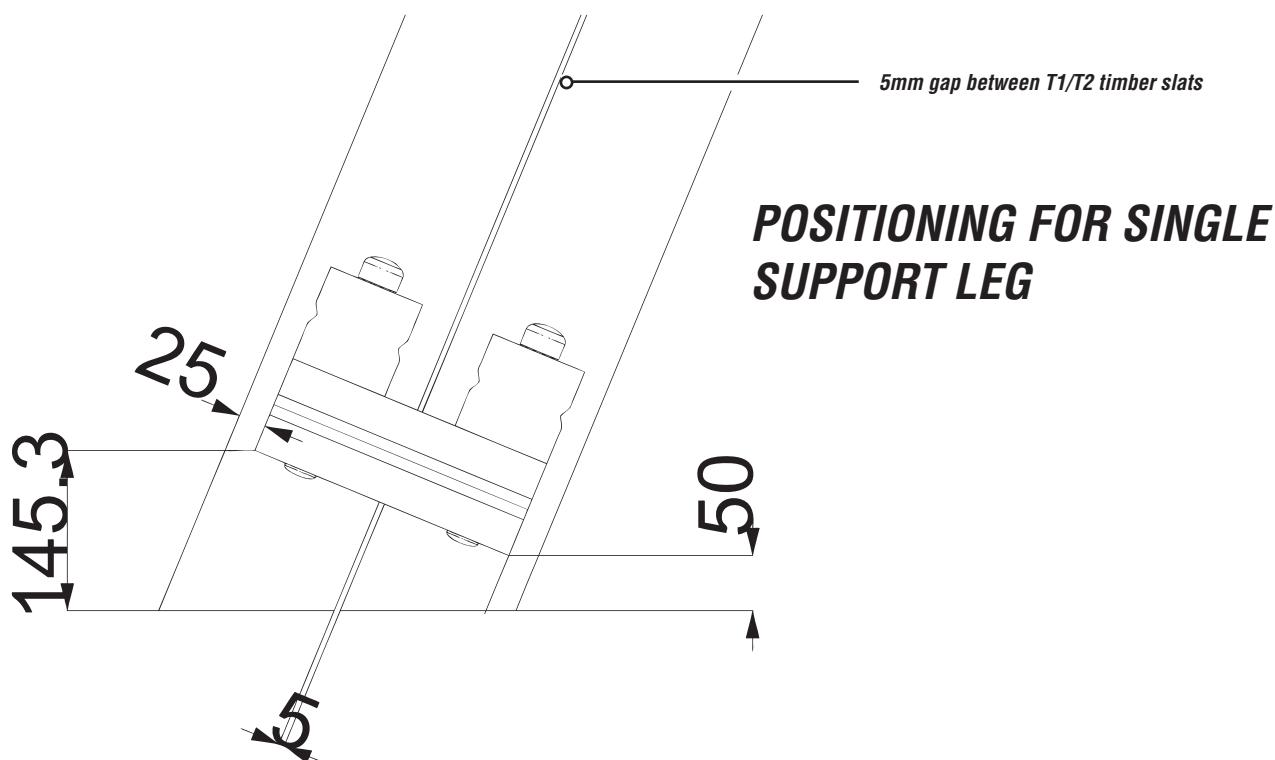



Assembly Instructions

3


Attach bench slats (T1 & T2 timbers) to the support assemblies *Continued....*

POSITIONING FOR DOUBLE SUPPORT LEG


5mm gap between T1 timber slats

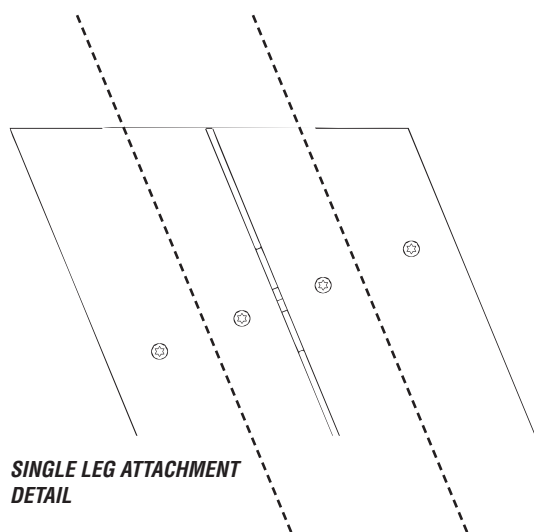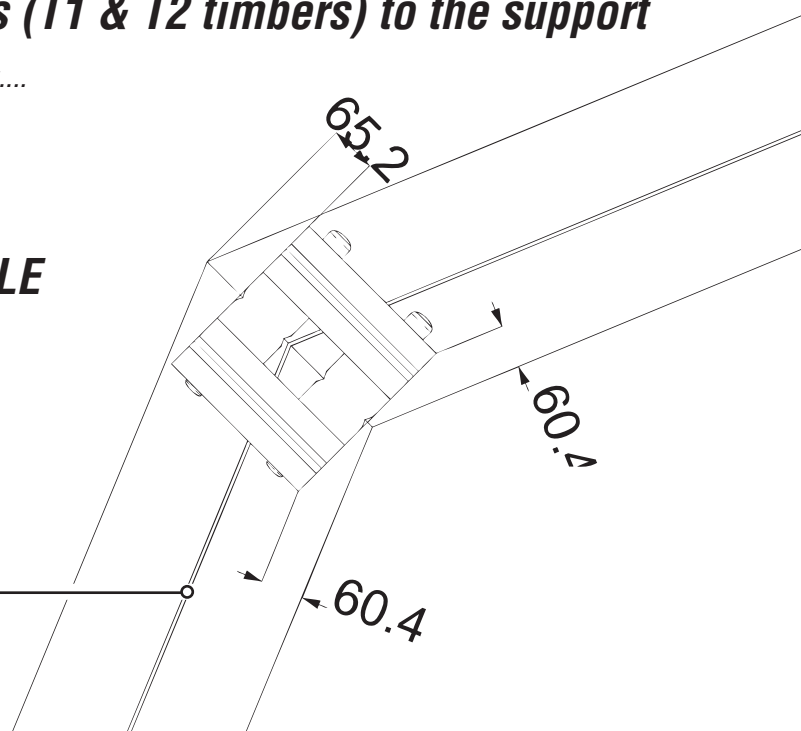

**SINGLE LEG ATTACHMENT
DETAIL**

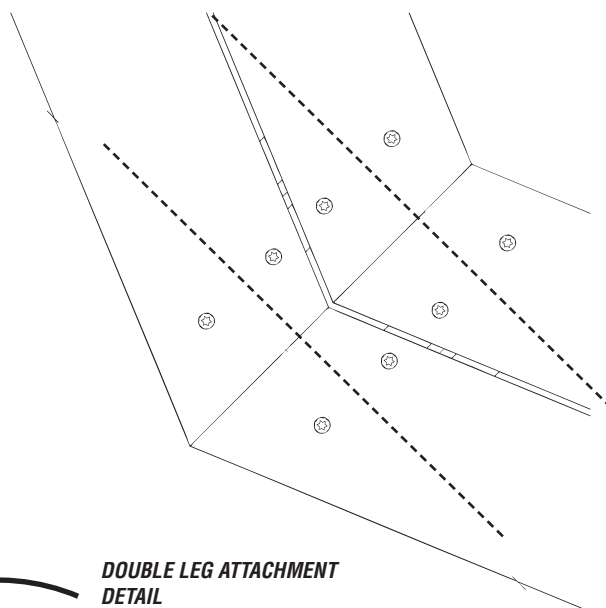

**DOUBLE LEG ATTACHMENT
DETAIL**

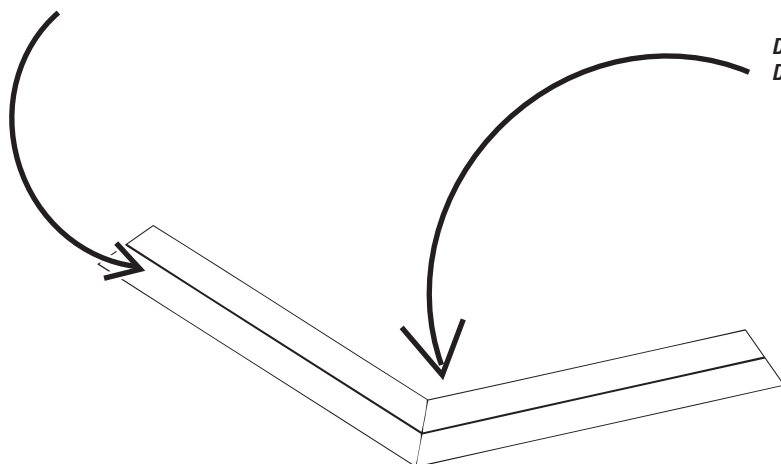

***IMPOTANT - DASHED LINE SHOWS
BOLT LOCATIONS FOR BENCH SUPPORTS
- ensure the screws for the SLATS are
postioned either side**

Assembly Instructions

4

Additional dimensions

