


# JC106 - JUNGLE CLIMBER COMBI (WITHOUT SLIDE)

## Installation Instructions

creative  
play


(WITHOUT SLIDE)

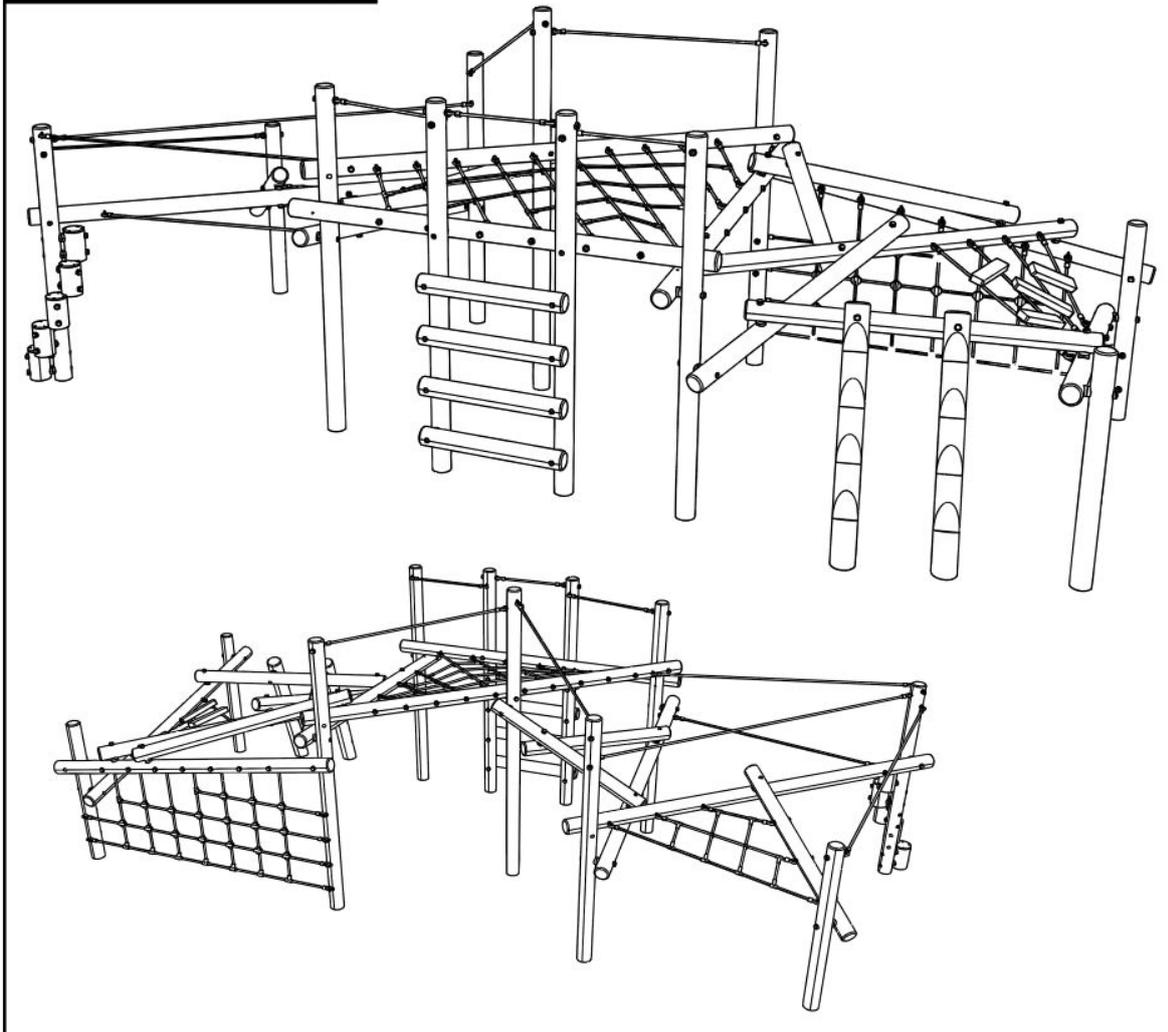

## CONTENTS



<b>Vertical timbers</b>	<b>(pg. 2)</b>
<b>Additional timbers</b>	<b>(pg. 3-4)</b>
<b>Ropes + Nets</b>	<b>(pg. 4-6)</b>
<b>Parts required</b>	<b>(pg. 7)</b>
<b>Tools required</b>	<b>(pg. 8)</b>
<b>Foundation Details</b>	<b>(pg.9-11)</b>
<b>Surfacing Details</b>	<b>(pg.12)</b>
<b>Installation instructions</b>	<b>(pg.13-48)</b>
<b>Additional drawings</b>	<b>(pg.49-50)</b>

# VERTICAL TIMBERS

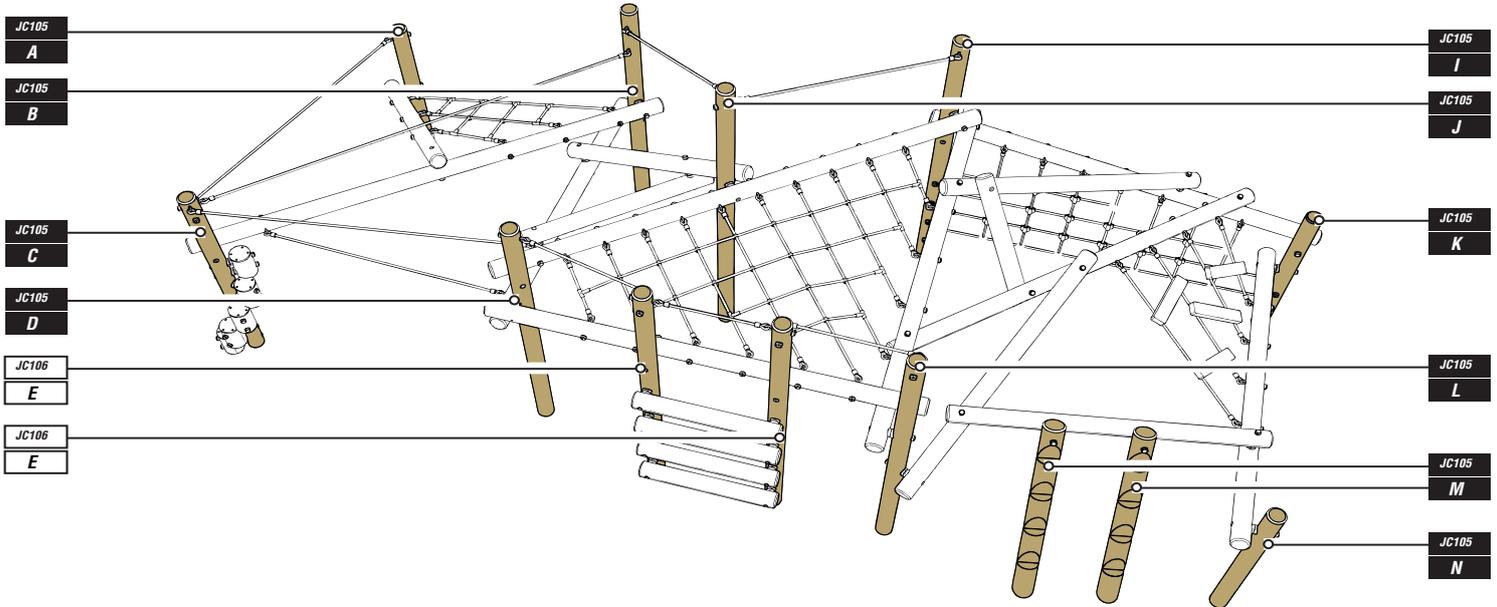

CODE	TYPE	SIZE (mm)	QTY	CODE	TYPE	SIZE (mm)	QTY
JC105A	Ø 125mm	2275	1	JC105L	Ø 150mm	3250	1
JC105B	Ø 125mm	3040	1	JC105M	Ø 125mm	2331.5	2
JC105C	Ø 125mm	2740	1	JC105N	Ø 125mm	2225	1
JC105D	Ø 125mm	3250	1	JC106E	Ø 125mm	3300	2
JC105I	Ø 125mm	3390	1				
JC105J	Ø 125mm	3640	1				
JC105K	Ø 125mm	2225	1				

# ADDITIONAL TIMBERS

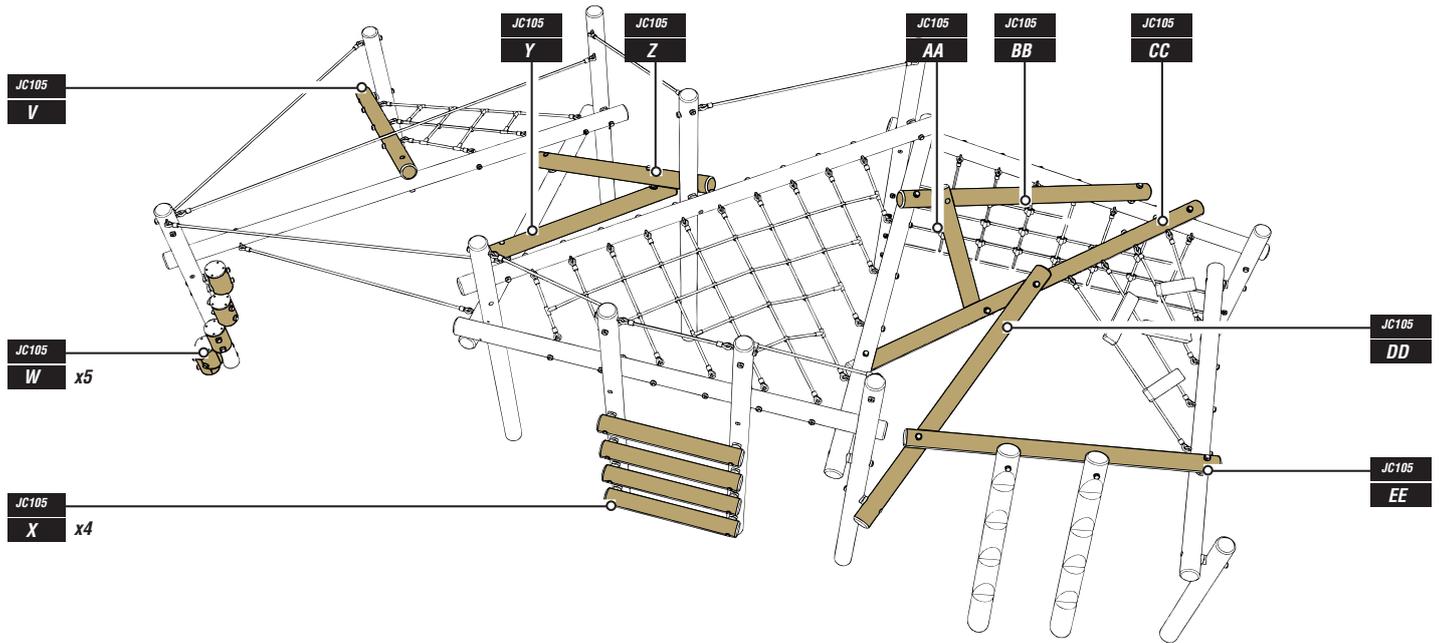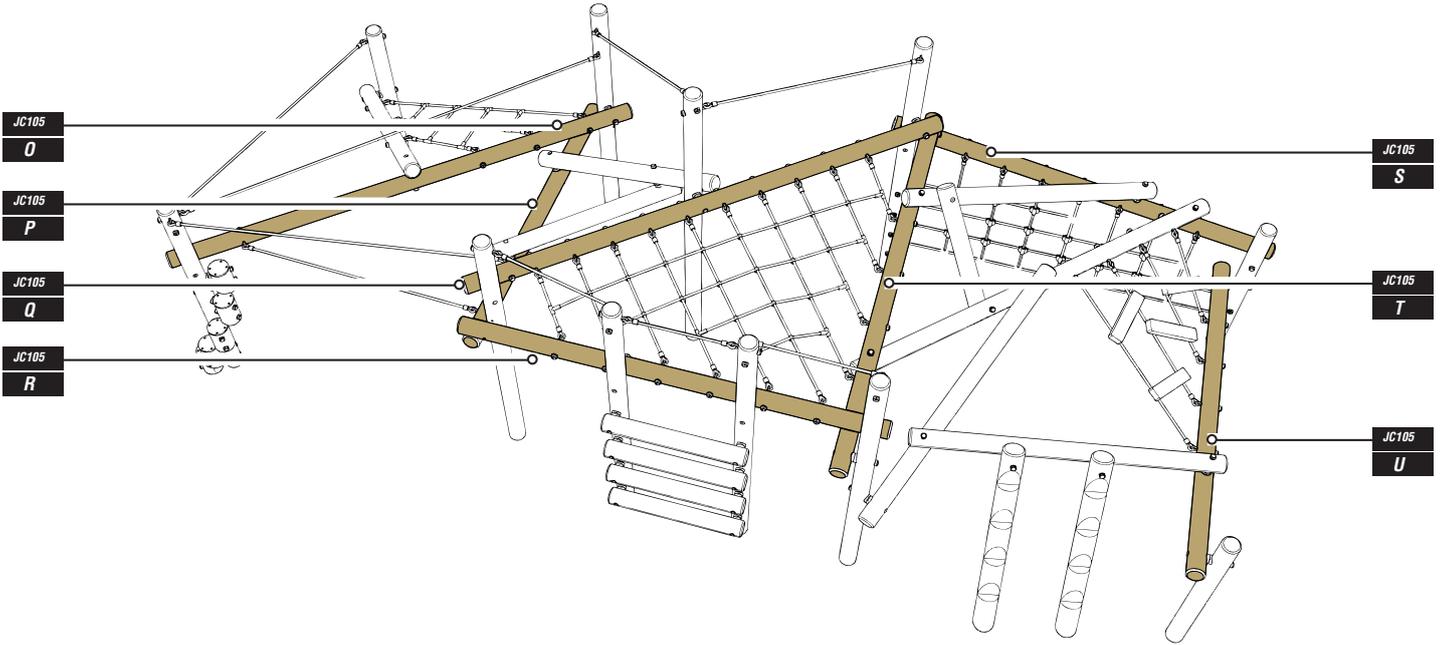


# ADDITIONAL TIMBERS

CODE	TYPE	SIZE mm	QTY	CODE	TYPE	SIZE mm	QTY
JC105O	Ø 125mm	3650	1	JC105X	Ø 125mm	1005	4
JC105P	Ø 125mm	2711.5	1	JC105Y	Ø 150mm	1450	1
JC105Q	Ø 125mm	3650	1	JC105Z	Ø 125mm	1625	1
JC105R	Ø 125mm	3000	1	JC105AA	Ø 125mm	1013.5	1
JC105S	Ø 125mm	3000	1	JC105BB	Ø 125mm	1477	1
JC105T	Ø 125mm	3000	1	JC105CC	Ø 125mm	3100	1
JC105U	Ø 125mm	3000	1	JC105DD	Ø 125mm	2271	1
JC105V	Ø 125mm	1742	1	JC105EE	Ø 125mm	2129	1
JC105W	Ø 125mm	230	5				

# ROPES + NETS REQUIRED


## CARGO NET

QTY - 1 ASSEMBLY

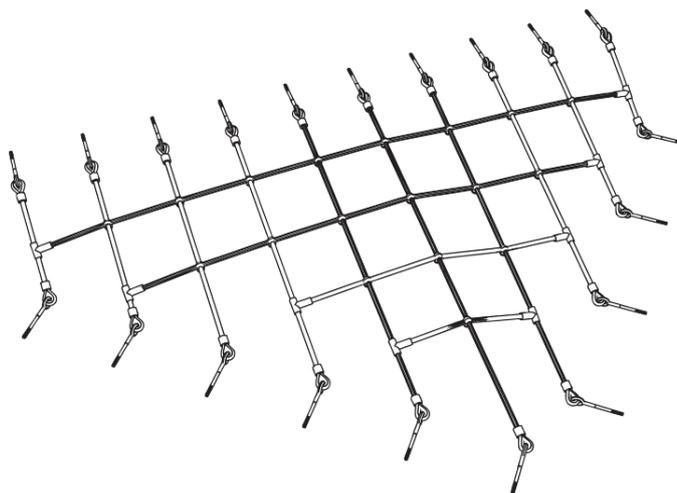

## NET CLIMBER

QTY - 1 ASSEMBLY

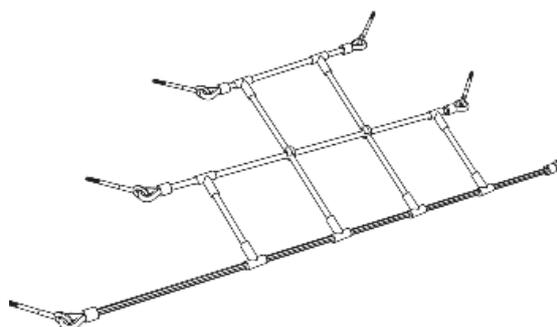

# ROPES + NETS REQUIRED



## NET + BLOCKS

QTY - 1 ASSEMBLY

SUPPLIED LOOSE


CONSISTS OF:

- T1/T2/T3/T4 TIMBERS
- R1/R2/R3/R4 ROPES

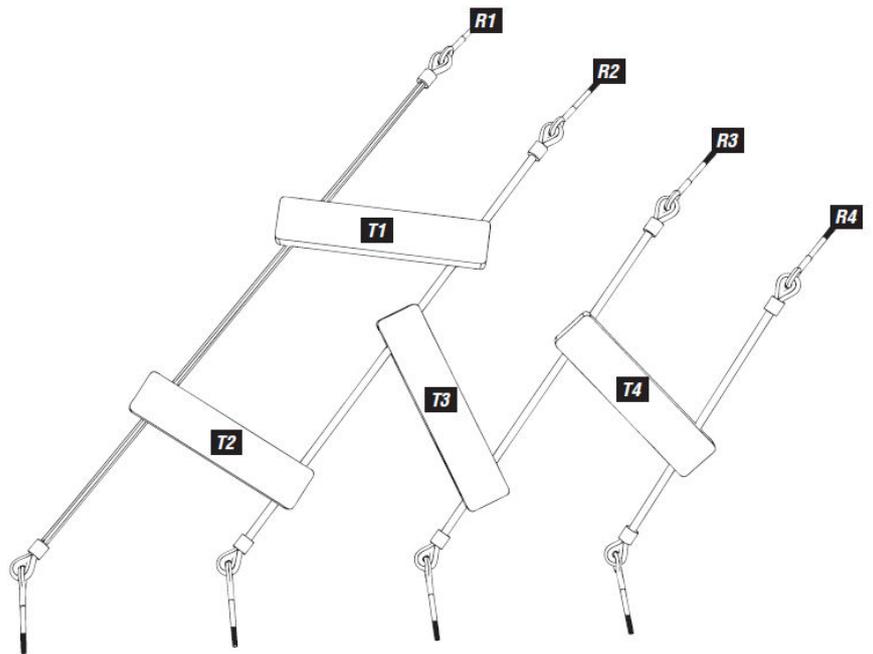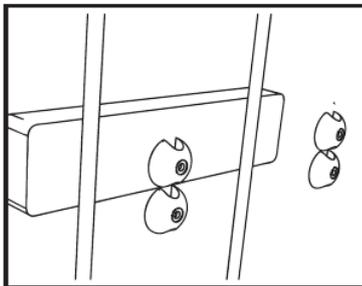


## NET WALL

QTY - 1 ASSEMBLY

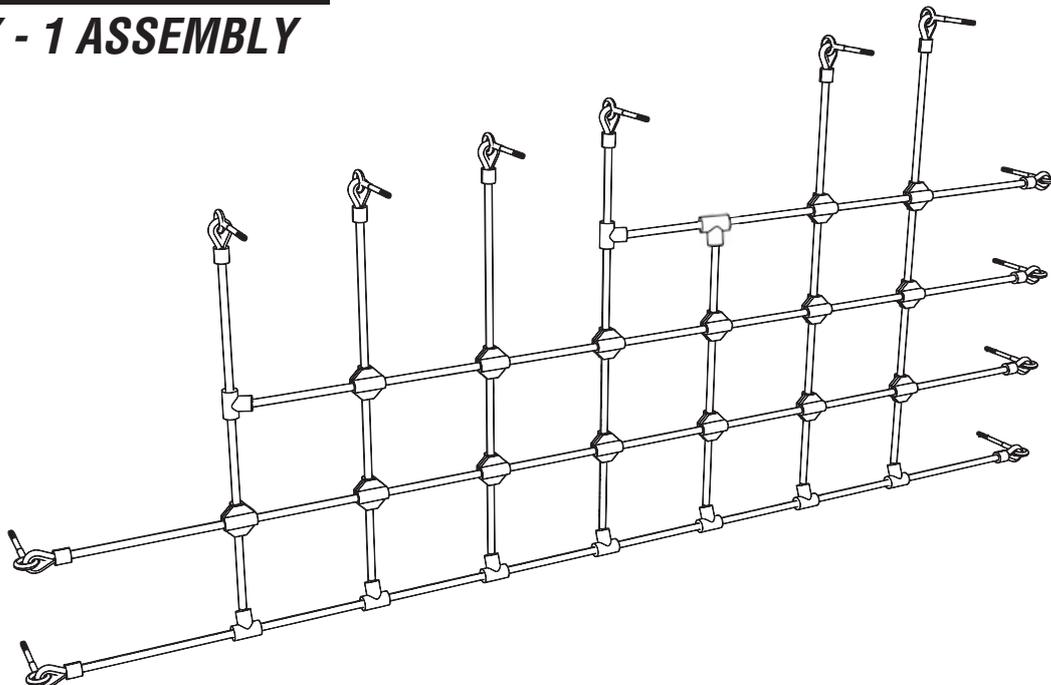

# ROPES + NETS REQUIRED

## INDIVIDUAL ROPES:

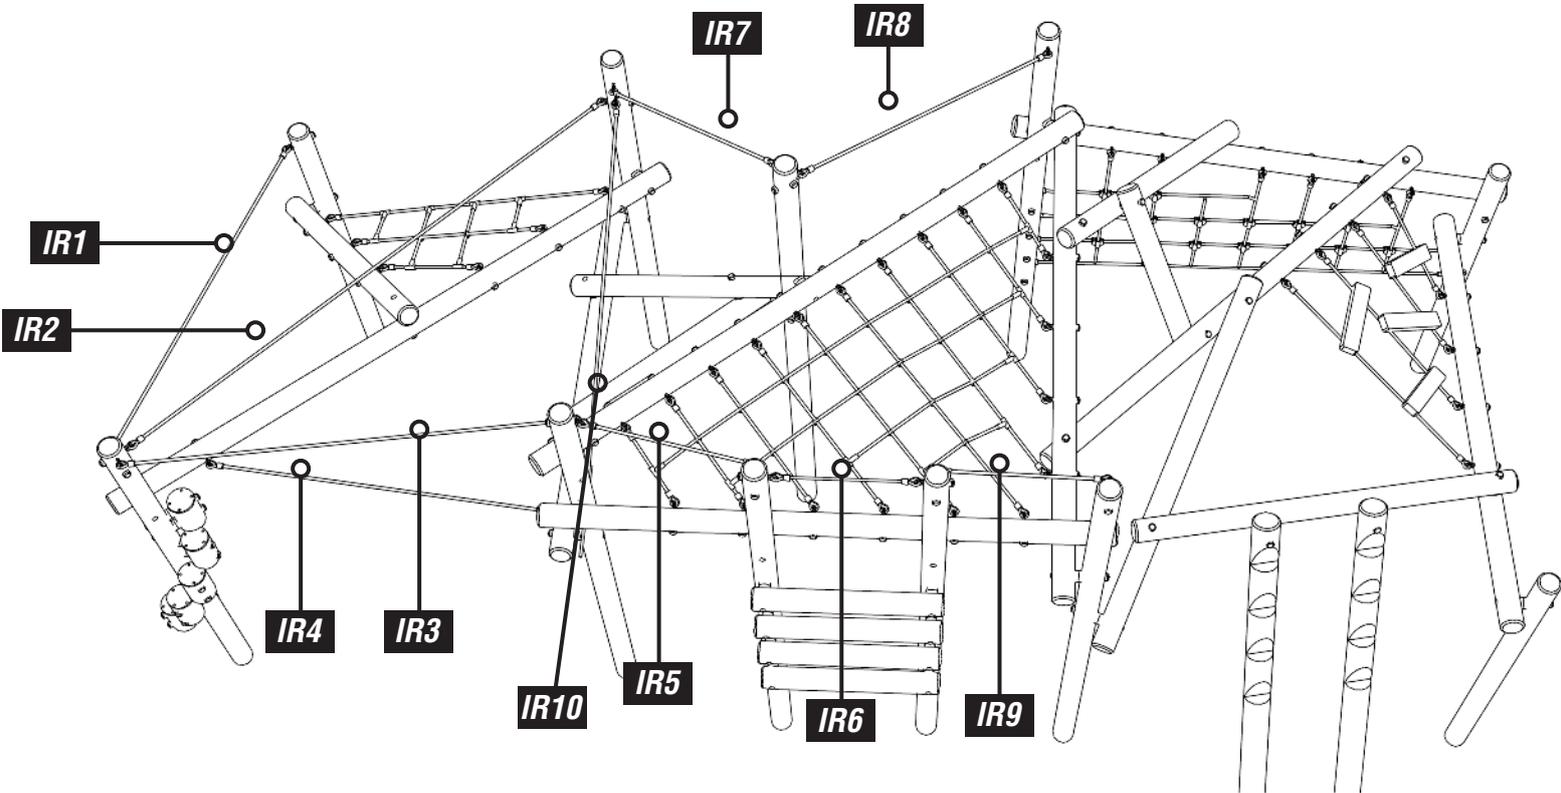

**IR 1**

1 x rope @ 2562mm  
(OST / 2172mm ROPE / OST)

**IR 2**

1 x rope @ 3446mm  
(OST / 3056mm ROPE / OST)

**IR 3**

1 x rope @ 2576mm  
(OST / 2186mm ROPE / OST)

**IR 4**

1 x rope @ 2119mm  
(OST / 1729mm ROPE / OST)

**IR 5**

1 x rope @ 1151mm  
(OST / 761mm ROPE / OST)

**IR 6**

1 x rope @ 931.5mm  
(OST / 541.5mm ROPE / OST)

**IR 7**

1 x rope @ 1752mm  
(OST / 1362mm ROPE / OST)

**IR 8**

1 x rope @ 1839mm  
(OST / 1449mm ROPE / OST)


**IR 9**

1 x rope @ 1085mm  
(OST / 695mm ROPE / OST)

**IR 10**


1 x rope @ 2302mm  
(OST / 1912mm ROPE / OST)

# PARTS REQUIRED

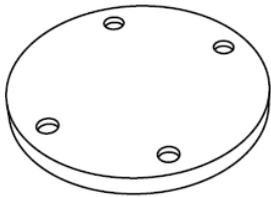

**x1**

**EKON "STEP"**

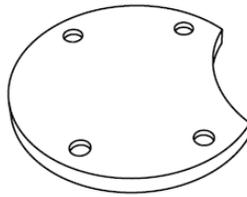


**x4**

**EKON "STEP" WITH CUT OUT**



*(To be used for NET+BLOCKS)* **x16**

**POLYFIX HALVES**

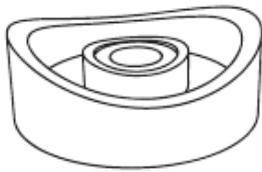

*(120 Label shown on inside)* **x100**

**120 DISTANCE PIECE**


*(140 Label shown on inside)* **x16**

**140 DISTANCE PIECE**



**x16**

**M6X60 SCREWS**

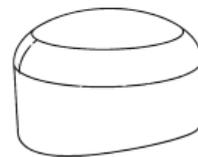

*(End caps with radius)* **x127**

**R60 COVERED END CAP**



**x24**

**M8X80 SCREWS**



**x45**

**M12X300 CUP SQUARE BOLTS**



*(M10 Used on eyebolts on nets/ropes)*

**M10 NYLOCS**

**x70**

**M12 NYLOCS**

**x60**



**x2**


**Handles**



*(\* or closest size available - not smaller)* **x15**


**M12X320\* CUP SQUARE BOLTS**

# TOOLS REQUIRED


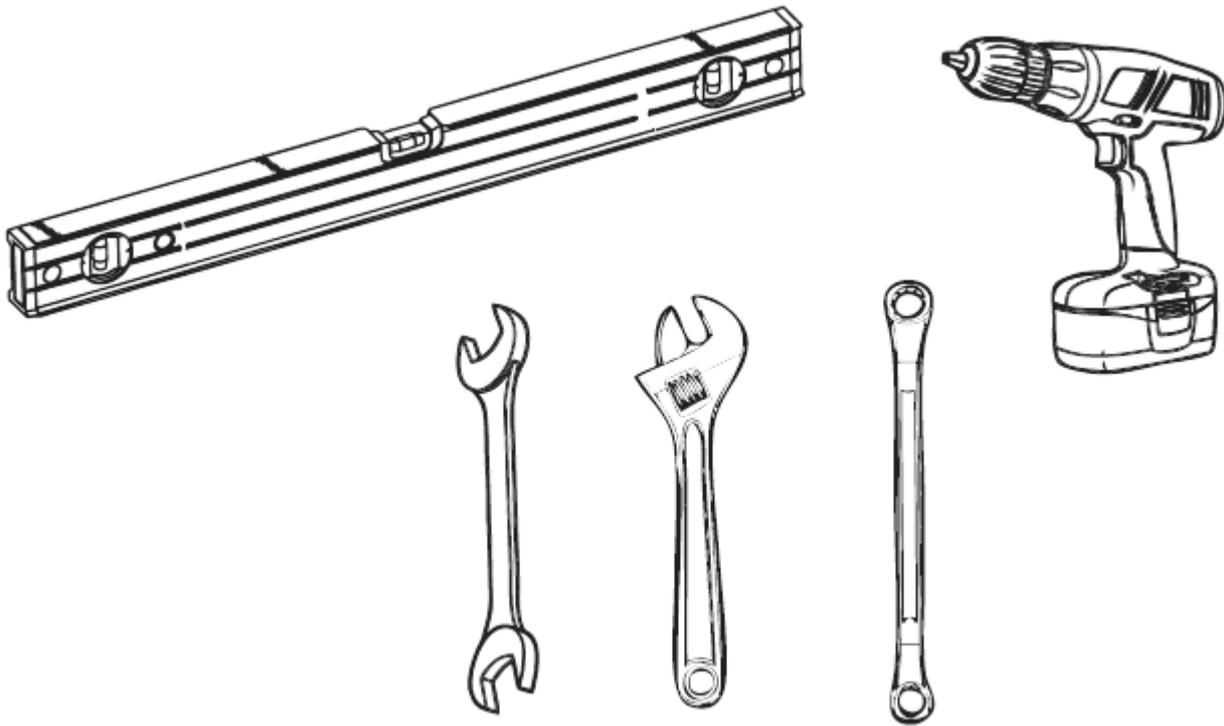


## SPECIFIC JUNGLE CLIMBER TOOLS

**X1** (14mm - Long combination auger bit - 400mm)  
To be used for DRILLING THROUGH 2 x 125mm dia timbers

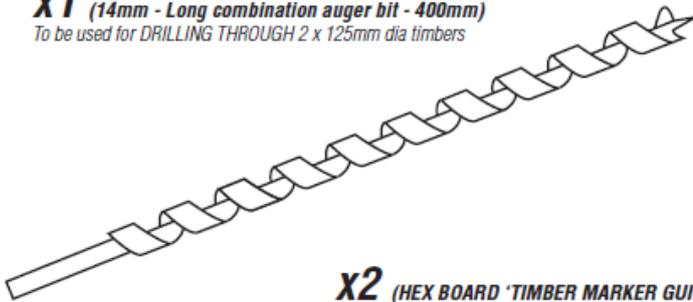


**X2** (HEX BOARD 'TIMBER MARKER GUIDE')  
To be used for MARKING the 125mm dia timbers

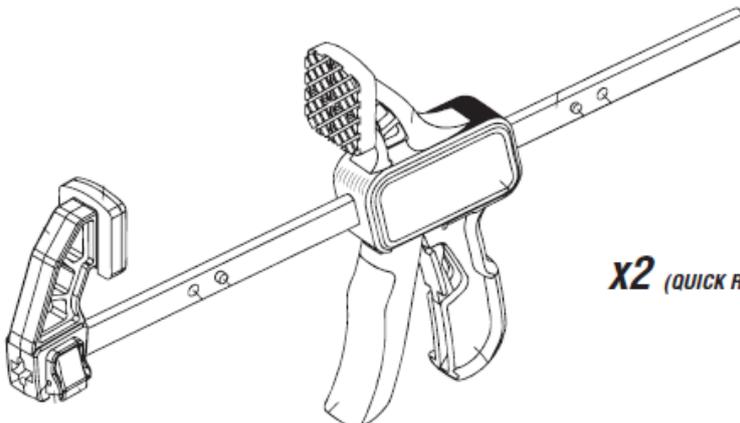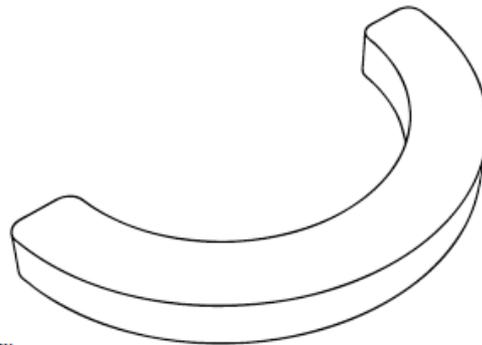

**X2** (QUICK RELEASE CLAMPS)

# FOUNDATION DETAILS

---

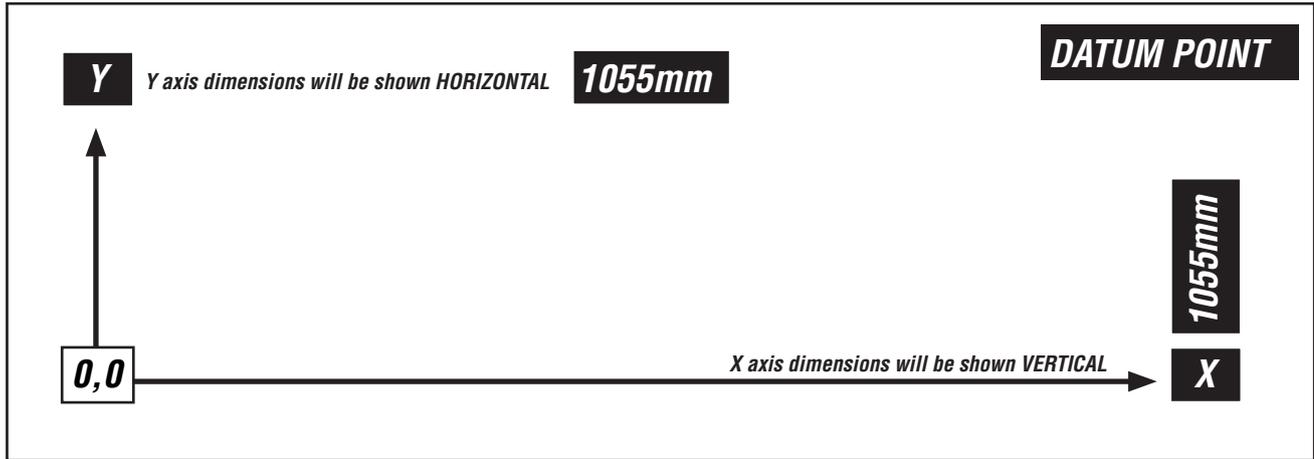

## Notes:

---

### 1) DATUM POINT

Foundation measurements will be taken from the DATUM POINT - this is CIRCLED IN RED

### 2) GROUND LEVEL

All measurements for DEPTHS and HEIGHTS are taken from FINISHED GROUND LEVEL - this is labeled as FGL

### 4) DIRECTION OF HOLES

Ensure any PRE DRILLED HOLES are positioned as shown - Dashed lines show holes going in the opposite direction

### 5) FOUNDATION HOLES

Foundation holes should measure 400mm X 400mm X 750mm. (750mm below FINISHED GROUND LEVEL - IF WET POUR / MULCH / PLAYSAFE is to be laid, amend as required.

### 6) FOUNDATION HOLES HIGHLIGHTED IN A BOX


Boxed Foundation holes should measure 400mm X 600mm X 750mm. (750mm below FINISHED GROUND LEVEL - IF WET POUR / MULCH / PLAYSAFE is to be laid, amend as required.

# FOUNDATION DETAILS


FOUNDATIONS 400mm x 400mm x 750

**RED FOUNDATIONS** 400mm x 600mm x 750 (SLIDE - JIG105 ONLY)

\*REMEMBER - 750mm below FINISHED GROUND LEVEL - if WETPOUR / MULCH / PLAYSAFE is to be laid amend as required

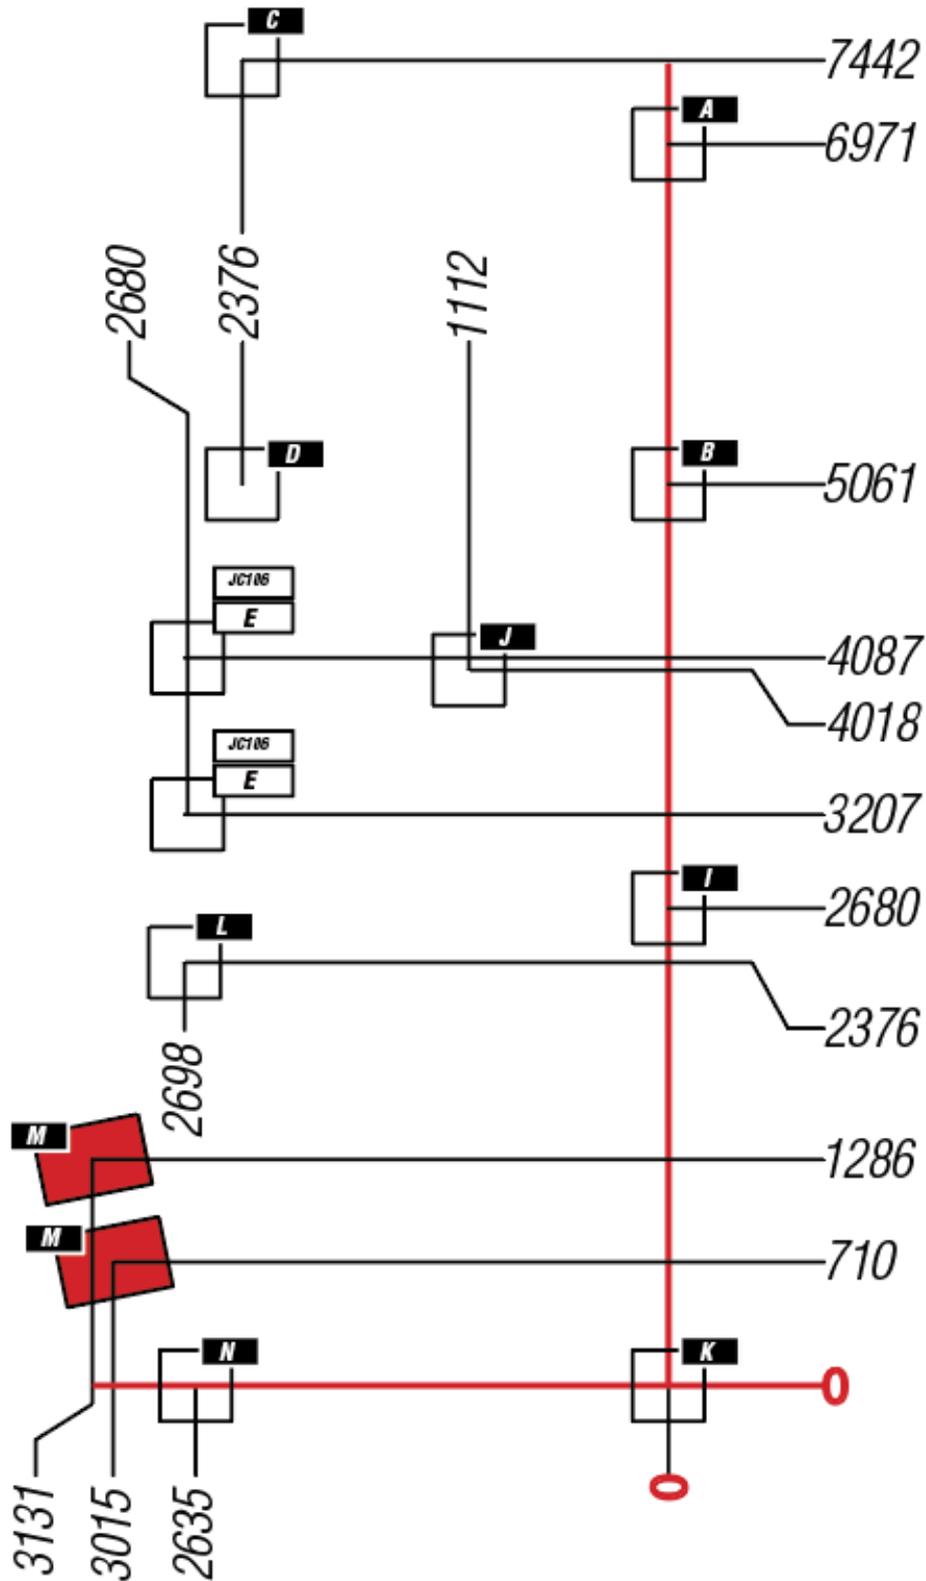

# FOUNDATION DETAILS

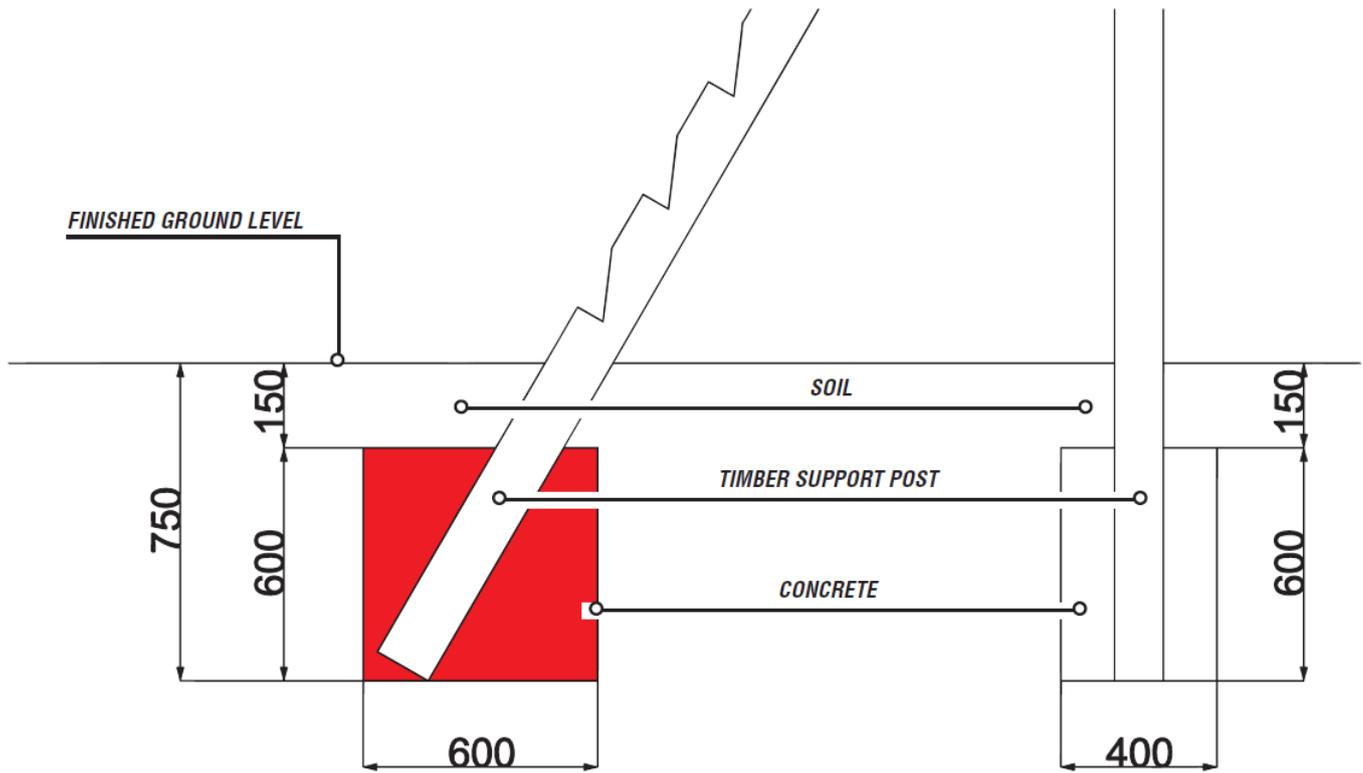


**M**

ARE SET AT A 45 degree ANGLE - the 'edge' of the 600mm measurement is where the post meets the ground level  
ALL OTHER VERTICAL TIMBERS ARE POSITIONED UPRIGHT

# SURFACING DETAILS


----- = MINIMUM SPACE  
————— = SURFACE AREA

**RED DIMENSIONS** CENTRE OF  
VERTICAL TIMBERS

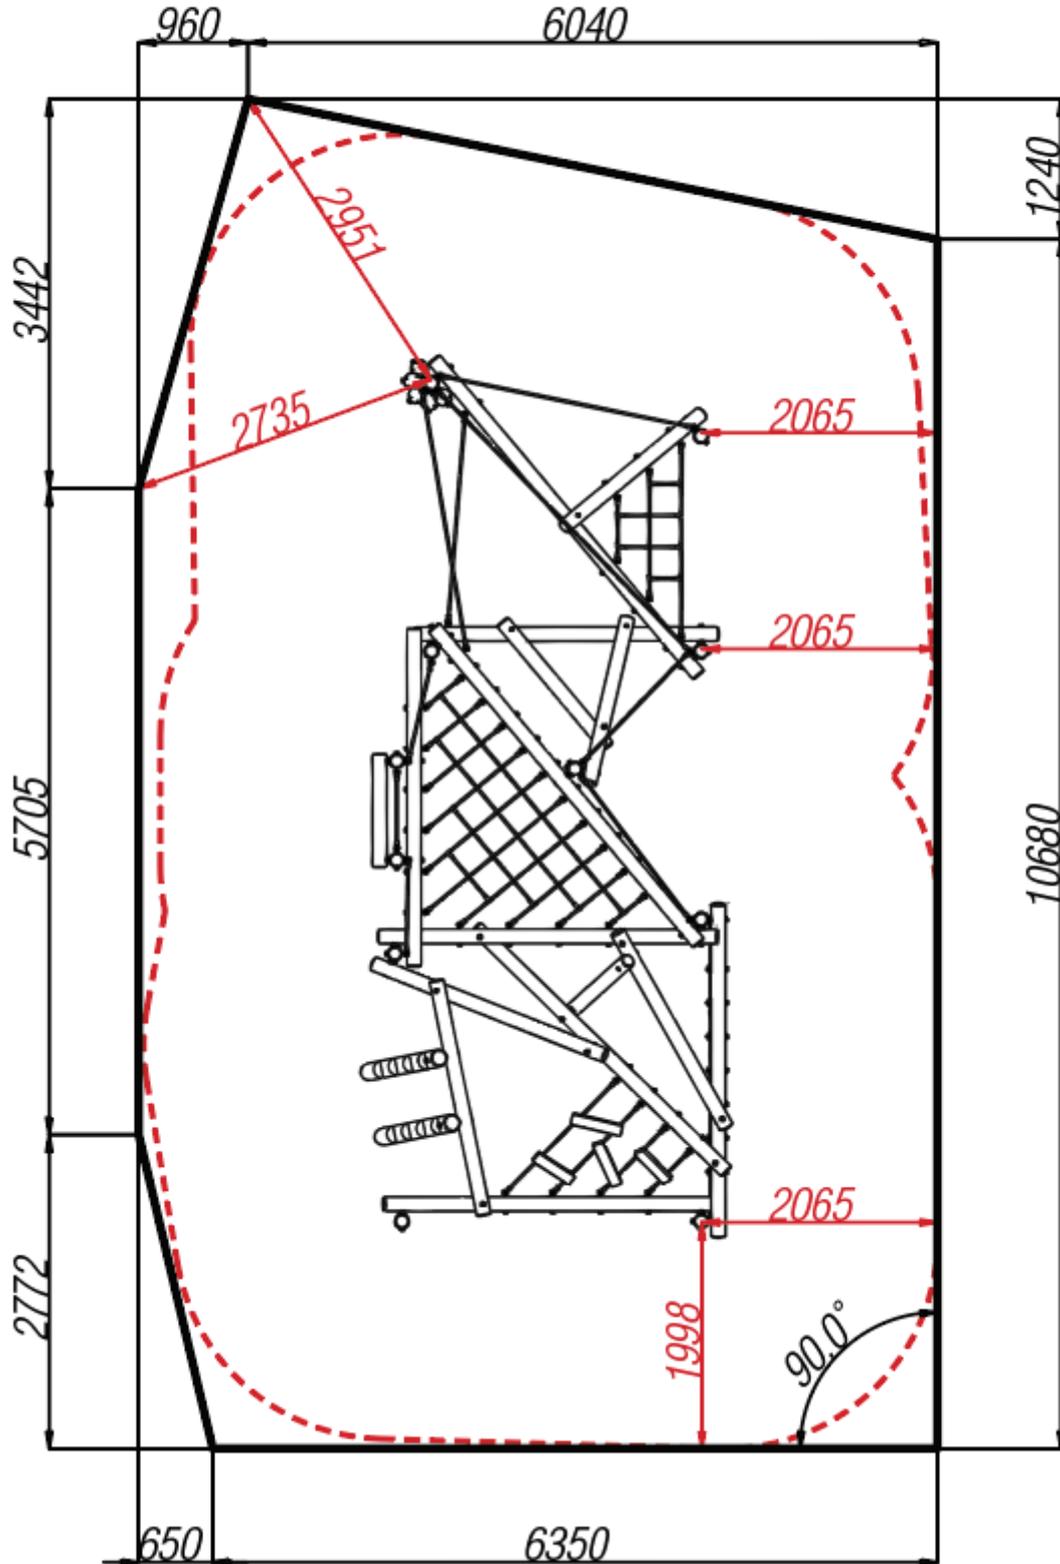

**1**


**Construct the main assembly BEFORE laying concrete foundations STEPS 1 to 19**

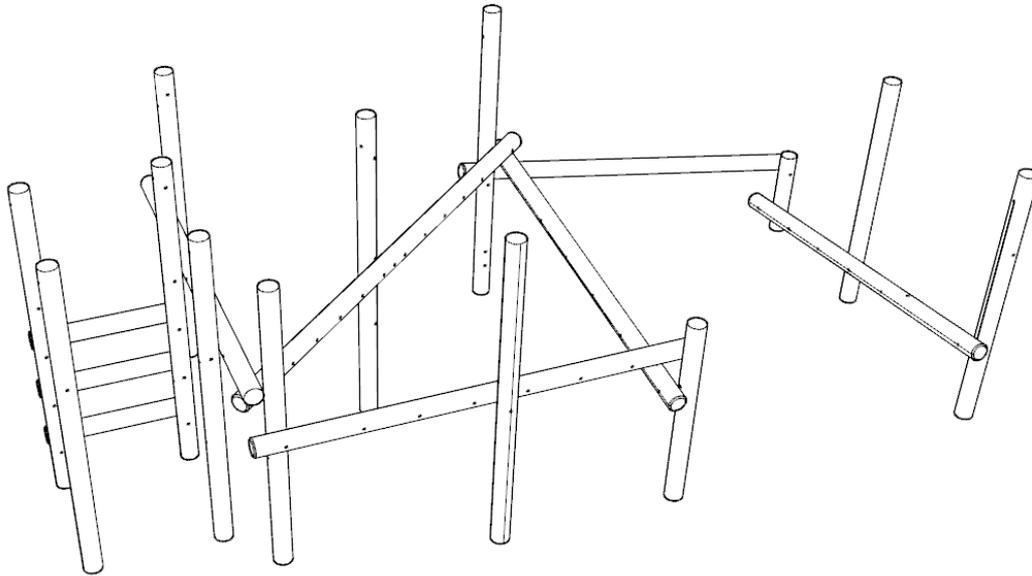

**NOTES:**

**- All timbers bolted together MUST include 2 x DISTANCE PIECES**

*TIMBERS DO NOT BOLT DIRECTLY TO EACH OTHER*

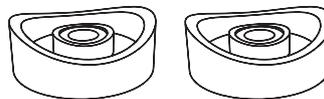

**- Install STEP by STEP**

*TO ENSURE THE CORRECT HOLES ARE USED AT EACH STAGE*

**- TAKE EXTRA CARE WHEN DRILLING**

*TAKE EXTRA PRECAUTION WHEN DRILLING THE TIMBERS - ONCE POSITIONED REMEMBER TO ALLOW FOR THE DISTANCE PIECES AND MARK ACCORDINGLY (distance between timbers 27mm)*

**- DRILLING THROUGH THE CENTRE**

*ALTHOUGH SOME HOLES ARE DRILLED AT AN ANGLE - THE HOLE IS DRILLED THROUGH THE CENTRE OF THE TIMBER (LEAVING 62.5mm either side)*




# INSTALLATION INSTRUCTIONS

**2**

## Position the N / L / K / I - timbers


VERTICAL TIMBERS (VT) are CHAMFERED at one end only - ENSURE THIS END IS NOT IN THE GROUND

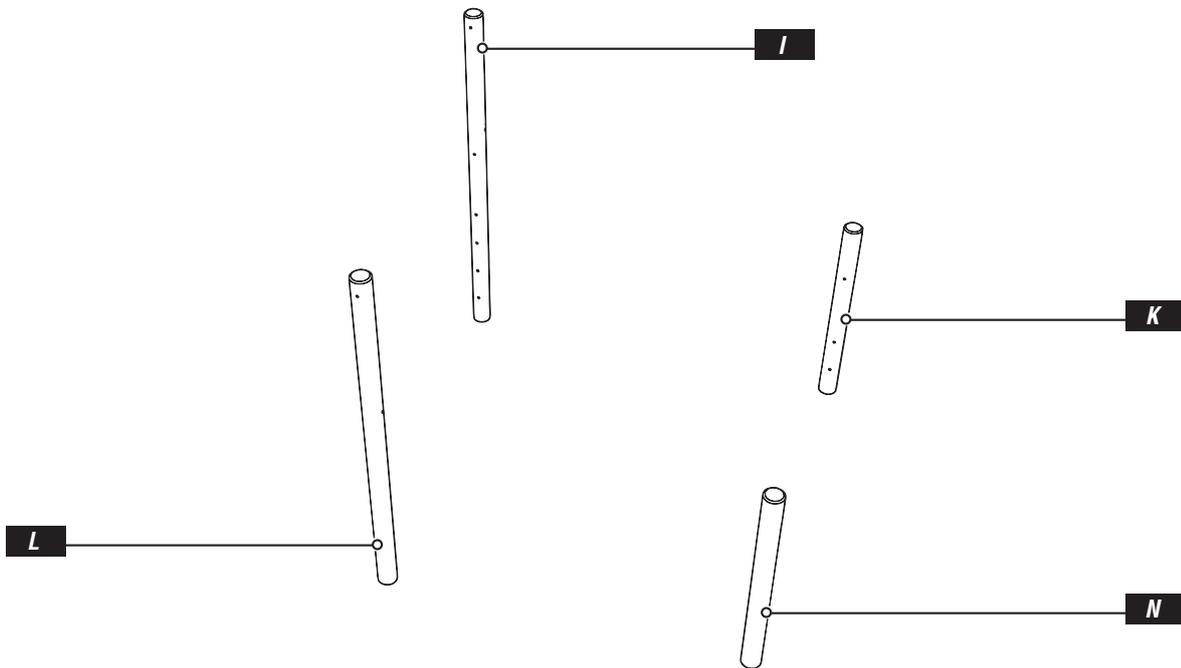

**3**

## Attach U to N / K - timbers

Using 2 x M12 x 290\* CUP SQUARE BOLTS / 2 x 'NYLOCS' M12 / 2 x Covered end cap R60 / 4 x 120 Distance pieces

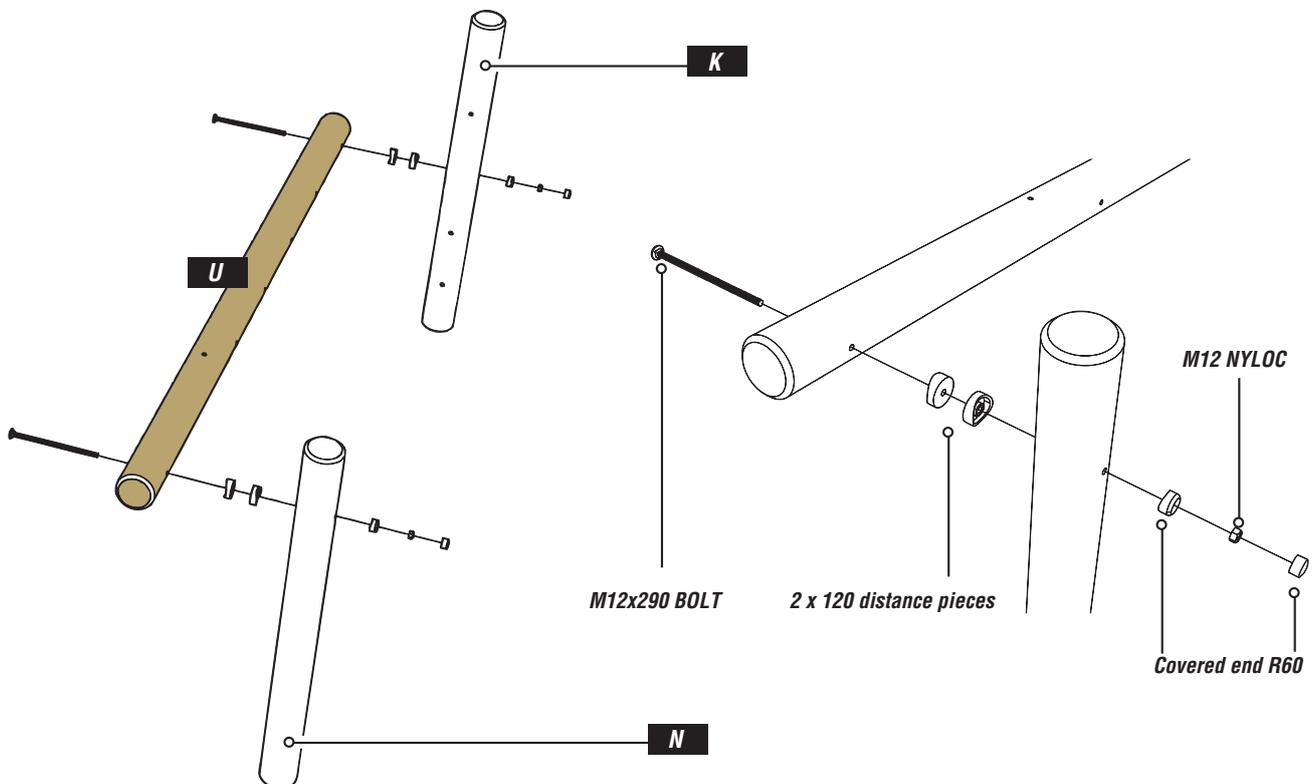


# INSTALLATION INSTRUCTIONS

**4**

## ENSURE the positioning of U is correct


The 4 remaining holes in U are positioned closer to the K - timber

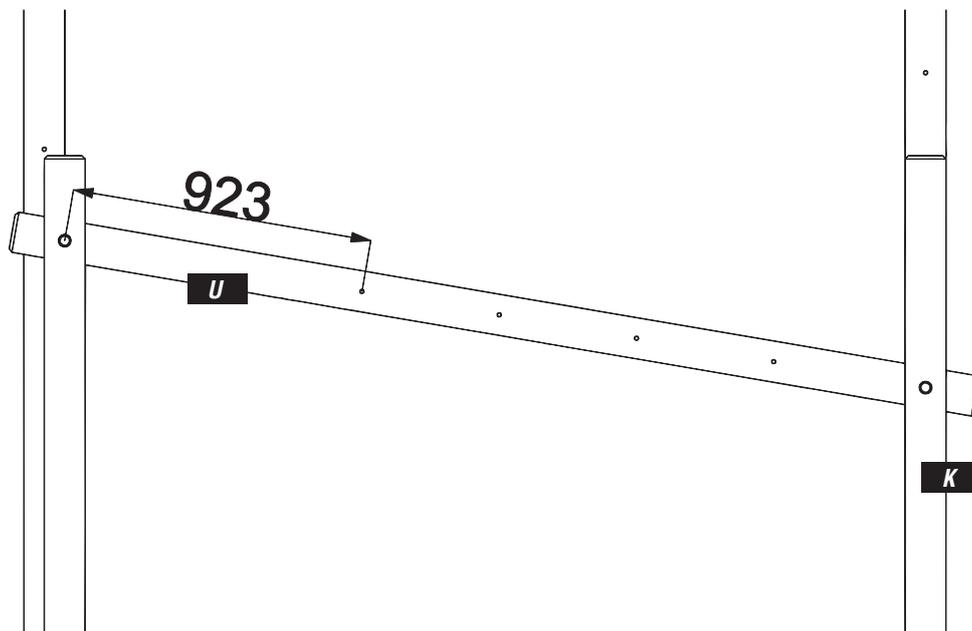

**5**

## Attach S to K / I - timbers

Using 2 x M12 x 290\* CUP SQUARE BOLTS / 2 x 'NYLOCS' M12 / 2 x Covered end cap R60 / 4 x 120 Distance pieces

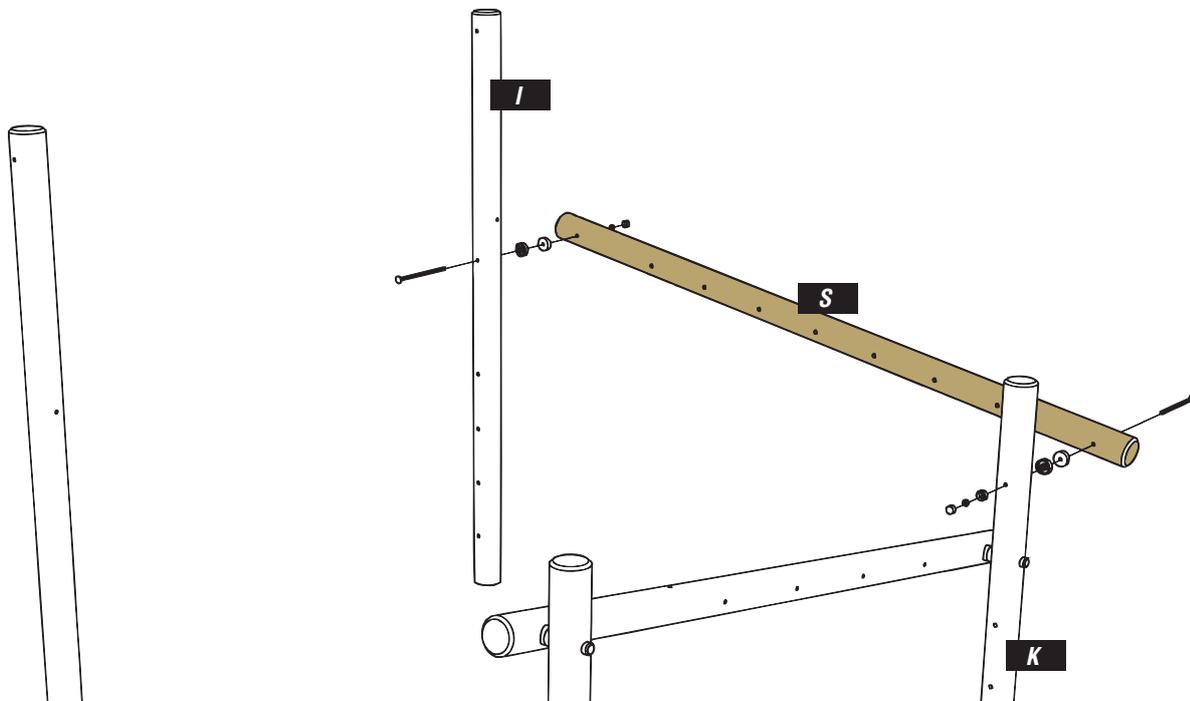


# INSTALLATION INSTRUCTIONS

6

## ENSURE the positioning of S is correct


There is a remaining HIGHER hole in I - timber (in the opposite direction) - CIRCLED RED BELOW

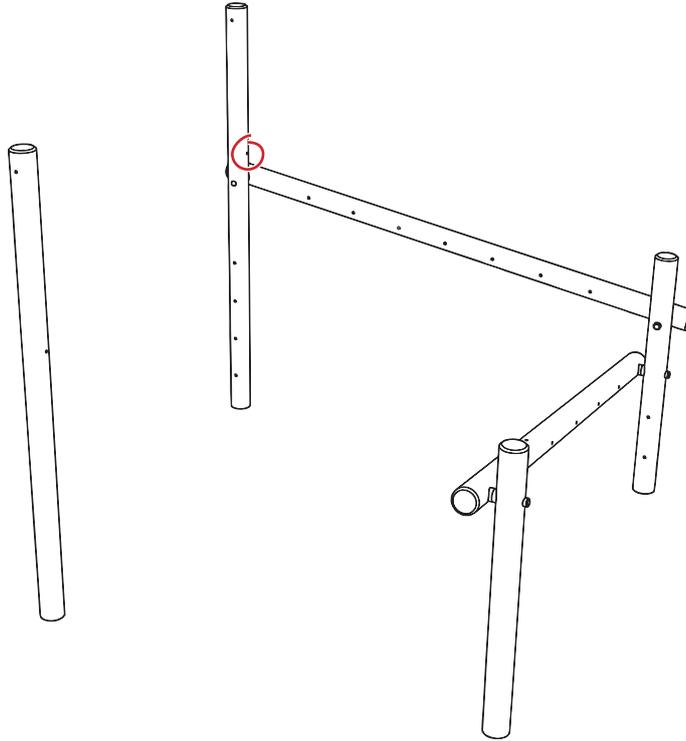

7

## Attach T to I / L - timbers

Using 2 x M12 x 290\* CUP SQUARE BOLTS / 2 x 'NYLOCS' M12 / 2 x Covered end cap R60 / 4 x 120 Distance pieces

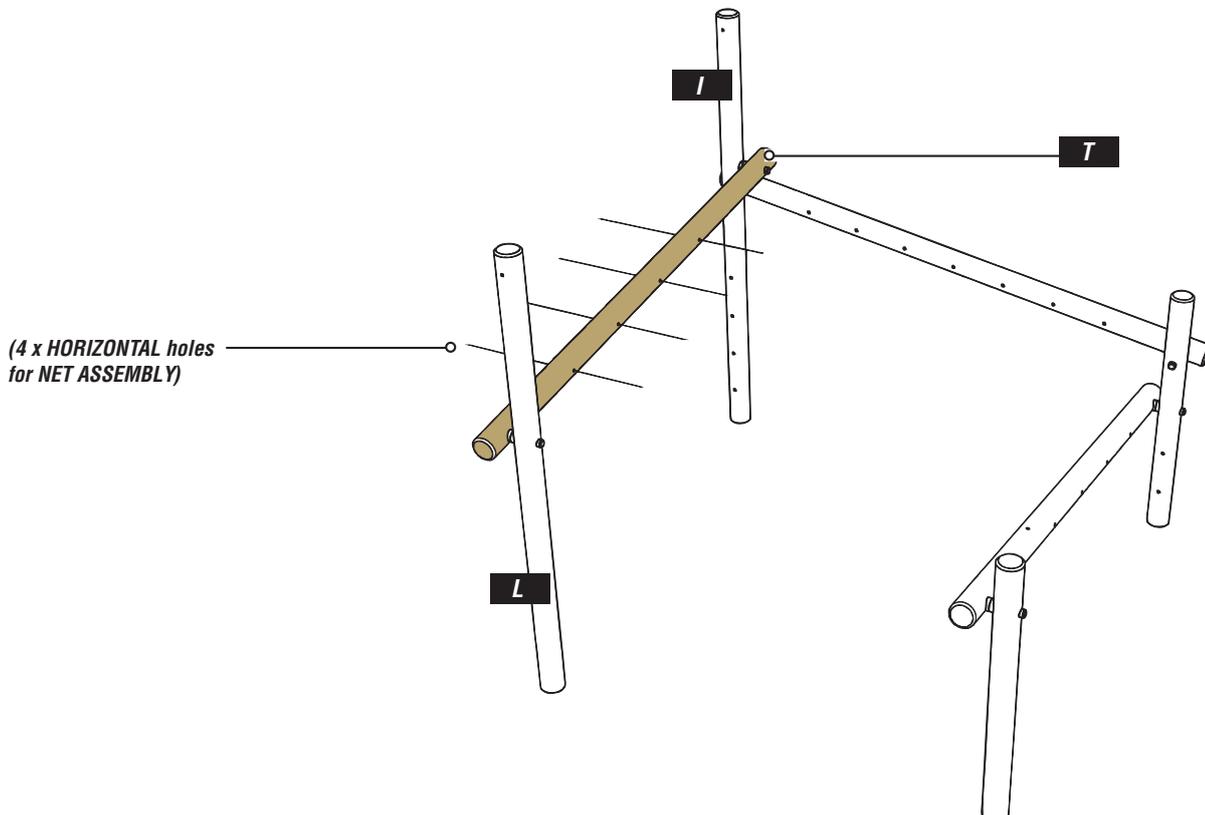


# INSTALLATION INSTRUCTIONS

8

## Position the B / J / D - timbers


VERTICAL TIMBERS (VT) are CHAMFERED at one end only - ENSURE THIS END IS NOT IN THE GROUND

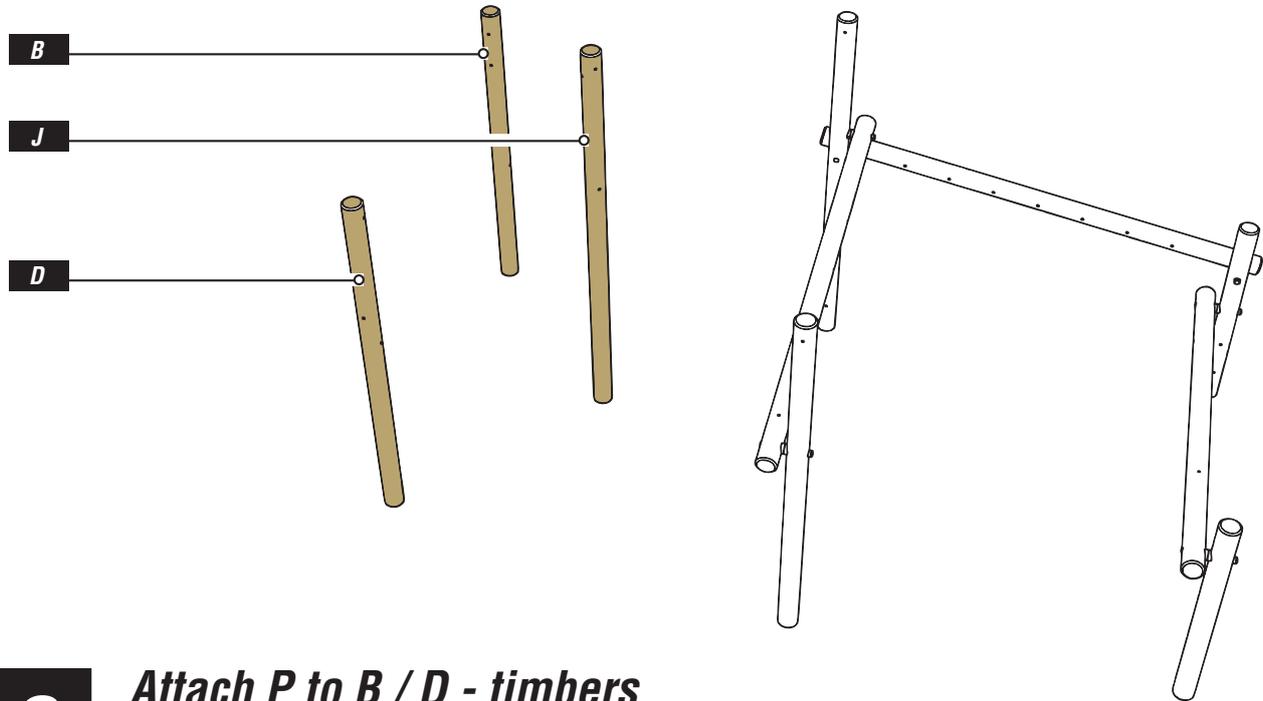

9

## Attach P to B / D - timbers

Using 2 x M12 x 290\* CUP SQUARE BOLTS / 2 x 'NYLOCS' M12 / 2 x Covered end cap R60 / 4 x 120 Distance pieces

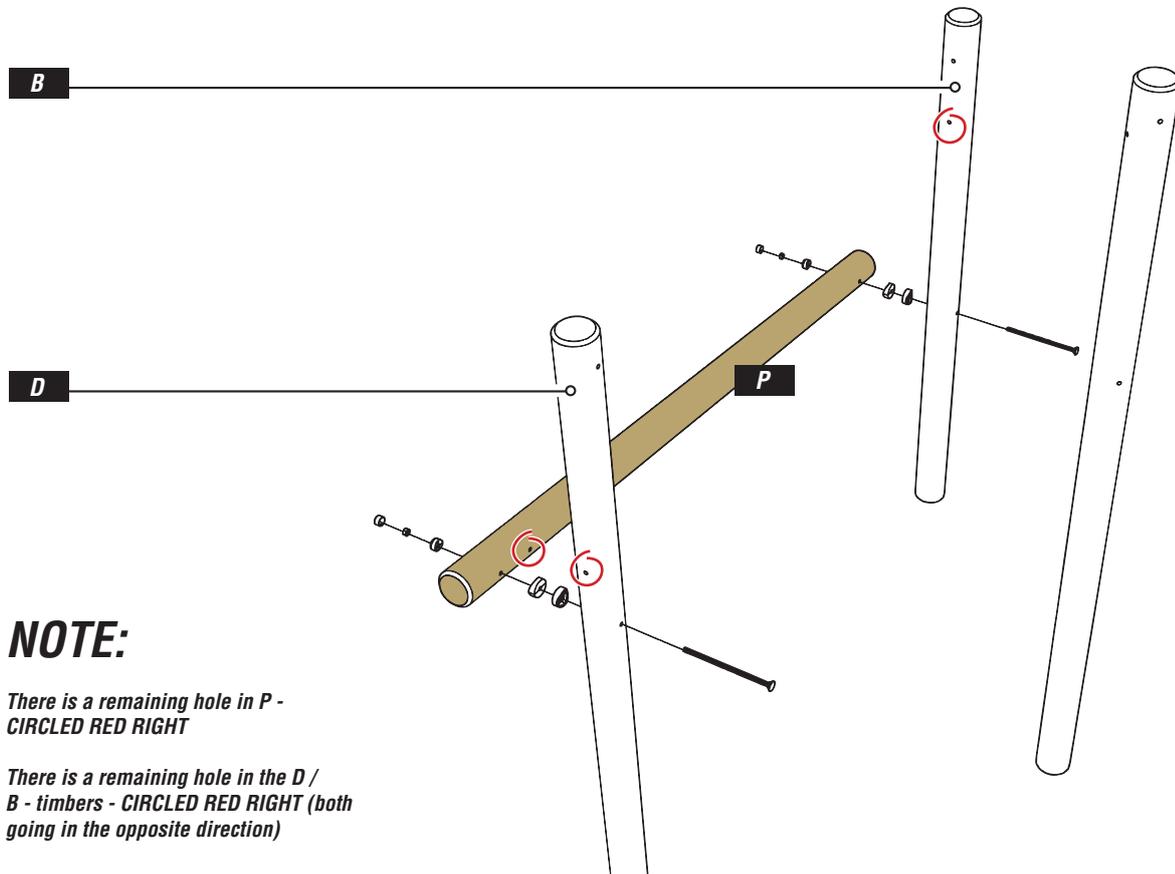

### NOTE:

There is a remaining hole in P -  
CIRCLED RED RIGHT


There is a remaining hole in the D /  
B - timbers - CIRCLED RED RIGHT (both  
going in the opposite direction)

# INSTALLATION INSTRUCTIONS

**10**

## Attach Q to D / J / I - timbers


Using 3x M12 x 290\* CUP SQUARE BOLTS / 3 x 'NYLOCS' M12 / 3 x Covered end cap R60 / 6 x 120 Distance pieces

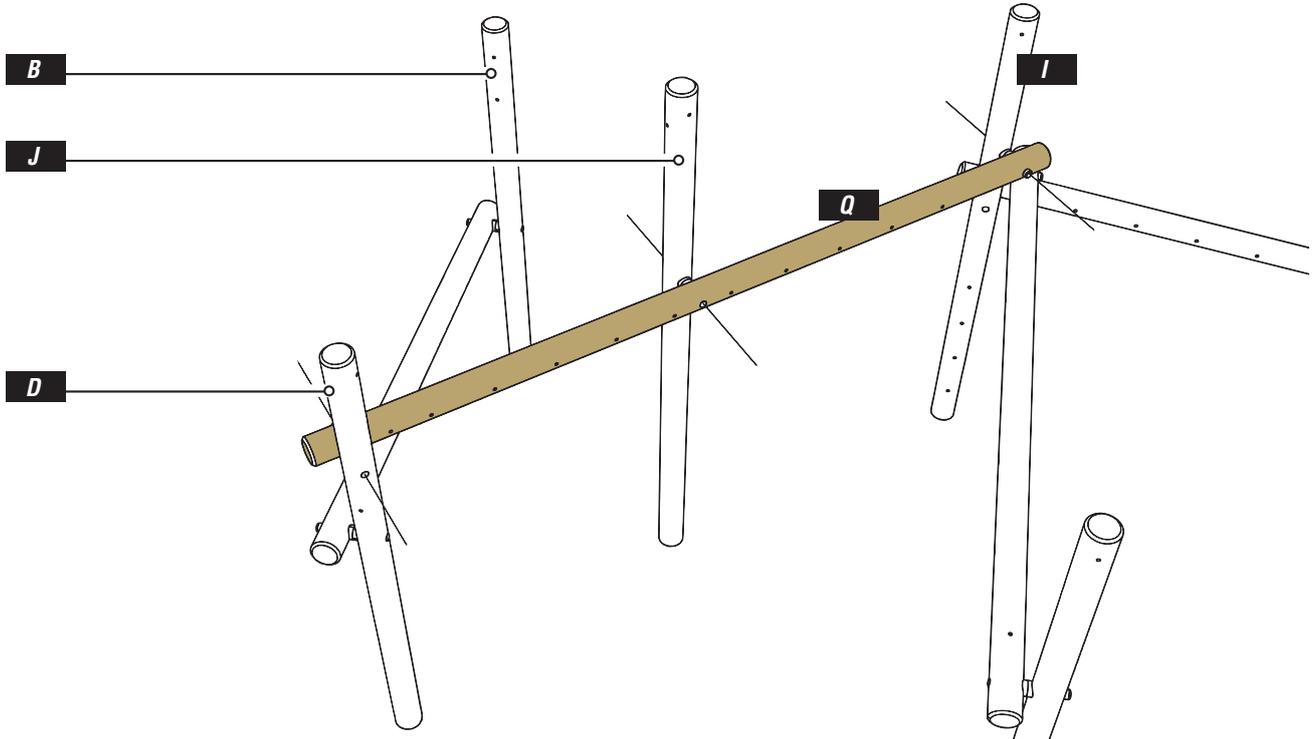

**11**


## ENSURE the positioning of the Q is correct

Q - timber is bolted through 8th hole onto the J - timber CIRCLED RED BELOW (8th from the LEFT)

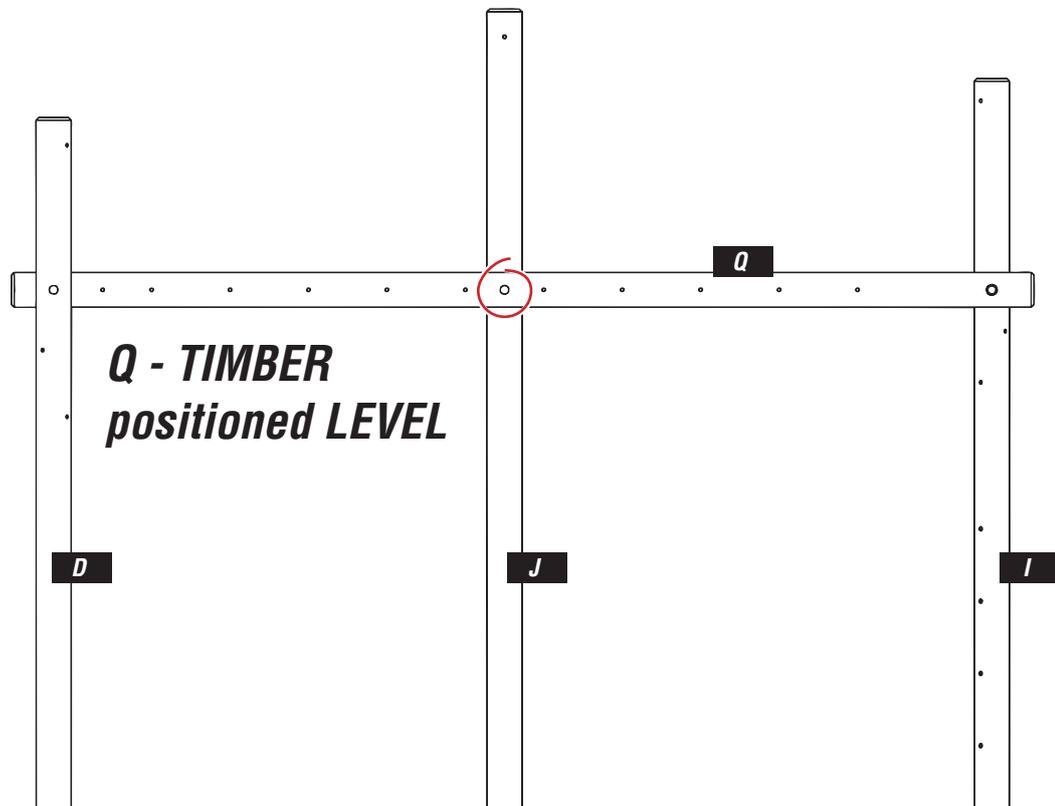


# INSTALLATION INSTRUCTIONS

**12** DRILL D / I - timbers, using the PRE-DRILLED HOLE in the Q - timber as a guide

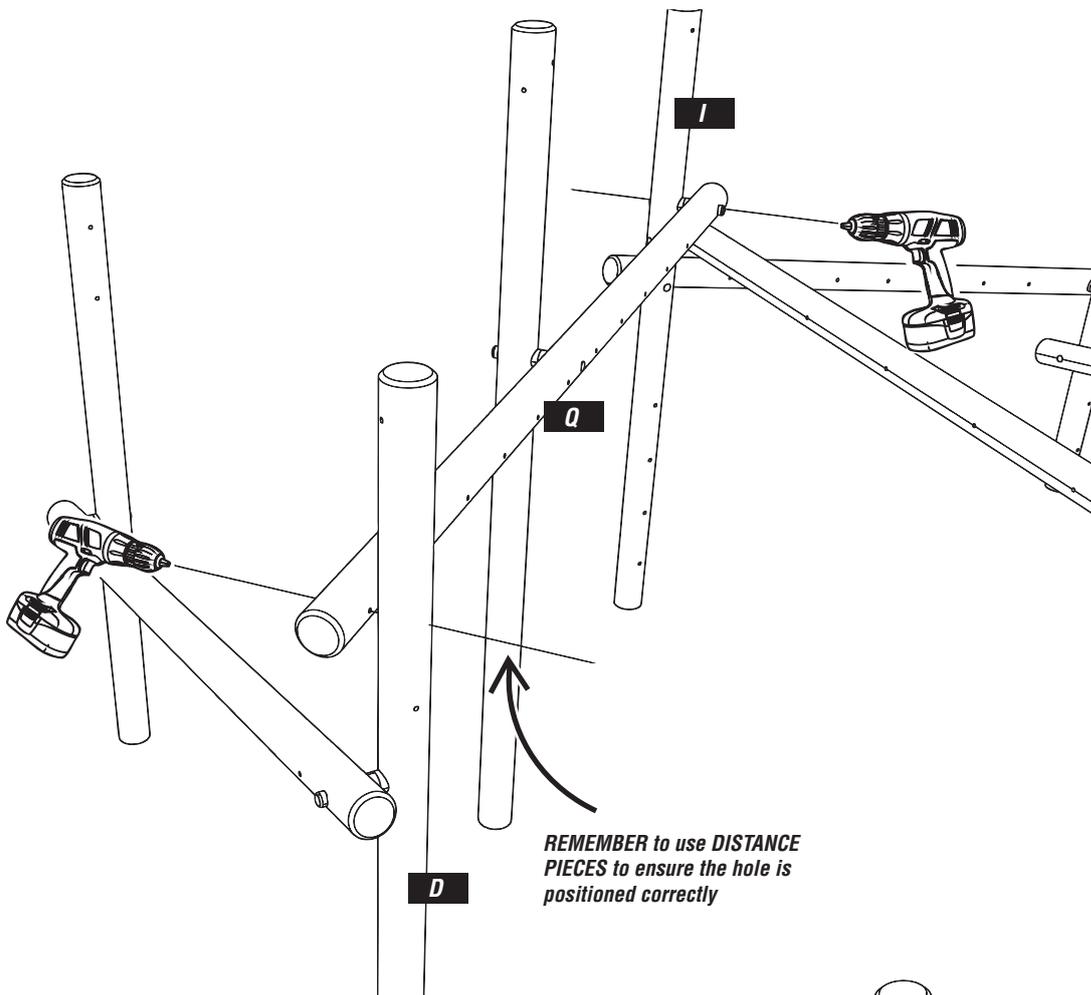

**13** Attach Q to the D / I timbers

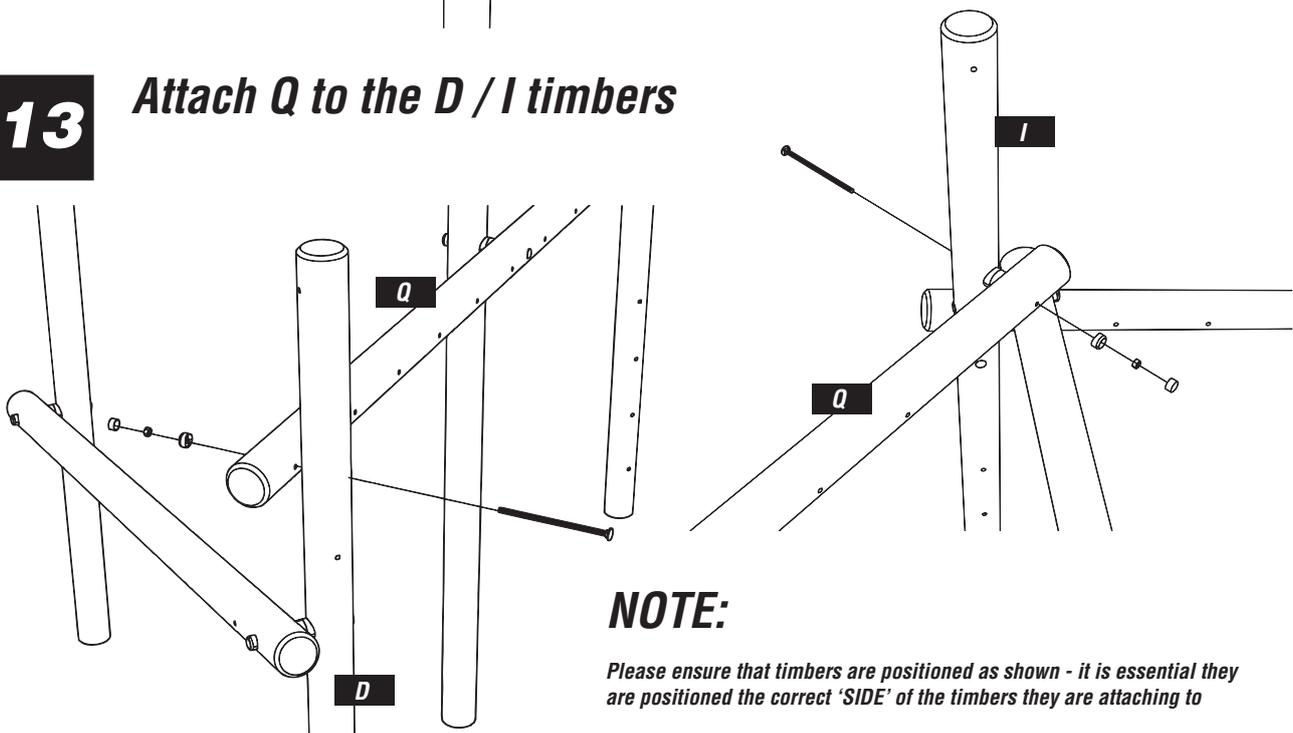


# INSTALLATION INSTRUCTIONS

**14**

## Position the A / C - timbers


VERTICAL TIMBERS (VT) are CHAMFERED at one end only - ENSURE THIS END IS NOT IN THE GROUND

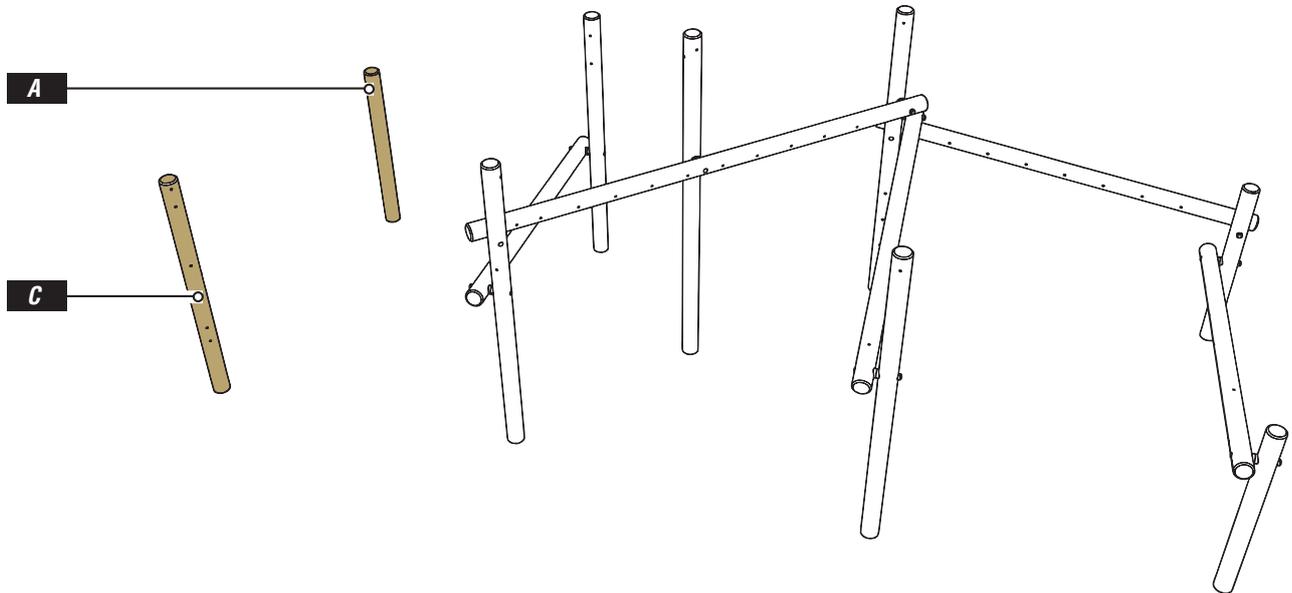

**15**

## Attach O to VT1 timber

Using 1 x M12 x 290\* CUP SQUARE BOLTS / 1 x 'NYLOCS' M12 / 1 x Covered end cap R60 / 2 x 120 Distance pieces  
7th HOLE UP circled red below

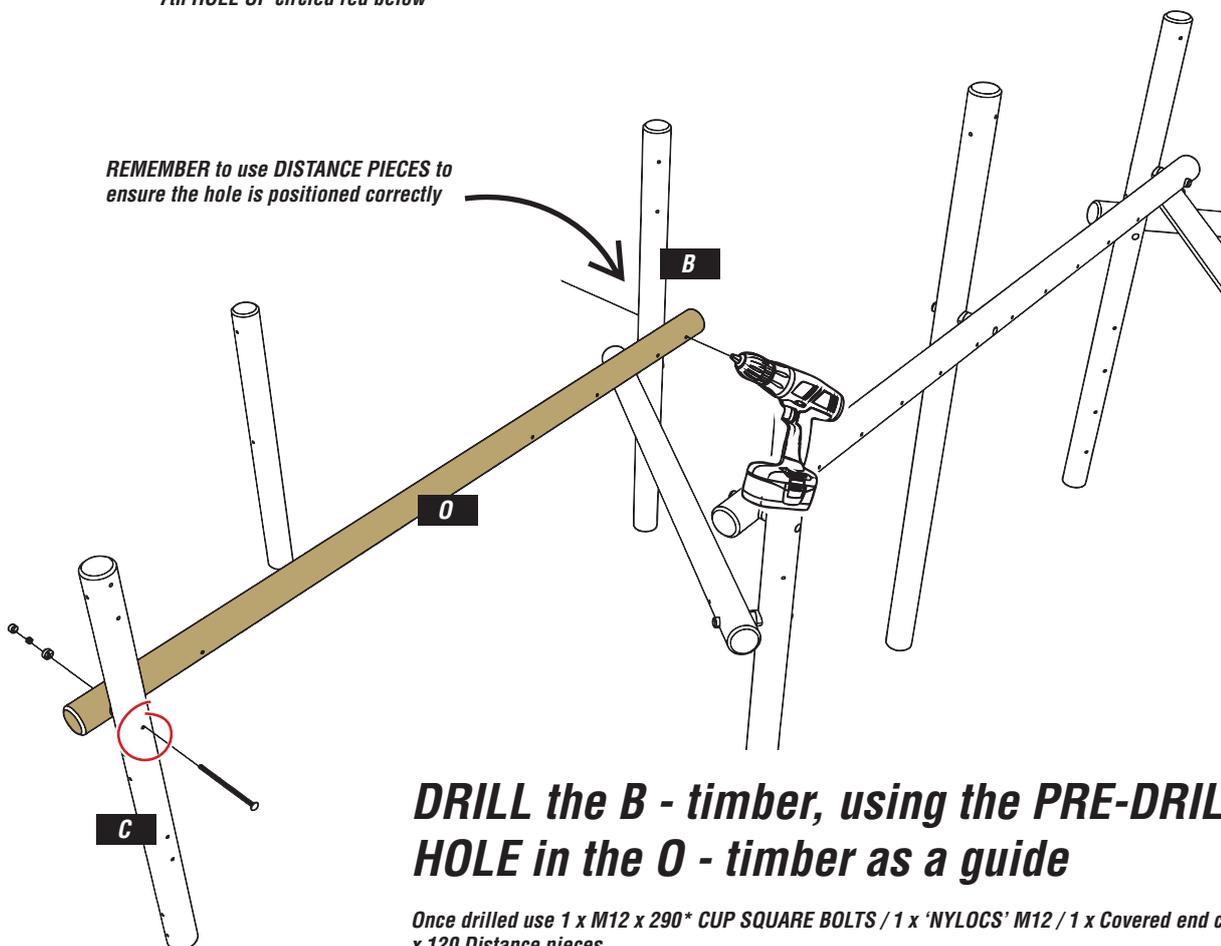

**DRILL the B - timber, using the PRE-DRILLED HOLE in the O - timber as a guide**


Once drilled use 1 x M12 x 290\* CUP SQUARE BOLTS / 1 x 'NYLOCS' M12 / 1 x Covered end cap R60 / 2 x 120 Distance pieces

# INSTALLATION INSTRUCTIONS

**16**

**ENSURE the positioning of the O-timber is correct**


The O - timber is bolted through 1st HOLE (either end) onto the C / B timbers CIRCLED RED BELOW

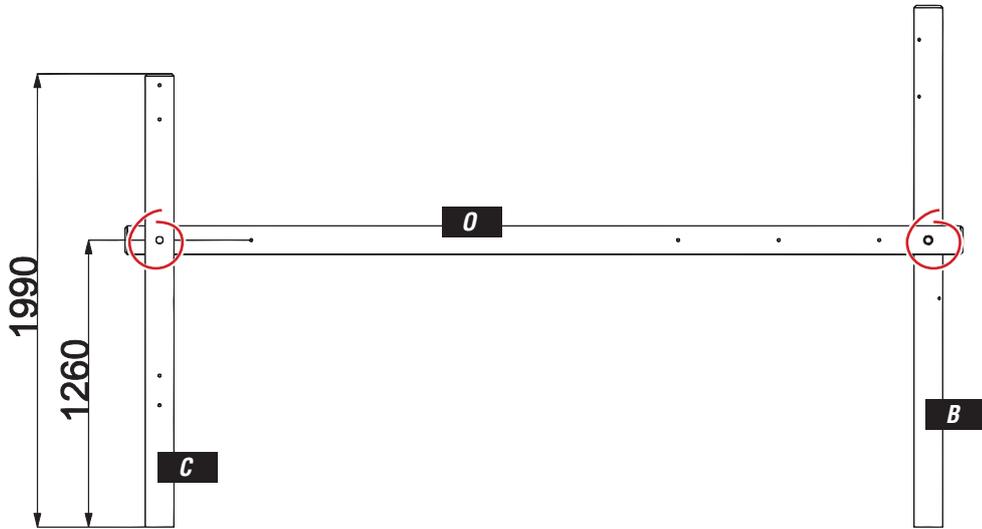

**17**

**Use the 'TIMBER MARKER GUIDE' to mark the O - Timber**

Mark a line around the O - timber - 1878mm from the end as shown below

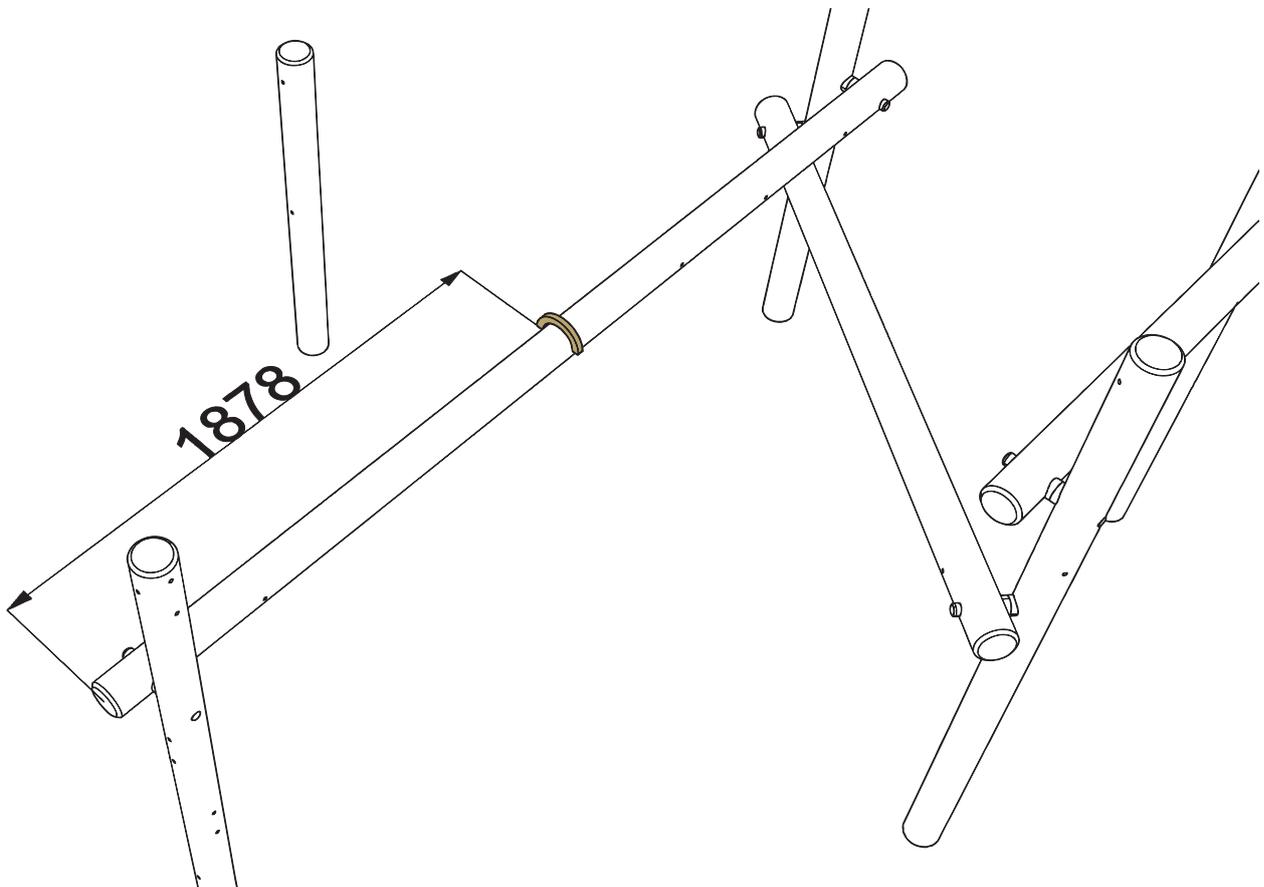


# INSTALLATION INSTRUCTIONS

**18**

## Attach V - timber to A - timber

Using 1 x M12 x 290\* CUP SQUARE BOLTS / 1 x 'NYLOGS' M12 / 1 x Covered end cap R60 / 2 x 120 Distance pieces

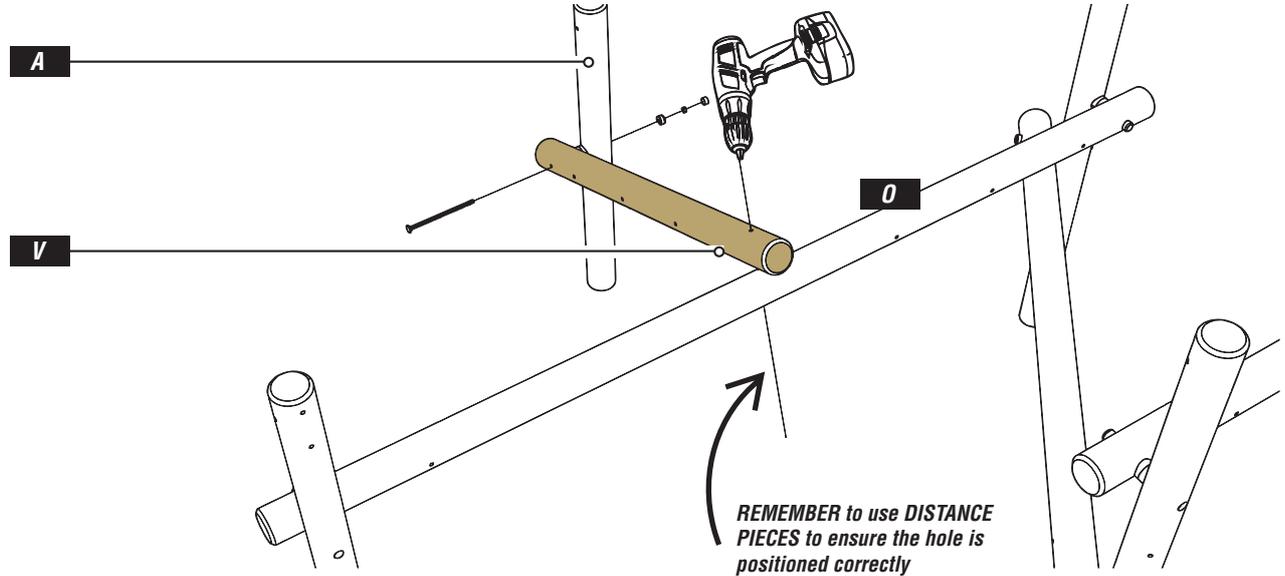


**DRILL O timber, using the PRE-DRILLED HOLE in the V - timber as a guide - line the hole up with the LINE marked in step 17**

Once drilled use 1 x M12 x 290\* CUP SQUARE BOLTS / 1 x 'NYLOGS' M12 / 1 x Covered end cap R60 / 2 x 120 Distance pieces

**19**

## The main assembly is now complete

Concrete foundations can now be laid - the main assembly means that ALL holes are 'LOCKED' in the correct position

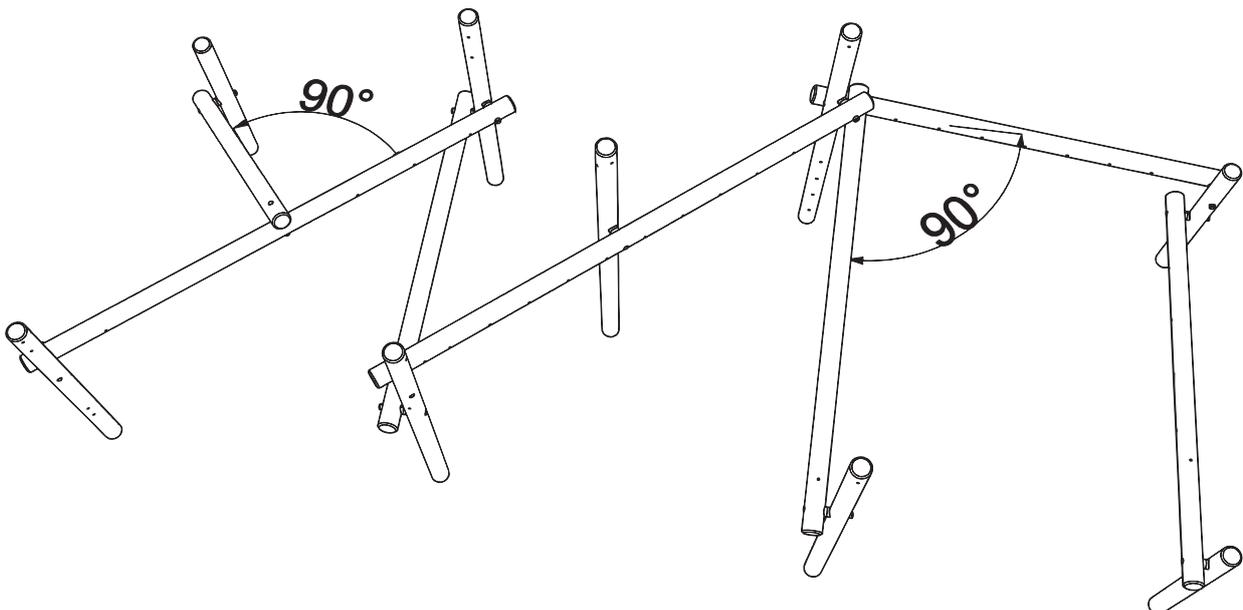


# INSTALLATION INSTRUCTIONS

**20**

## Attach R - timber to D - timber


Using 1 x M12 x 290\* CUP SQUARE BOLTS / 1 x 'NYLOCS' M12 / 1 x Covered end cap R60 / 2 x 120 Distance pieces

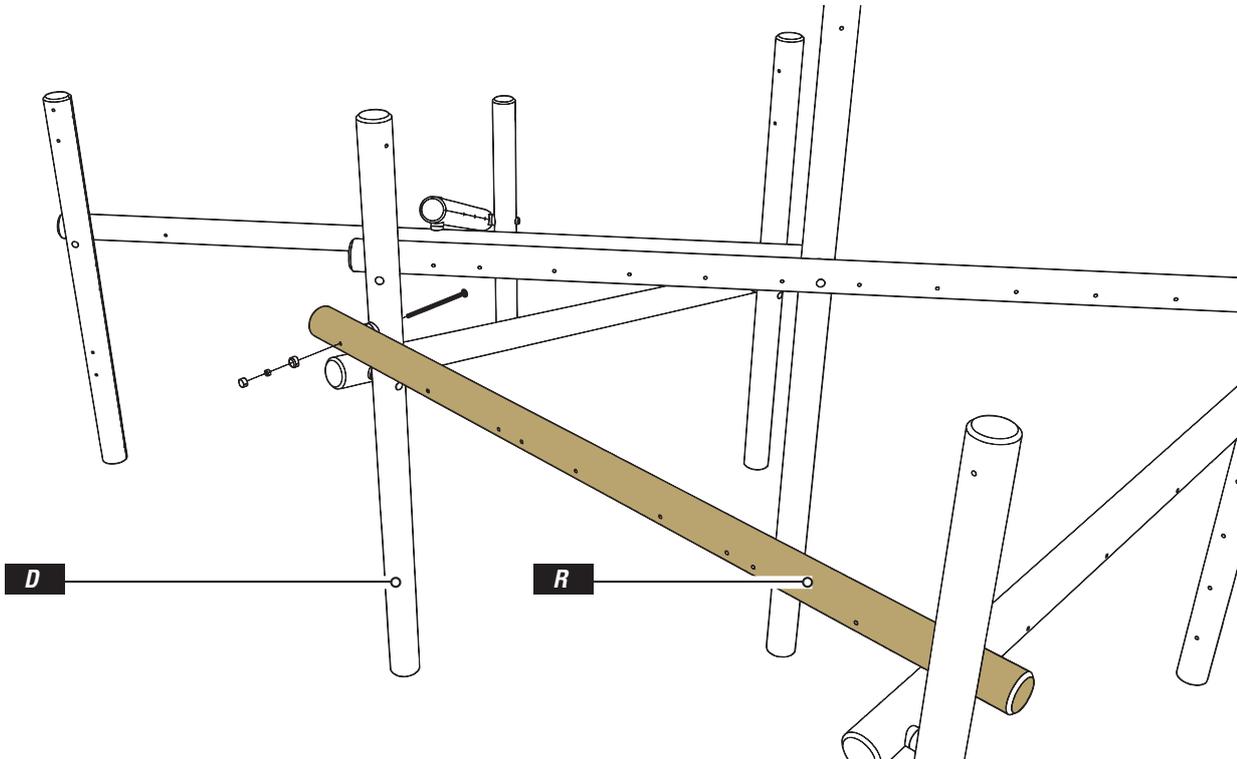

**21**

## ENSURE the positioning of the R is correct

The R - timber is bolted through 1st HOLE - 200mm FROM THE END into the D - timber CIRCLED RED BELOW


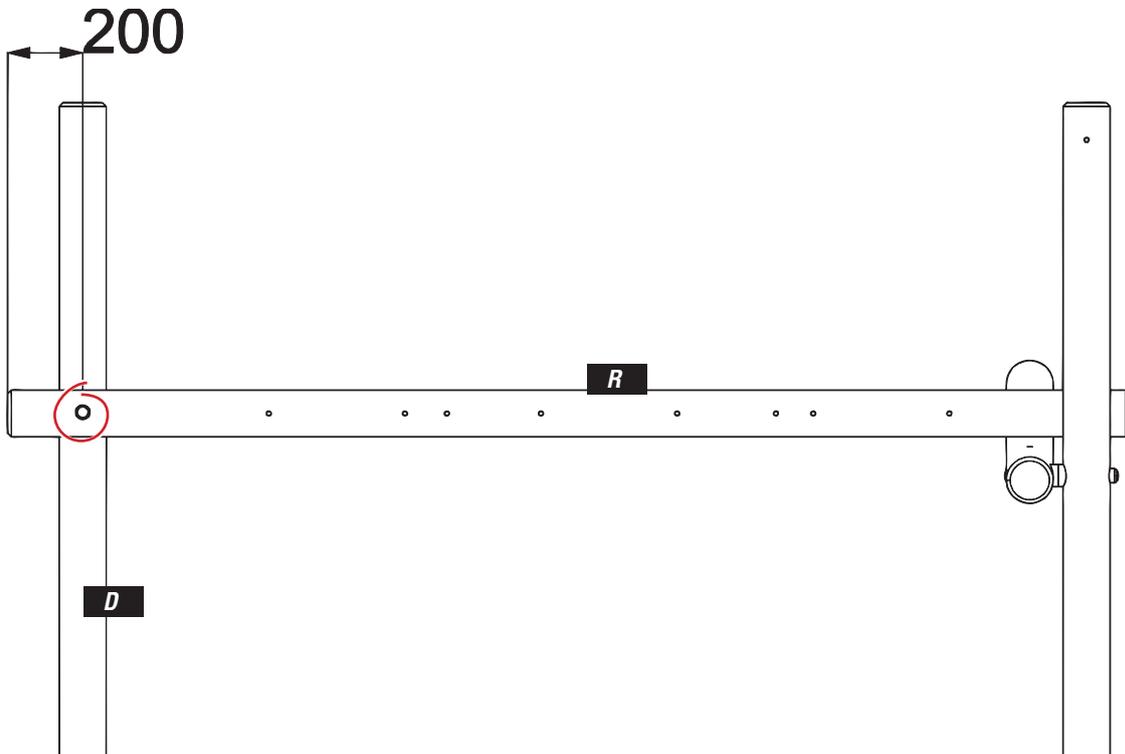


# INSTALLATION INSTRUCTIONS

**22**

**DRILL the R - timber, using the PRE-DRILLED HOLE in the T - timber as a guide**

Once drilled attach using 1 x M12 x 290\* CUP SQUARE BOLTS / 1 x 'NYLOCS' M12 / 1 x Covered end cap R60 / 2 x 120 Distance pieces

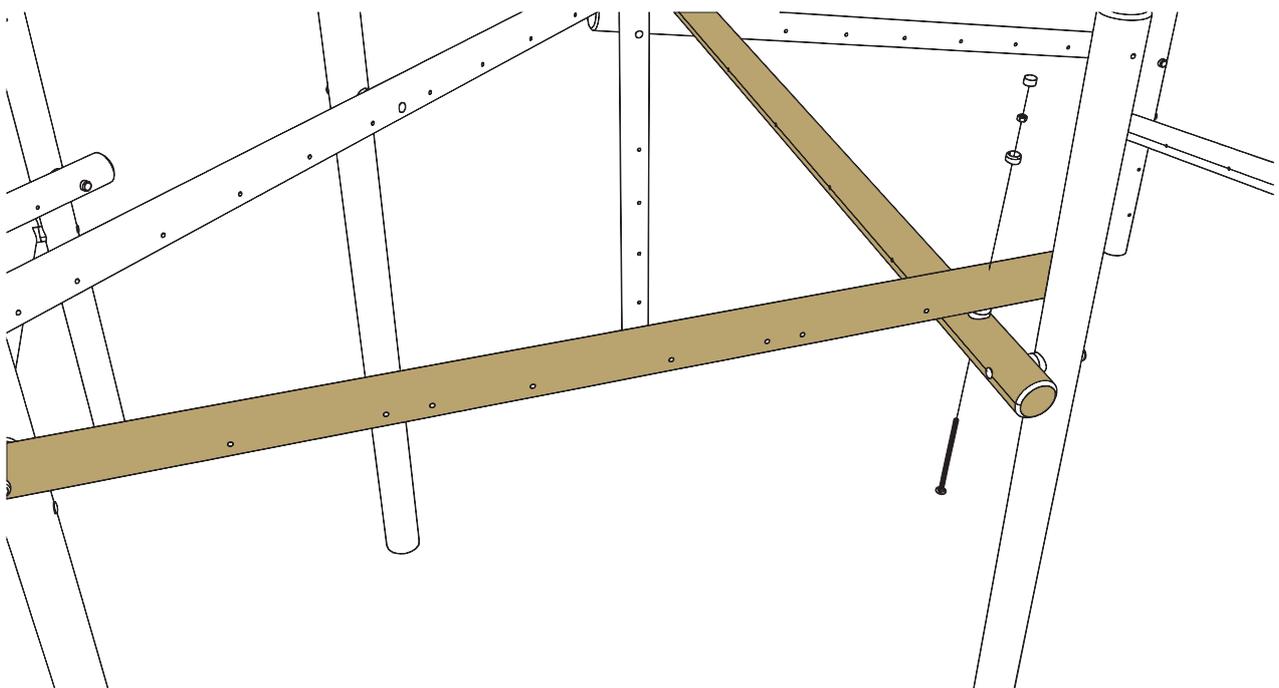
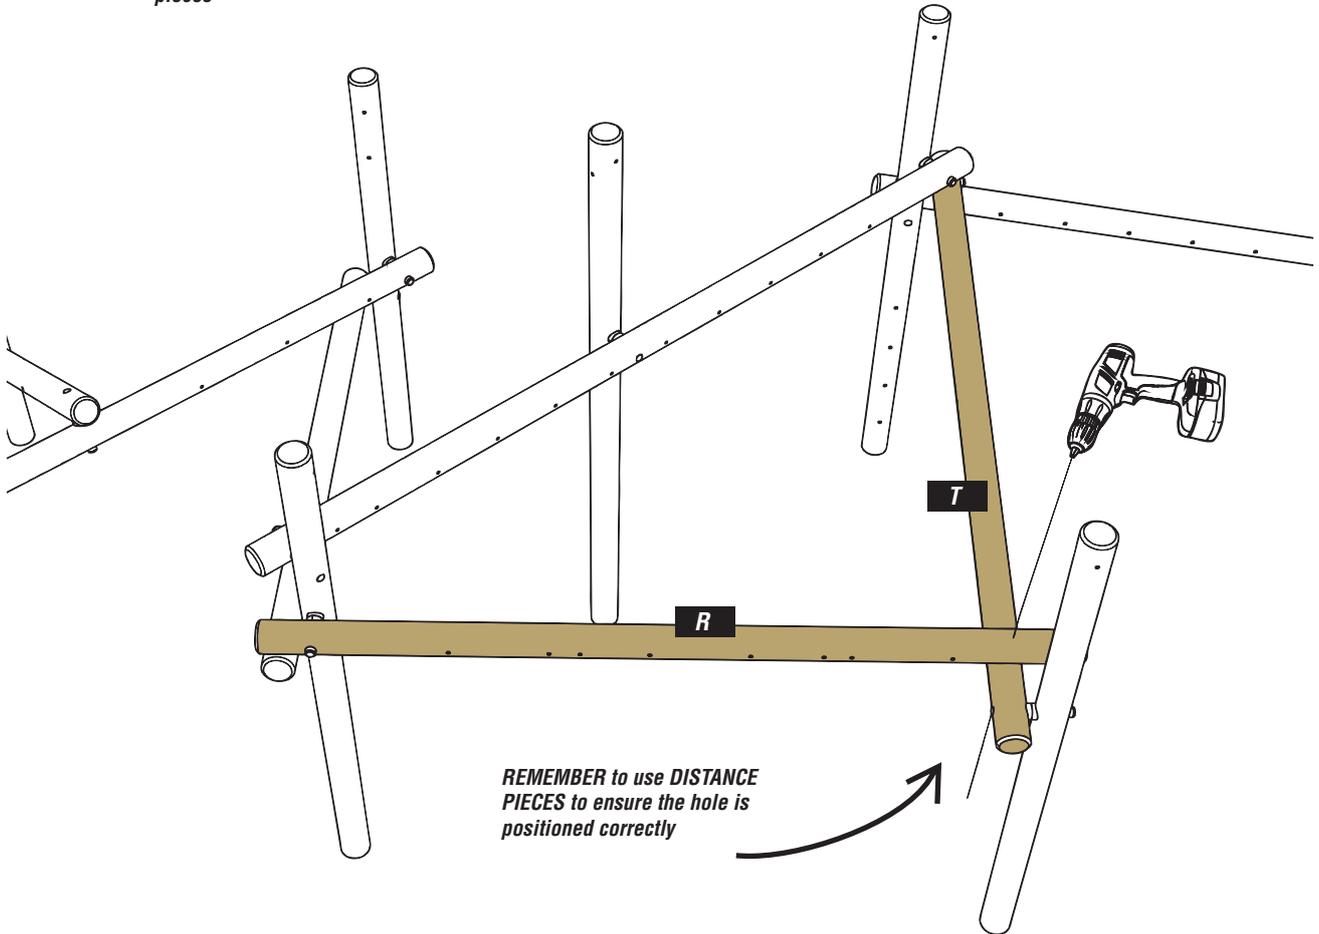


# INSTALLATION INSTRUCTIONS


**23**

## Assemble the SPIRAL STEP CLIMBER to the C - timber

Step climber consists of ... 5 x W - timbers, 1 x HEX board step, 4 x HEX board step with cut outs pieces

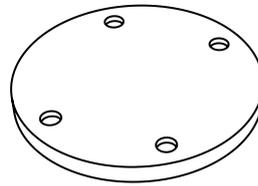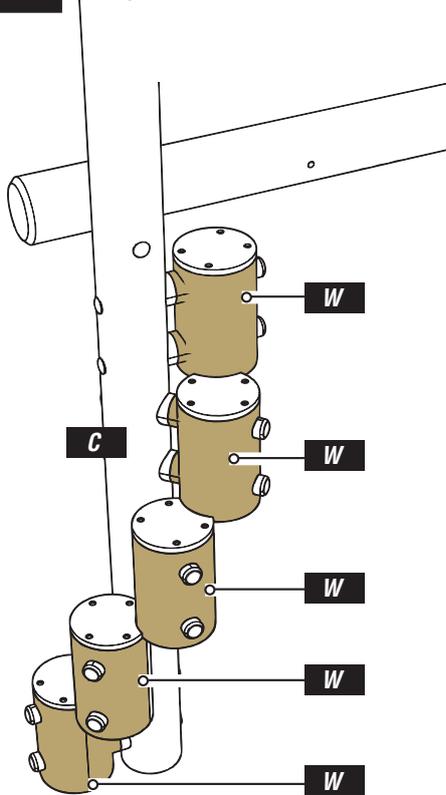

**x1** (HEX BOARD 'STEP')

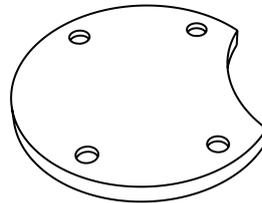

**x4** (HEX BOARD 'STEP' with cut out)


**24**

## Attach the BOTTOM W - timber to the C - timber

Using 2 x M12 x 320\* CUP SQUARE BOLTS / 2 x 'NYLOCS' M12 / 2 x Covered end cap R60 / 2 x 120 Distance piece  
2 x 140 Distance piece

### NOTE:

The 140mm DISTANCE PIECE SITS AGAINST THE W - timber MARKED BELOW (120mm distance piece against the C timber)

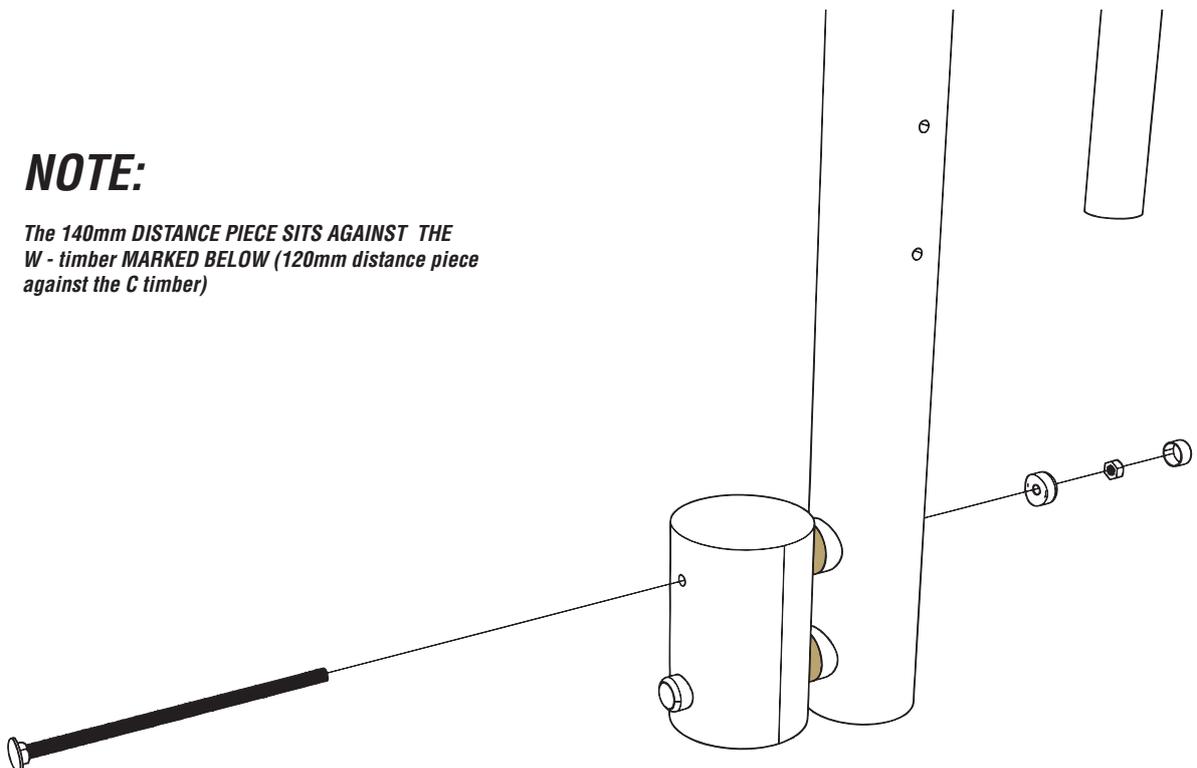


# INSTALLATION INSTRUCTIONS

**25**

## Attach the 3rd / 5th W - timbers to the C - timber

Using 4 x M12 x 320\* CUP SQUARE BOLTS / 4 x 'NYLOCS' M12 / 4 x Covered end cap R60 / 4 x 120 Distance piece  
4 x 140 Distance piece

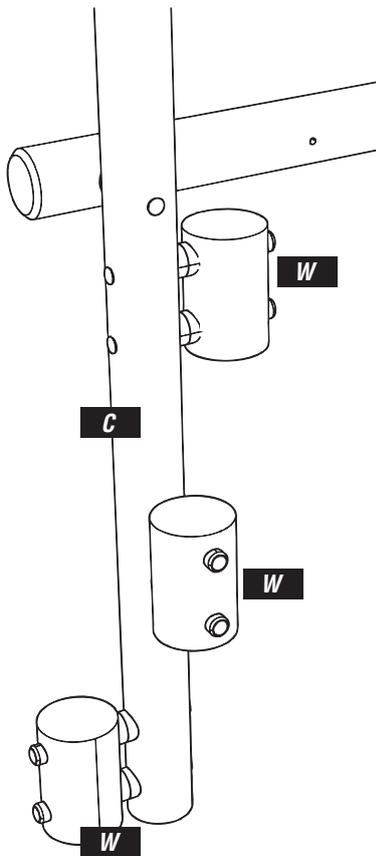


### NOTE:

- The W - timbers sit 'ontop' of each other
- Using the HEX BOARD STEP with cut outs and the distance pieces will ensure the W timbers are positioned correctly
- USE THE CLAMP to hold it in place

**26**

## DRILL C using the PRE-DRILLED HOLES in the W - timbers as a guide

Once drilled attach using 4 x M12 x 320\* CUP SQUARE BOLTS / 4 x 'NYLOCS' M12 / 4 x Covered end cap R60 / 4 x 120 Distance piece / 4 x 140 Distance piece

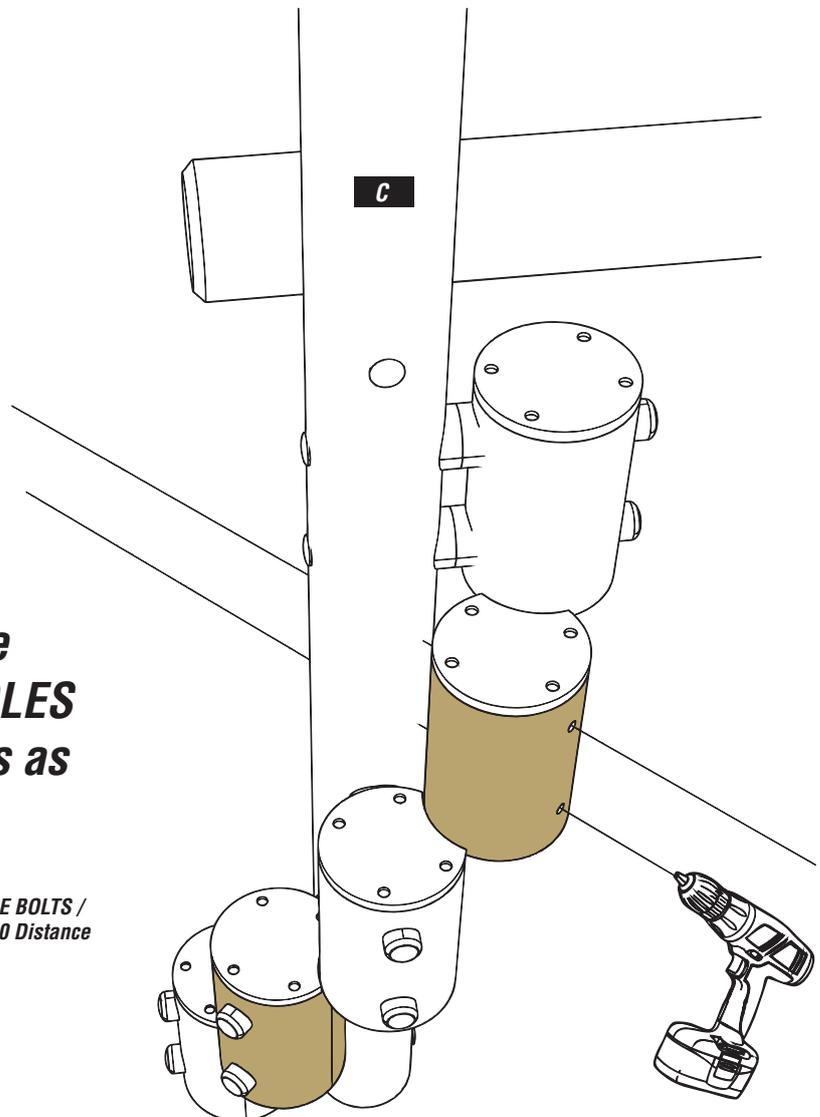


# INSTALLATION INSTRUCTIONS

**27**

## Attach the HEX BOARD STEPS


Once all the W - timbers are positioned / attached use 20 x FM80 WOOD SCREWS to secure the HEX STEPS

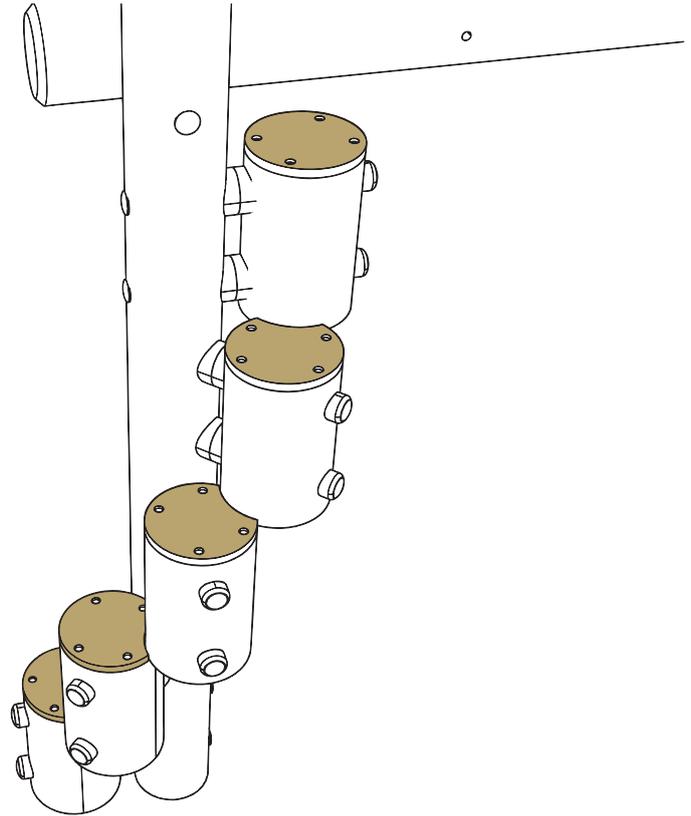

**28**

## Position Z against the P / J timbers

The Z - timber is pre-drilled ONE END ONLY - this end sits against the P timber (circled RED below)

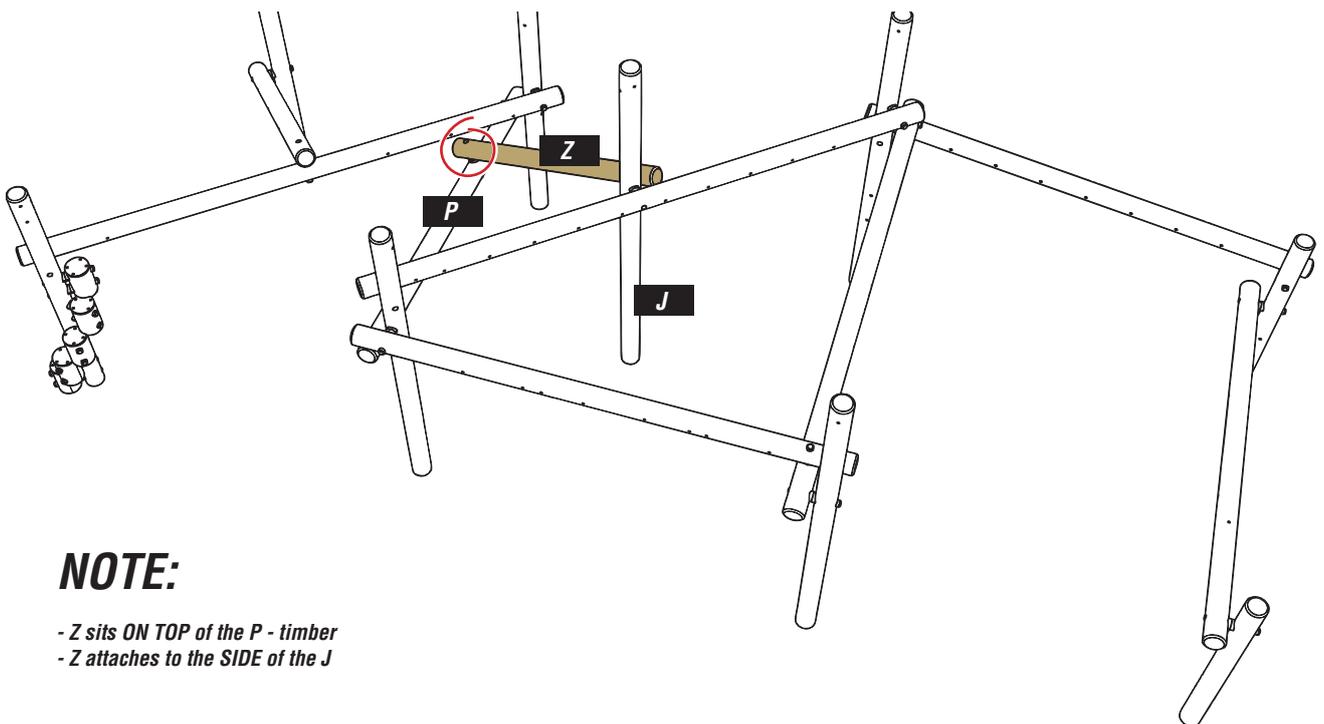

### NOTE:


- Z sits ON TOP of the P - timber
- Z attaches to the SIDE of the J

# INSTALLATION INSTRUCTIONS

**29**

## MARK / CLAMP / DRILL / ATTACH

Follow the STEPS A / B / C / D below

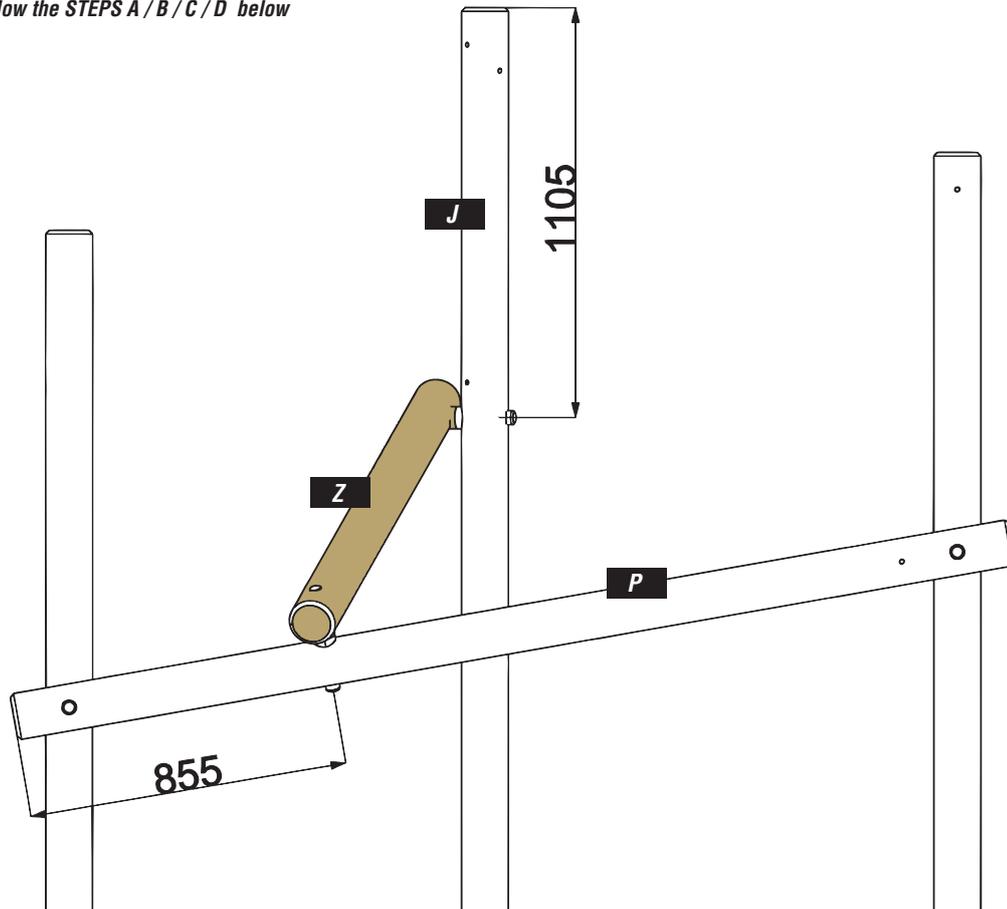

## MARK / CLAMP / DRILL / ATTACH

### A - Use the 'TIMBER MARKER GUIDE' to mark P and J Timbers

Mark a line around the P - timber - 855mm from the end as shown above / Mark a line around the J - timber - 1105mm from the TOP OF THE TIMBER

### B - CLAMP the top of the Z - timber to the J - Timber

REMEMBER to use DISTANCE PIECES to ensure the hole is positioned correctly

### C - DRILL the P - timber using the hole in Z as a guide

REMEMBER to use DISTANCE PIECES to ensure the hole is positioned correctly


### D - ATTACH using 2 x M12 x 290\* CUP SQUARE BOLTS / 2 x 'NYLOGS' M12 / 2 x Covered end cap R60 / 2 x 120 Distance pieces

# INSTALLATION INSTRUCTIONS

**30**


## DRILL through Z & J timbers

The J timber hole position is MARKED - 1105mm from the TOP

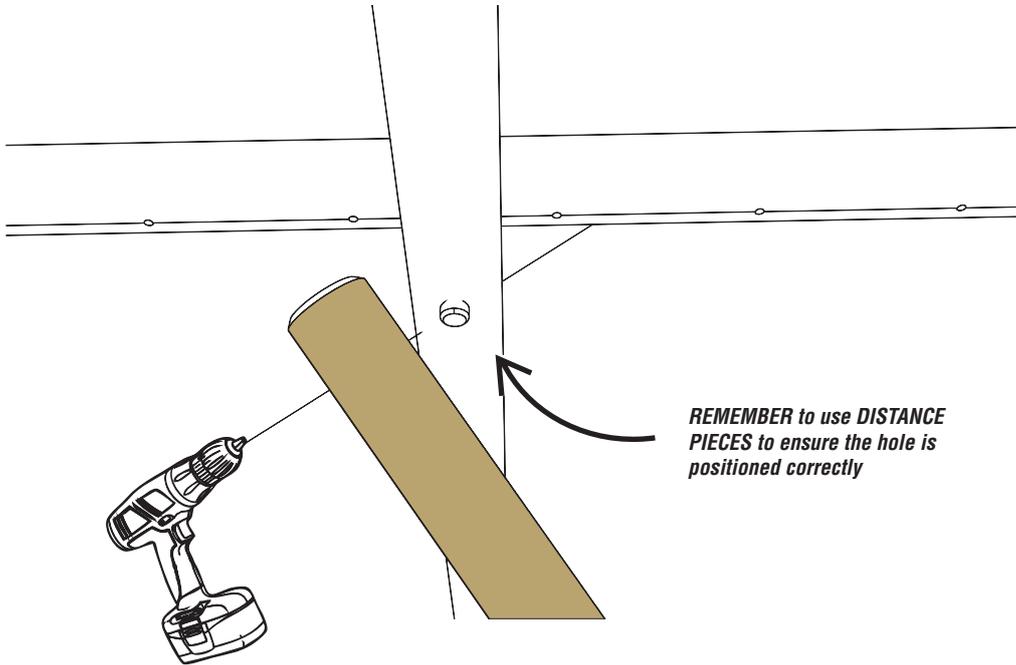

**31**

## ATTACH Z to the J timber

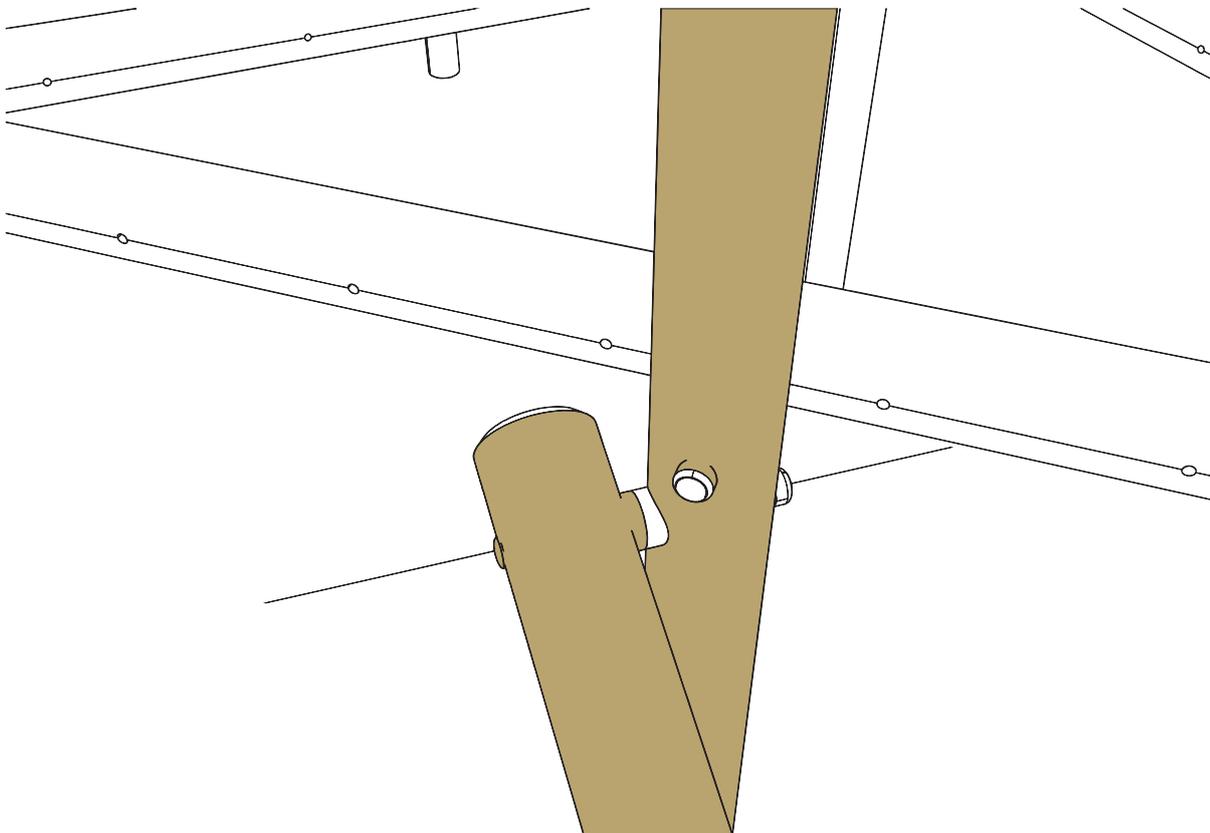


# INSTALLATION INSTRUCTIONS

**32**

## Position the Y timber against the P and Z timbers

Y is pre-drilled ONE END ONLY - this end sits against the P timber (circled RED below)

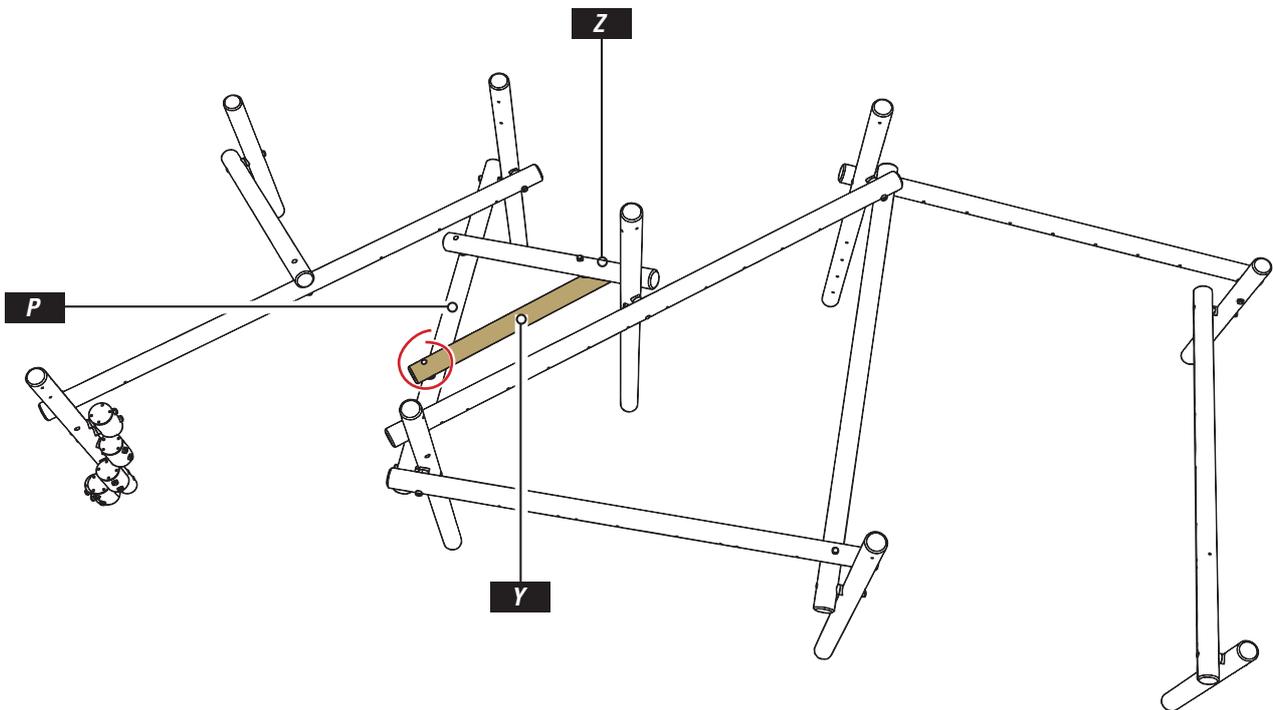

## MARK / CLAMP / DRILL / ATTACH

### A - Use the 'TIMBER MARKER GUIDE' to mark the Z and P Timbers

Mark a line around the P timber - 1882mm from the end as shown next page / Mark a line around the Z timber - 536mm from the TOP OF THE TIMBER

### B - CLAMP the top of the Y timber to the Z timber

REMEMBER to use DISTANCE PIECES to ensure the hole is positioned correctly

### C - DRILL the P timber using the hole in Y as a guide

REMEMBER to use DISTANCE PIECES to ensure the hole is positioned correctly

### D - ATTACH using 2 x M12 x 290\* CUP SQUARE BOLTS / 2 x 'NYLOCS' M12 / 2 x Covered end cap R60 / 4 x 120 Distance pieces


(ATTACH CIRCLED RED END FIRST)

# INSTALLATION INSTRUCTIONS

**33**

## MARK / CLAMP / DRILL / ATTACH


Follow the STEPS A / B / C / D previous page

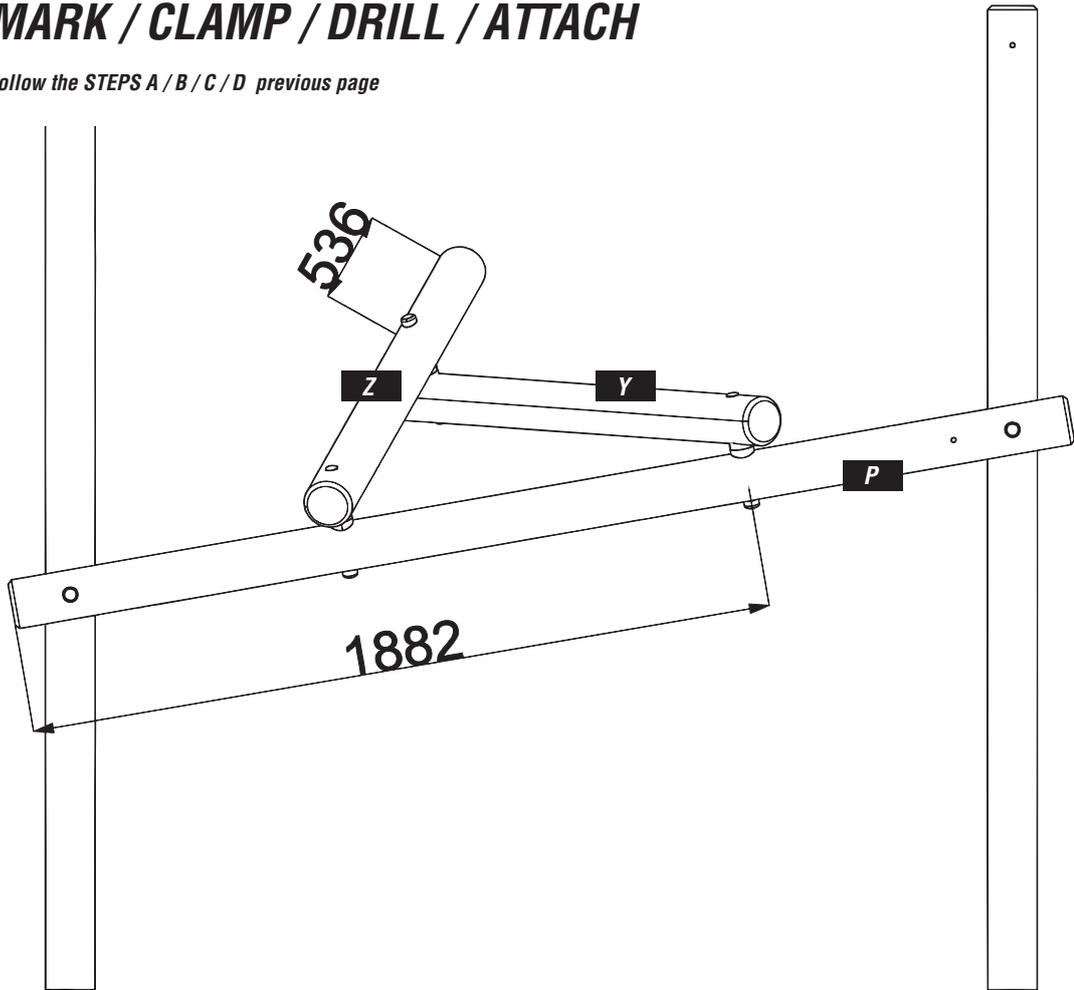

**34**

## DRILL through the Z & Y timbers

Once drilled attach

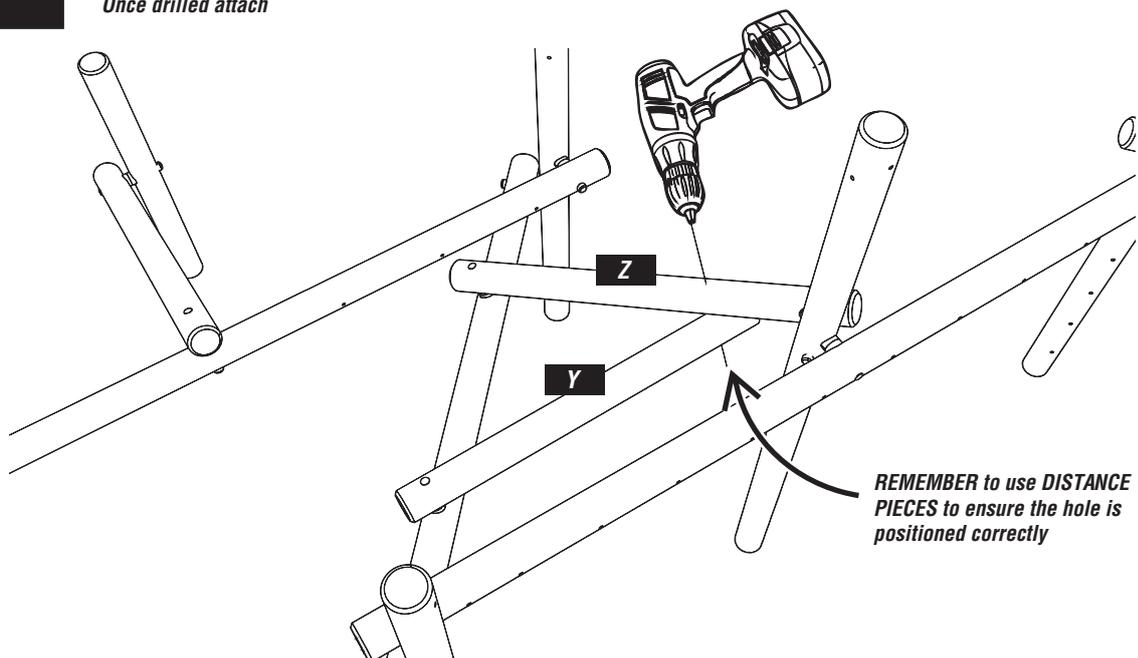


# INSTALLATION INSTRUCTIONS

**35**


## MARK / CLAMP / DRILL / ATTACH **BB**

*BB is pre-drilled ONE END ONLY - this end sits against the S - timber (circled RED below)*

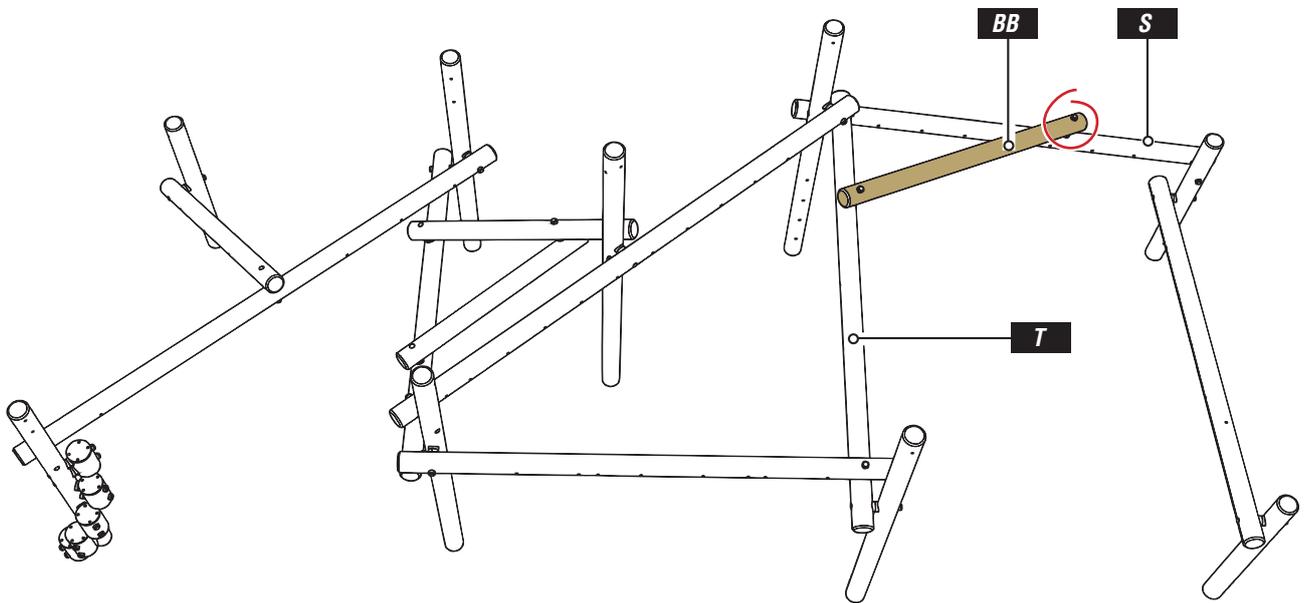

### NOTE:

- BB is positioned ON TOP of the T and S
- Once drilled use 2 x M12 x 290\* CUP SQUARE BOLTS / 2 x 'NYLOCS' M12 / 2 x Covered end cap R60 / 4 x 120 Distance pieces
- BB is drilled @ 100mm from the end (non drilled) see detail below


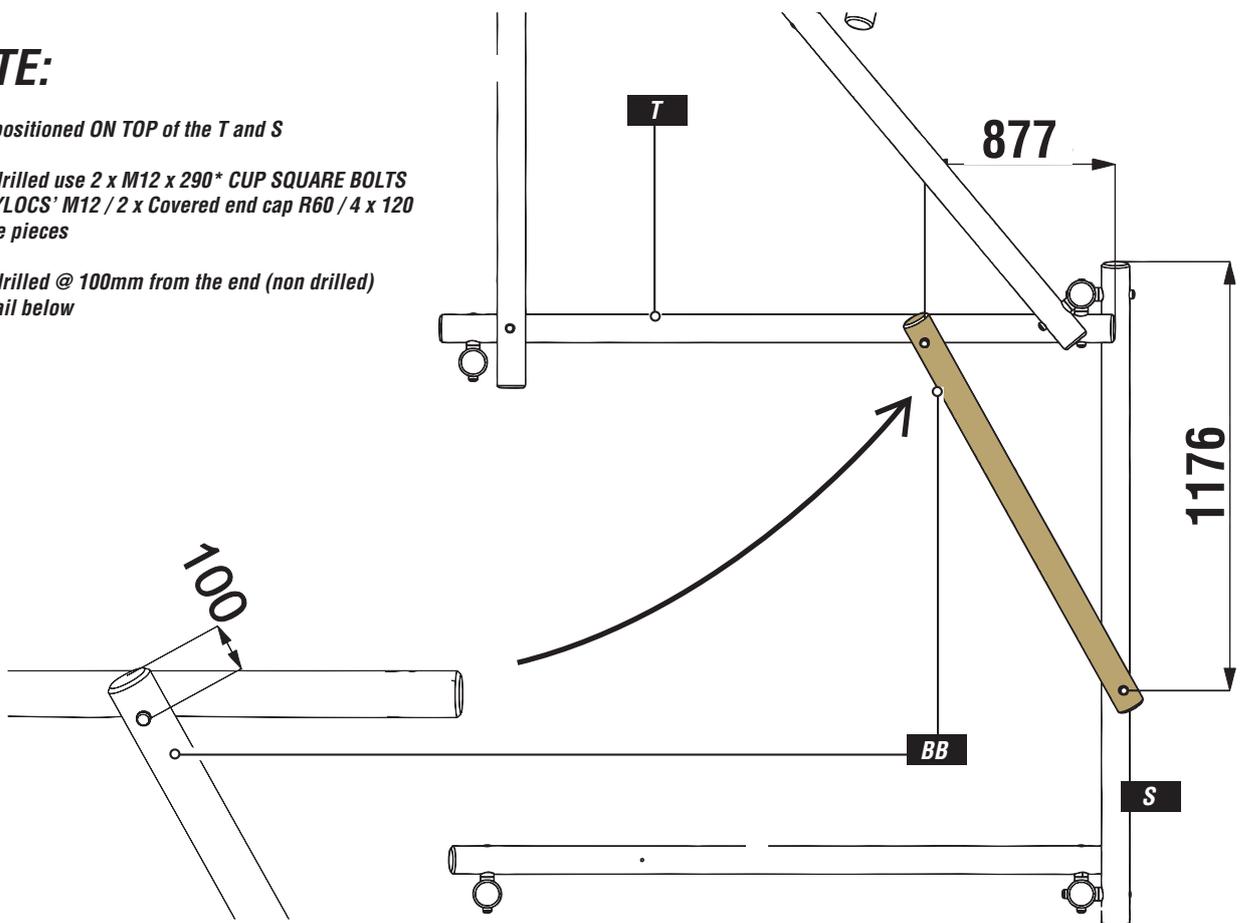


# INSTALLATION INSTRUCTIONS

**36**

## MARK / CLAMP / DRILL / ATTACH **CC**

The CC is pre-drilled FOR THE NET + BLOCKS - These must be positioned 'LEVEL / HORIZONTAL'

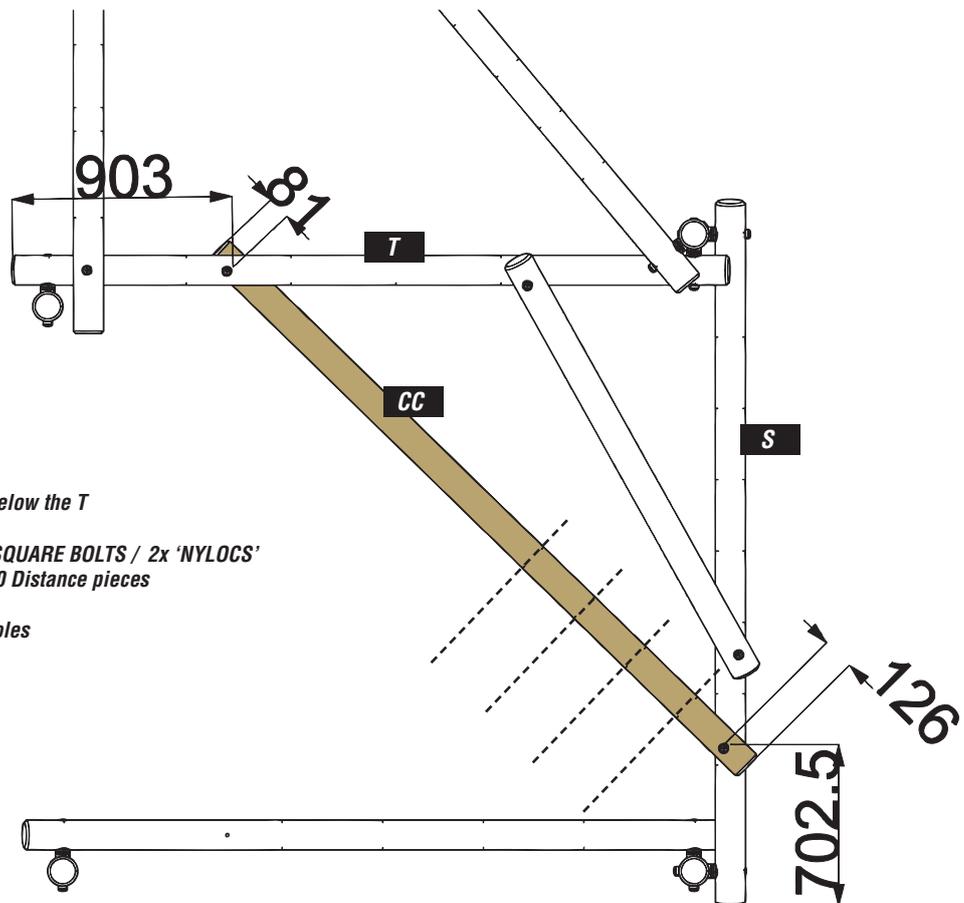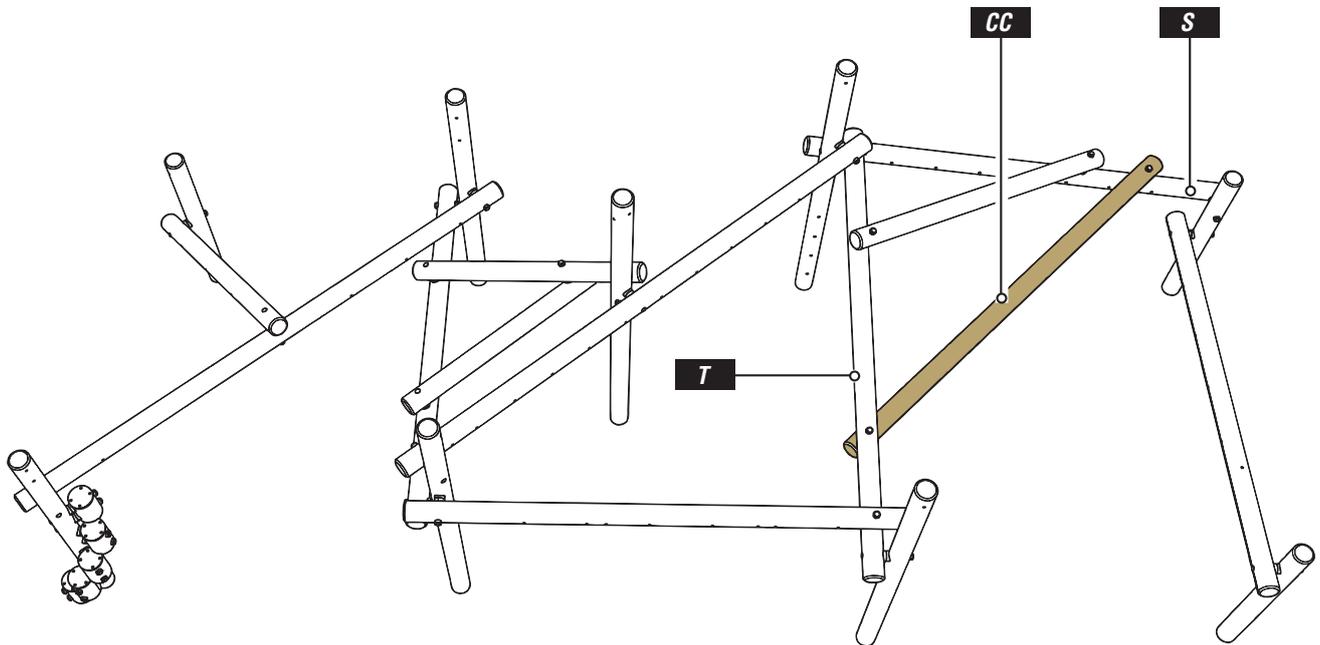

### NOTE:

- CCs positioned ON TOP of the S and below the T
- Once drilled use 2 x M12 x 290\* CUP SQUARE BOLTS / 2x 'NYLOCS' M12 / 2 x Covered end cap R60 / 4 x 120 Distance pieces
- DOTTED LINE shows direction of the holes


# INSTALLATION INSTRUCTIONS

---

**37**

**ENSURE the positioning of the CC is correct**

*The DOTTED LINES / HOLES MUST BE HORIZONTAL*

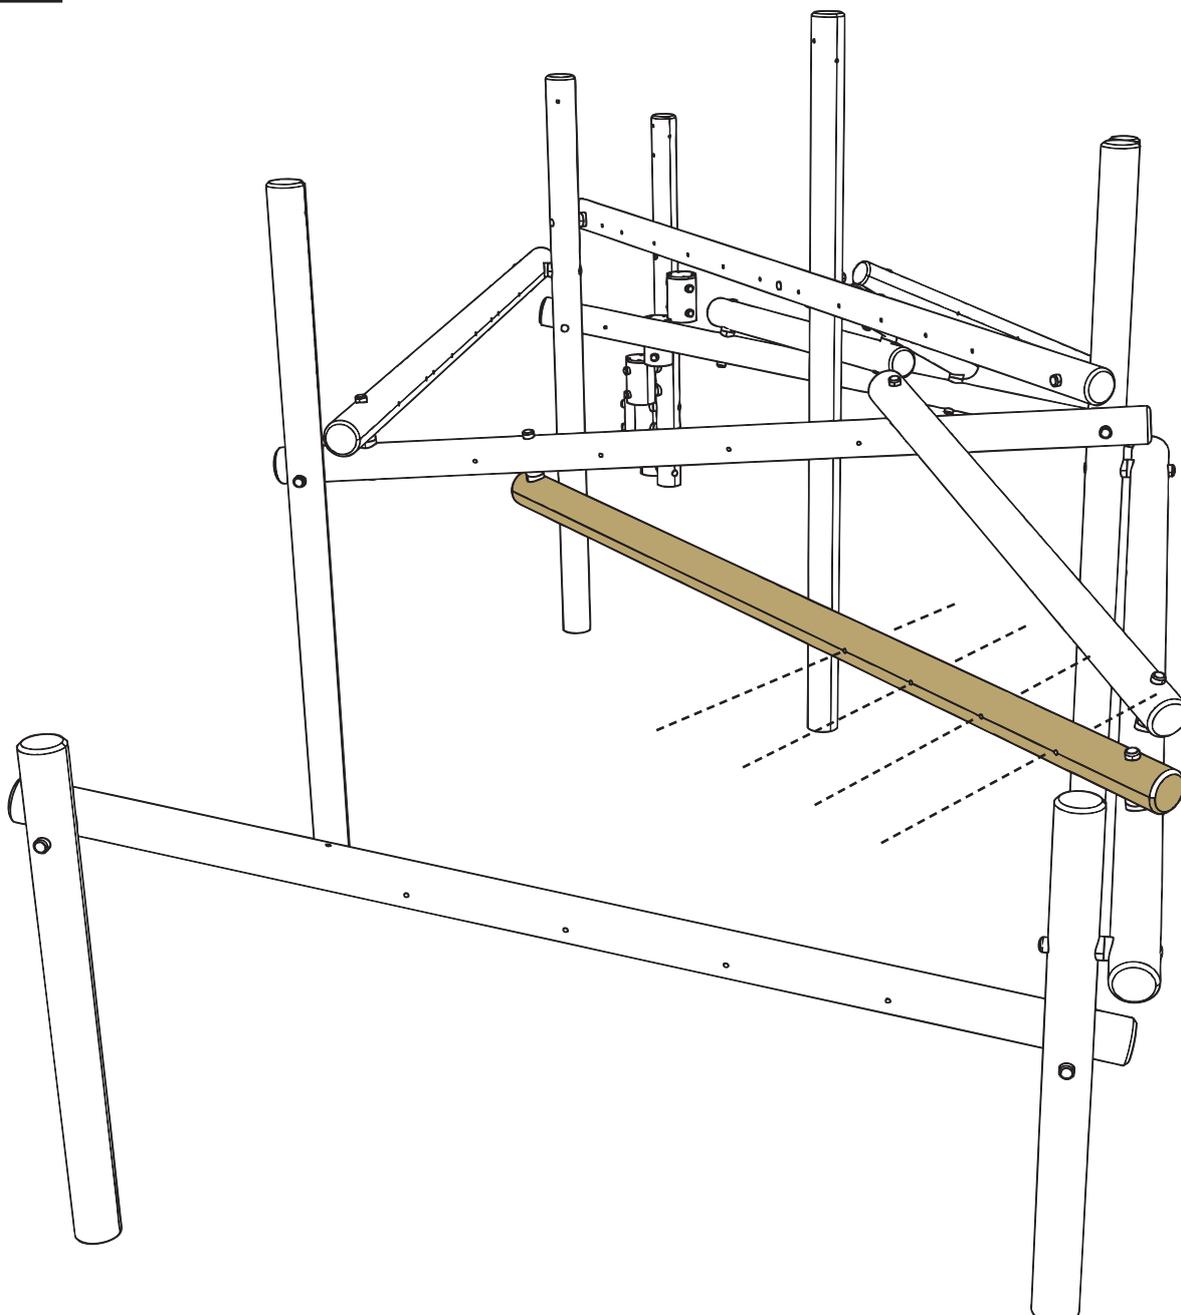


# INSTALLATION INSTRUCTIONS

**38**


## MARK / CLAMP / DRILL / ATTACH **DD**

The DD is pre-drilled ONE END ONLY - this end sits against the L timber (circled RED below)

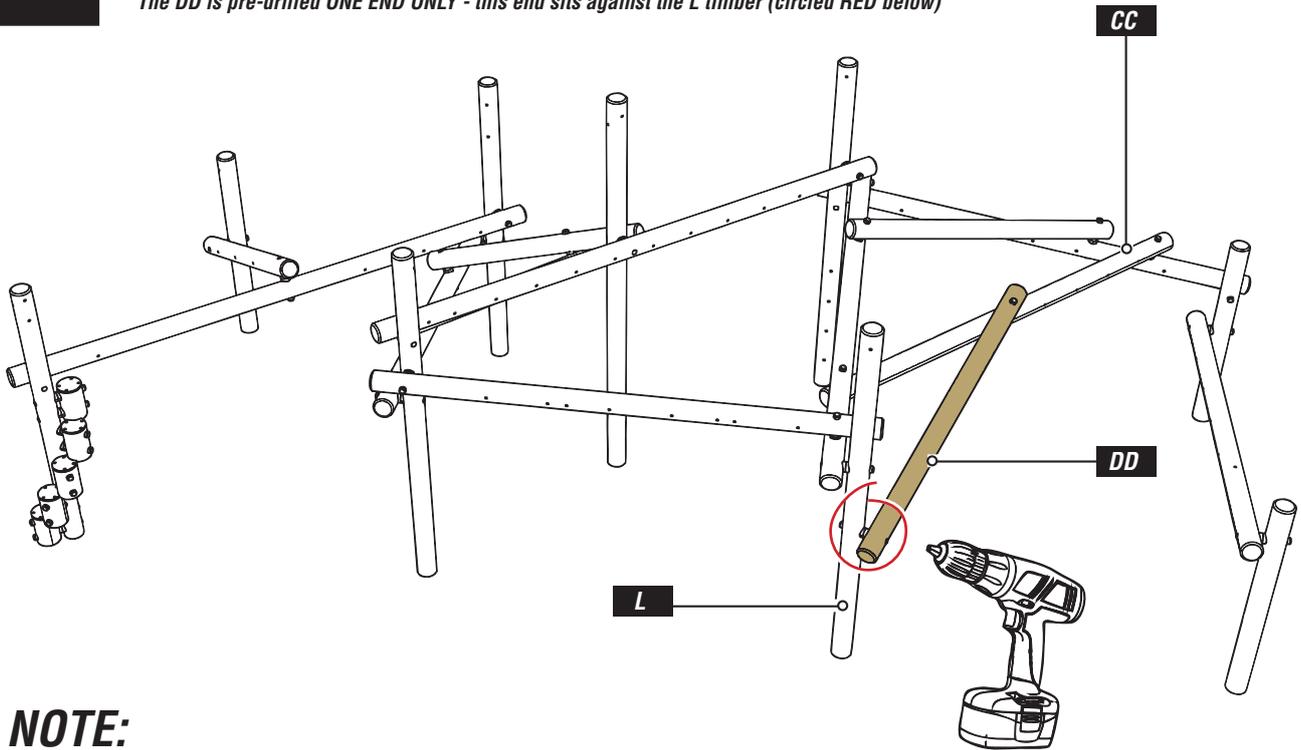

### NOTE:

- Use the PRE-DRILLED hole in the DD timber as a guide to drill through the L timber
- Once drilled use 2 x M12 x 290\* CUP SQUARE BOLTS / 2 x 'NYLOCS' M12 / 2 x Covered end cap R60 / 4 x 120 Distance pieces
- DRILL THE L - timber FIRST then DRILL through the DD / CC TIMBERS


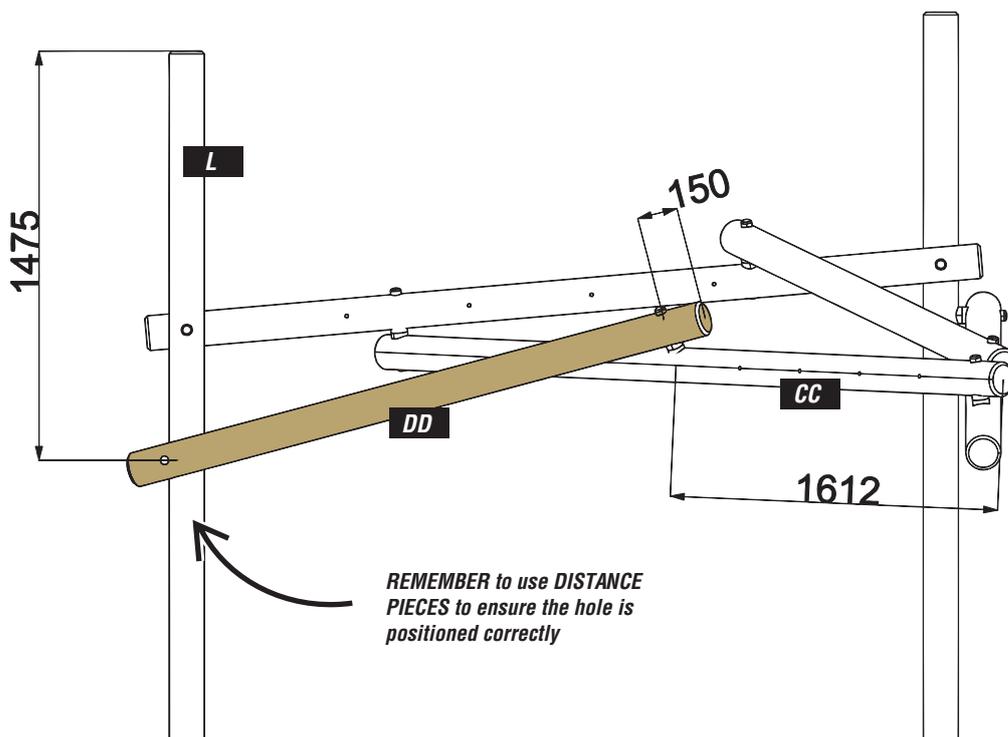


# INSTALLATION INSTRUCTIONS

**39**

## MARK / CLAMP / DRILL / ATTACH **EE**

The EE is pre-drilled ONE END ONLY - this end is bolted into the U (circled RED below)

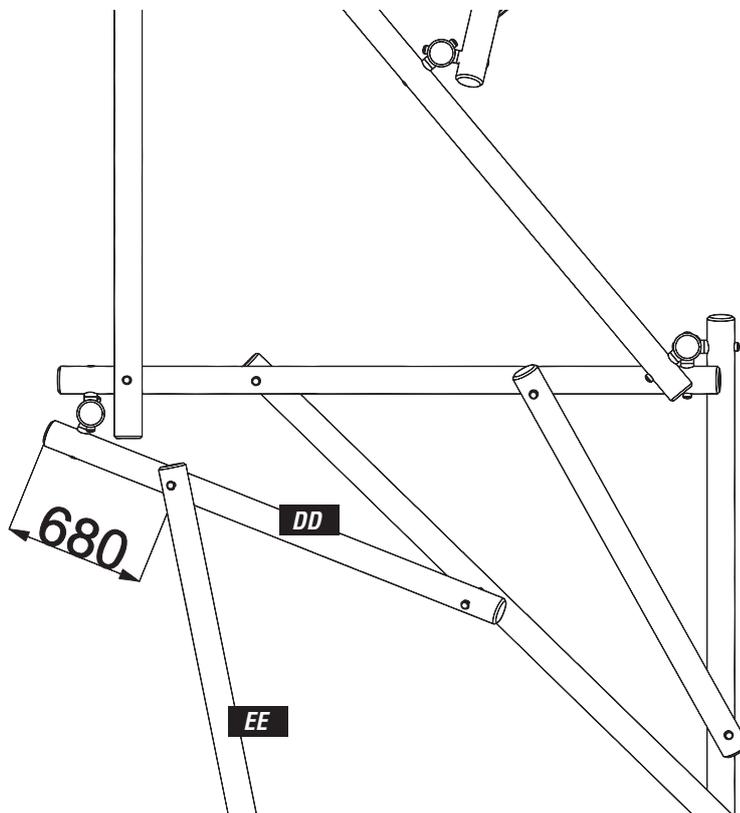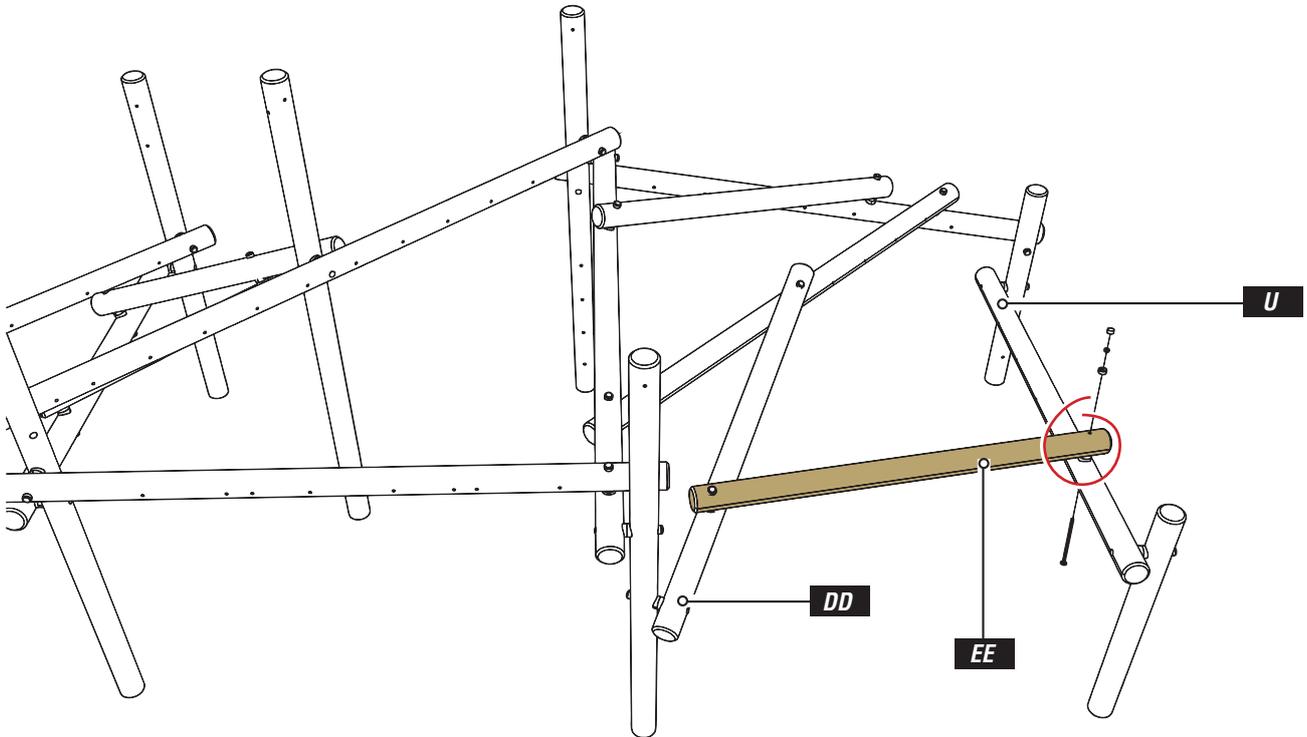

### NOTE:

- Use 1 x M12 x 290\* CUP SQUARE BOLTS / 1 x 'NYLOCS' M12 / 1 x Covered end cap R60 / 2 x 120 Distance pieces - TO ATTACH EE to the U - timber

- DRILL the EE & EE timbers


- Once drilled use 1 x M12 x 290\* CUP SQUARE BOLTS / 1 x 'NYLOCS' M12 / 1 x Covered end cap R60 / 2 x 120 Distance pieces

# INSTALLATION INSTRUCTIONS

**40**


## MARK / CLAMP / DRILL / ATTACH **AA**

The AA is pre-drilled BOTH ENDS - use the PRE-DRILLED holes as a guide to drill the BB & CC timbers

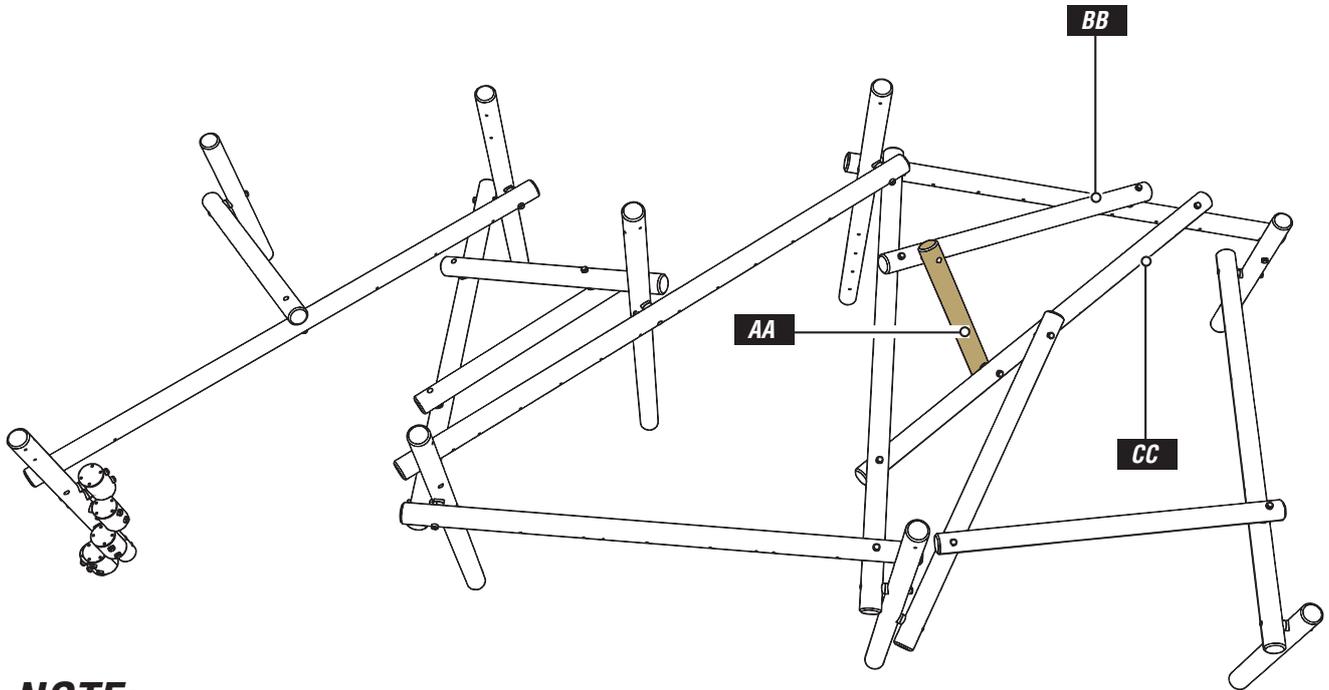

### NOTE:

- DRILL the BB / CC timbers
- Once drilled use 2 x M12 x 290\* CUP SQUARE BOLTS / 2 x 'NYLOCS' M12 / 2 x Covered end cap R60 / 4 x 120 Distance pieces

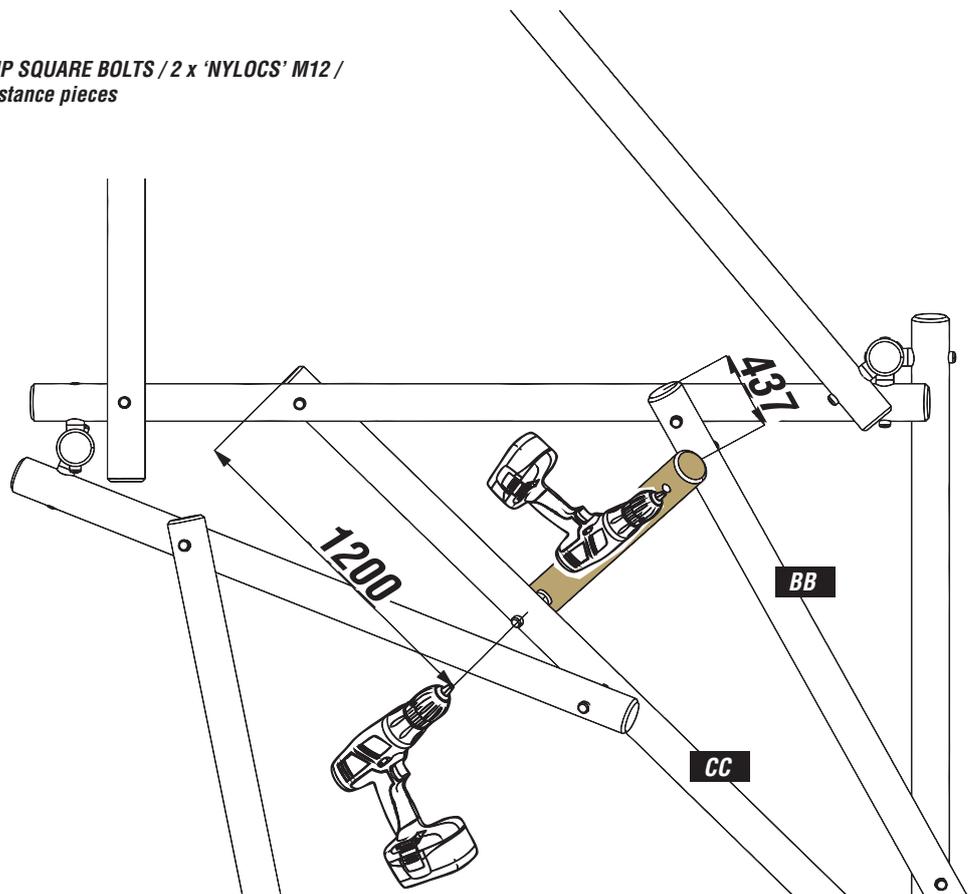

# INSTALLATION INSTRUCTIONS



**41**

## Attach the CARGO NET assembly

Using 20 x M10 'NYLOCS' and 20 x Covered end cap R60

### NOTE:

- THE NET WILL ONLY FIT 'ONE'WAY
- The 10 EYEBOLTS (circled red) fit into the pre-drilled holes in the Q timber
- The 6 EYEBOLTS (circled black) fit into the pre-drilled holes in the R timber

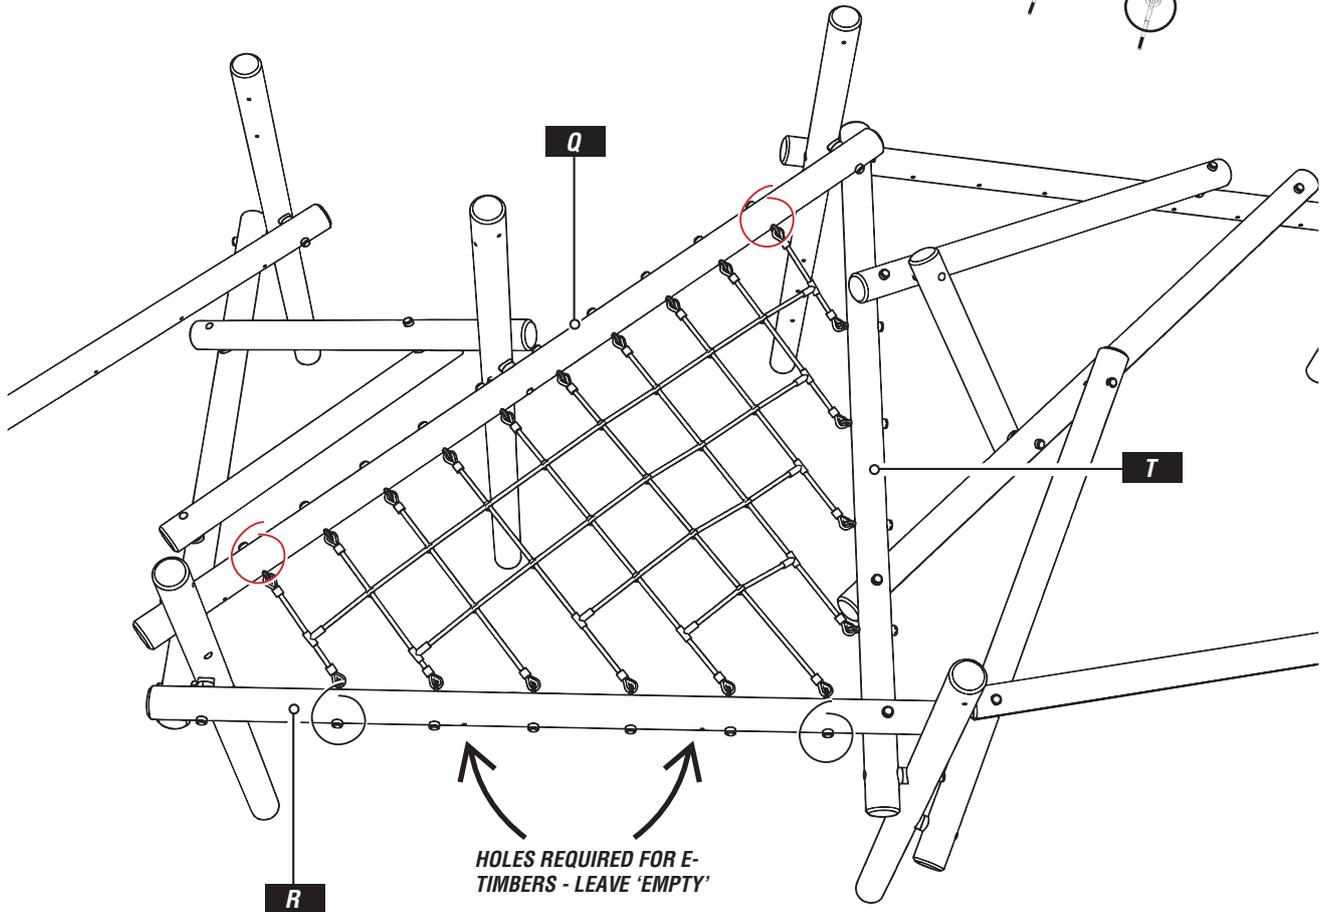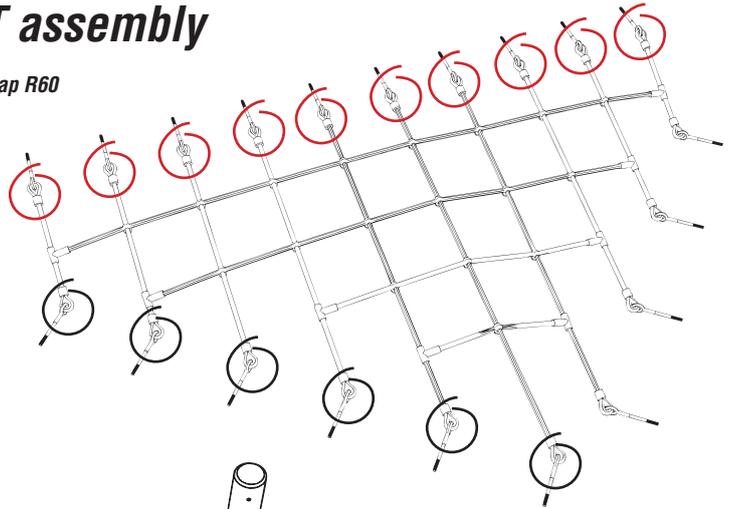


### ENSURE THE NET IS ATTACHED AS SHOWN ABOVE:

- DO NOT TRY TO 'STRETCH' into different holes
- DO NOT DRILL ANY ADDITIONAL HOLES

The Net is a triangle - 10 EYEBOLTS side = INTO Q  
 6 EYEBOLTS side = INTO R  
 4 EYEBOLTS side = INTO T

### EYEBOLTS

Eyebolts 'SHOULD' always be positioned so the 'EYE' is vertical - Shown SOLID BLACK

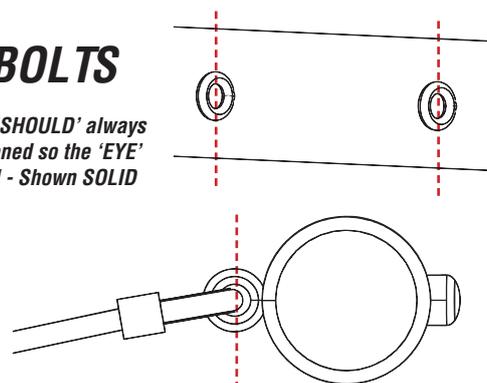

# INSTALLATION INSTRUCTIONS




**42**

## Attach the NET CLIMBER assembly

Using 6 x M10 'NYLOCS' and 6 x Covered end cap R60


### NOTE:

- THE NET WILL ONLY FIT 'ONE'WAY
- LONG(ER) GAP (circled red) in the bottom rope will highlight which way round the NET should be attached

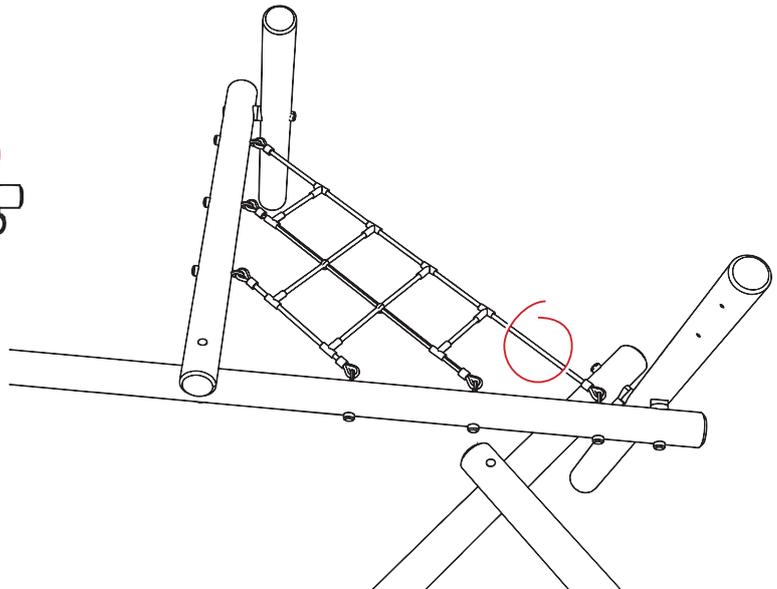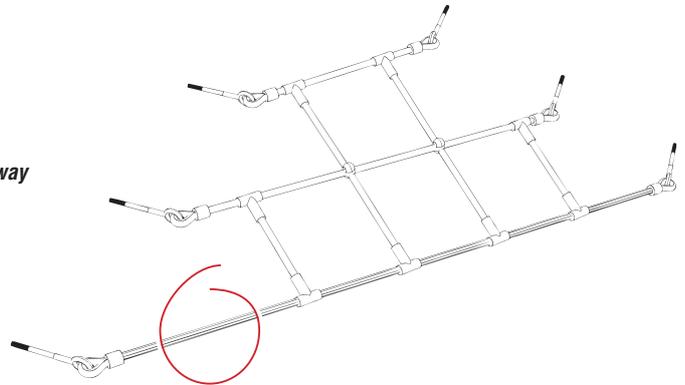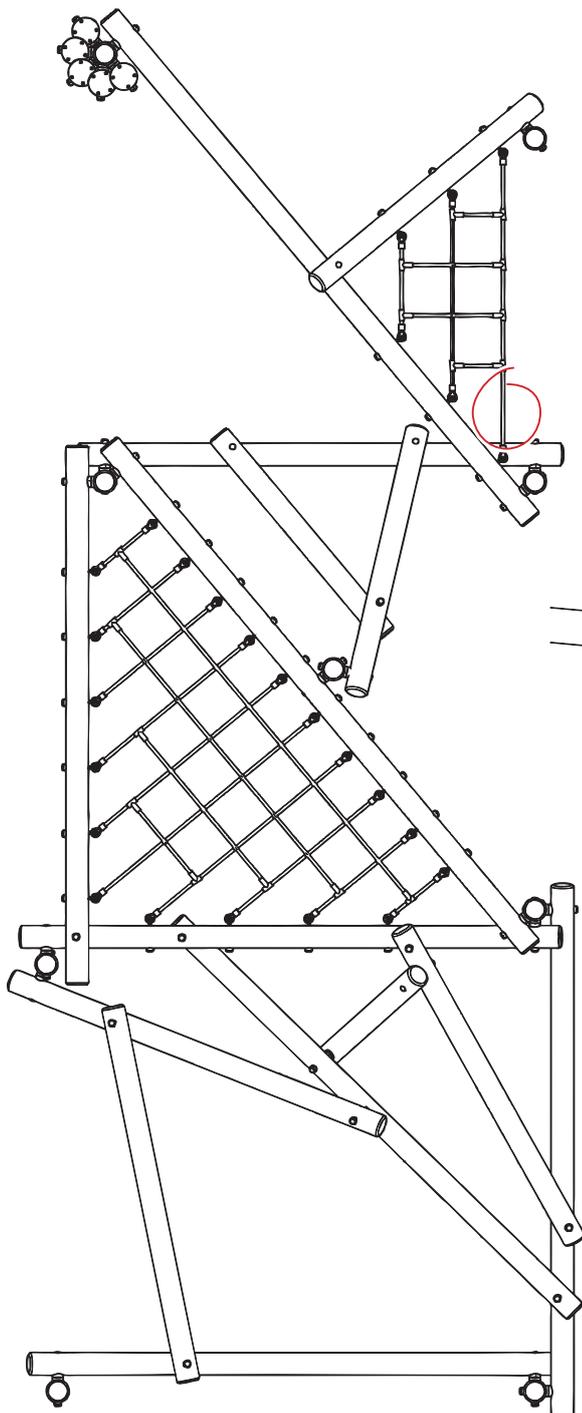

### EYEBOLTS

Eyebolts 'SHOULD' always be positioned so the 'EYE' is vertical - Shown SOLID BLACK

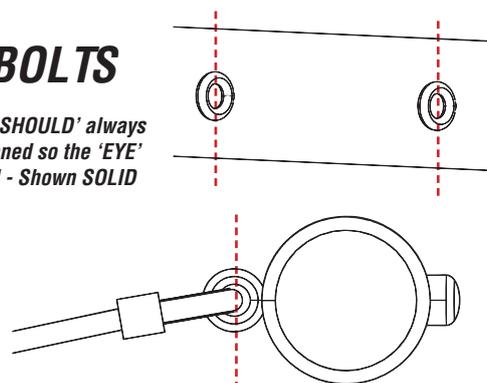



# INSTALLATION INSTRUCTIONS

**43**

## Attach the NET + BLOCKS (supplied loose)

Using 8 x M10 'NYLOCS' and 8 x Covered end cap R60

**Attach the ROPES FIRST -  
R1 / R2 / R3 / R4**

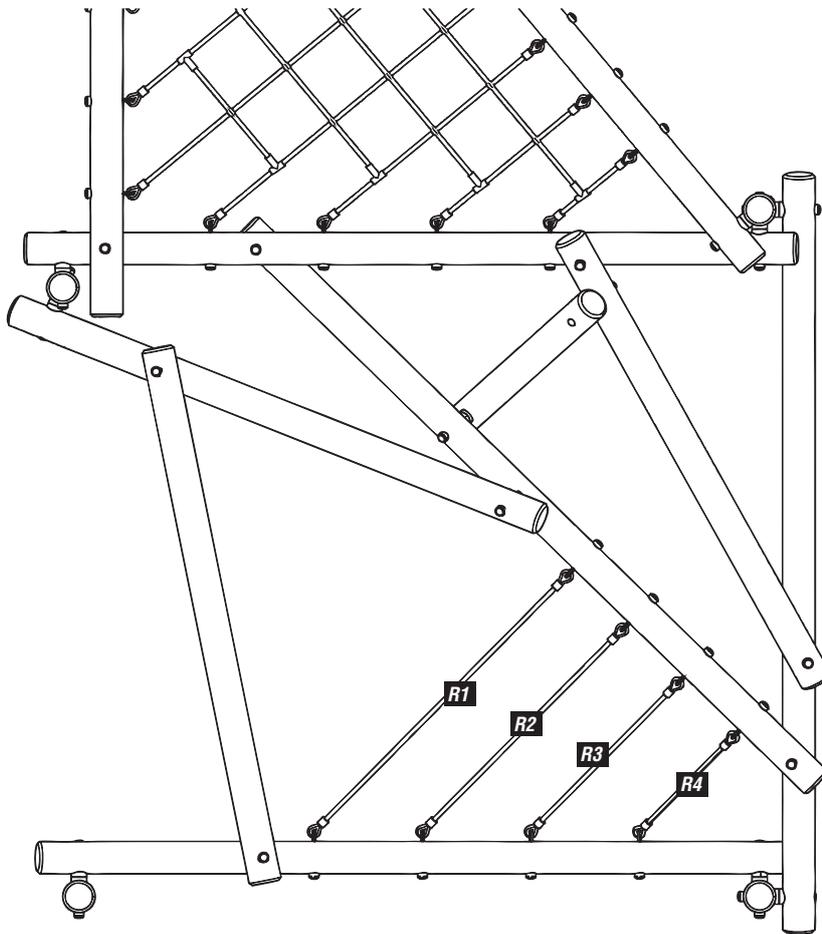
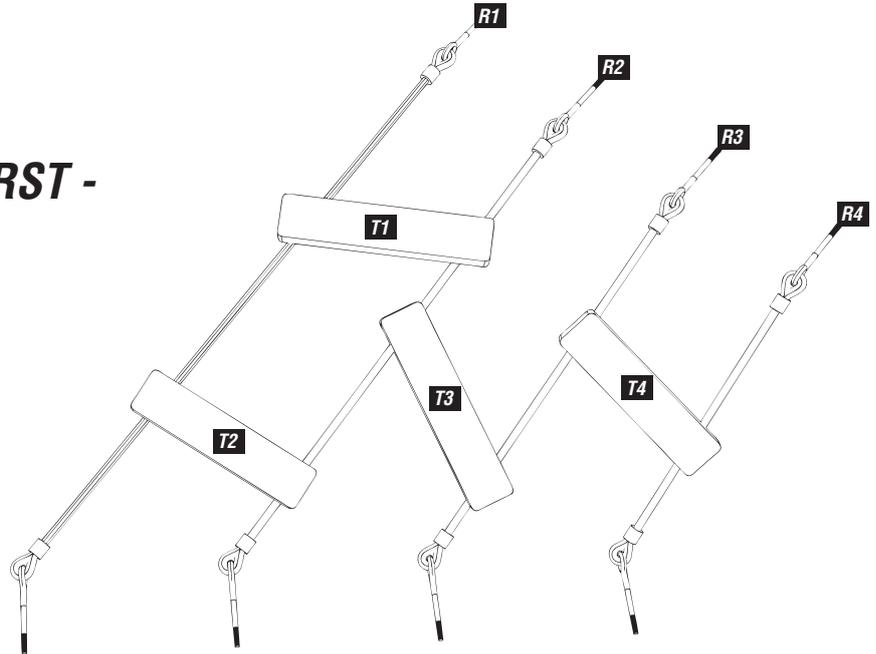


# INSTALLATION INSTRUCTIONS

**44**


## Mark the **BLOCK LOCATIONS** and **ATTACH THE BLOCKS**

Using **16 x POLYFIX HALVES** (supplied with screws)

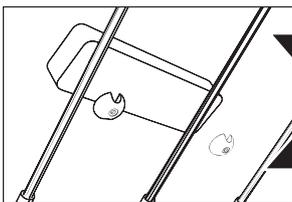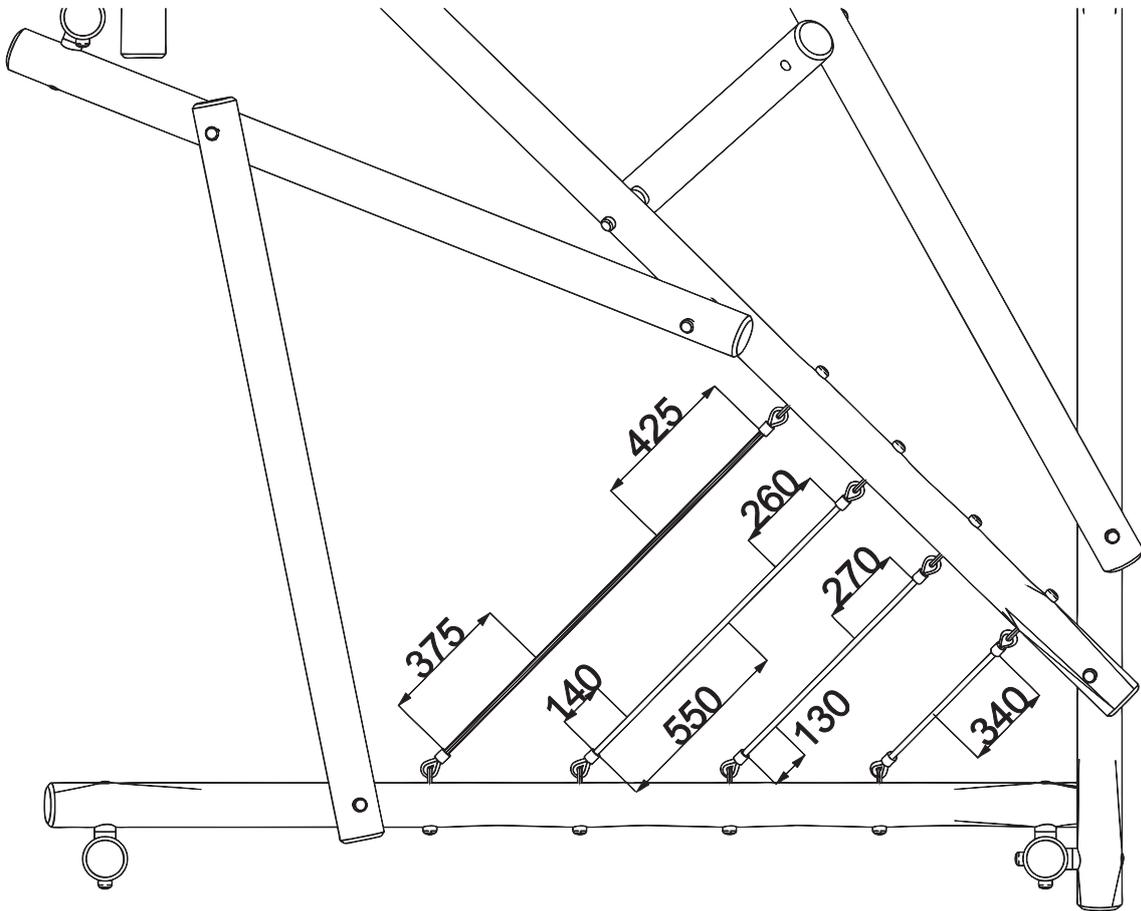


**X**

**SCREW FROM  
'UNDERNEATH'**

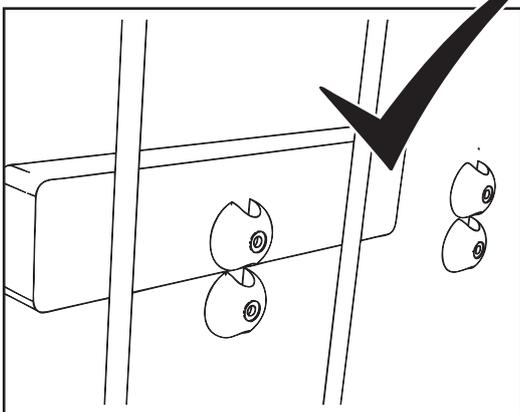

### **EYEBOLTS**

*Eyebolts 'SHOULD' always be positioned so the 'EYE' is vertical - Shown **SOLID BLACK***

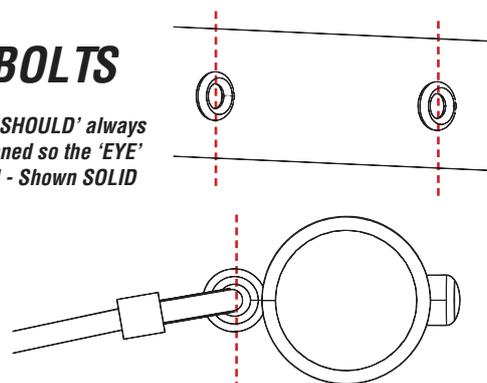

# INSTALLATION INSTRUCTIONS




**45**

## Attach NET WALL

Using 12 x M10 'NYLOGS' and 12 x Covered end cap R60

### NOTE:

- EYEBOLTS ALONG 'TOP' - VERTICAL - FIG. 1
- EYEBOLTS ALONG SIDES - HORIZONTAL - FIG. 2

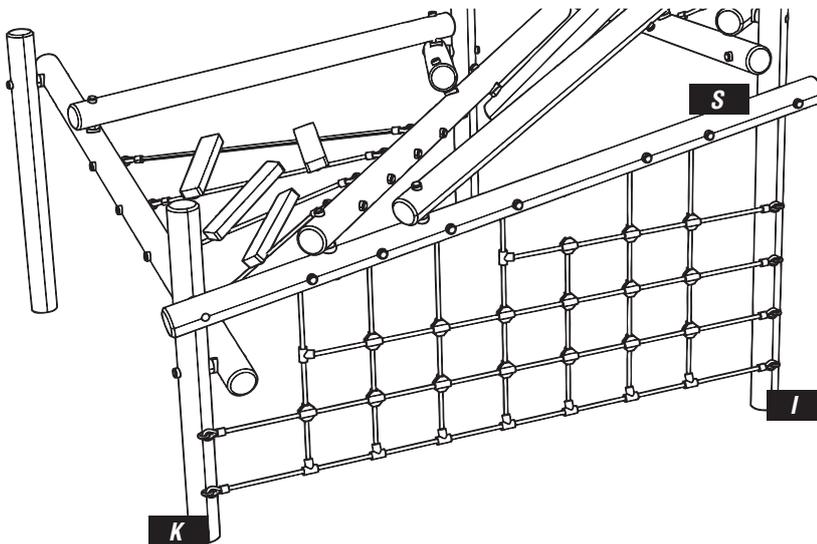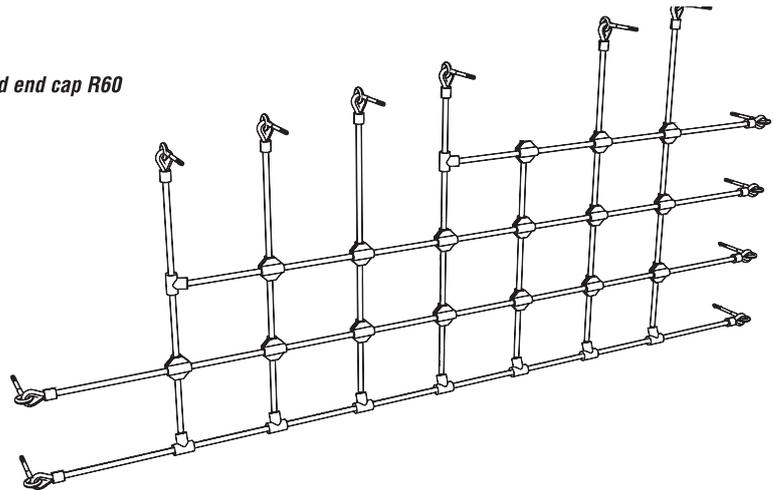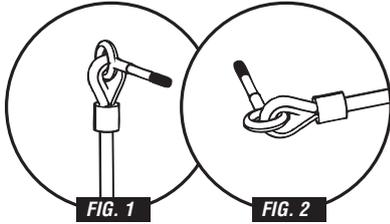


### ENSURE:

Eyebolts are ATTACHED through the CORRECT SIDE of the timbers

- ALONG THE SIDES - BOLT THROUGH THE OUTSIDE

- ALONG THE TOP - BOLT THROUGH THE 'INSIDE'

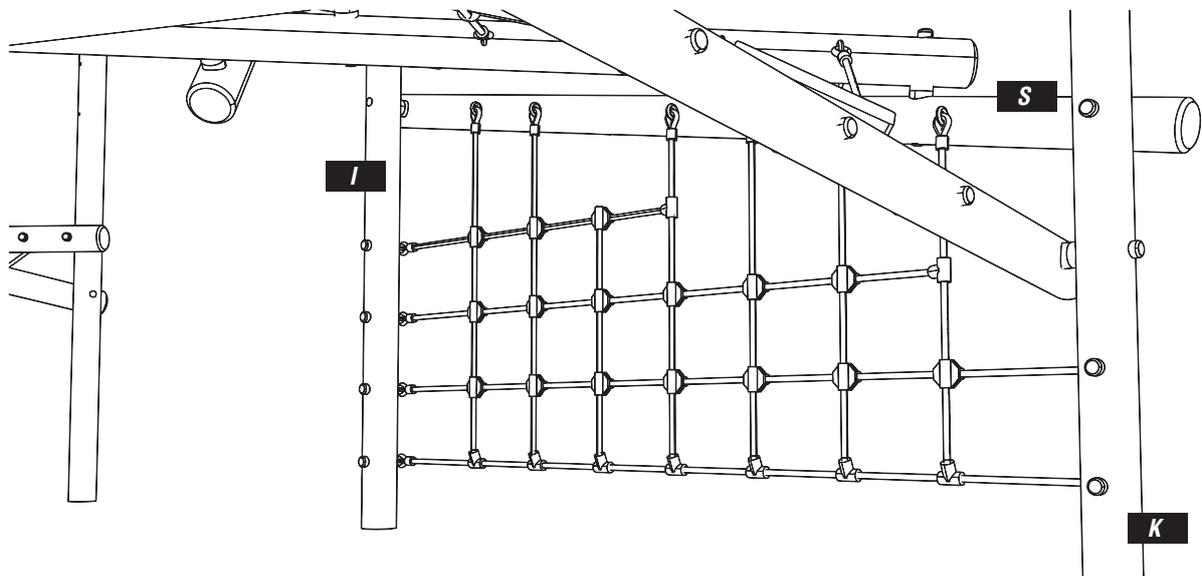


# INSTALLATION INSTRUCTIONS

**46**

## MARK / CLAMP / DRILL / ATTACH **M**

Once drilled attach using 2 x M12 x 320\* CUP SQUARE BOLTS / 2 x 'NYLOCS' M12 / 2 x Covered end cap R60 / 2 x 120 Distance piece / 2 x 140 Distance piece

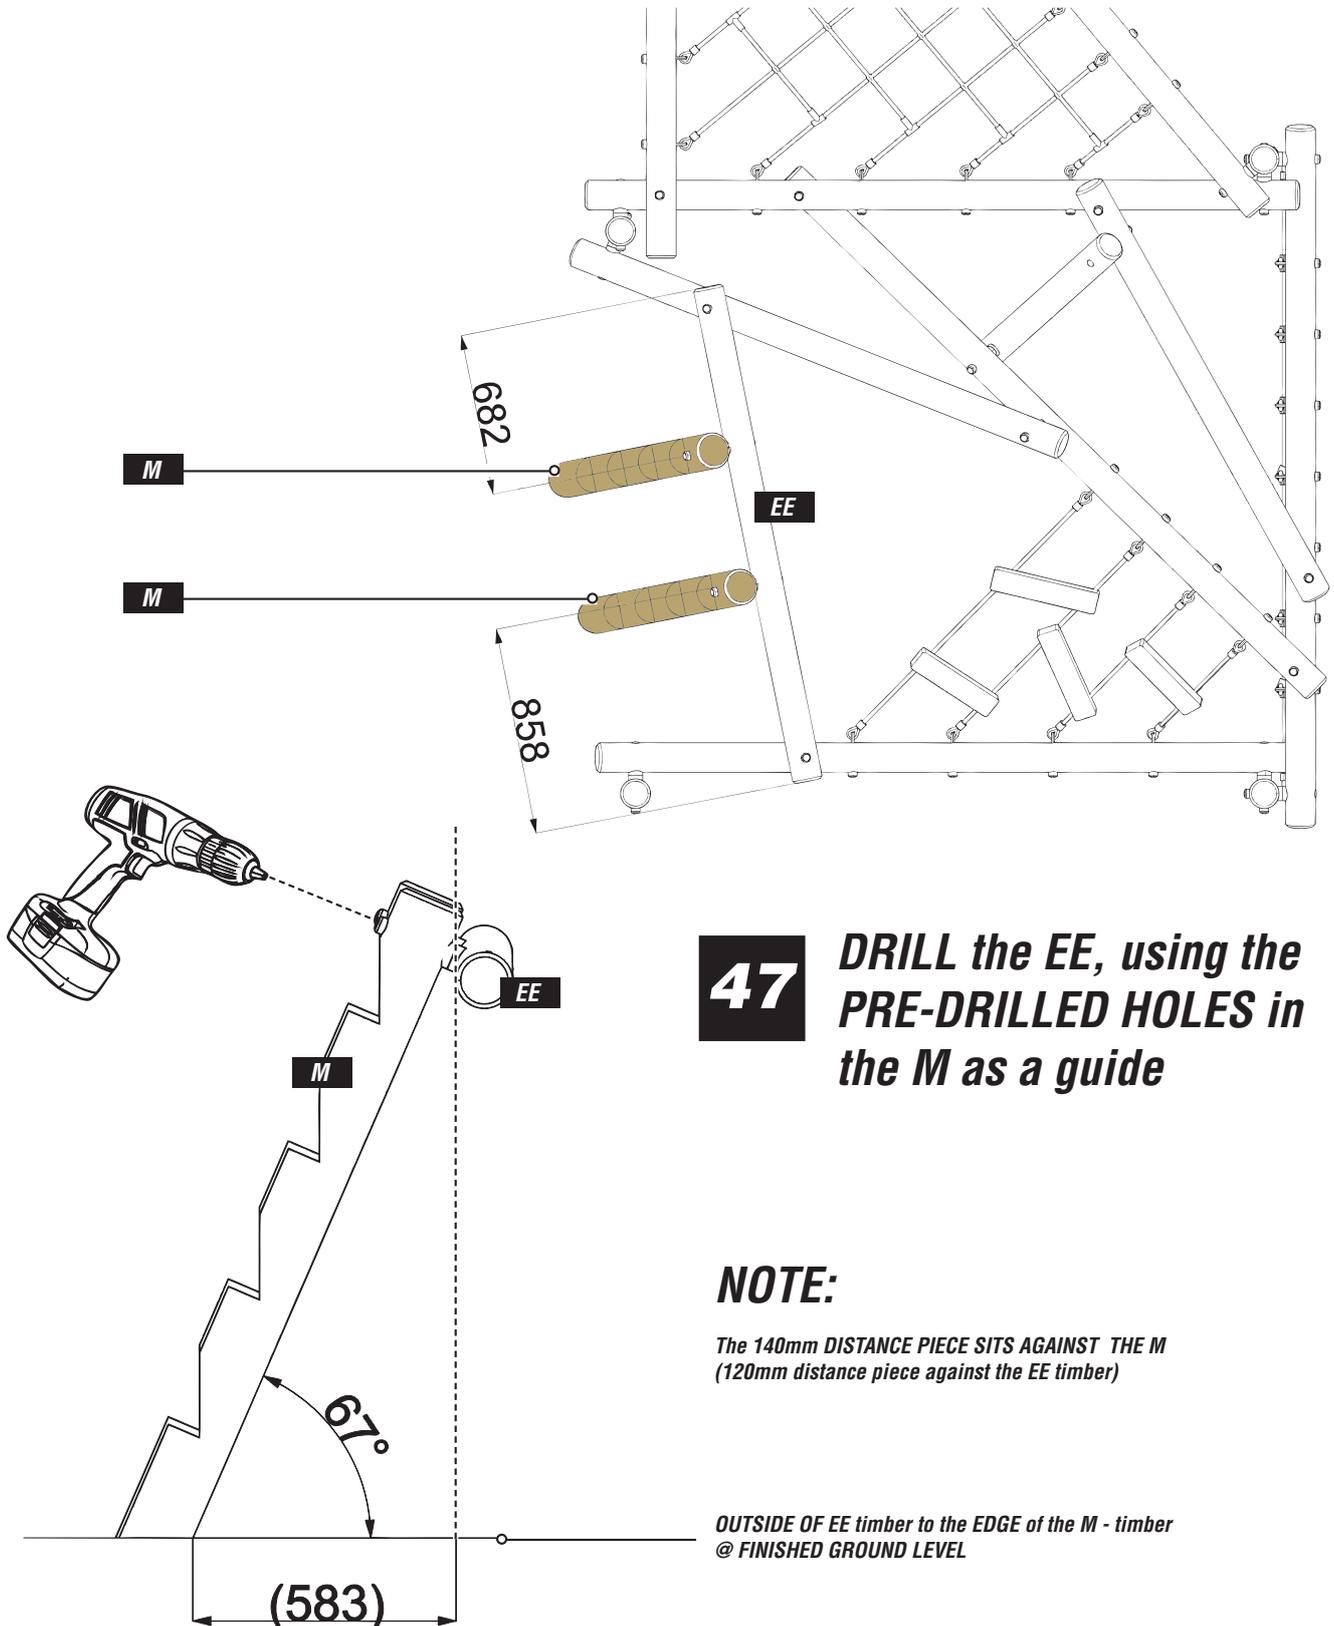

## **47** DRILL the EE, using the PRE-DRILLED HOLES in the M as a guide

### NOTE:

The 140mm DISTANCE PIECE SITS AGAINST THE M (120mm distance piece against the EE timber)


OUTSIDE OF EE timber to the EDGE of the M - timber @ FINISHED GROUND LEVEL

# INSTALLATION INSTRUCTIONS

**47**

## Position E - timbers


These are positioned AGAINST timber R

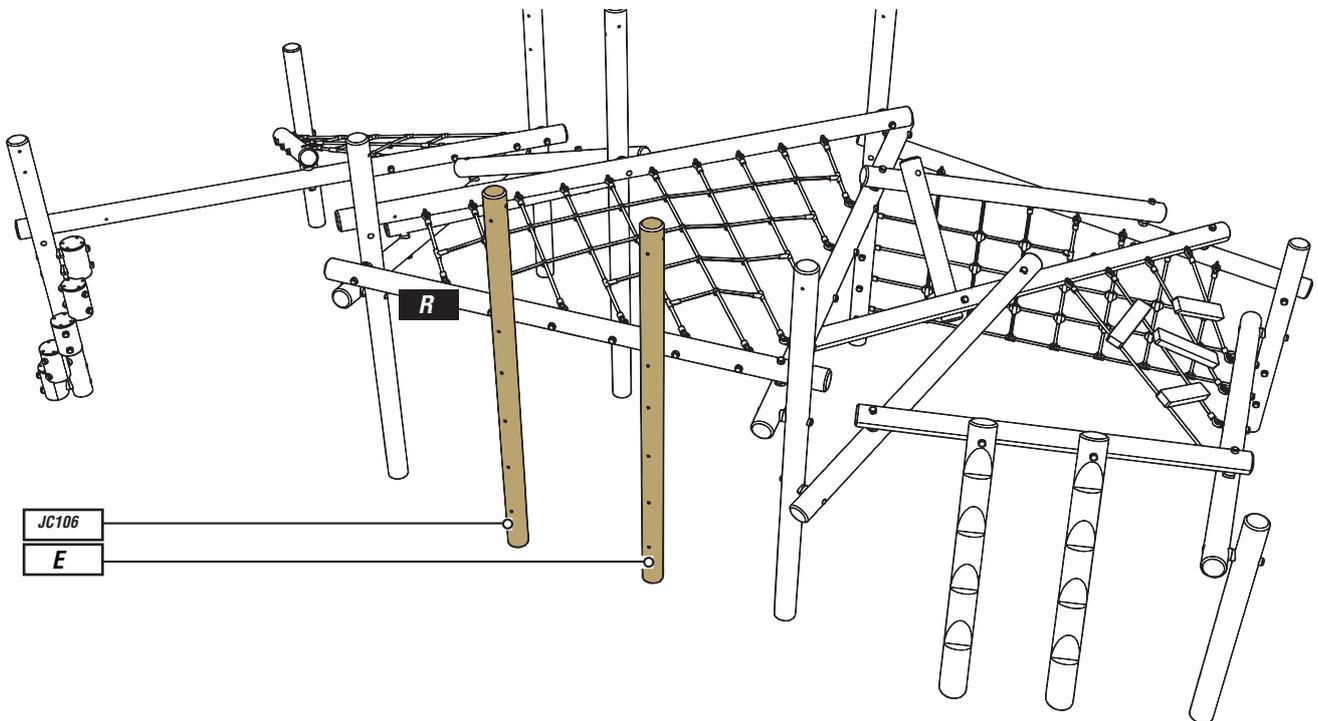

**48**

## Attach E - timbers to timber R

Using 2 x M12 x 290\* CUP SQUARE BOLTS / 2 x 'NYLOCS' M12 / 2 x Covered end cap R60 / 4 x 120 Distance pieces

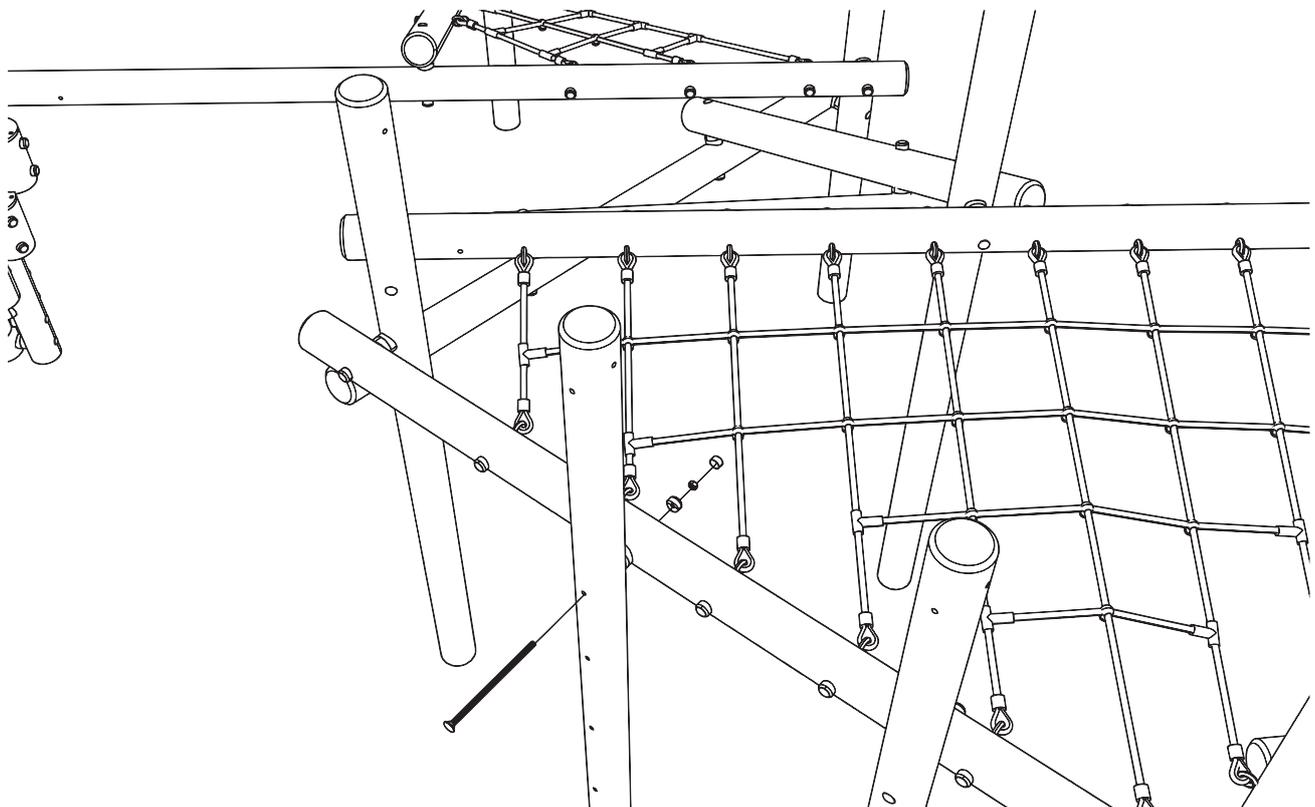


# INSTALLATION INSTRUCTIONS

**49**

## Attach X timbers to E - timbers


Using 8 x M12 x 290\* CUP SQUARE BOLTS / 8 x 'NYLOCS' M12 / 8 x Covered end cap R60 / 16 x 120 Distance pieces

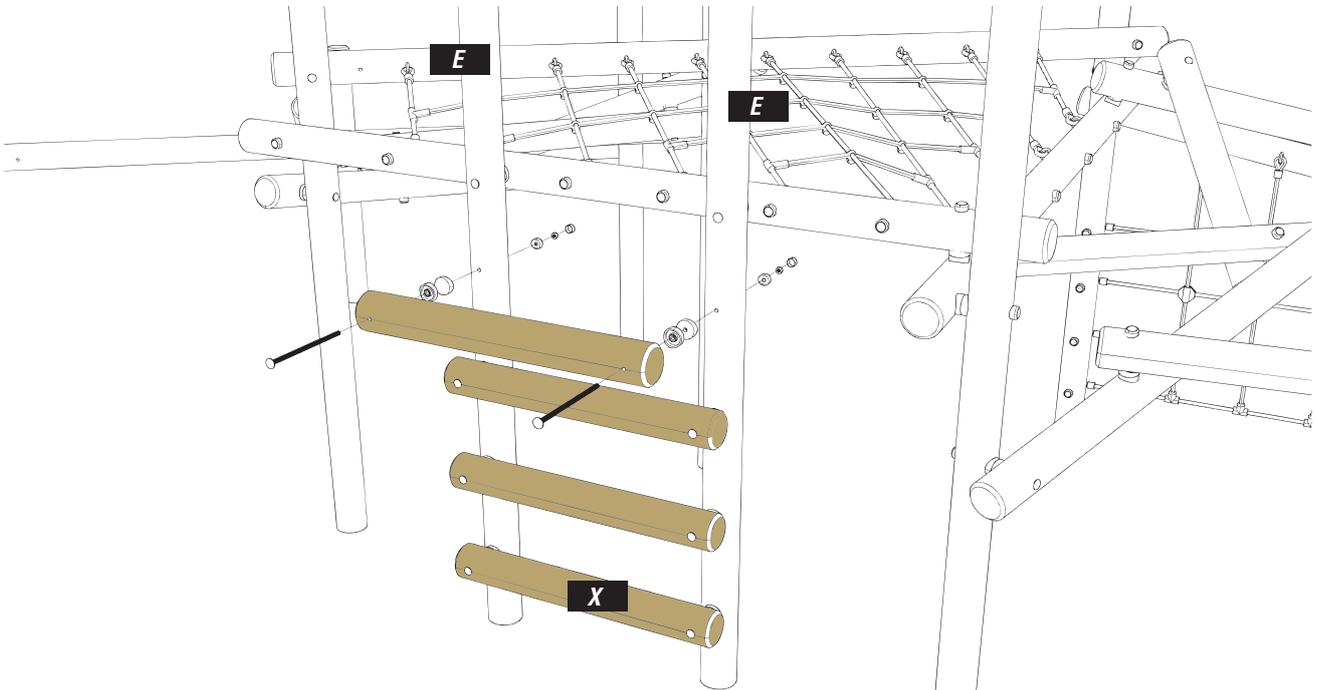

**50**

## Attach the IR ROPES (individual ropes)

Using 18 x M10 'NYLOCS' and 18 x Covered end cap R60

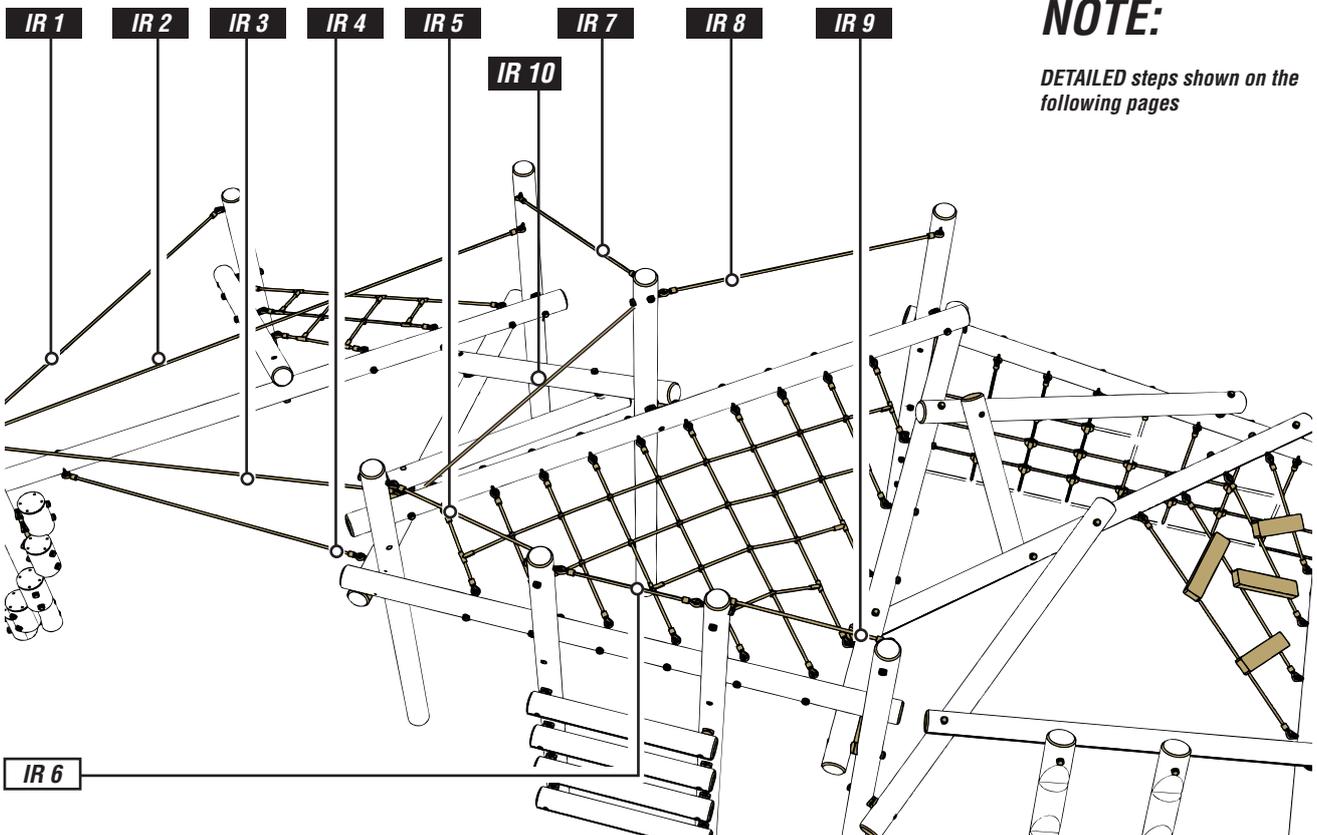


**NOTE:**

DETAILED steps shown on the following pages

# INSTALLATION INSTRUCTIONS


## Attach ROPE IR1

3rd HOLE down on C - timber / 1st HOLE on A - timber

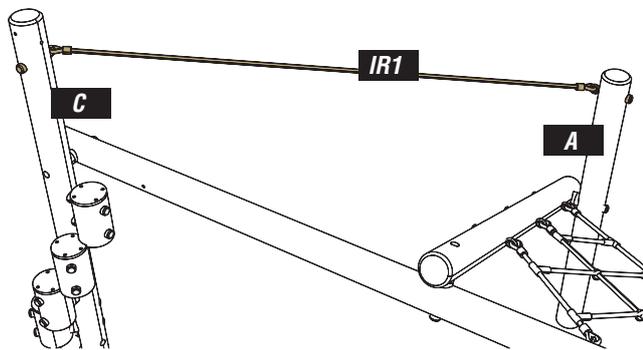


## Attach ROPE IR2

2nd HOLE down on C - timber / 2nd HOLE down on B - timber

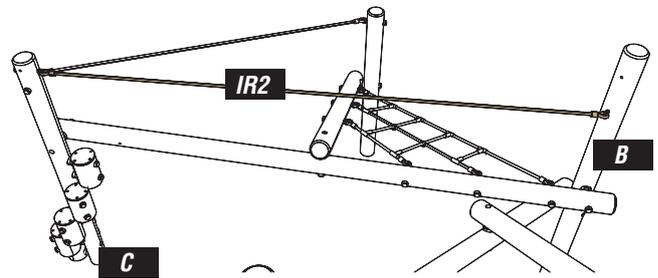


## Attach ROPE IR3

top HOLE on C - timber / 2nd HOLE on Q - timber

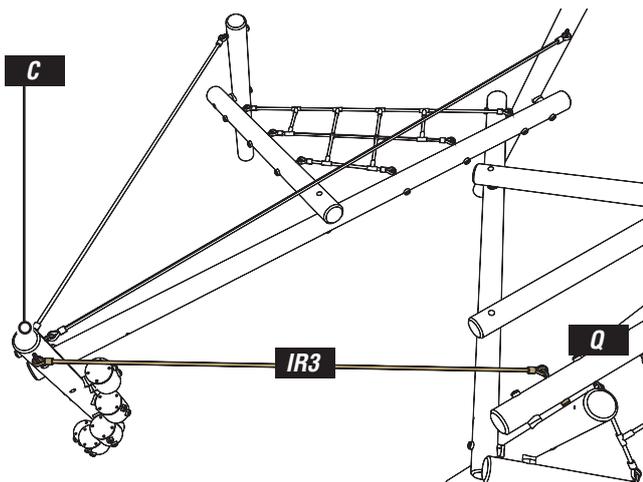


## Attach ROPE IR4

2nd HOLE on O - timber / 2nd HOLE on P - timber

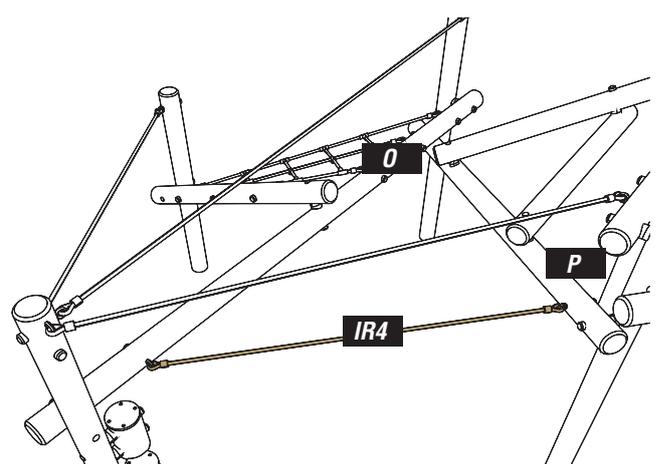


## Attach ROPE IR7

top HOLE on B - timber / top HOLE on J - timber

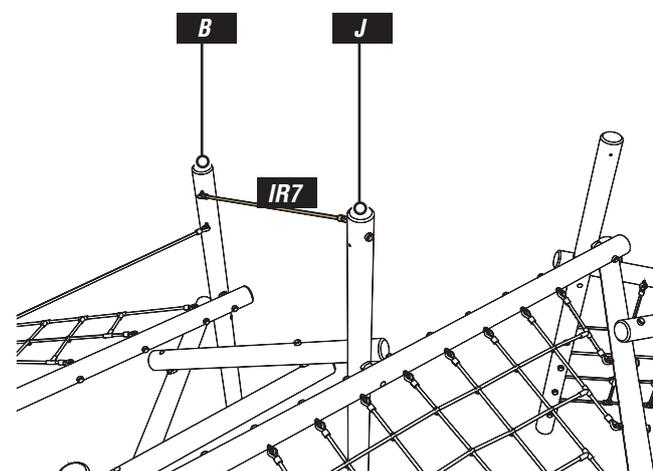

## Attach ROPE IR8

2nd HOLE on J - timber / top HOLE I - timber

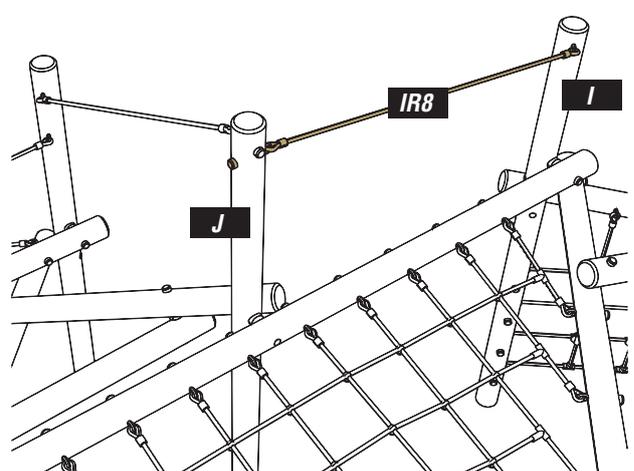


# INSTALLATION INSTRUCTIONS

Attach remaining **INDIVIDUAL ROPE**

**IR5**

**IR6**


**IR9**

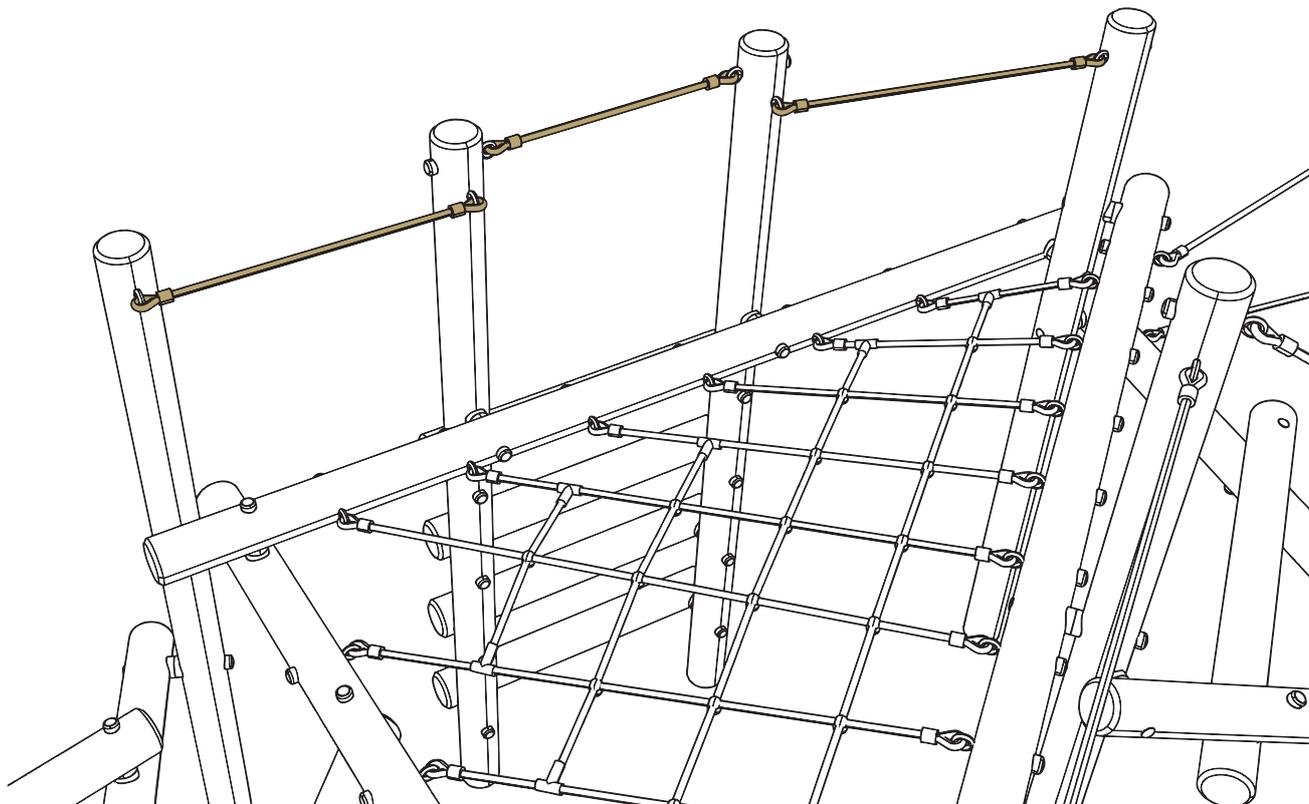

**IR10**


**B**

**D**

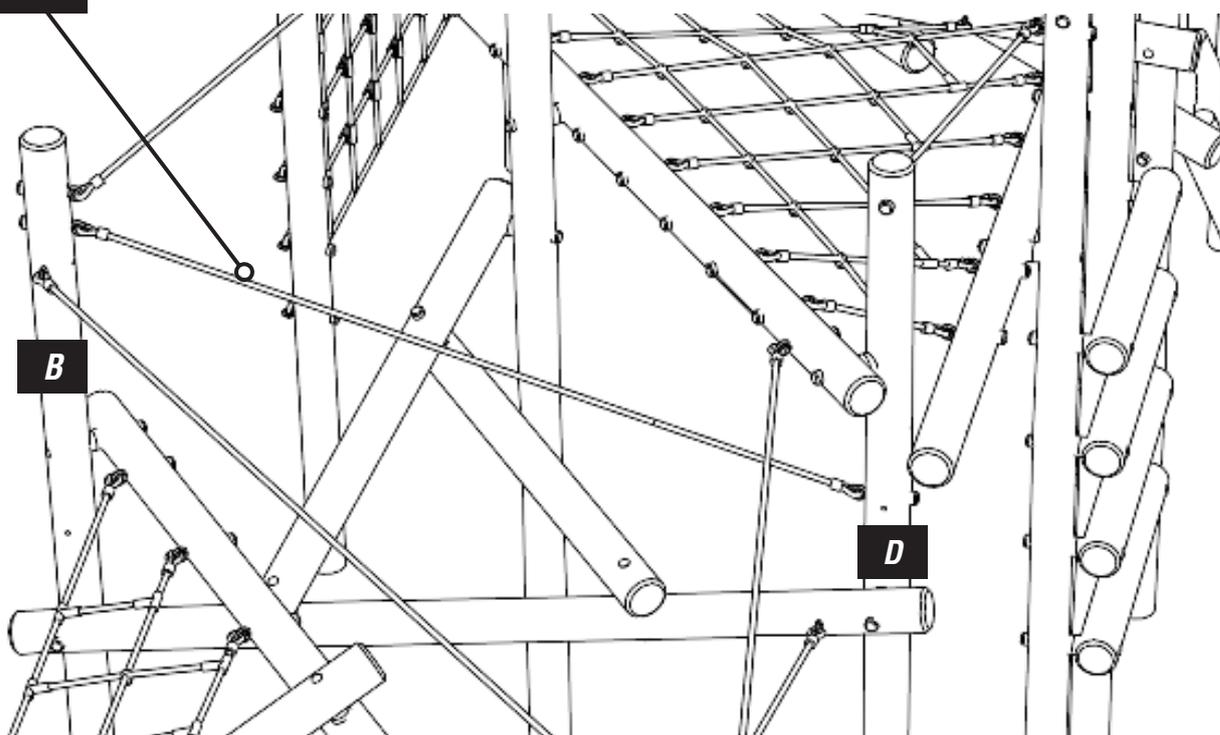

# INSTALLATION INSTRUCTIONS

*Use M8X80 screws to attach handles to E timbers.*

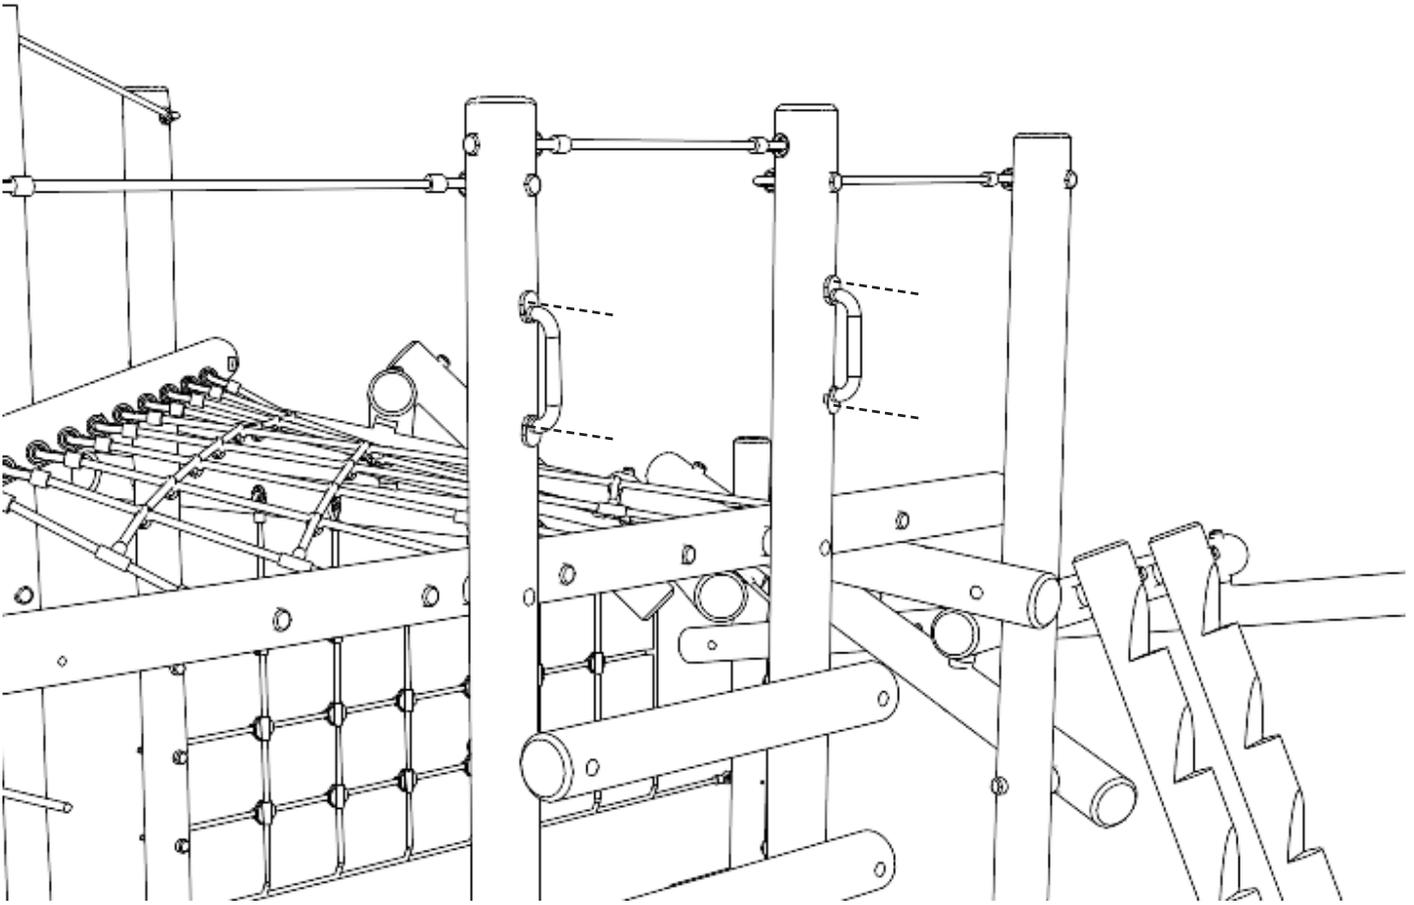


## **INSTALLATION COMPLETE - Please check**

- a** *All COVERED ENDS have been capped (insert any missing caps)*
- b** *Ensure all BOLTS are tight - tighten if / where required*
- c** *Posts are securely attached to each other (check the distance pieces are positioned correctly)*
- d** *MOVEMENT in the upright posts - ensure all posts are securely concreted*
- e** *SPLITS / CRACKS IN TIMBERS - check for any splits / cracks in timbers (they should not exceed 10mm)*


# ADDITIONAL DRAWINGS

## PLAN VIEW

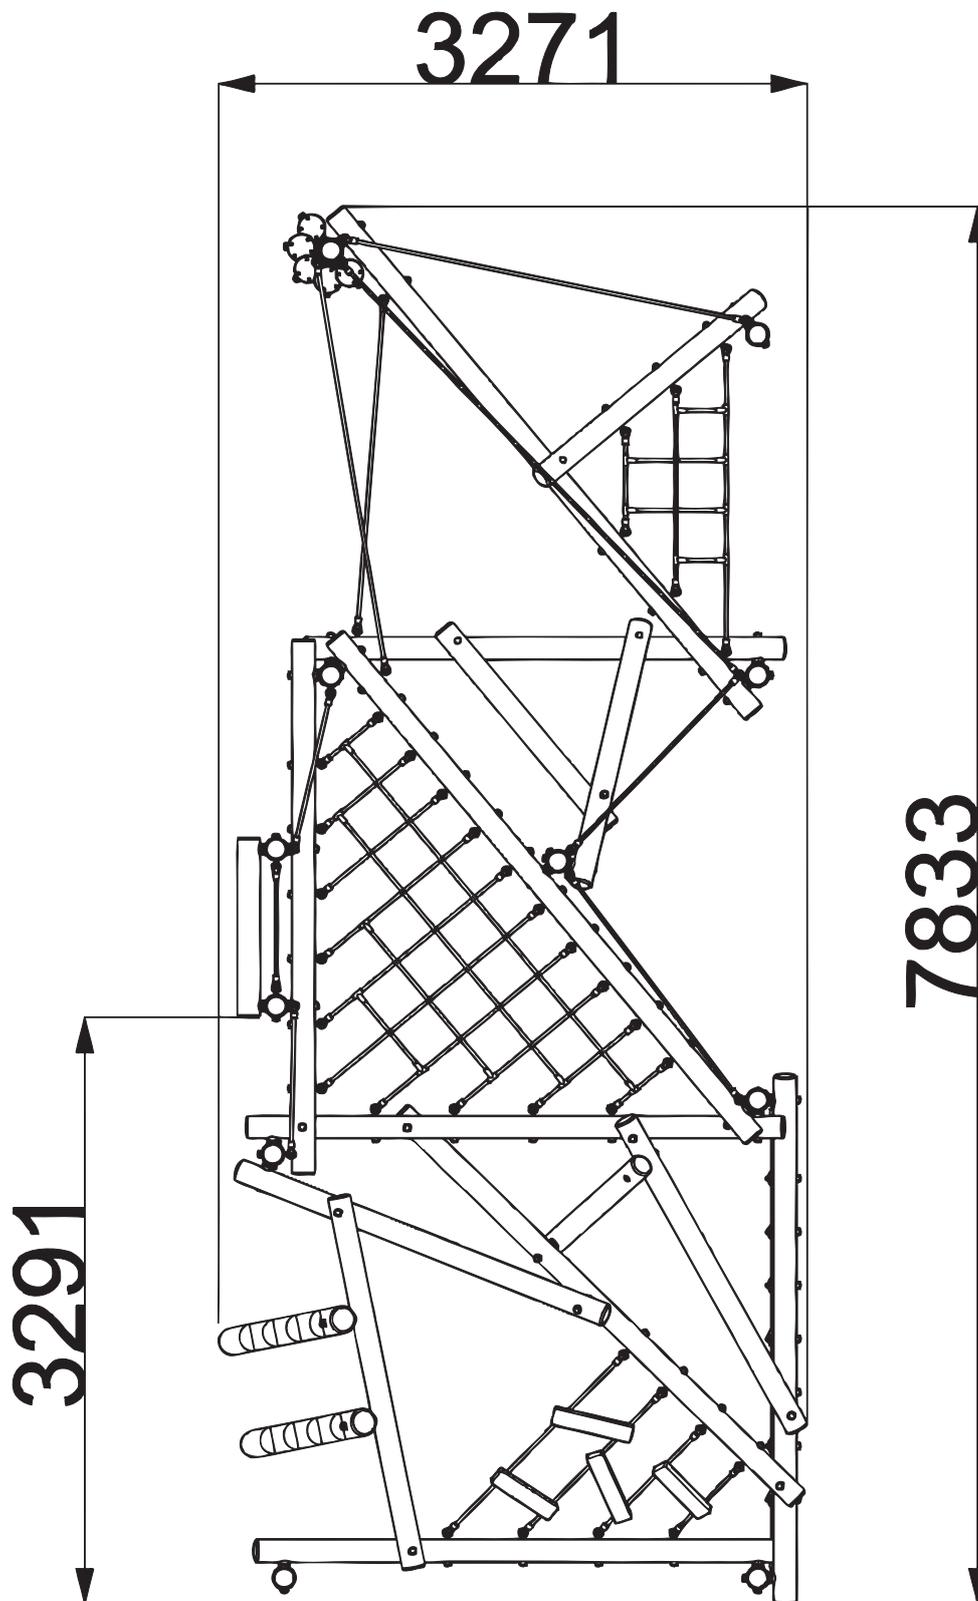

# ADDITIONAL DRAWINGS

## SIDE VIEW

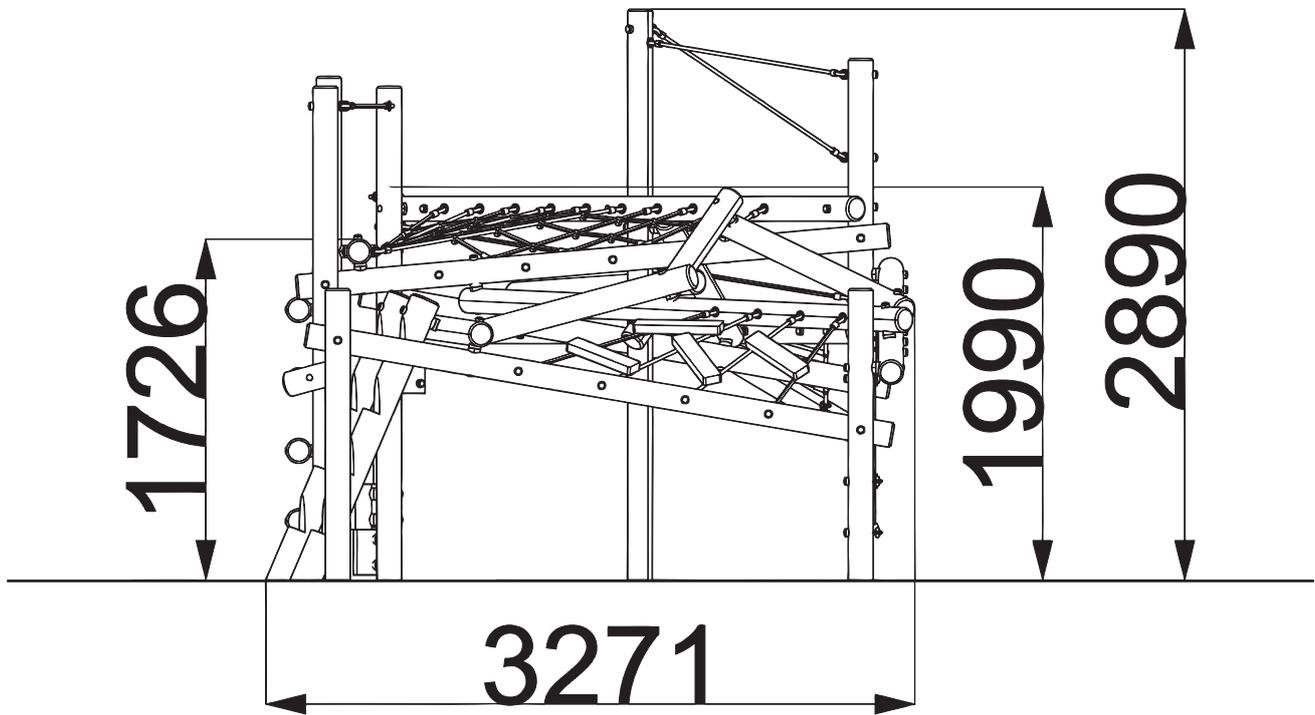

## FRONT VIEW

