


S101 - DOUBLE SWING (FLAT SEAT)

Installation Instructions

**creative
play**

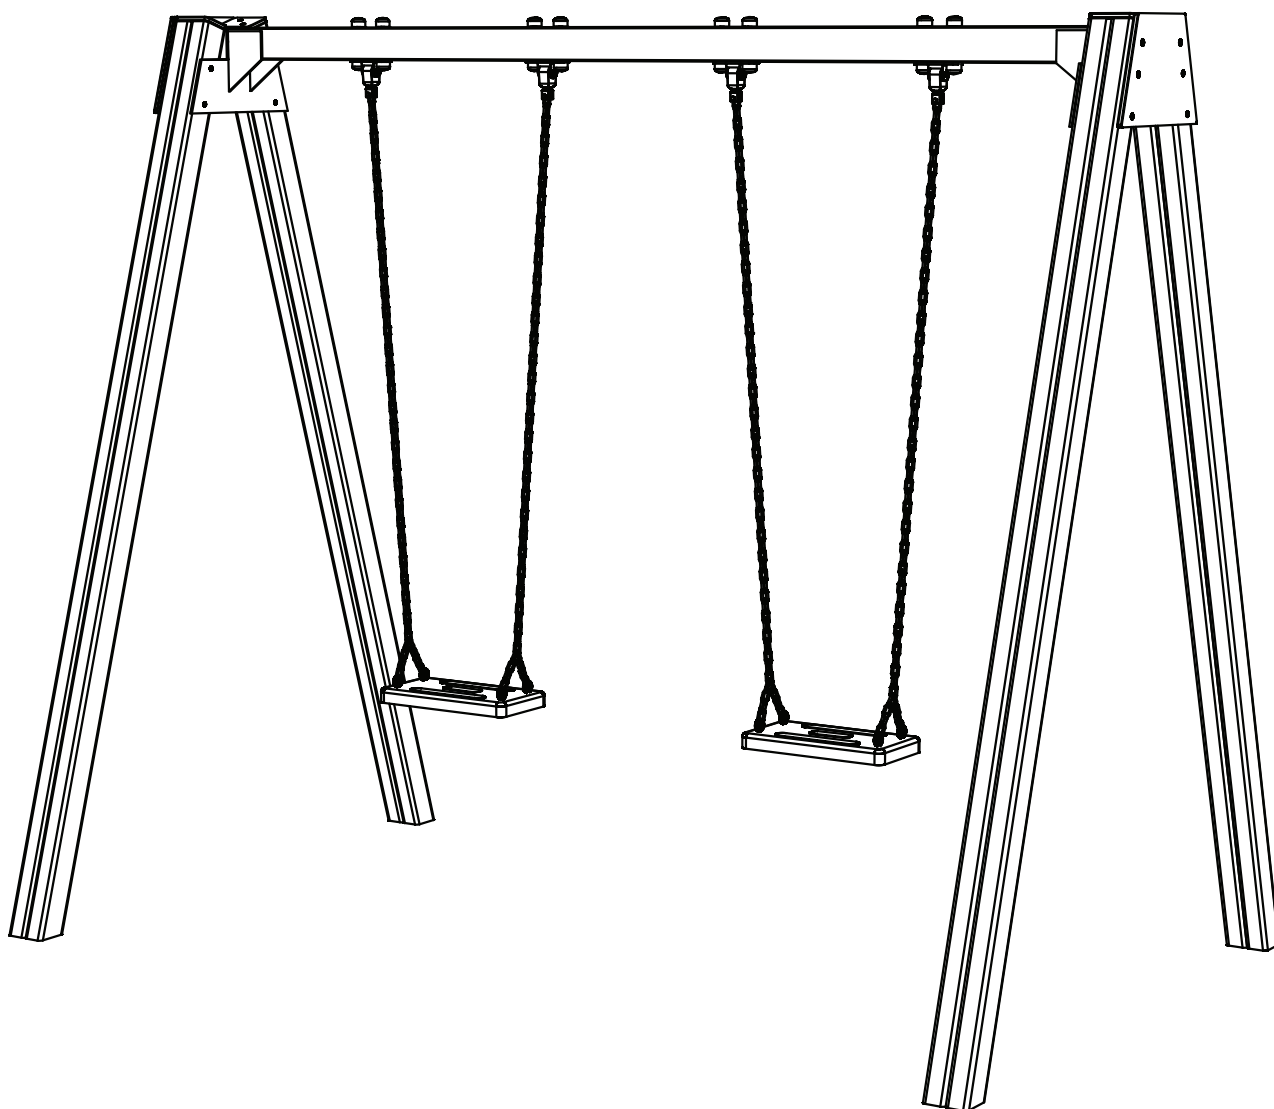

PARTS REQUIRED




X1

DOUBLE SUPPORT BEAM



X8

M8 NUT CAP

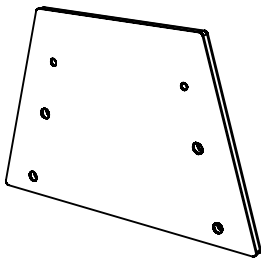

X2

PLAYTEC COVER



X4

M8X80 WOODSCREWS




X8

M12X160 BOLT




X8

M12 END CAP

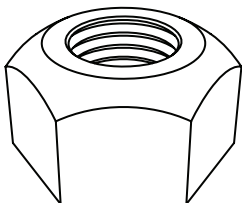

X8

M12 NYLOCS

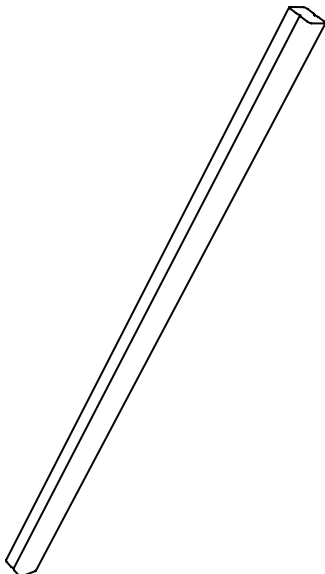

X4



S1 TIMBERS






X2


FLAT SEAT INC CHAINS

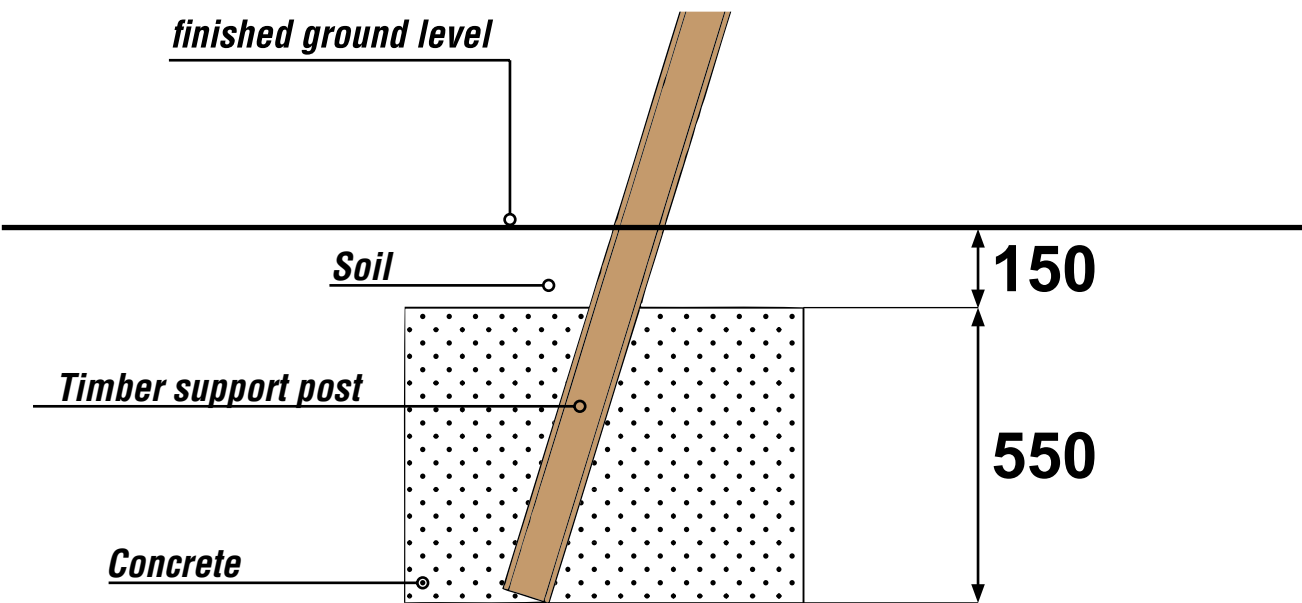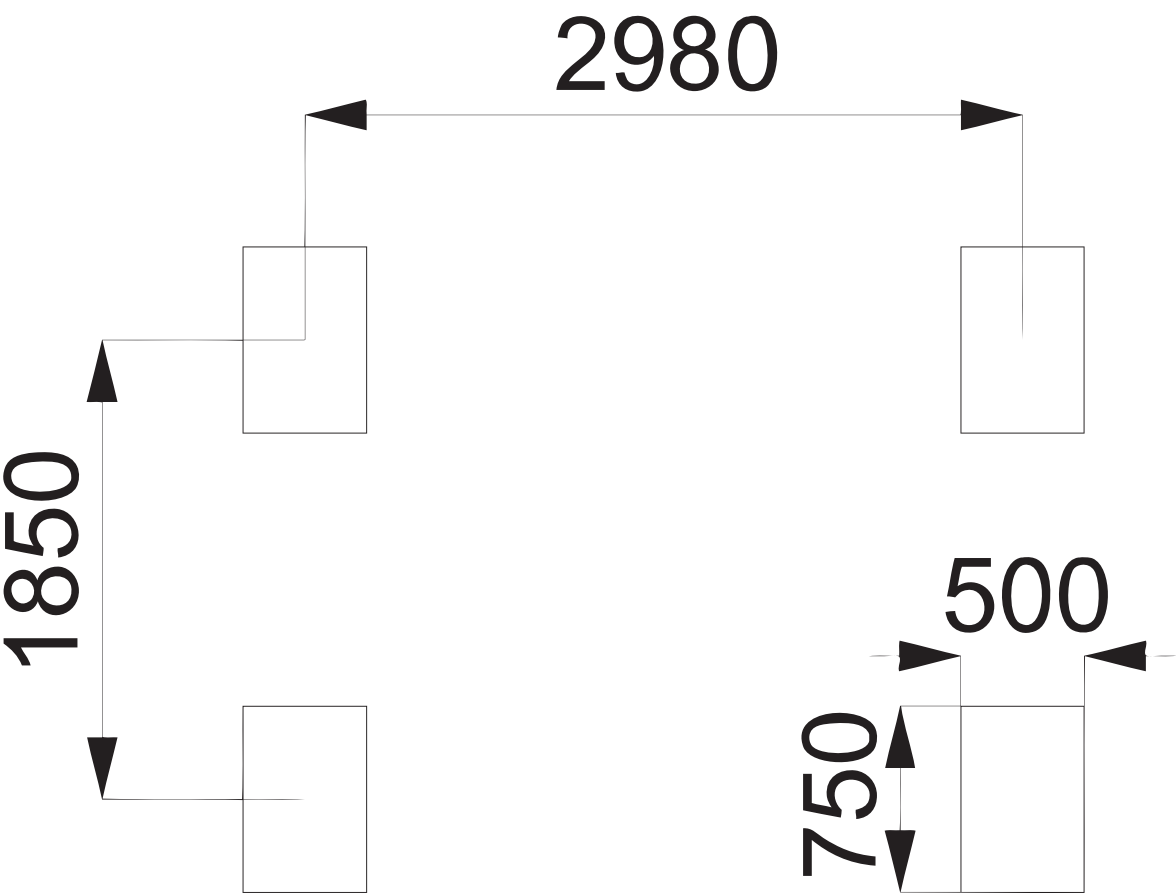FOUNDATION DETAILS




SURFACING DETAILS

-  = **SYNTHETIC**
-  = **LOOSE FILL**
-  = **AREA REQUIRED**

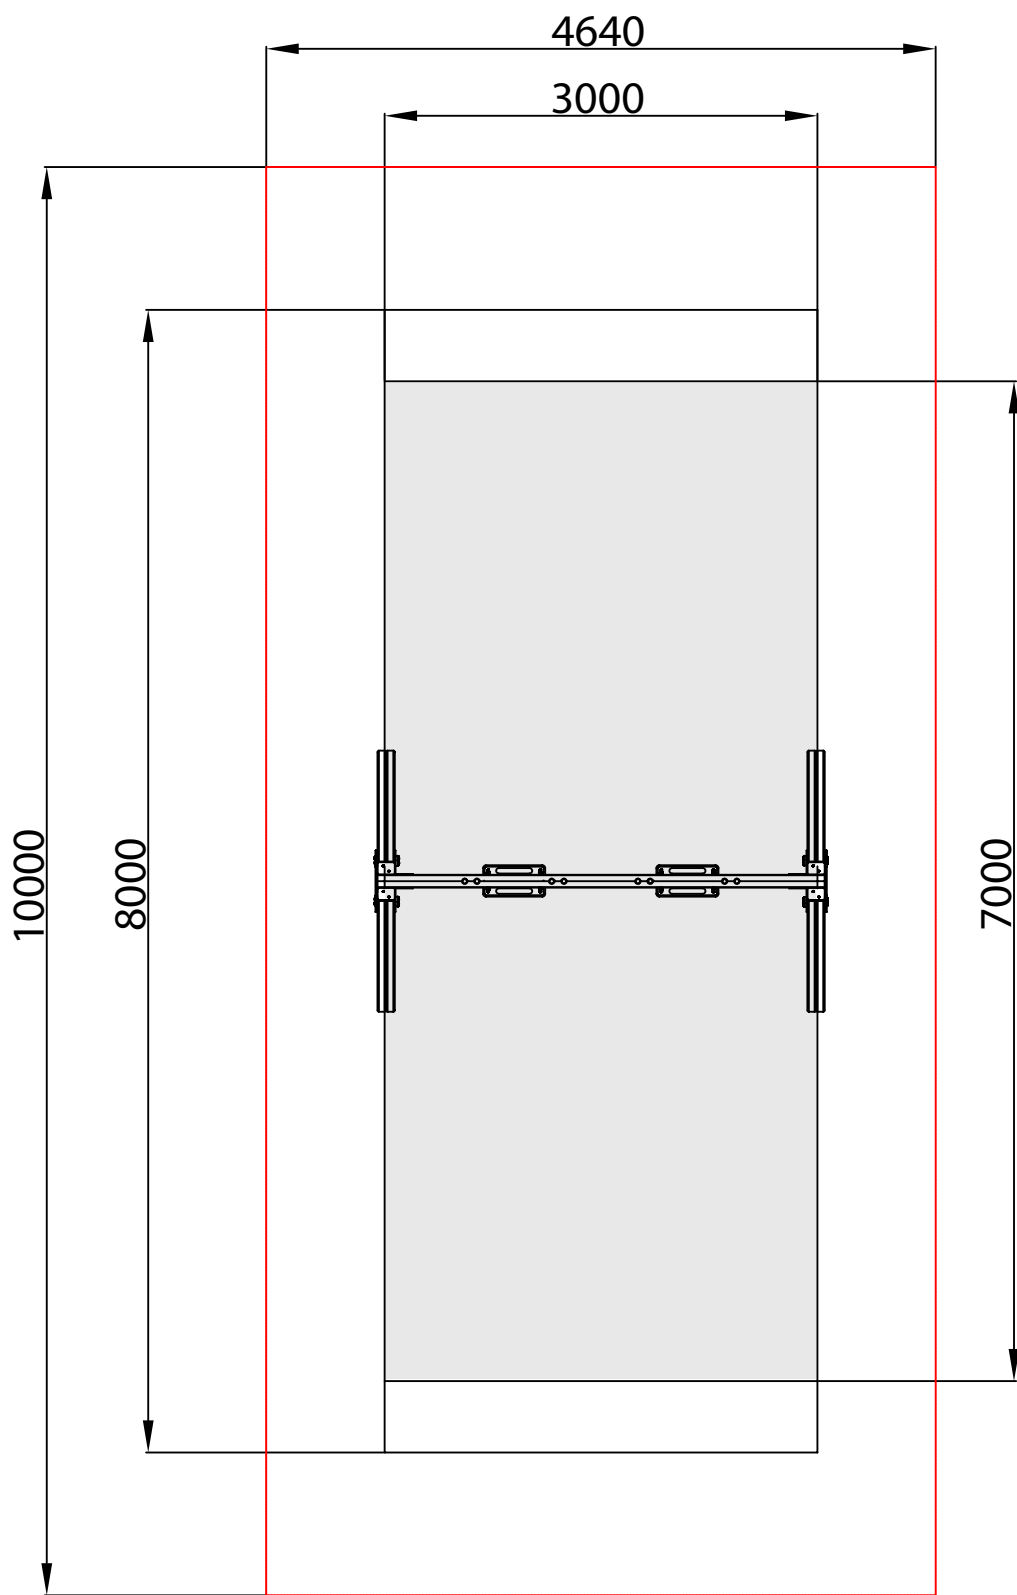


INSTALLATION INSTRUCTIONS

- 1** ATTACH PLAYTEC COVER AND S1 TIMBERS TO SUPPORT THE BEAM
USING M12X160 BOLTS [X8], M12 NYLOCS [X8] AND END CAPS [X8]

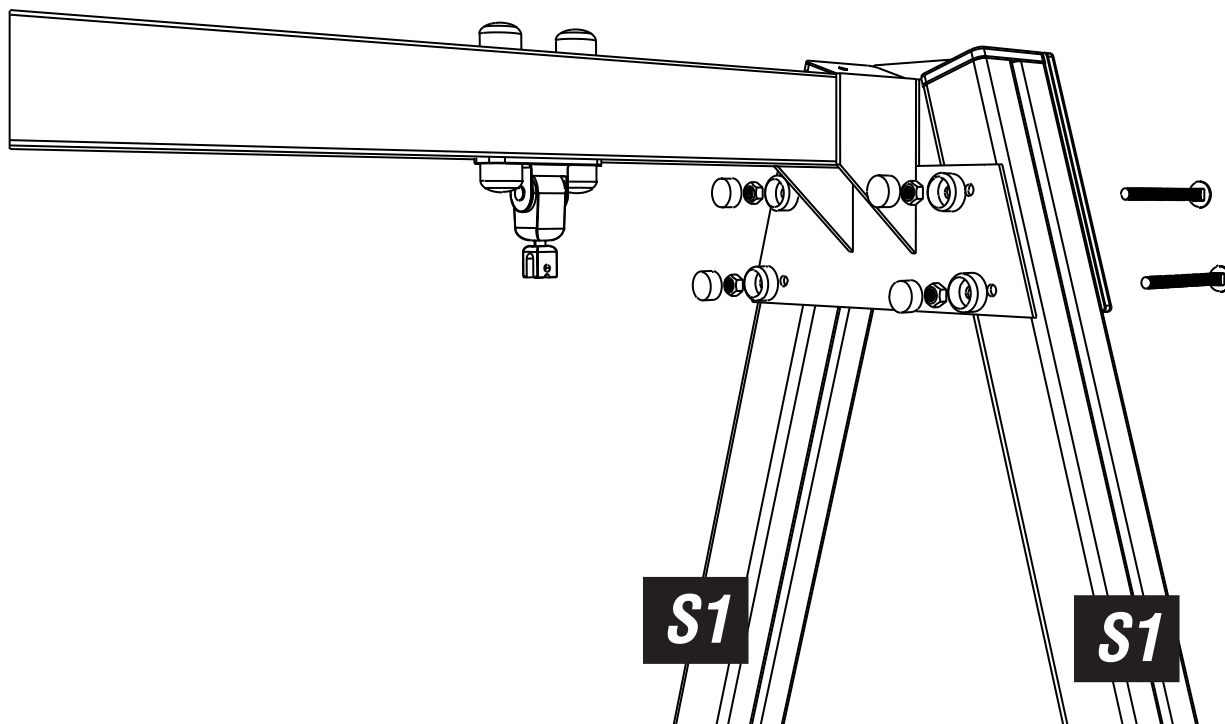


- 2** ATTACH PLAYTEC COVER TO TIMBERS S1
USING M8X80 WOODSCREWS [X4]

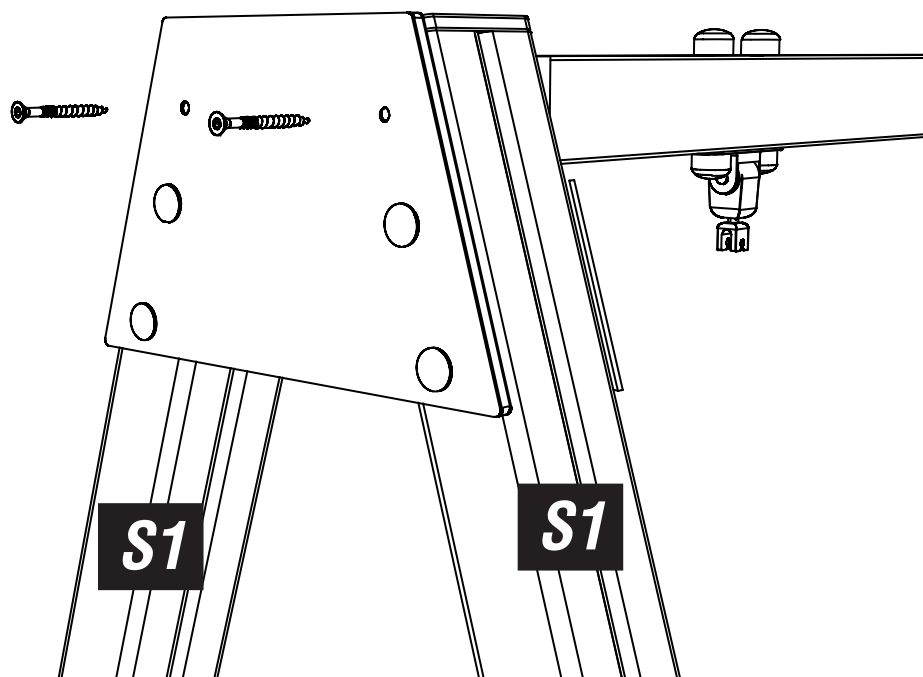

INSTALLATION INSTRUCTIONS


3

INSTALL THE ASSEMBLY
FOLLOW FOUNDATION DETAILS

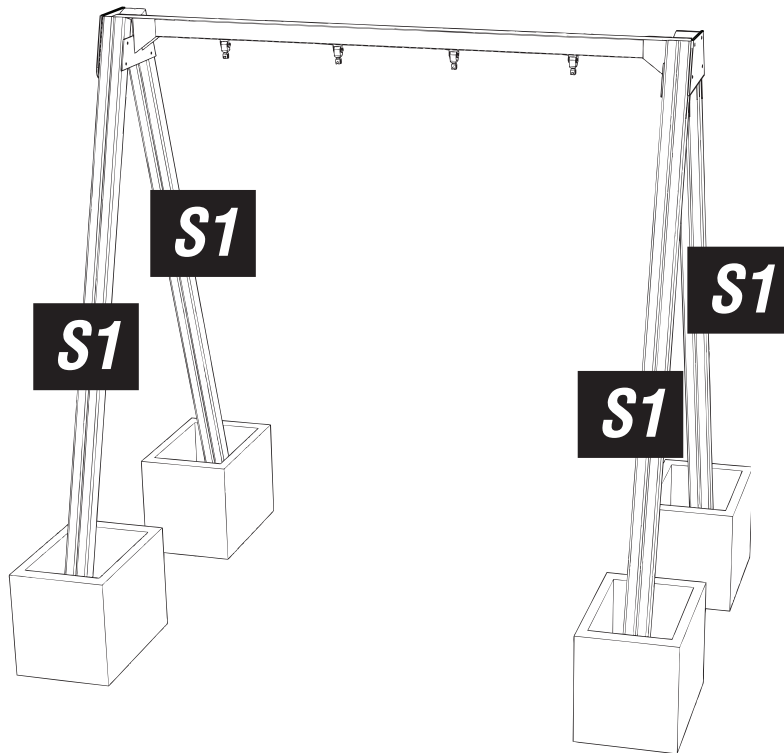

4

ATTACH SEATS TO BEAM
FOLLOW DIMENSION DETAILS ON NEXT PAGE

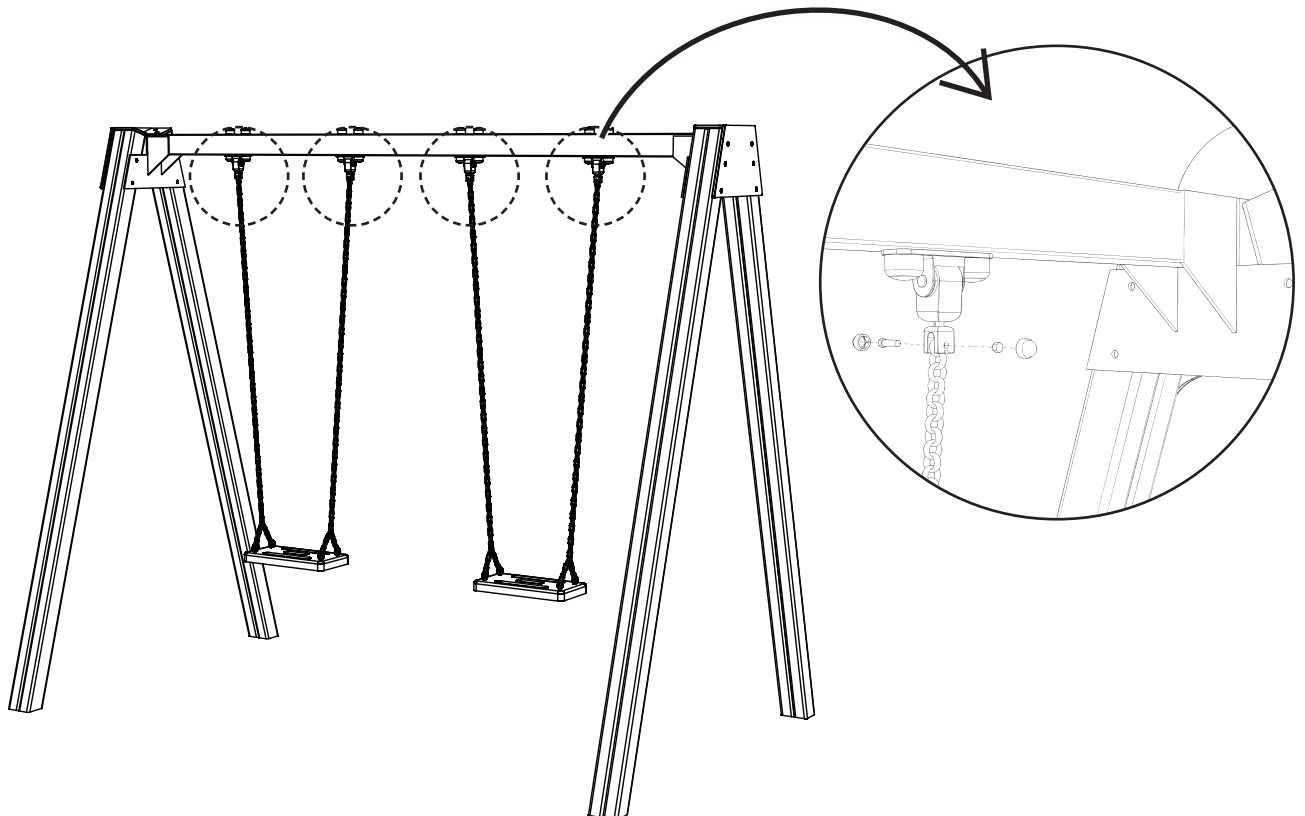

ADDITIONAL DIMENSIONS

