



S110-R - SINGLE SWING ROUND (FLAT SEAT)
Installation Instructions

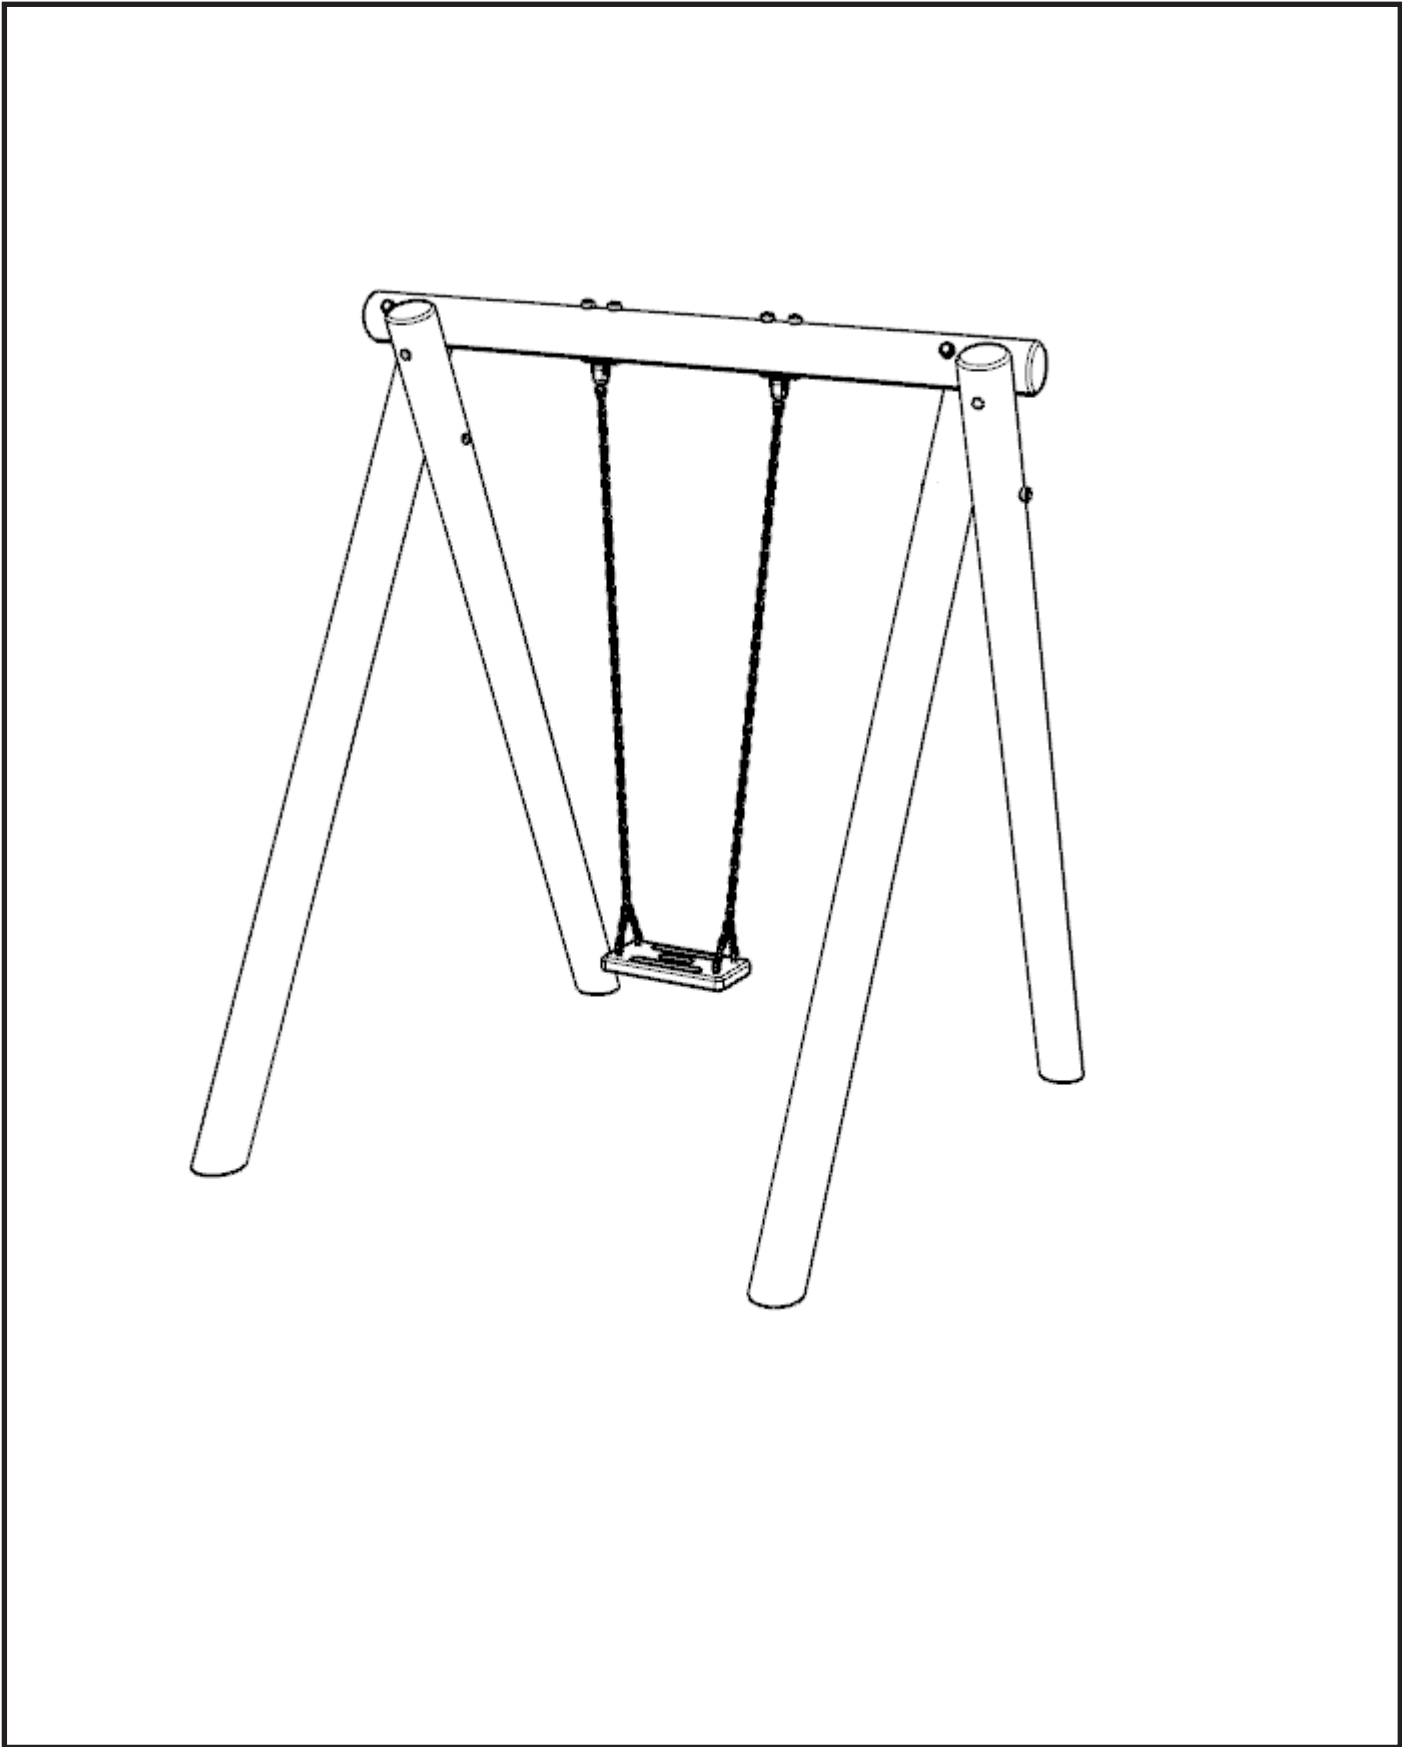

PARTS REQUIRED

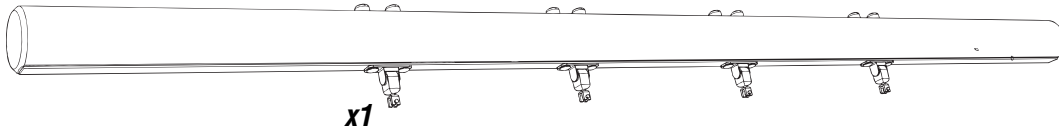

x1

TOP BEAM - SINGLE SWING




x4

UPRIGHTS S101R1




x1

FLAT SEAT (INC CHAIN)

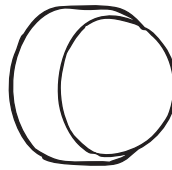


x4

BLACK M8 NUT CUP

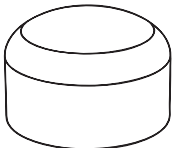

x6

END CAPS

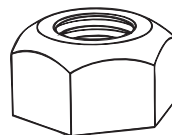

x6



M12 NYLOC NUT



x6

M12 x 320 SQUARE CUP BOLT

FOUNDATION DETAILS

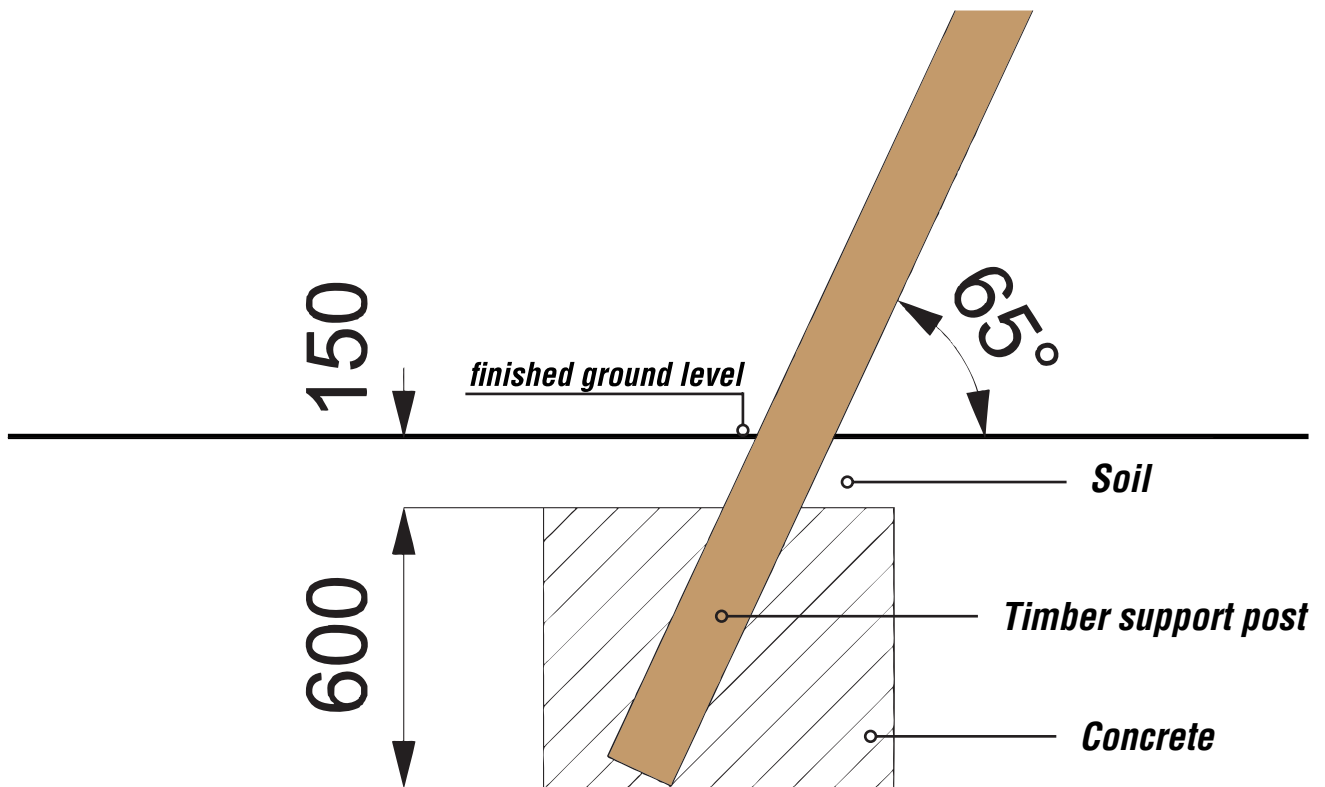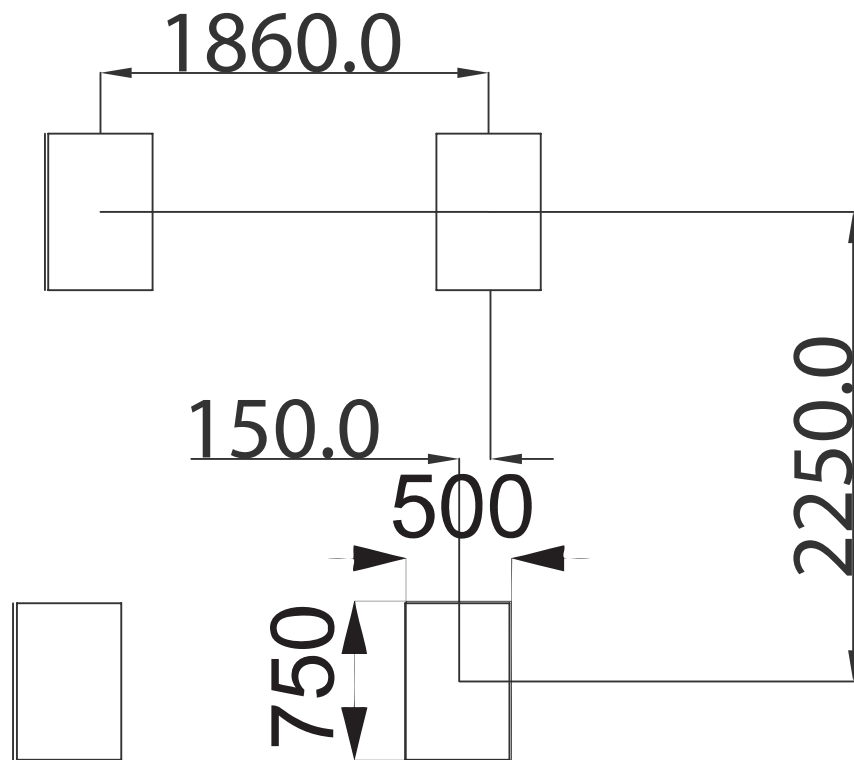


SURFACING DETAILS

----- = MINIMUM SPACE


———— = SURFACE AREA

■ = SYNTHETIC

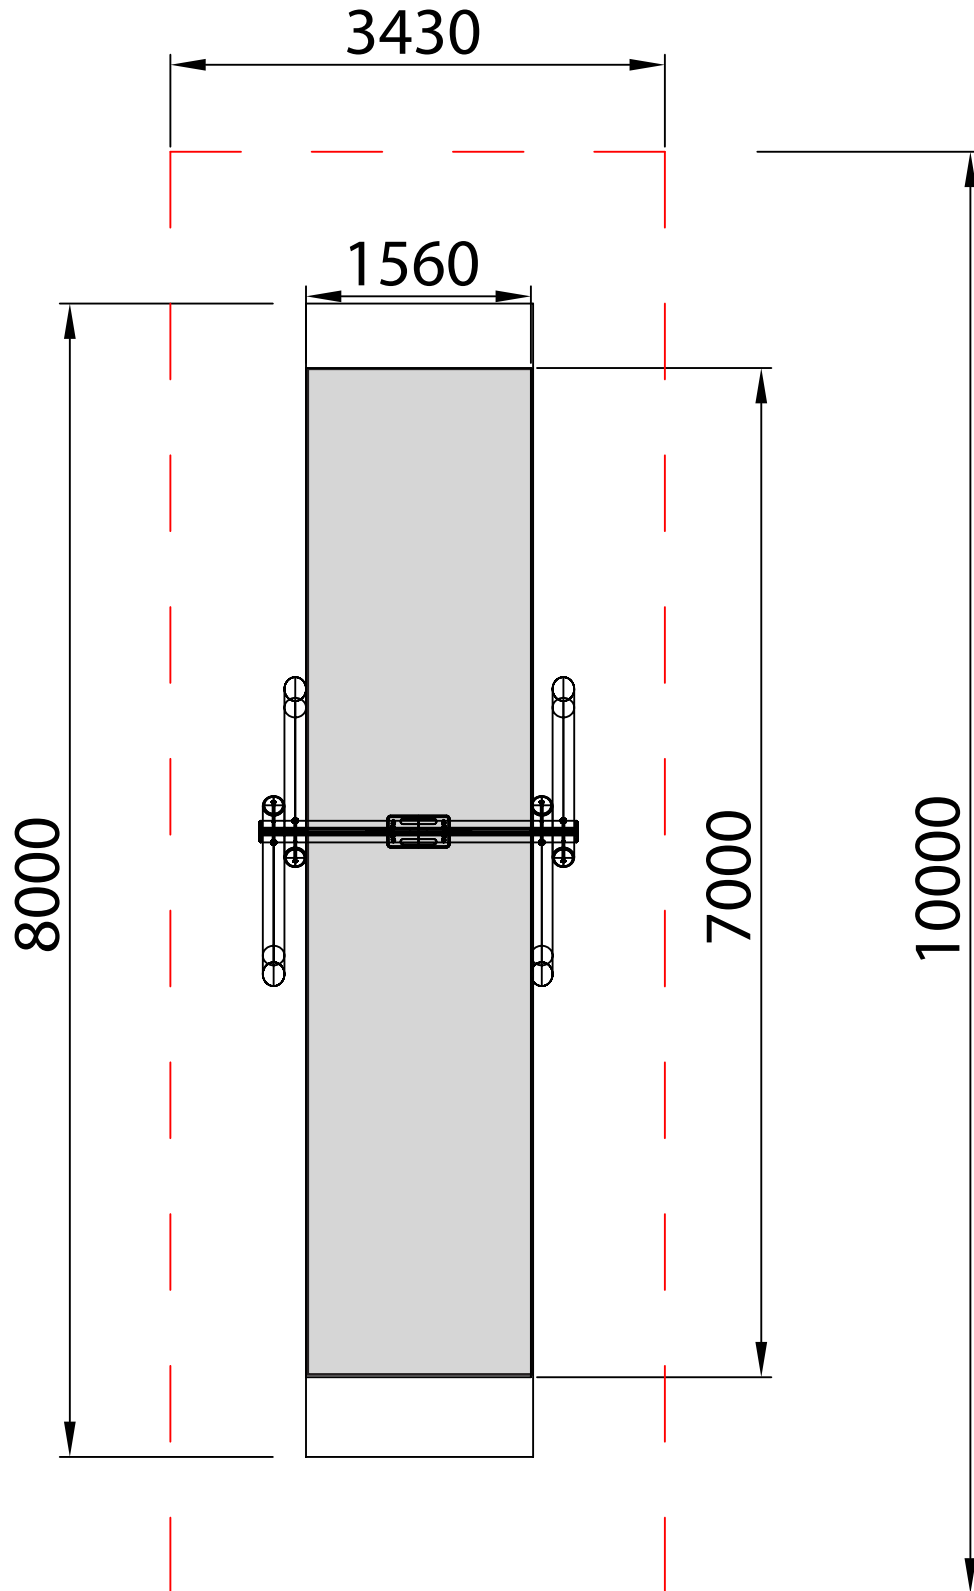

INSTALLATION INSTRUCTIONS

1 BUILD THE SINGLE SWING FRAME USING M12X310 X 6 / NYLOCS X 6/ END CAPS X6

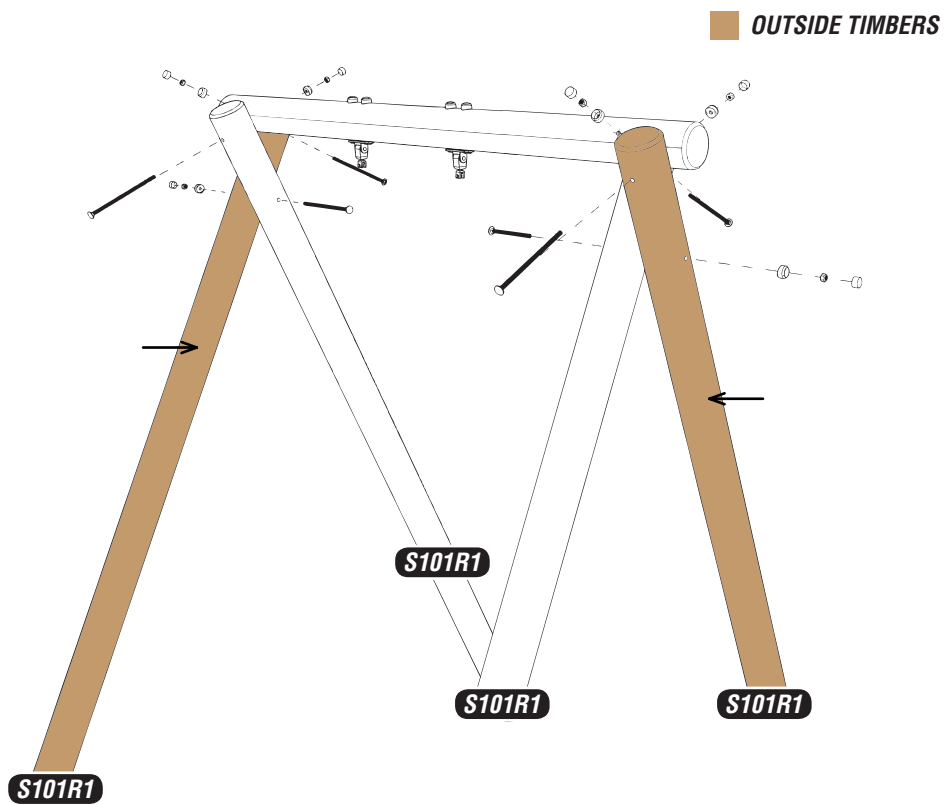


INSTALLATION INSTRUCTIONS

2

Install Assembly


Follow Foundation details

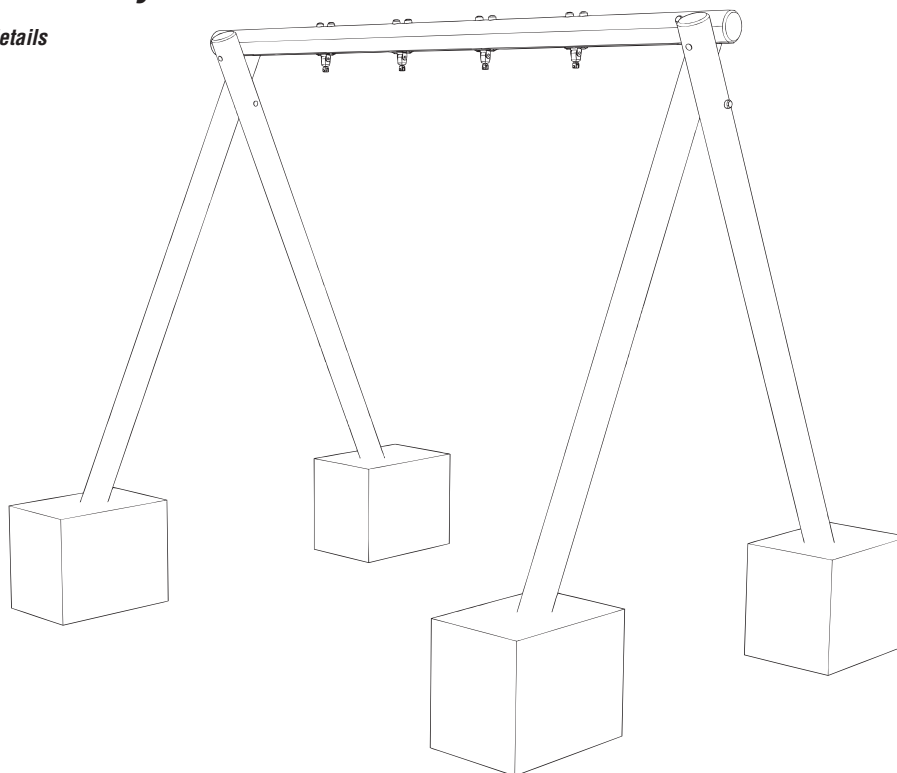

3

Install FLAT SEATS

USING M8 NUT CUP X4 . ADDITIONAL DIMENSIONS FOR SEAT HEIGHT

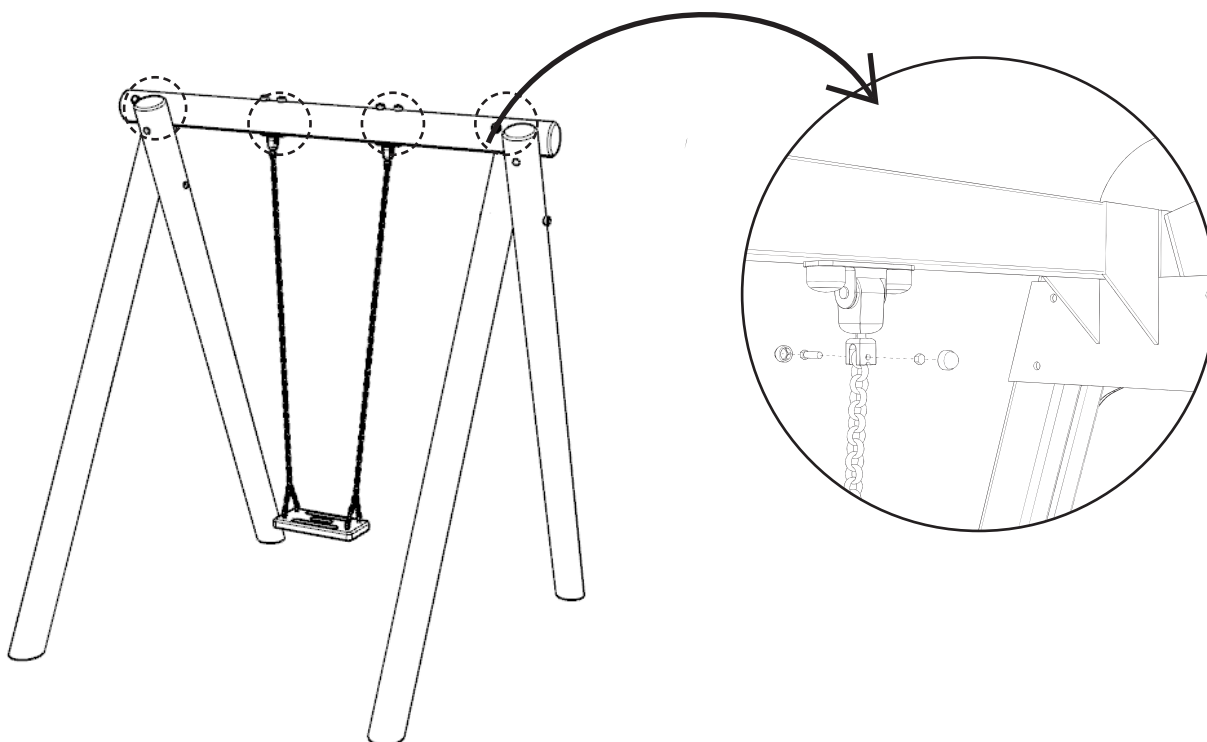

ADDITIONAL DIMENSIONS

SEAT HEIGHT BELOW

