


# **SWING BARRIER ROUND**


## ***Installation Instructions***

**creative  
play**

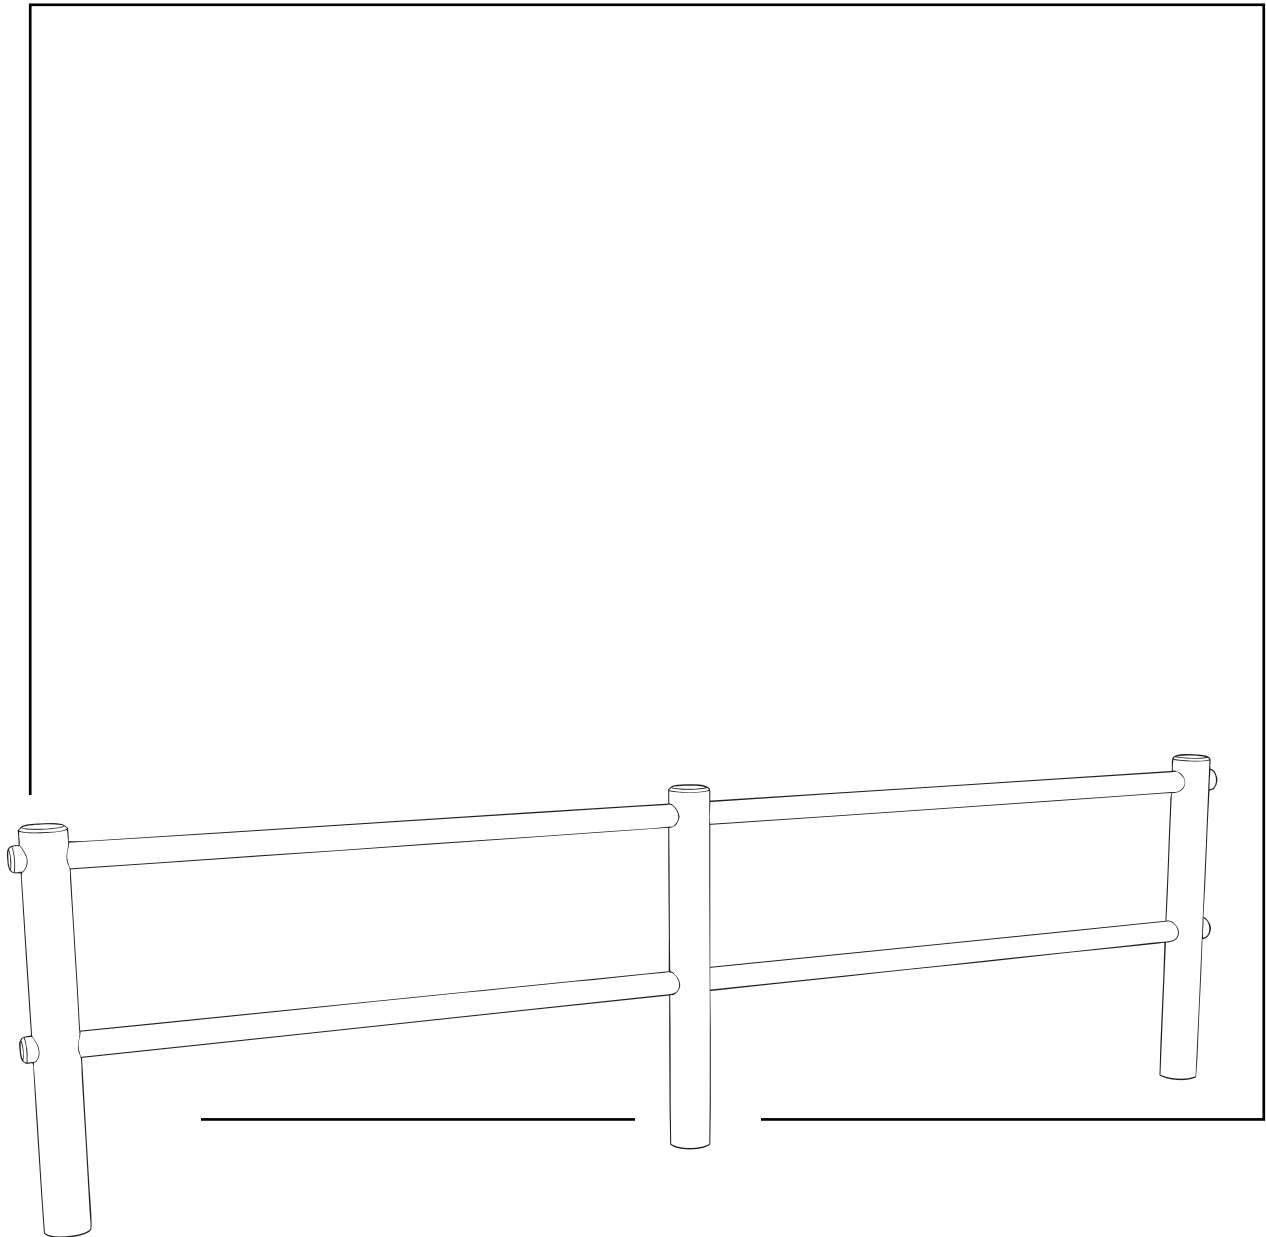


## ***PARTS required***


---



**S113R1** QTY x3

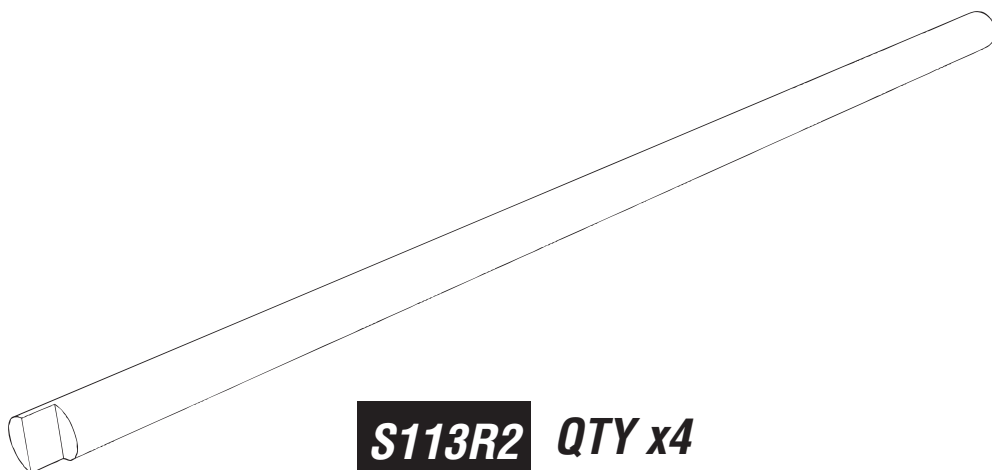


**S113R2** QTY x4




**x6** (FM120 'Brass screws')

## ***TOOLS required***

---

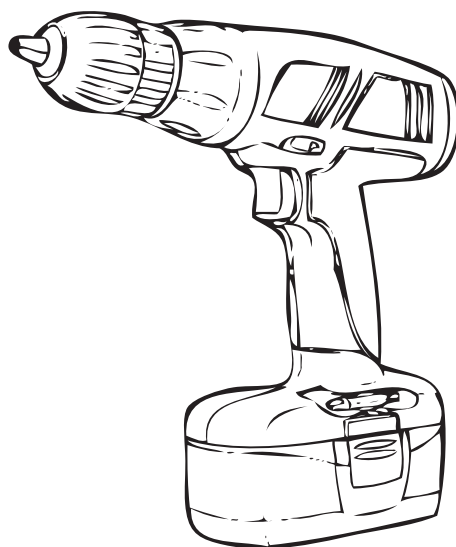

# Foundation Details

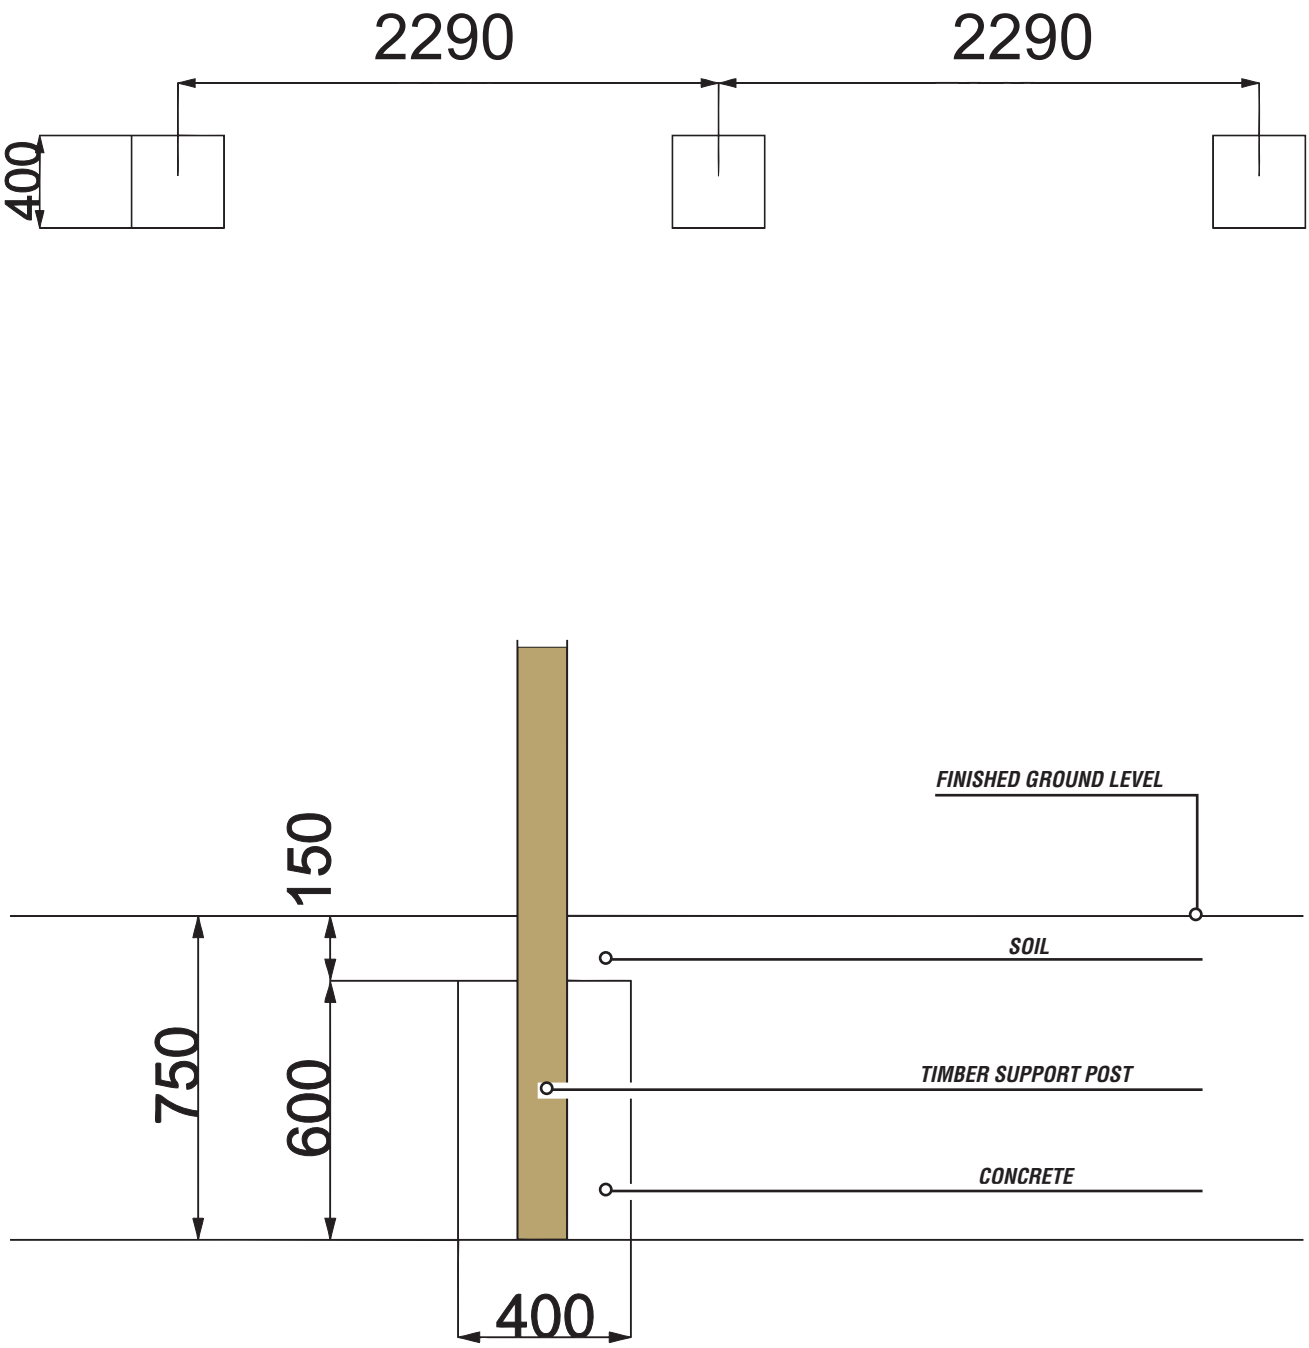


# Installation Instructions

---

**1**

## ***Install S113R1 TIMBERS***


*Follow Foundation details*

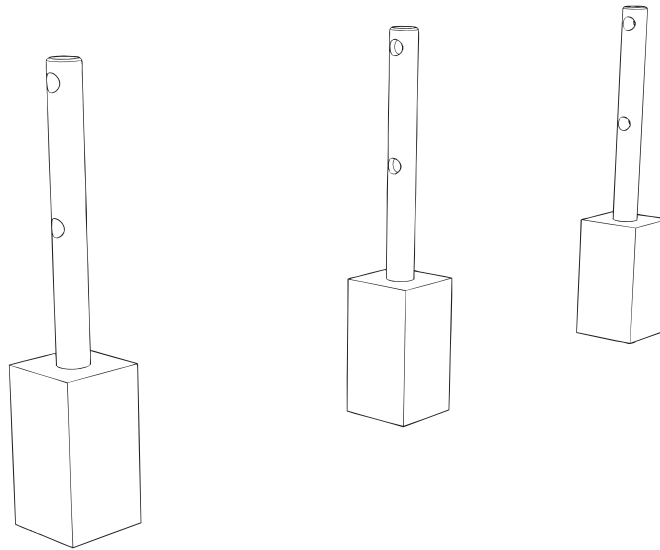

**2**

## ***Attach S113R2 TIMBERS to S113R1 TIMBERS***

*Using 6x FM120 Brass Screws*

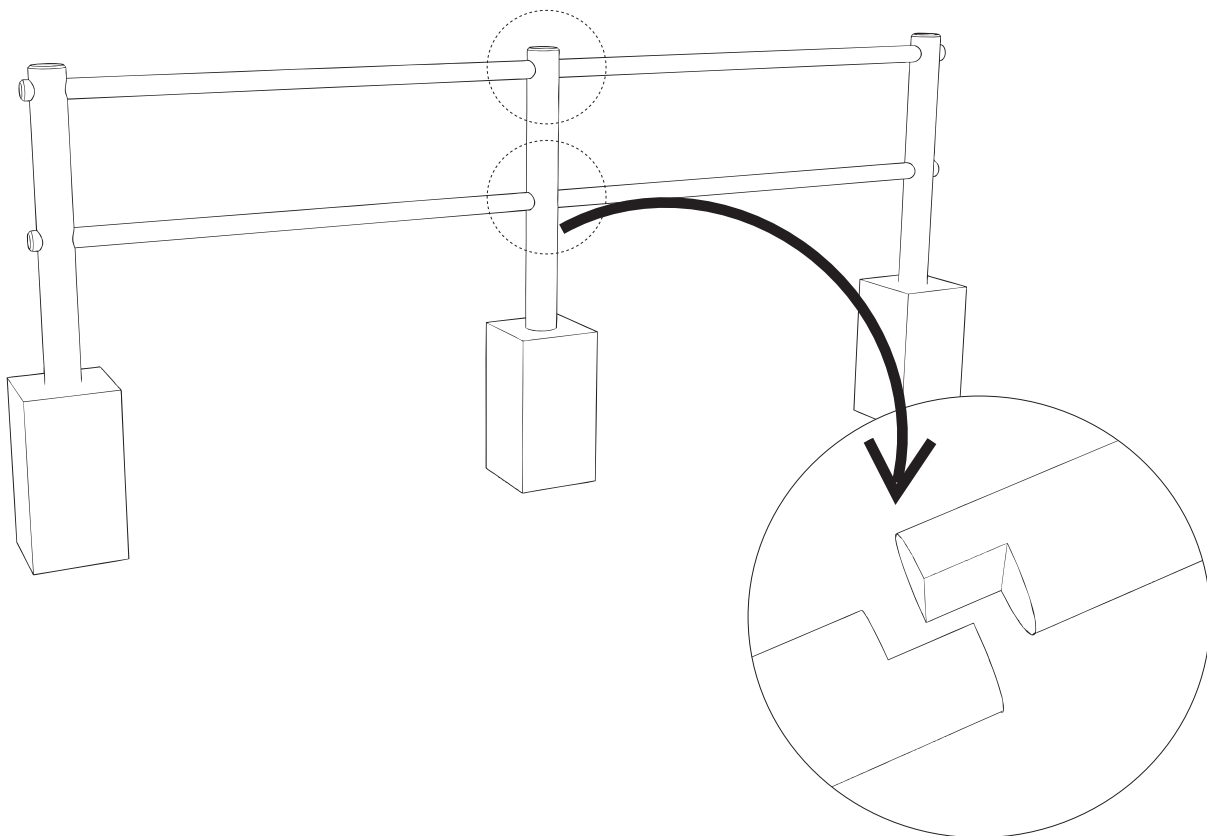

## ***Additional Dimensions***

---

