

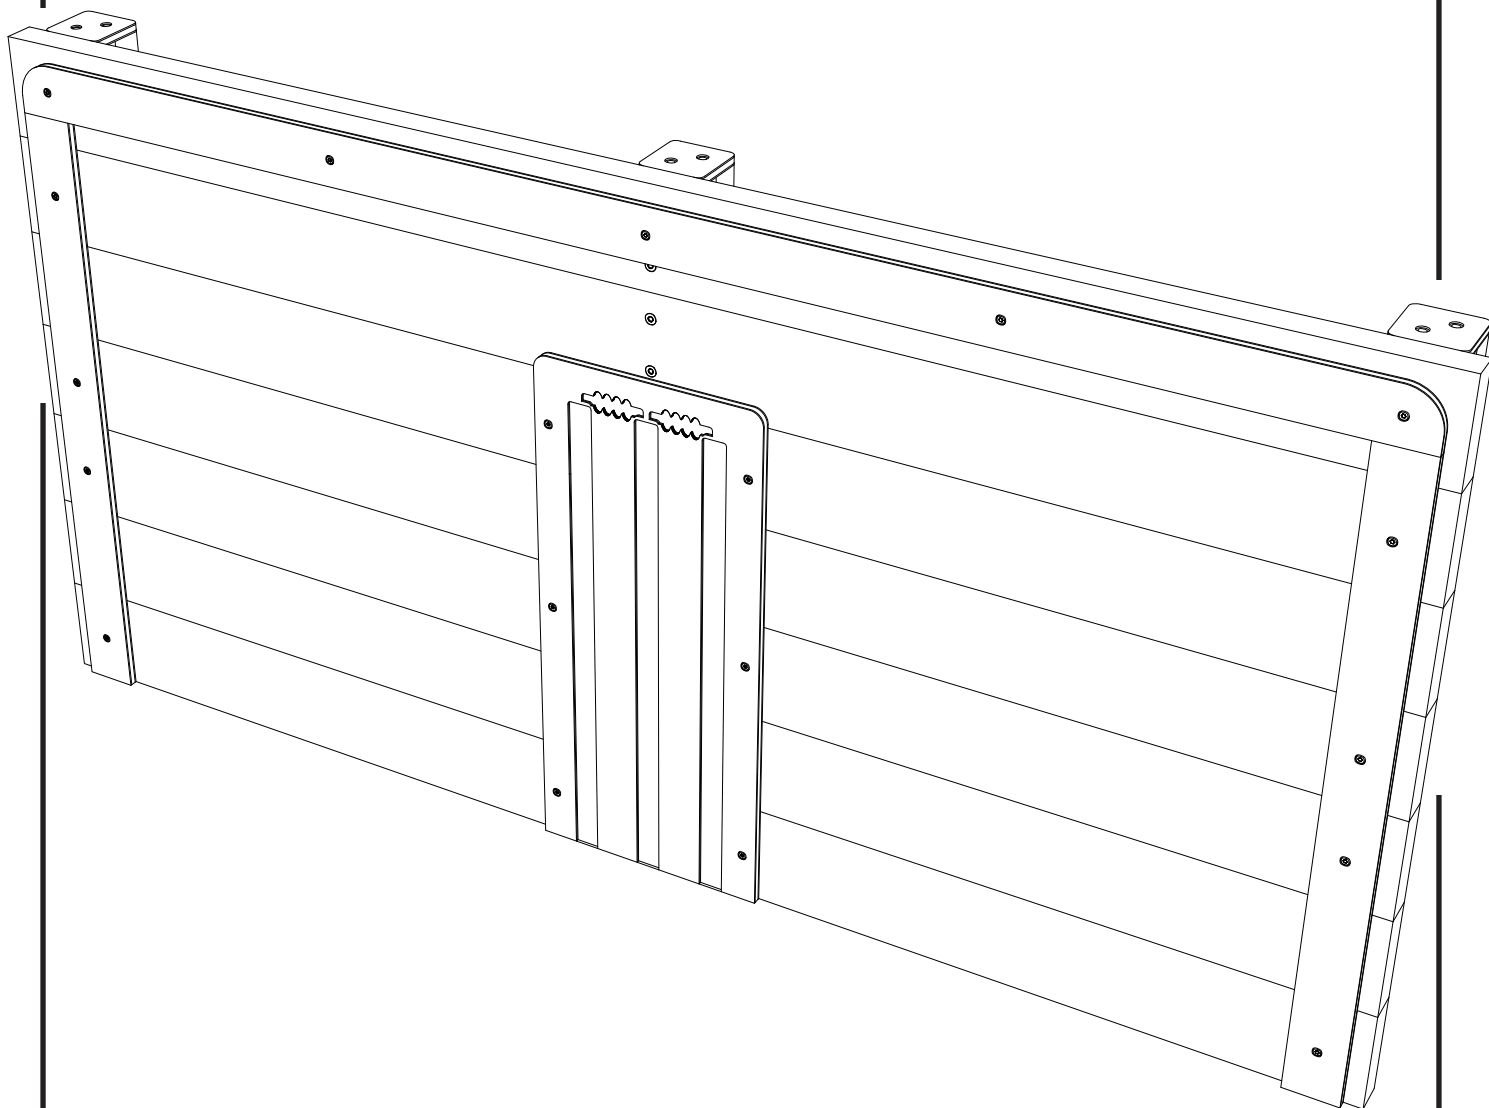


CP067(B) - 2M X 1M TIMBER KICK BOARD WITH TRIM
Installation Instructions

**creative
play**

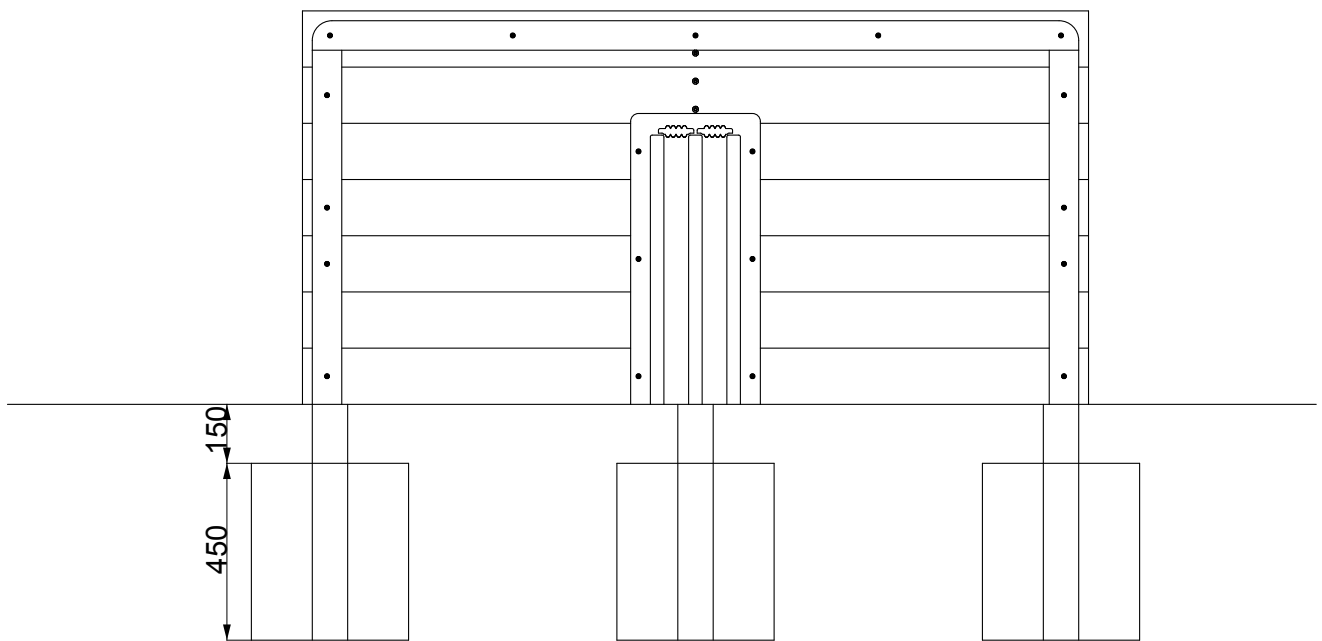


FOUNDATION DETAIL

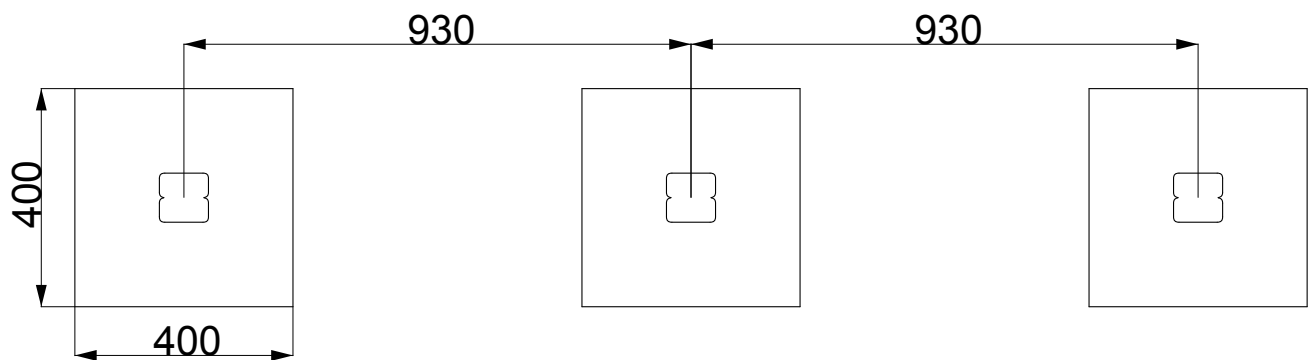

INSTALLATION INSTRUCTIONS

1 INSTALL CP067(B) INTO THE GROUND

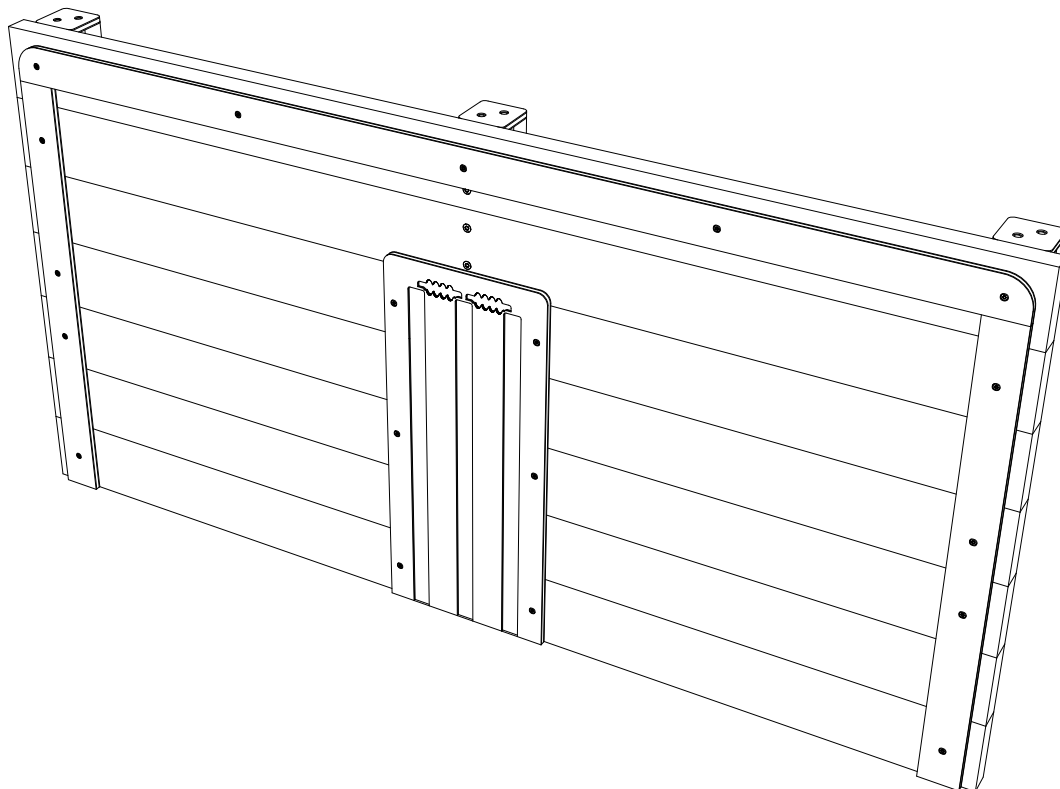

ADDITIONAL DIMENSIONS

