

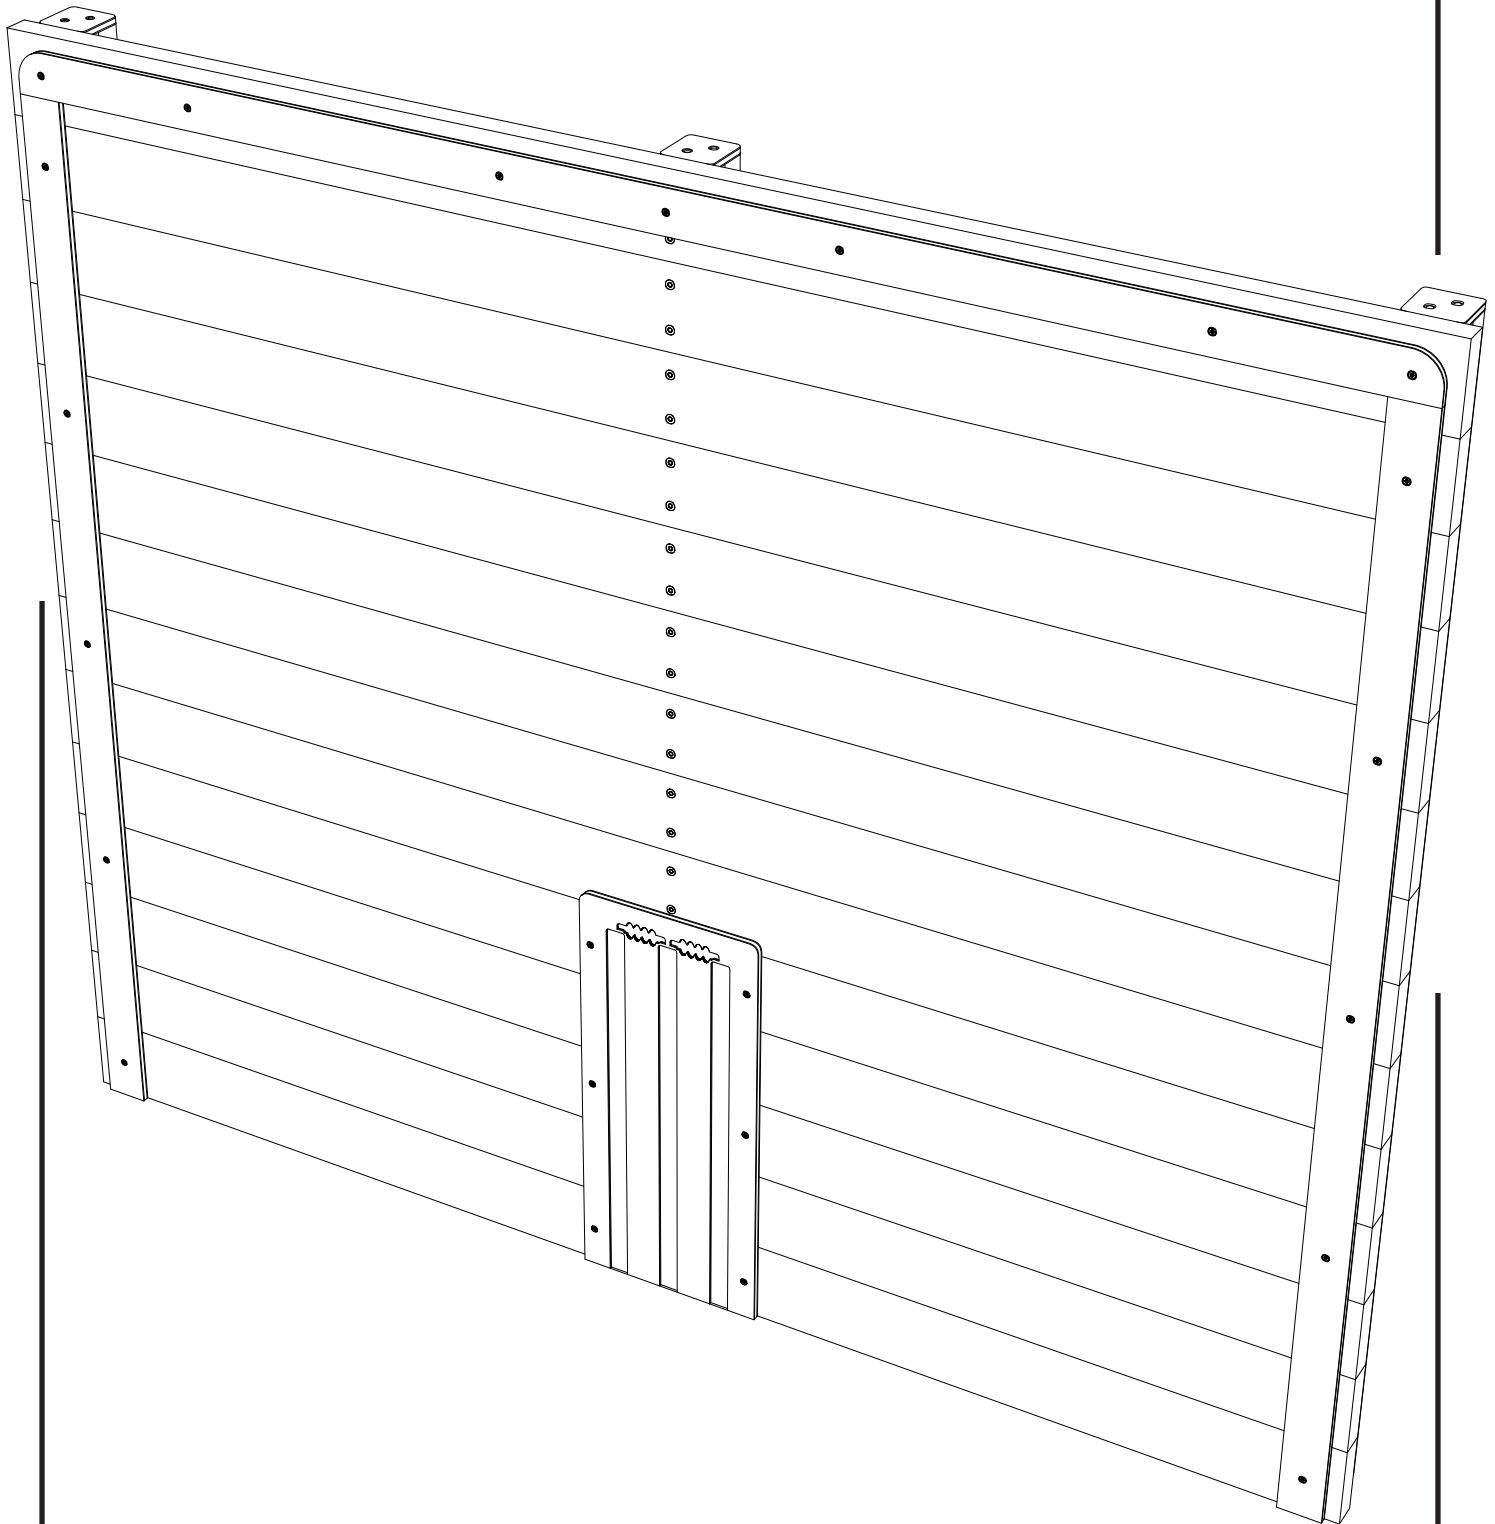


CP067(C) - 2.4M X 1M TIMBER KICK BOARD WITH TRIM
Installation Instructions

**creative
play**

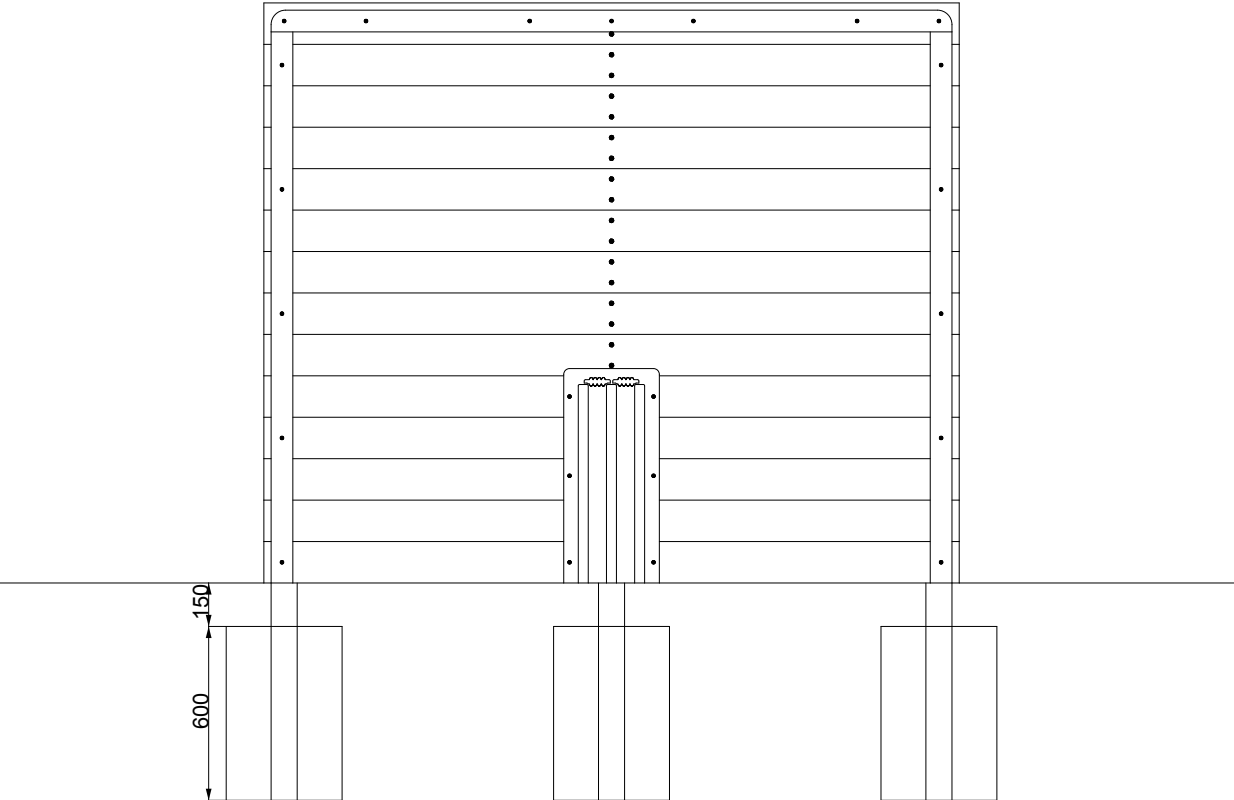


FOUNDATION DETAIL

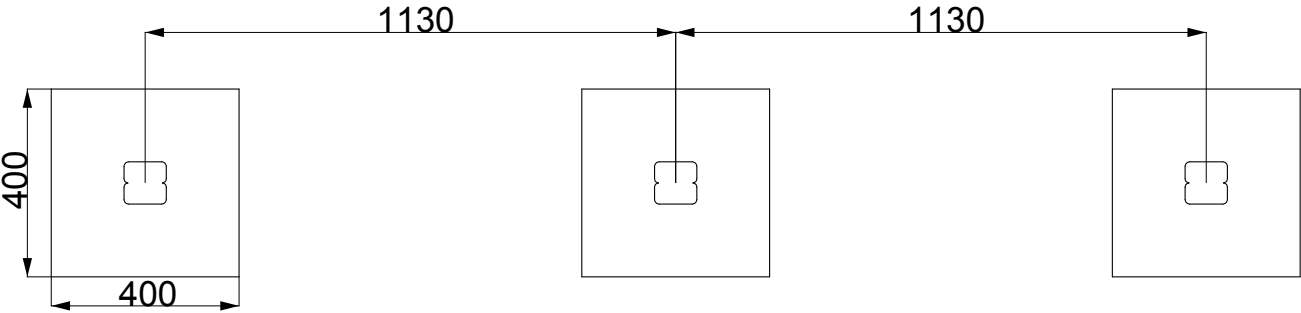

INSTALLATION INSTRUCTIONS

1

INSTALL CP067(C) INTO THE GROUND

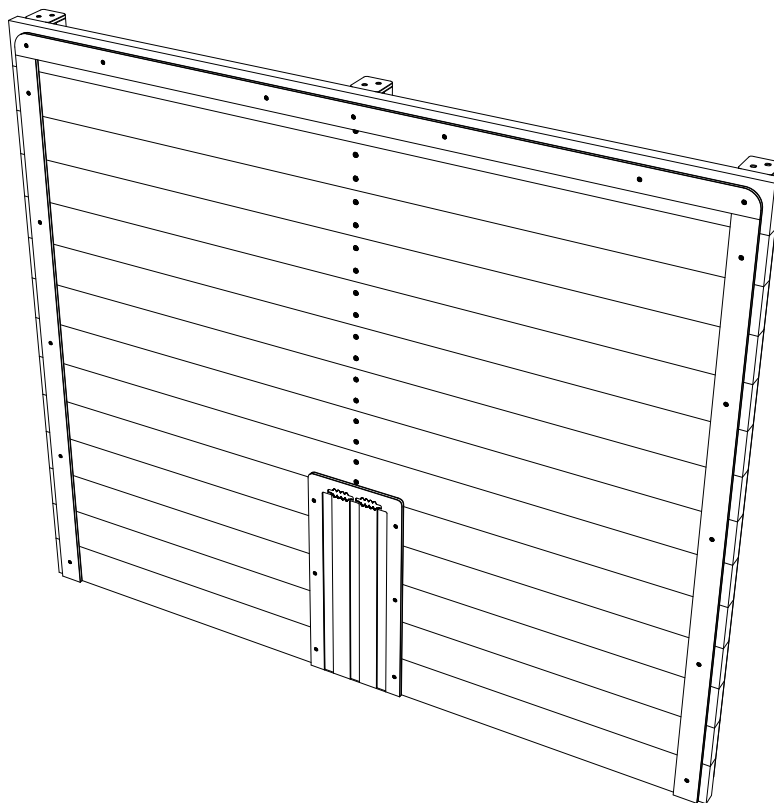

ADDITIONAL DIMENSIONS

