



NUR102 - 600MM PLAYTEC FENCING

Installation Instructions

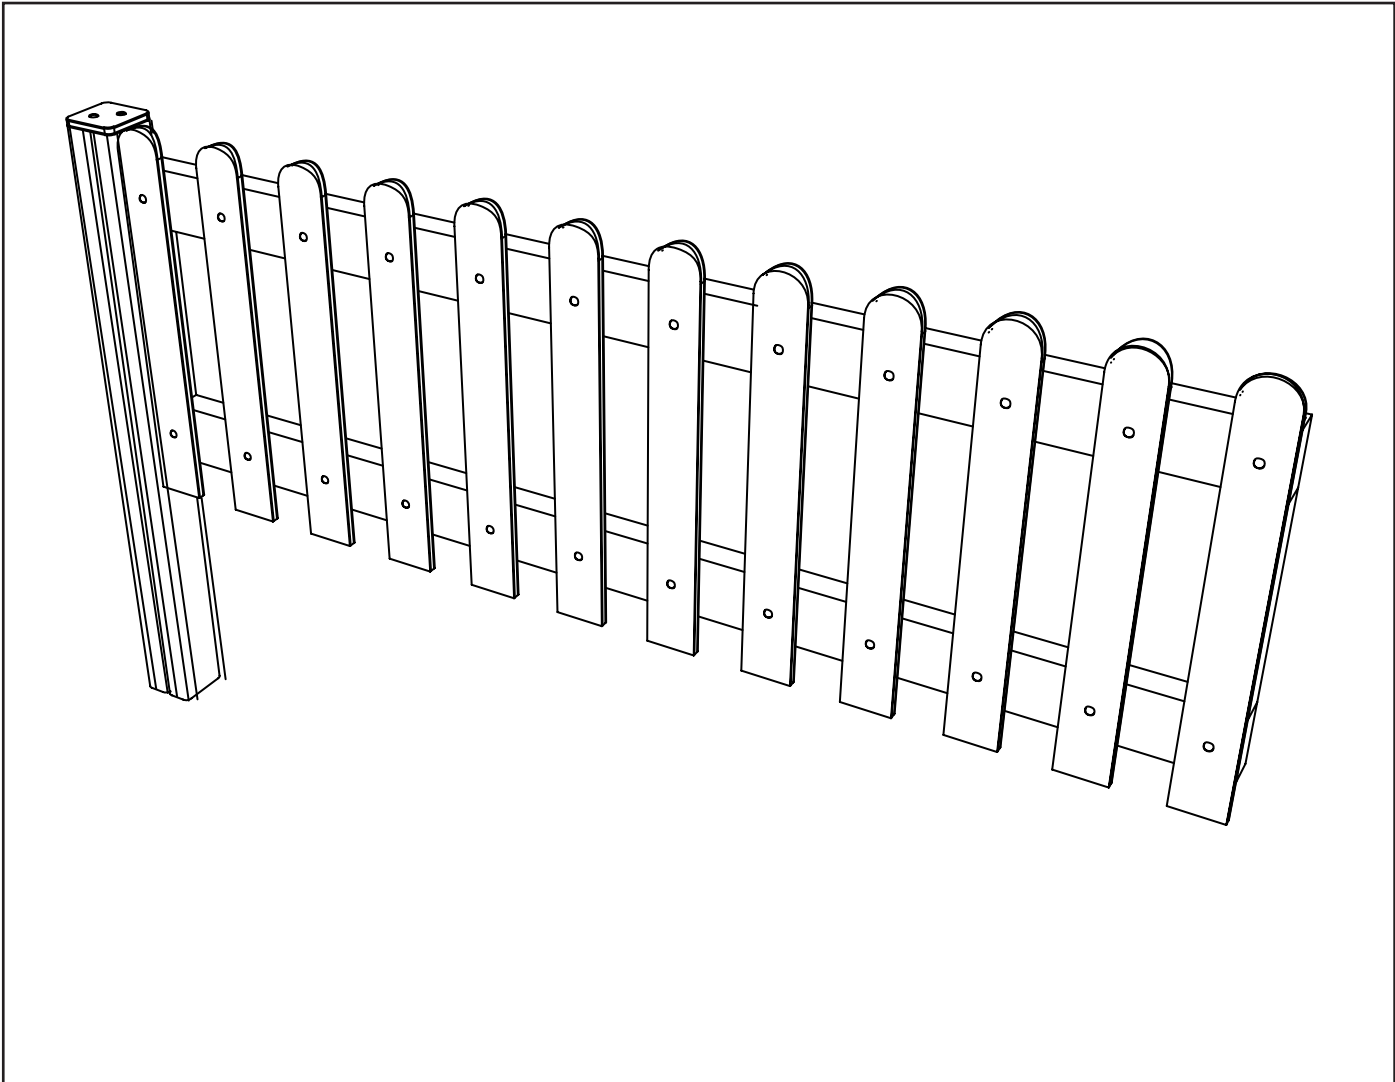


NUR102 - 600MM PLAYTEC FENCING

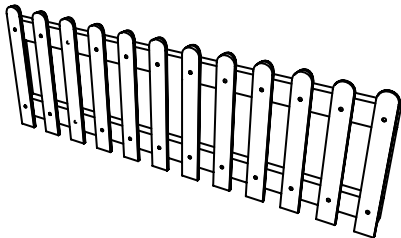

NUR102 - FENCE PANEL




NUR102-C



M8X120CSK

x6



FOUNDATIONS

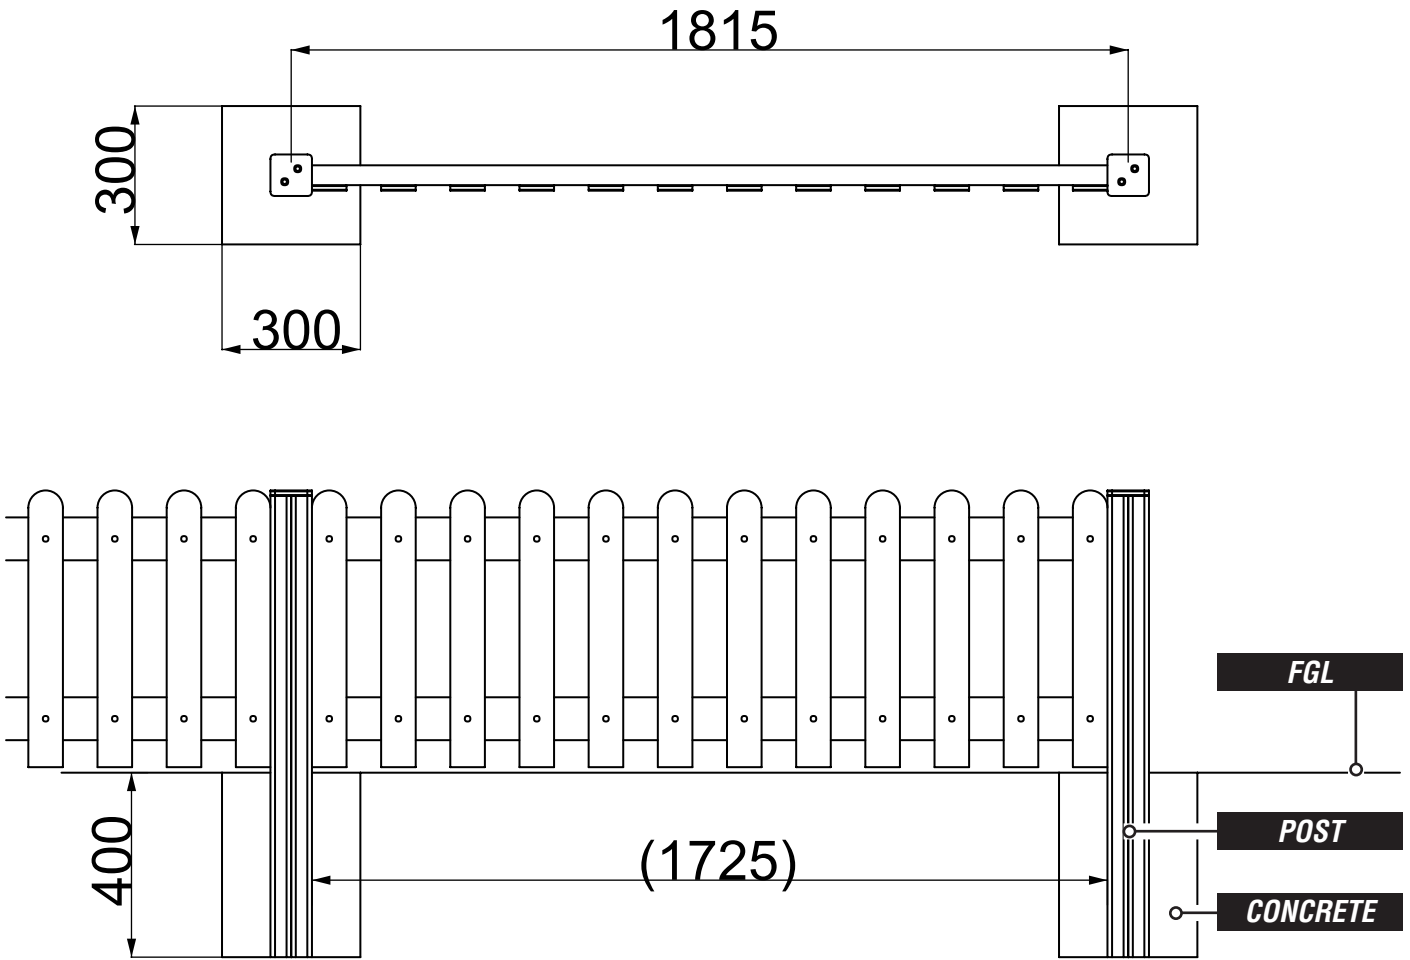


SHOWN ABOVE WITH AN ADJOINING SECTION OF FENCING

INSTALLATION INSTRUCTIONS

1 POSITION THE NUR102-C UPRIGHT TIMBER & ATTACH THE PANEL
USING - 97.M8X120CSK - QUANTITY X 6

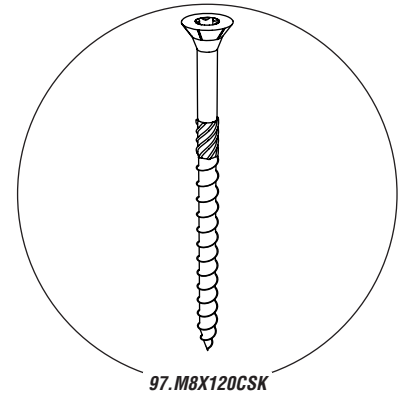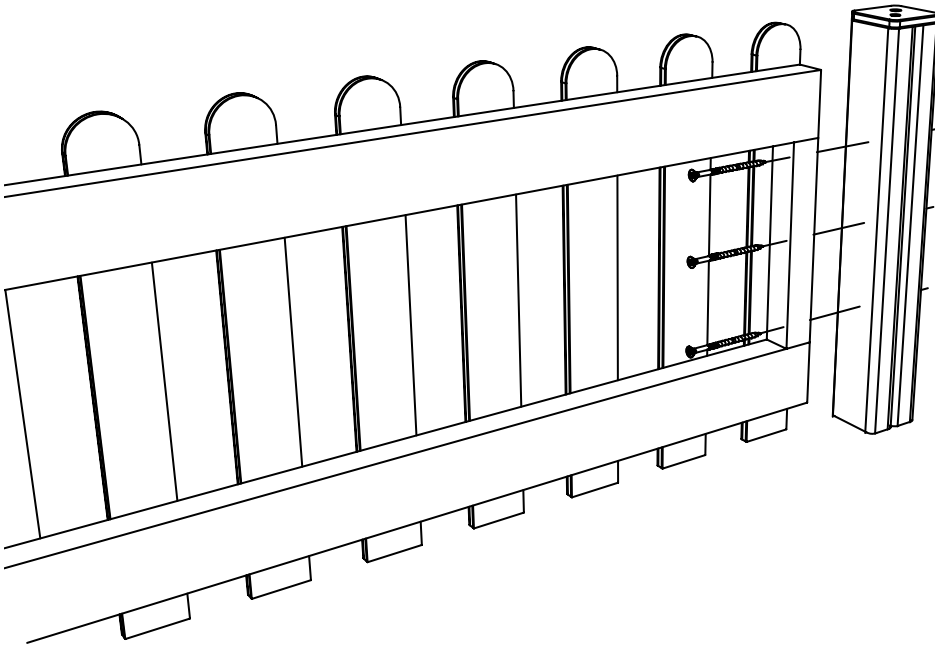

2 WHEN ATTACHING TO ADJOINING PANEL
OFFSET THE SCREWS TO ENSURE THEY DO NOT CROSS EACH OTHER

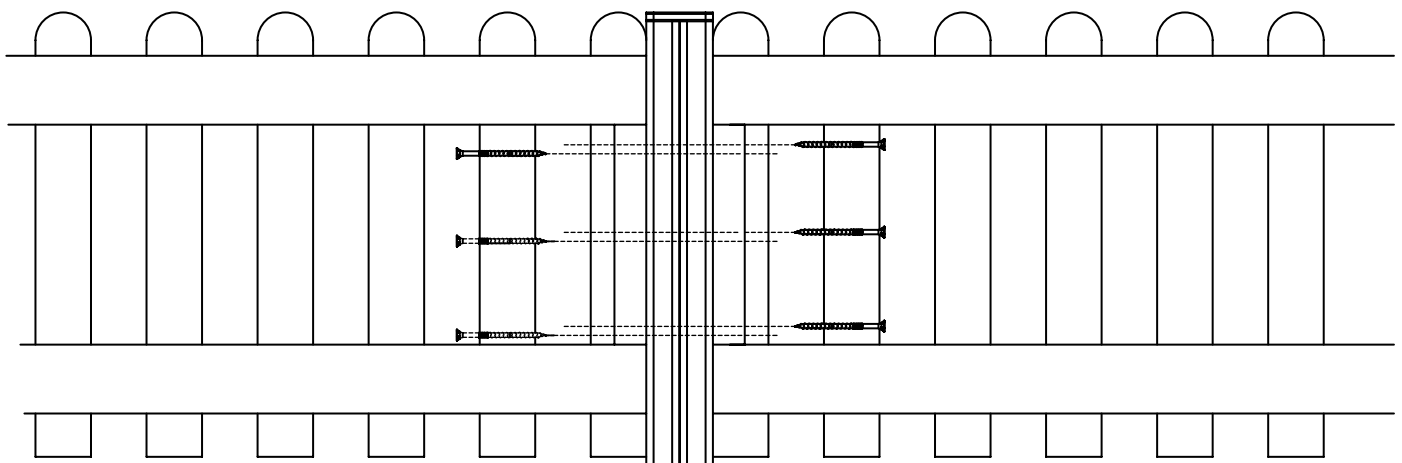

VIEW FROM BACK - SHOWN ABOVE WITH AN ADJOINING SECTION OF FENCING