


# **NUR106 - PLAYTEC STILE**


## ***Installation Instructions***

**creative  
play**

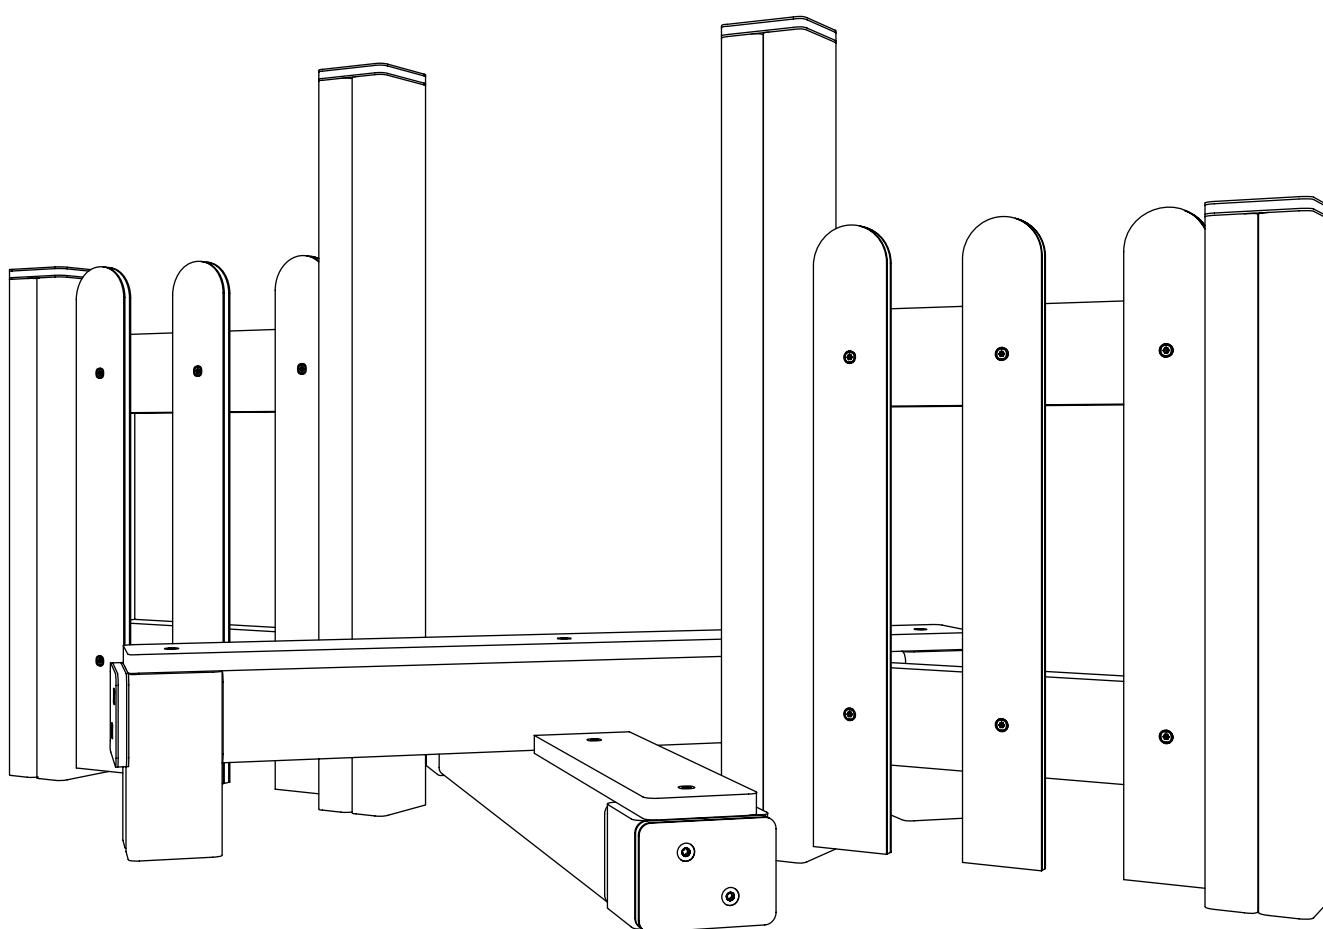


## ***PARTS REQUIRED***


---

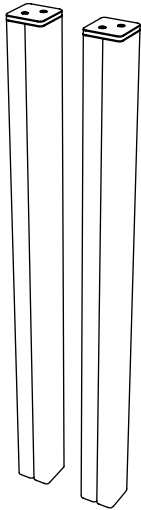


**106A [X2]**

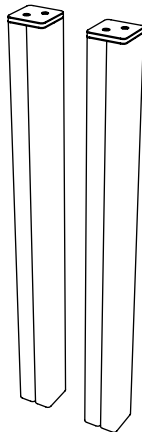


**106B [X2]**

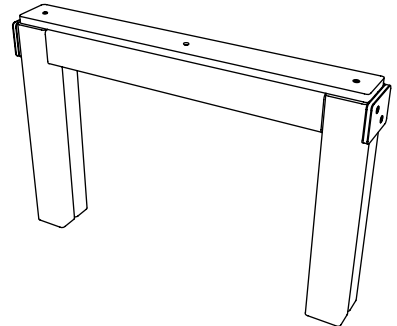


**106D&C ASSEMBLY**

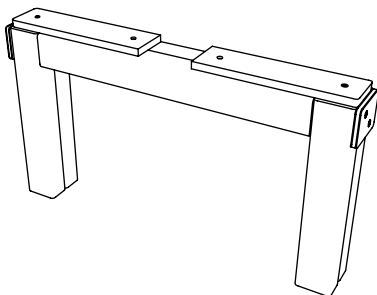

**106E&C ASSEMBLY**

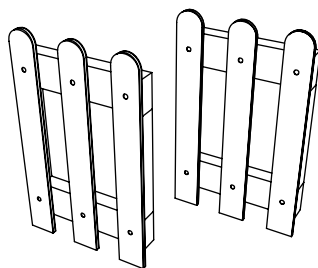



**PANEL ASSEMBLY**





**M8X80 SCREWS [X8]**

## ***TOOLS REQUIRED***

---

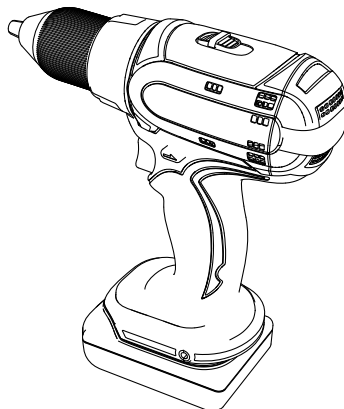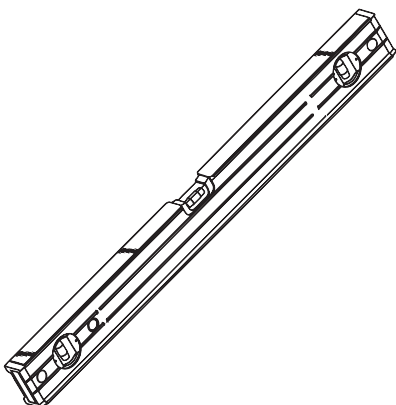

# FOUNDATION DETAIL

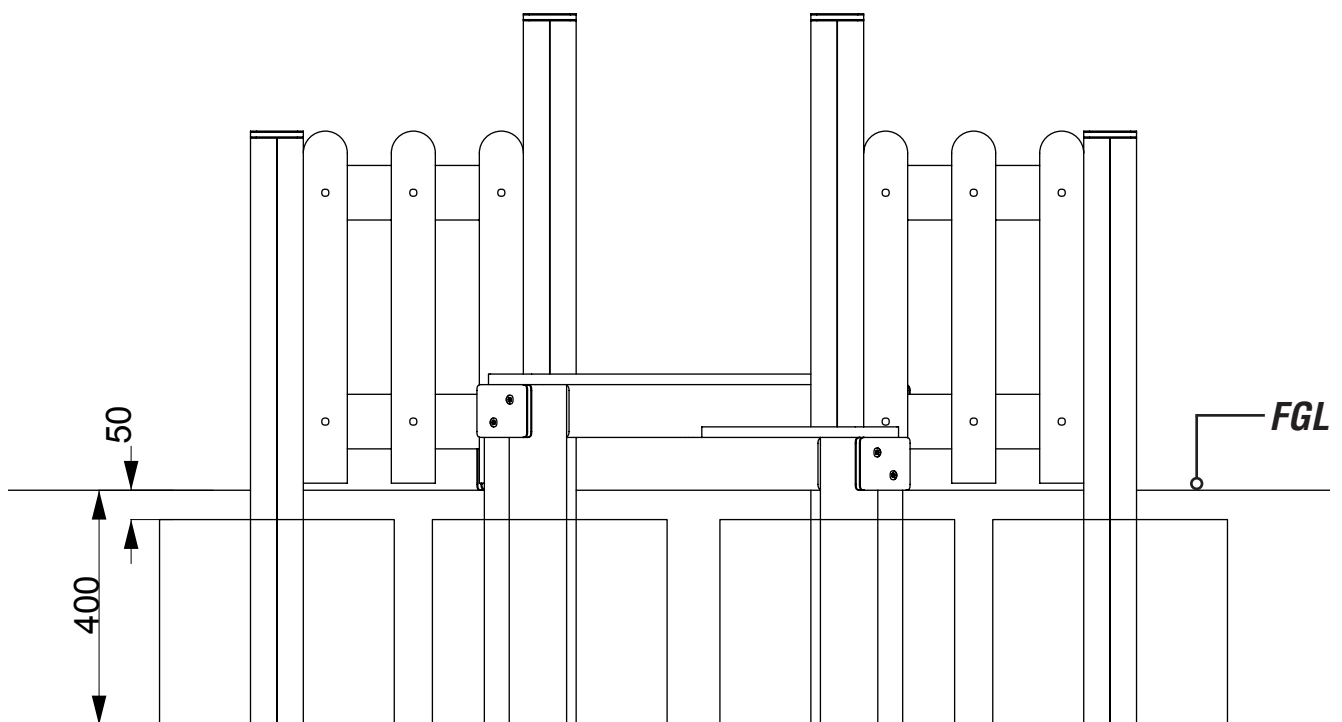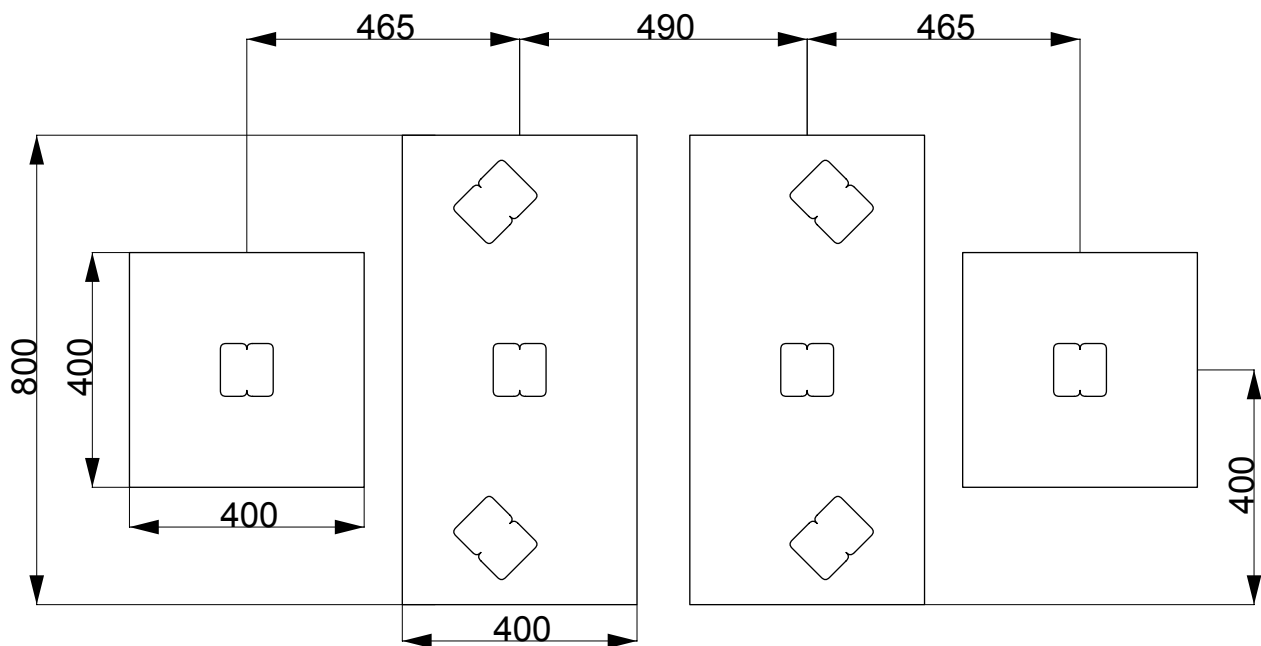


# INSTALLATION INSTRUCTIONS

---


**1**

**INSTALL 106A AND 106B INTO THE GROUND**

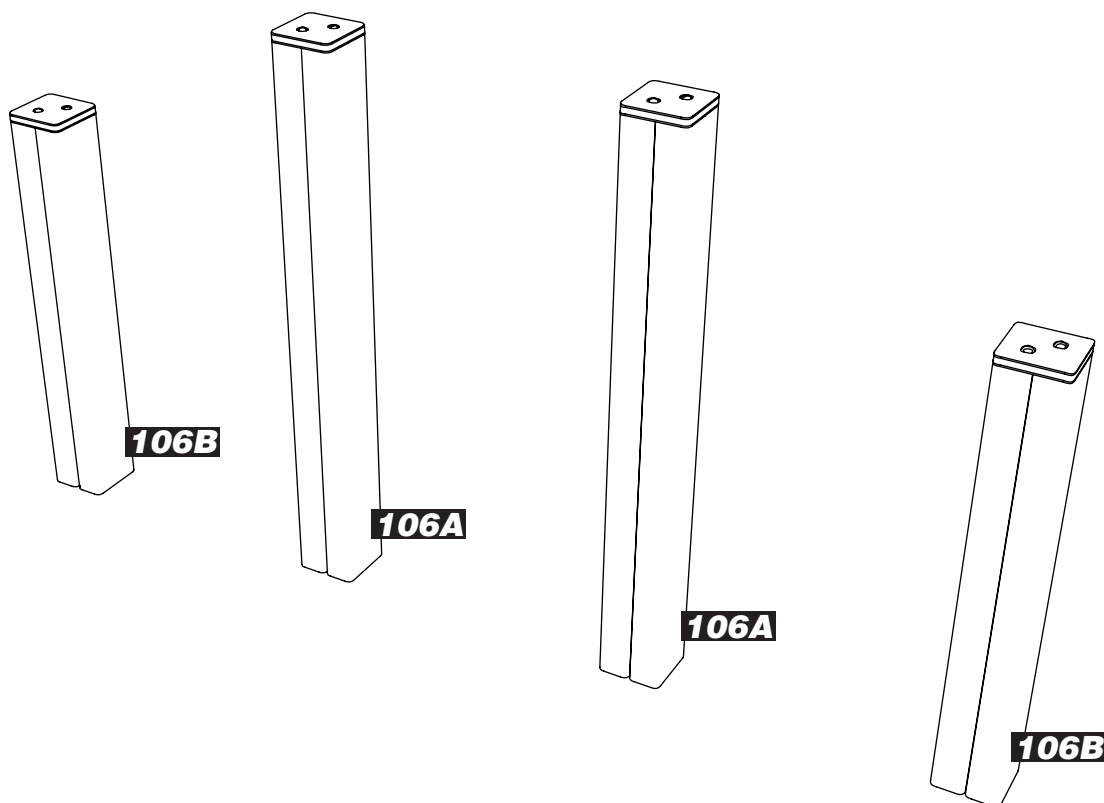

**2**

**INSTALL 106D&C ASSEMBLY AND 106E&C ASSEMBLY INTO THE GROUND  
ENSURE 106E&C ASSEMBLY GOES UNDERNEATH 106D&C ASSEMBLY**

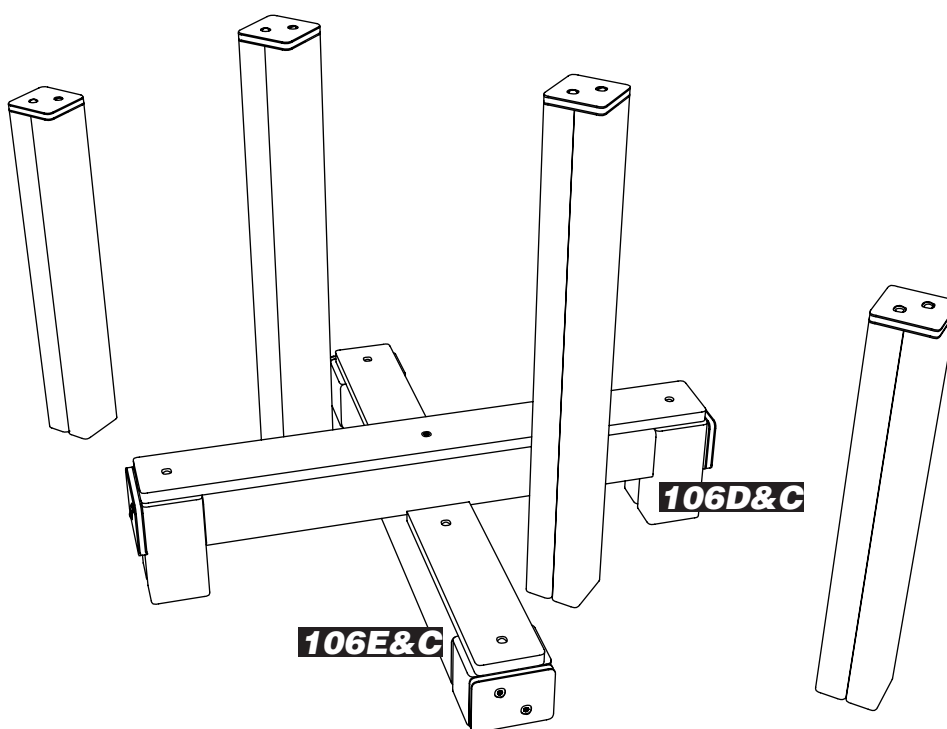


# INSTALLATION INSTRUCTIONS

---

**3**

## **ATTACH FENCE PANELS TO 106A AND 106B**

**USING M8X80 SCREWS - ENSURE THERE IS A 12MM GAP BETWEEN GROUND LEVEL AND PLAYTEC**

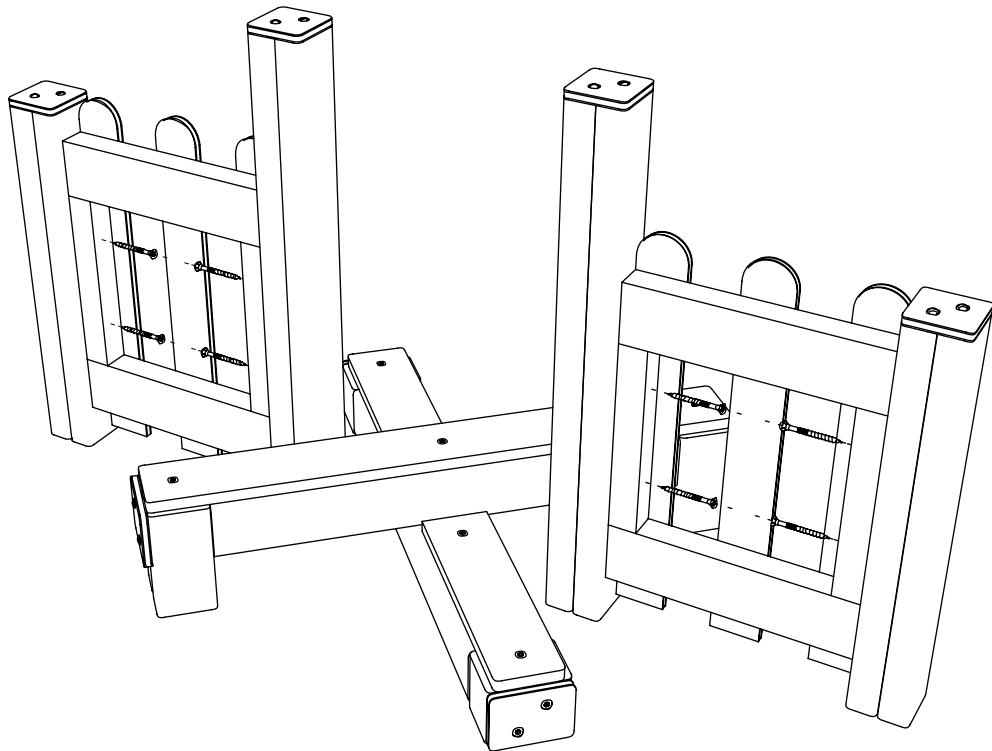

## ***ADDITIONAL DIMENSIONS***

---

