











NUR161 - MESSY PLAY TABLE

Installation Instructions




**creative
play**

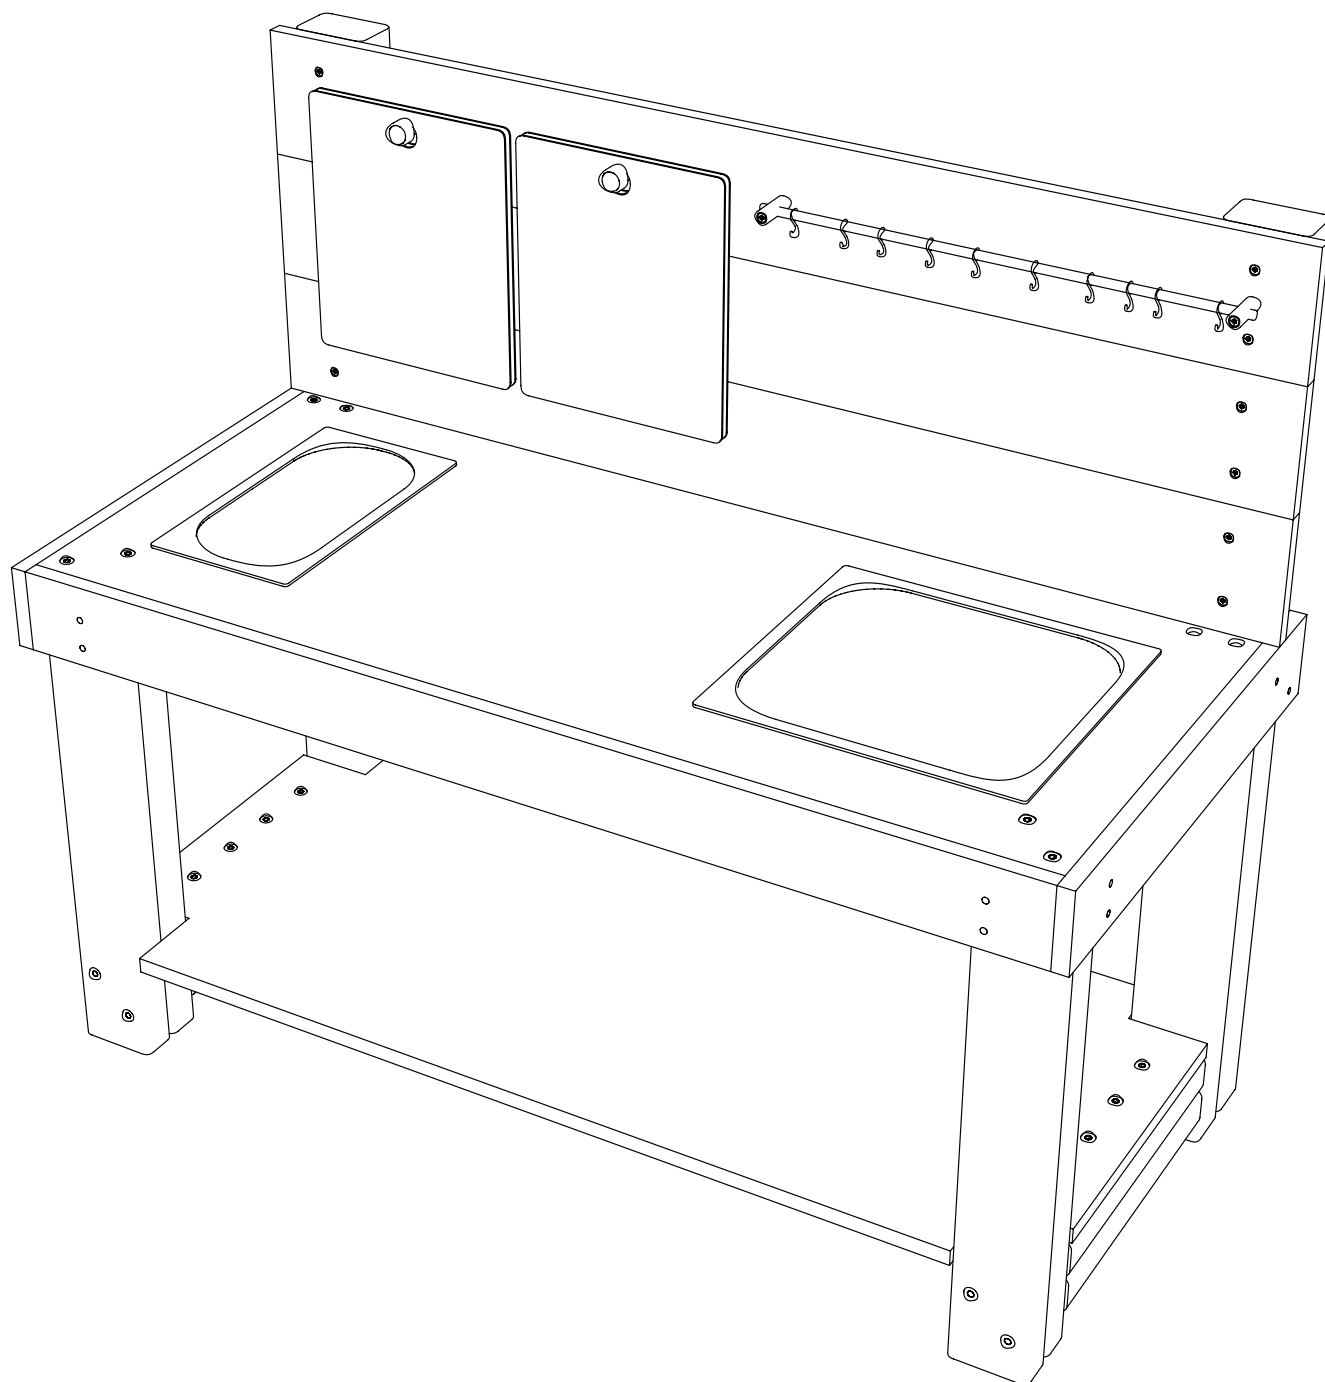



PARTS REQUIRED

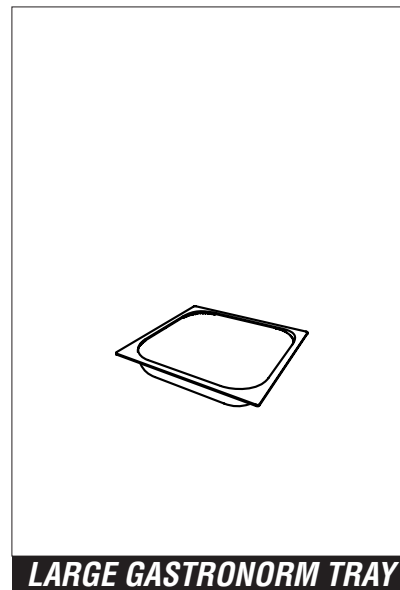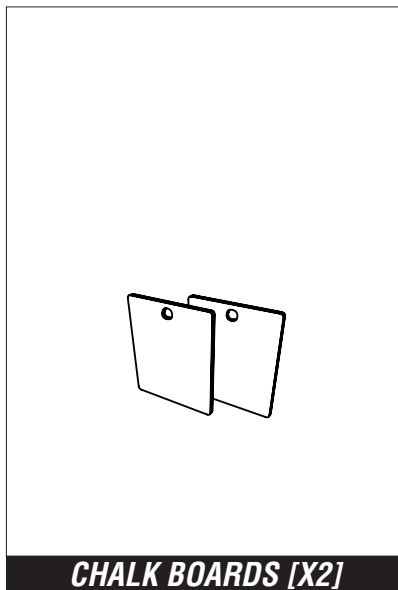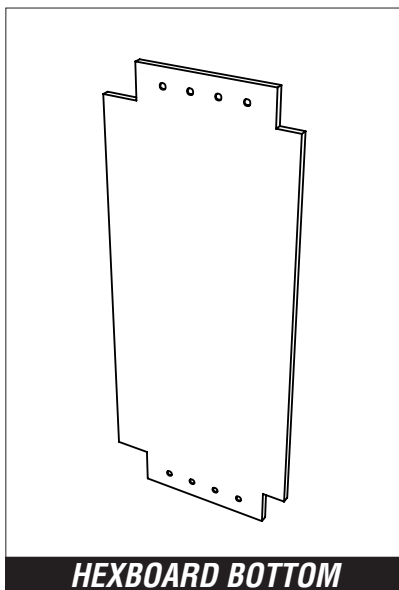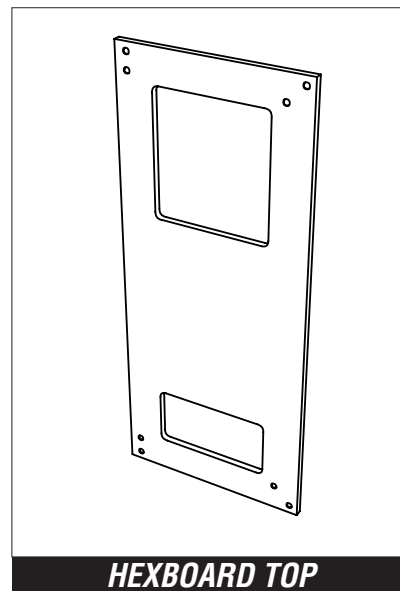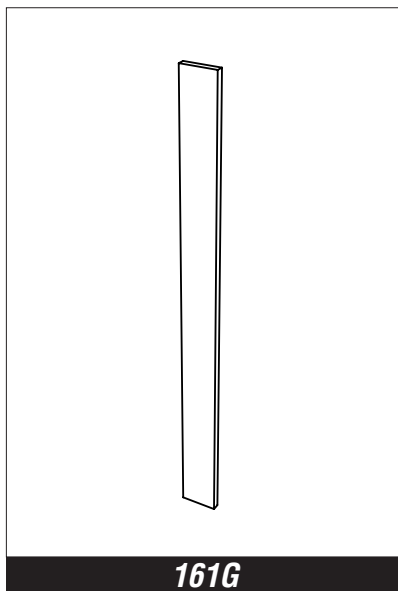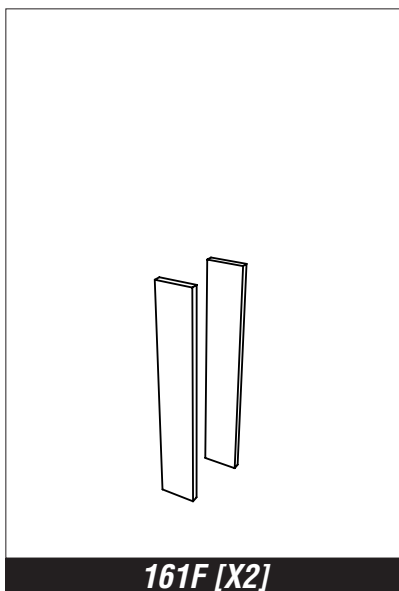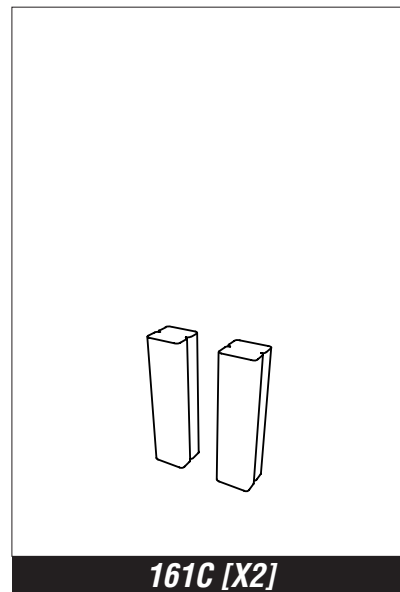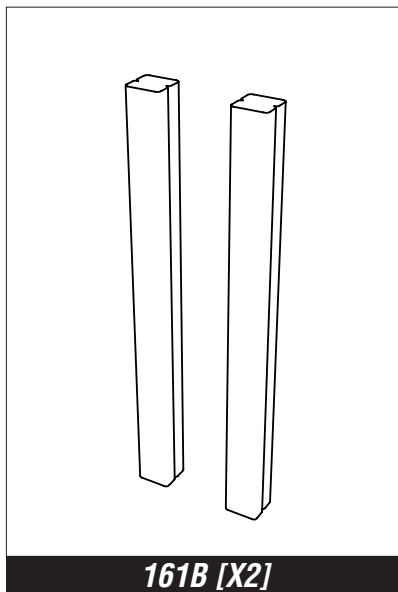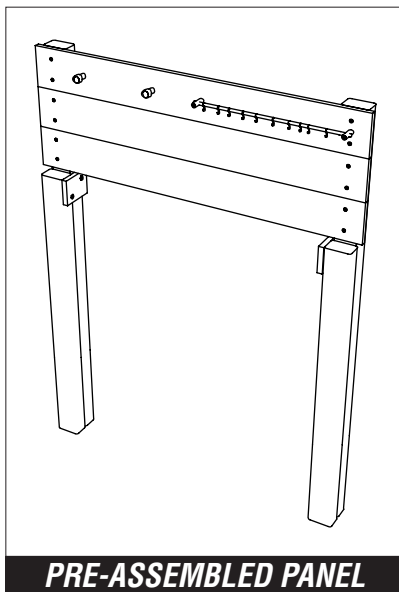



PARTS REQUIRED

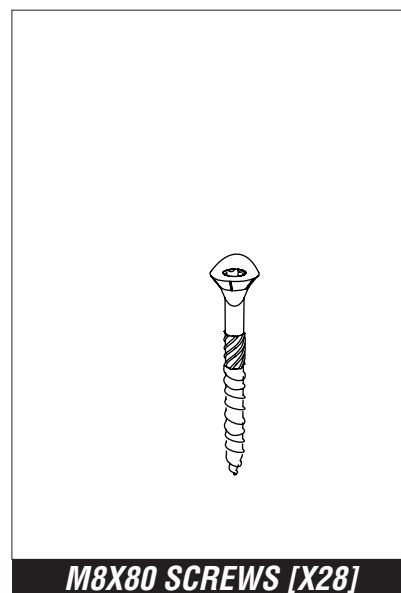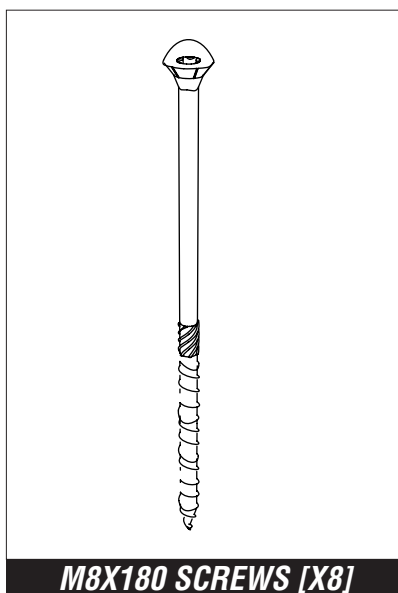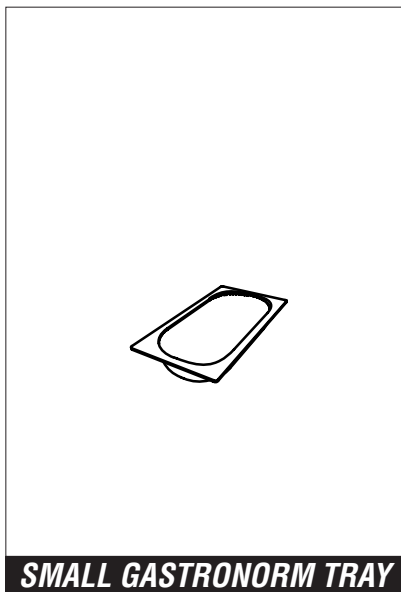

TOOLS REQUIRED

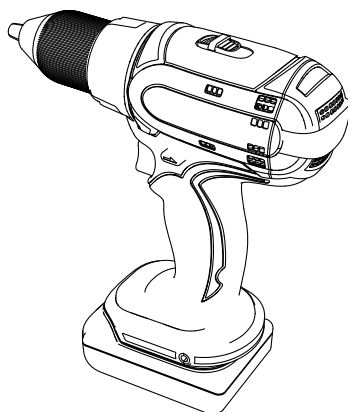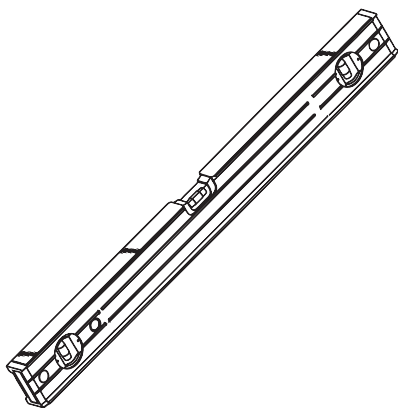


FOUNDATION DETAIL

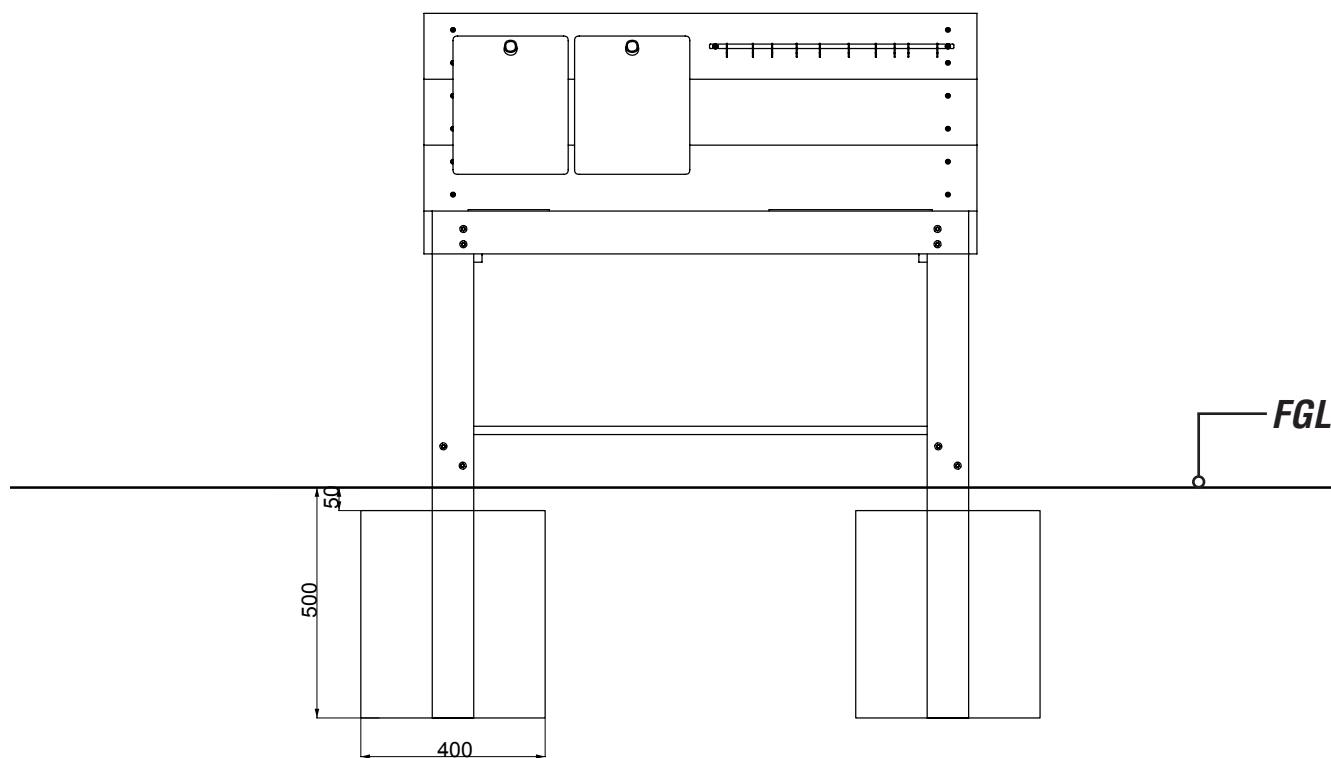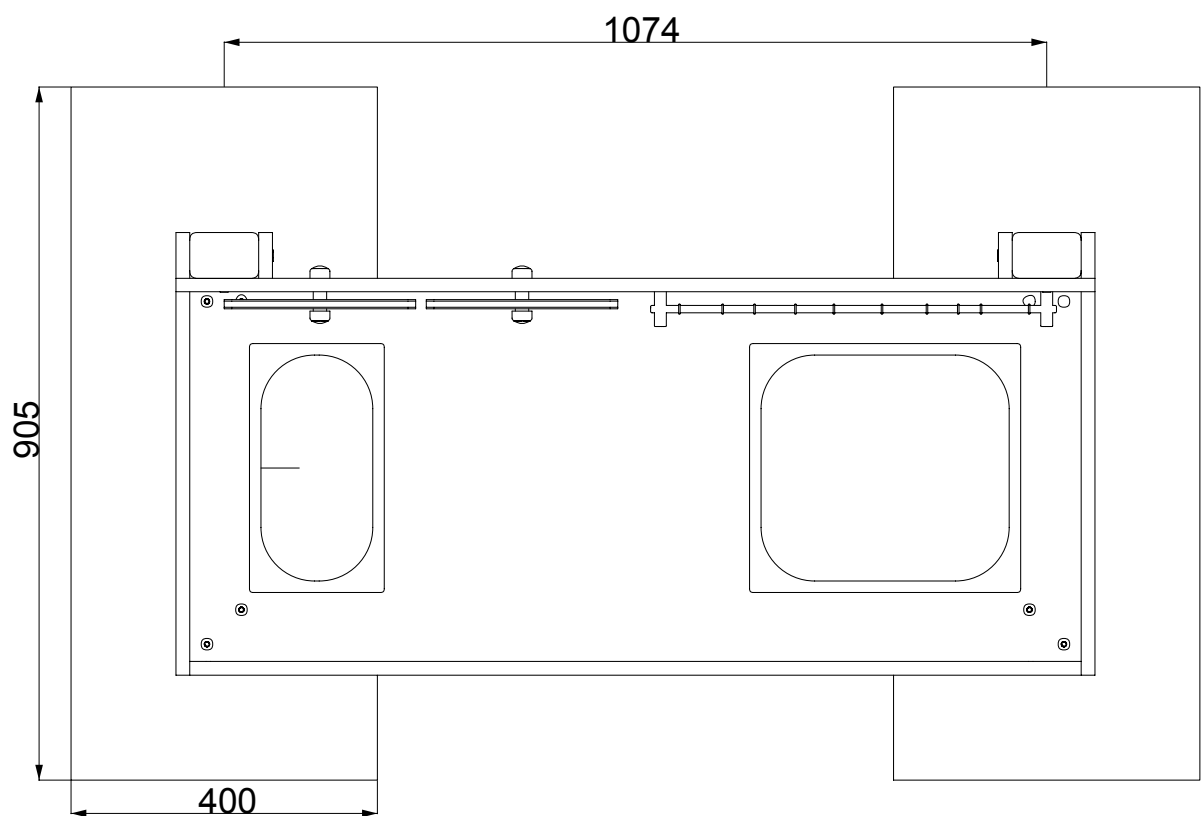

INSTALLATION INSTRUCTIONS

1


INSTALL PRE-ASSEMBLED PANEL AND 161B INTO THE GROUND

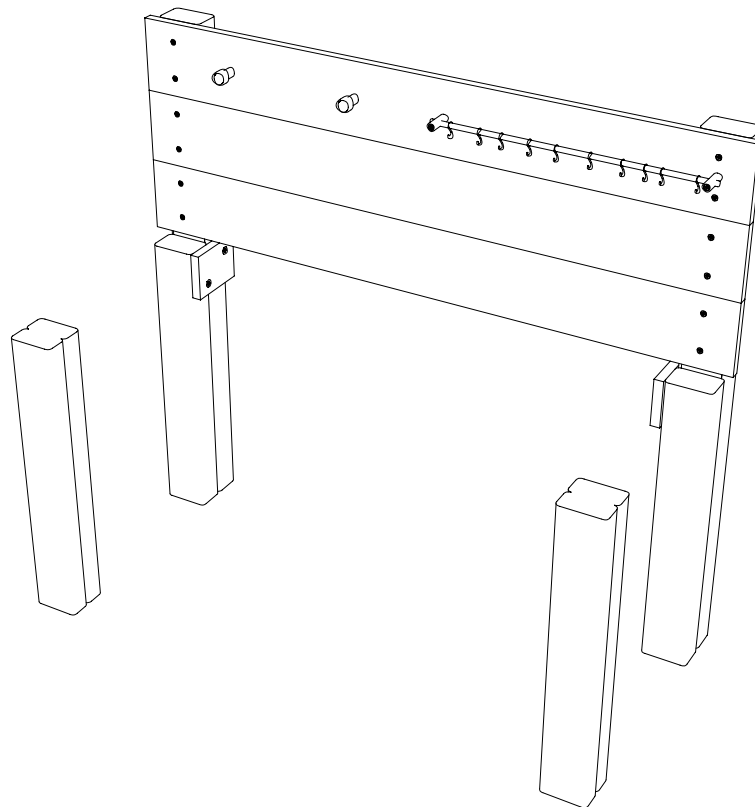

2

ATTACH 161C

USING M8X180 SCREWS

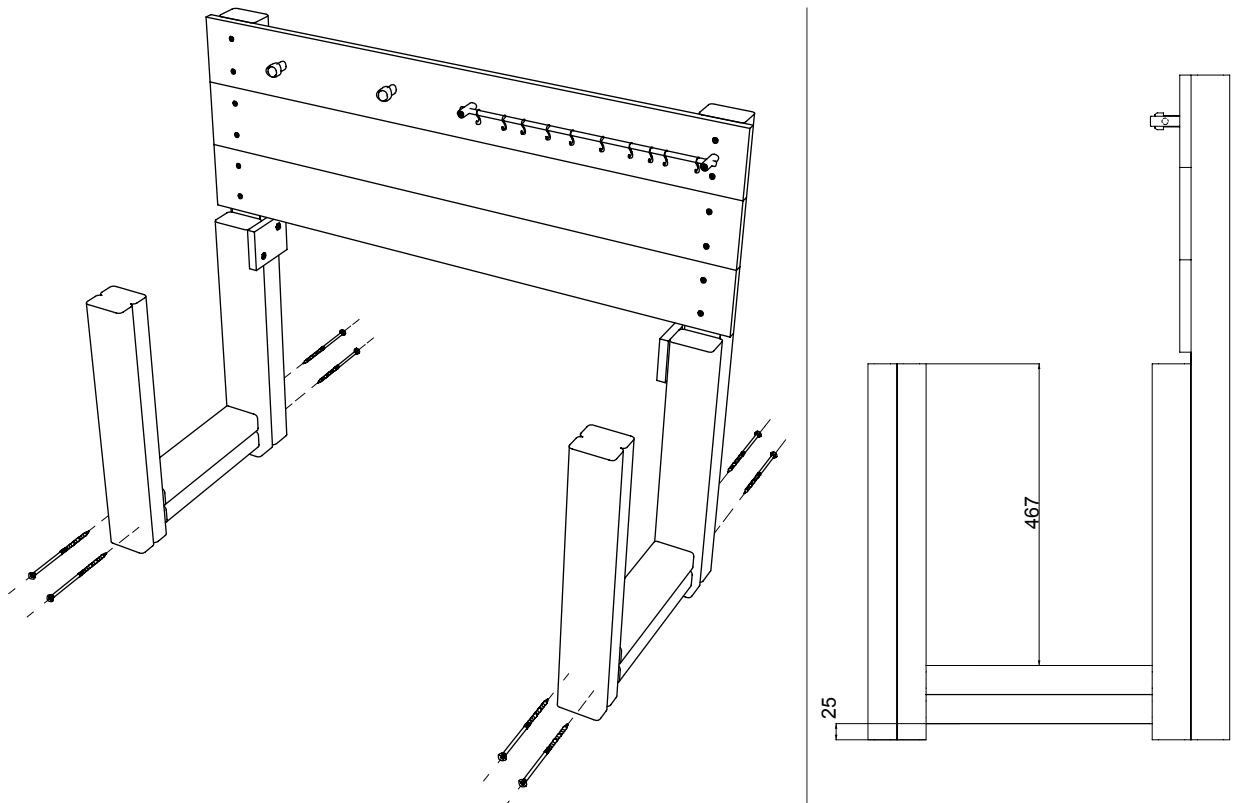


INSTALLATION INSTRUCTIONS

3

FIX HEX BOARD BOTTOM SHELF


USING M8X80 SCREWS

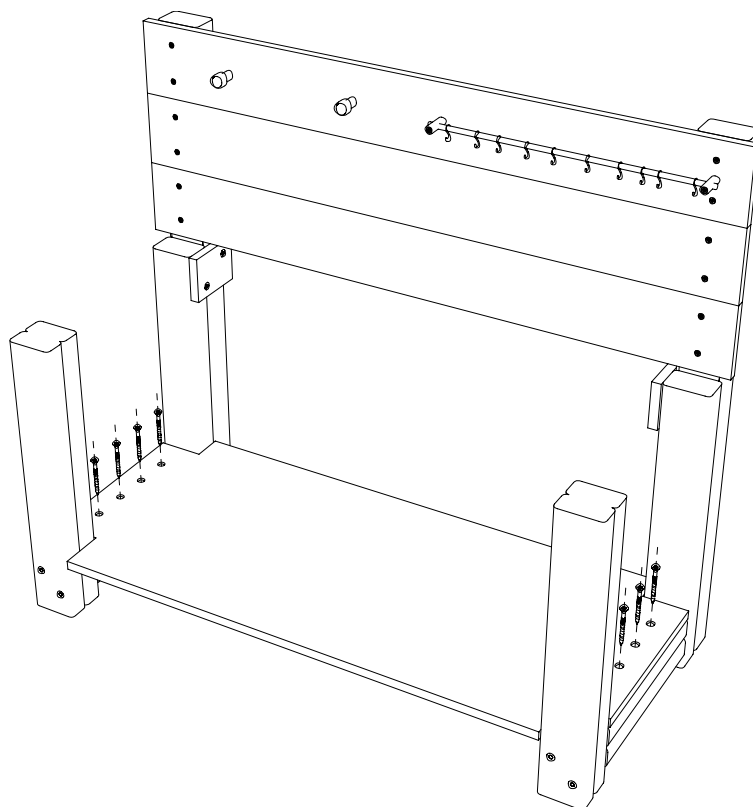

4

SLOT HEX BOARD TOP INTO POSITION

ENSURE IT IS SLOTTED INTO THE 18MM GAP OF THE PRE ASSEMBLED PANEL AND ALL EDGES ARE FLUSH WITH TIMBER LEGS

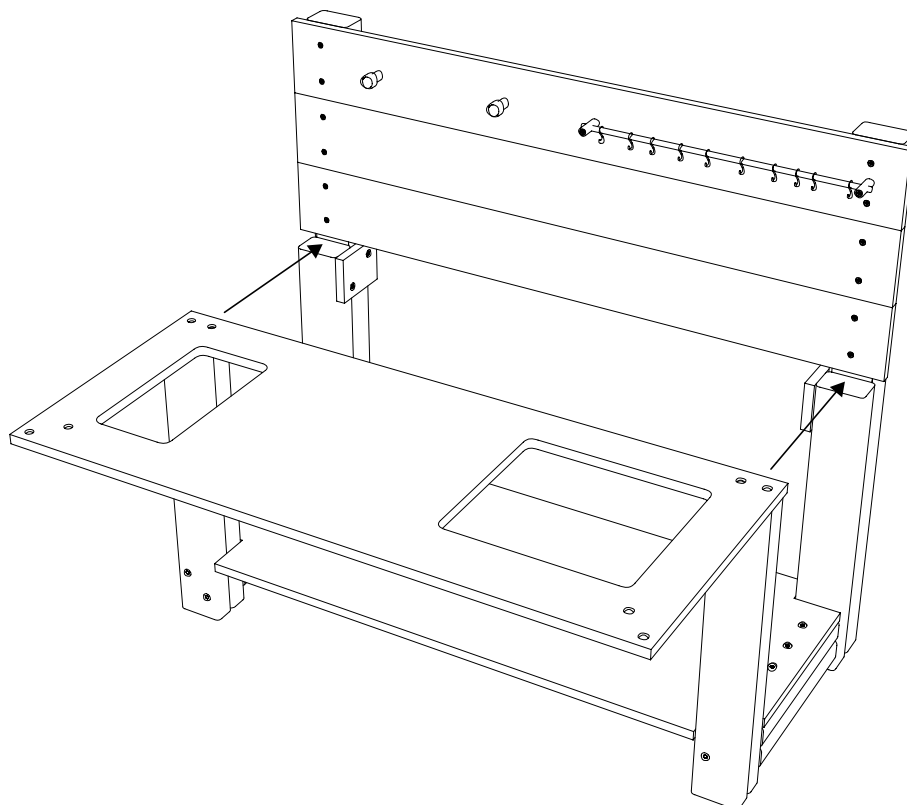


INSTALLATION INSTRUCTIONS

5

SECURE HEXBOARD TOP


USING M8X80 SCREWS

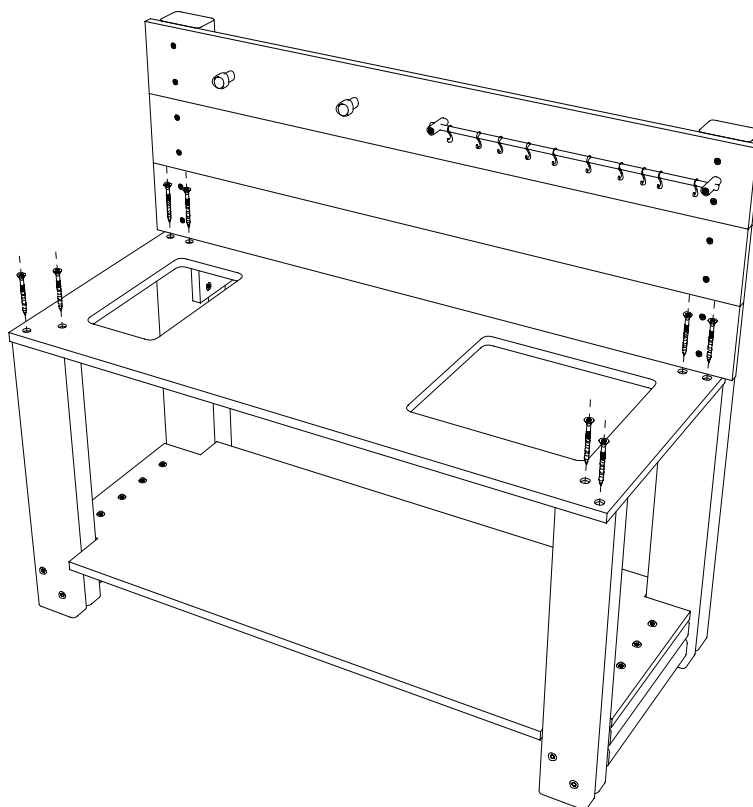

6

ATTACH 161F

ENSURE BACK EDGE SITS FLUSH AND THE FRONT EDGE OVERHANGS BY 17.5MM

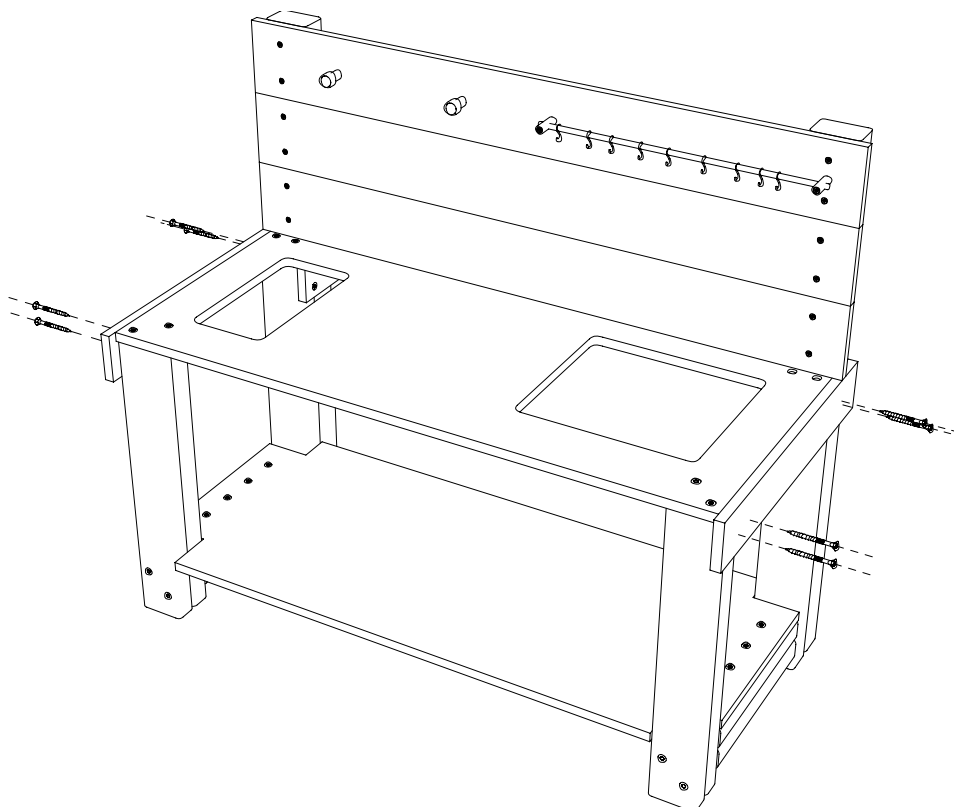


INSTALLATION INSTRUCTIONS

7


ATTACH 161G

USING M8X80 SCREWS - PLEASE BE AWARE OF THE LOCATION OF OTHER SCREWS THAT HAVE PREVIOUSLY SCREWED INTO LEGS

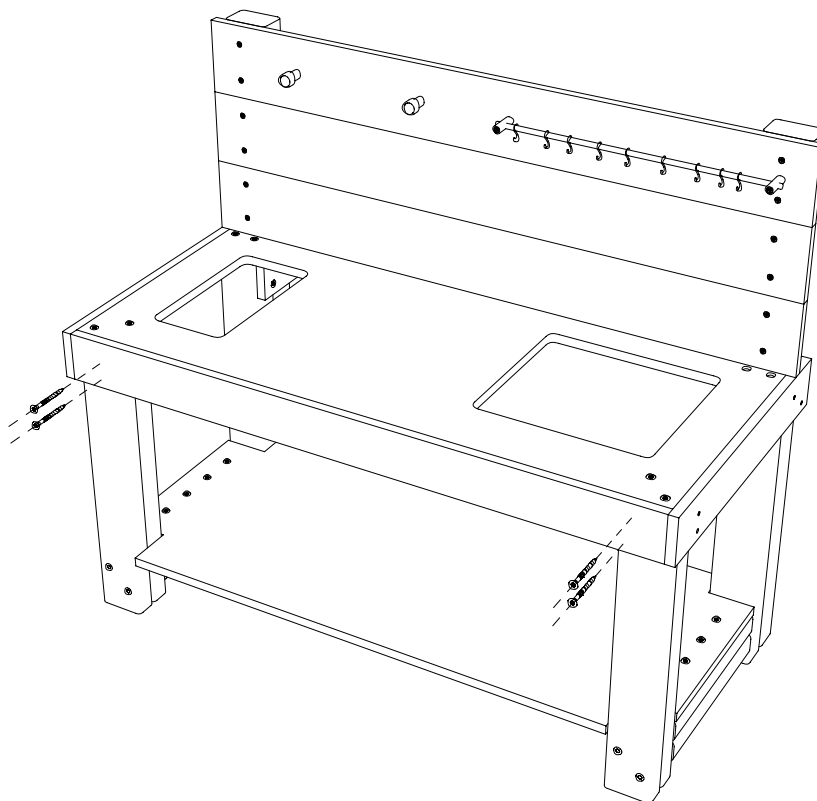

8


INSERT GASTRONORM PANS

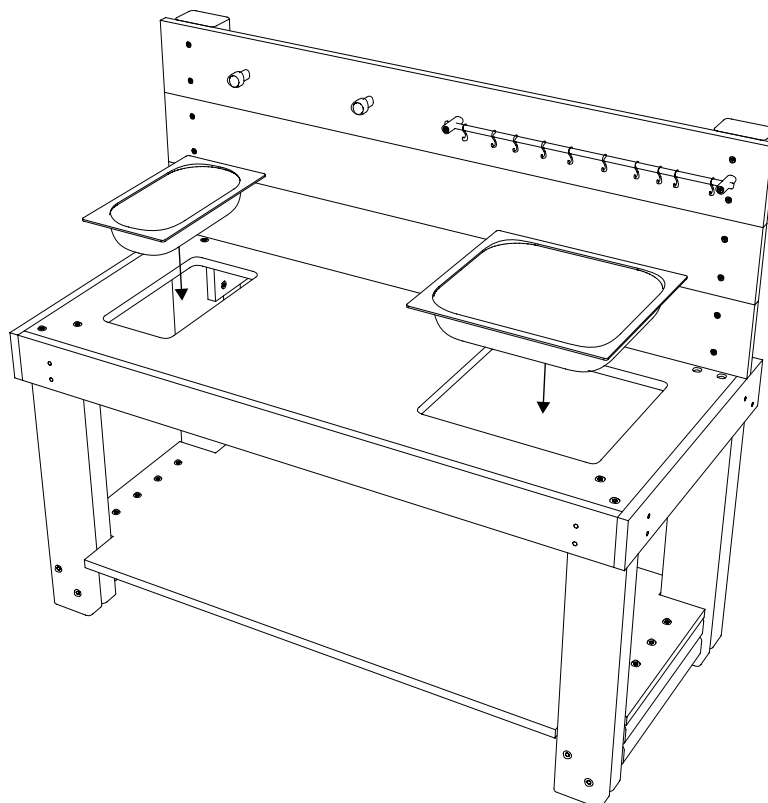

INSTALLATION INSTRUCTIONS

9

HOOK CHALK BOARDS ONTO PEGS

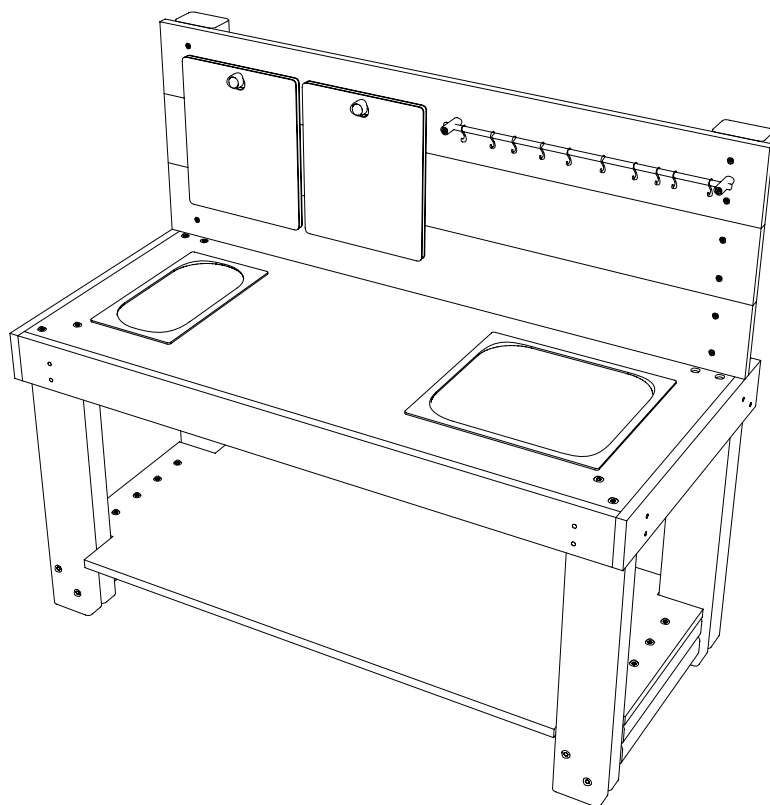

ADDITIONAL DIMENSIONS

