



OS122(4) - WINDOW SIDES

Installation Instructions

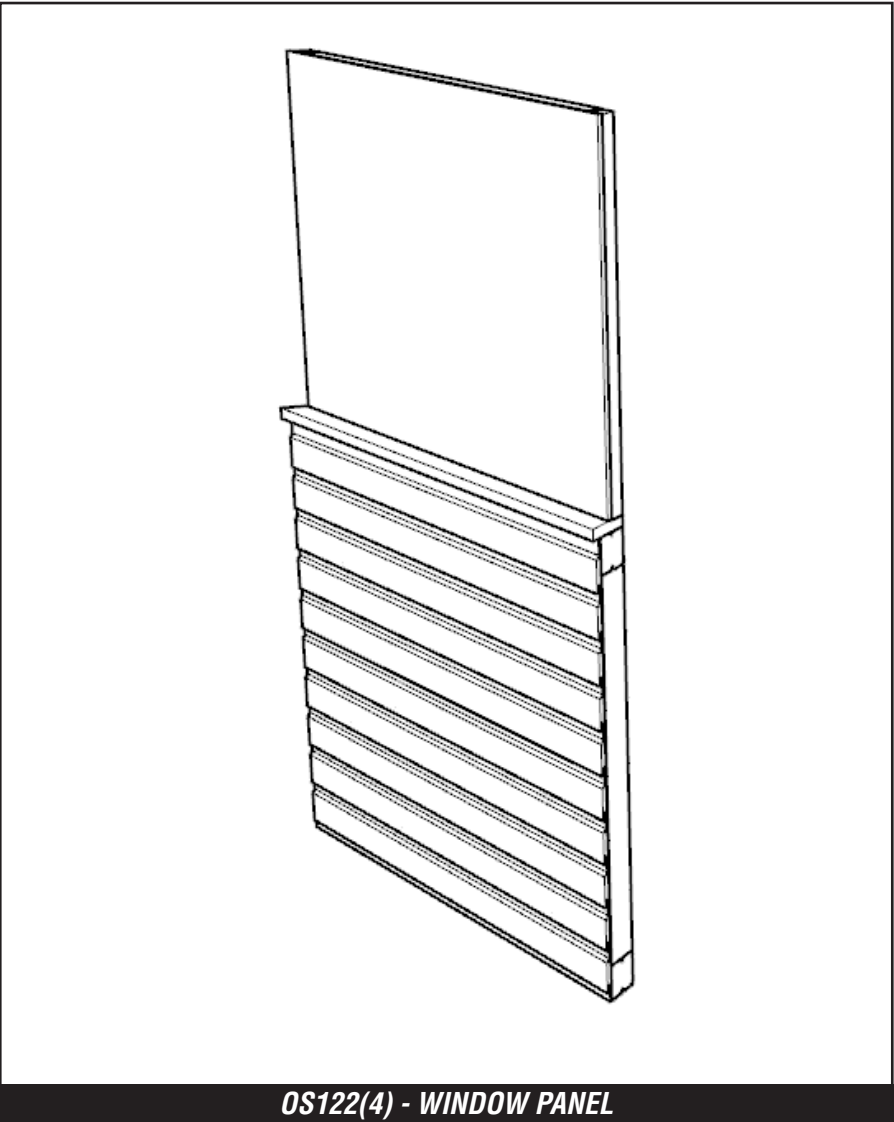


OS122(4) - WINDOW PANEL




x18

97.M8X120CSK

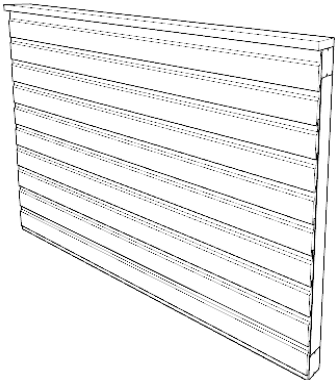

X (depends on order)

FILLED SIDE PANEL

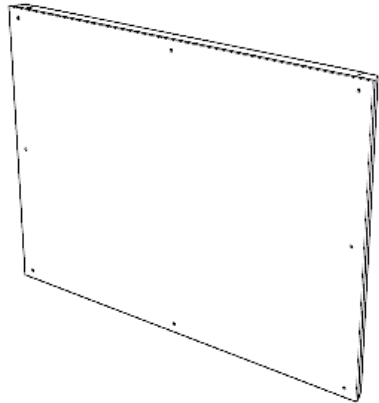


X (depends on order)

WINDOW PANEL

INSTALLATION INSTRUCTIONS



1

**INSTALL OR REPLACE EXISTING OCTAVIA WALL WITH FILLED SIDE PANELS
USING M8X120MM WOOD SCREWS**

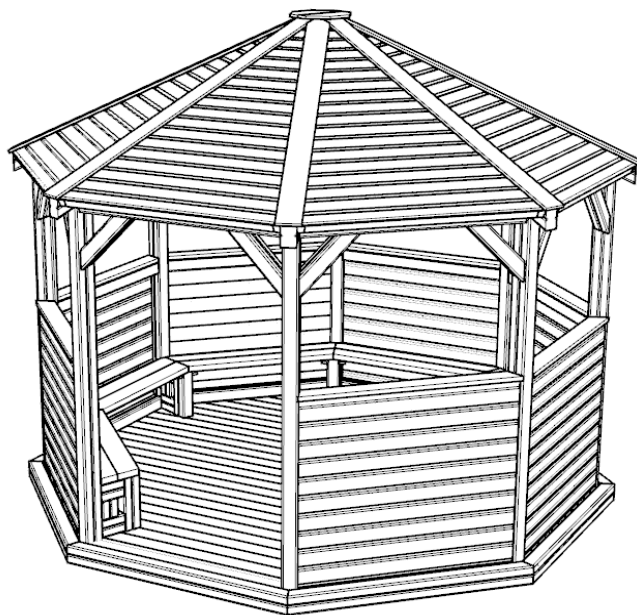



2

**ENSURE TIMBERS ARE PRE-DRILLED AND COUNTERSUNK
3X SCREWS PER SIDE**

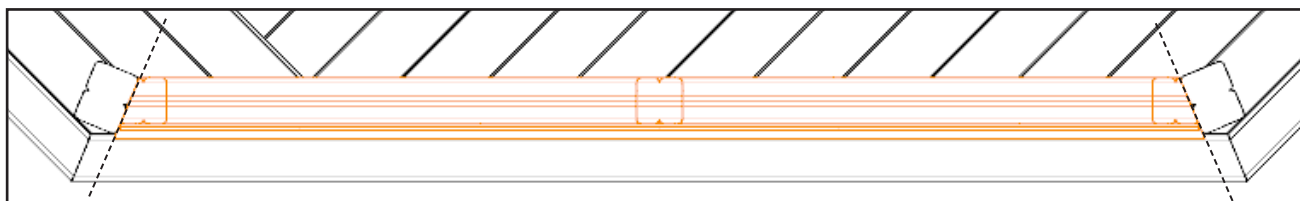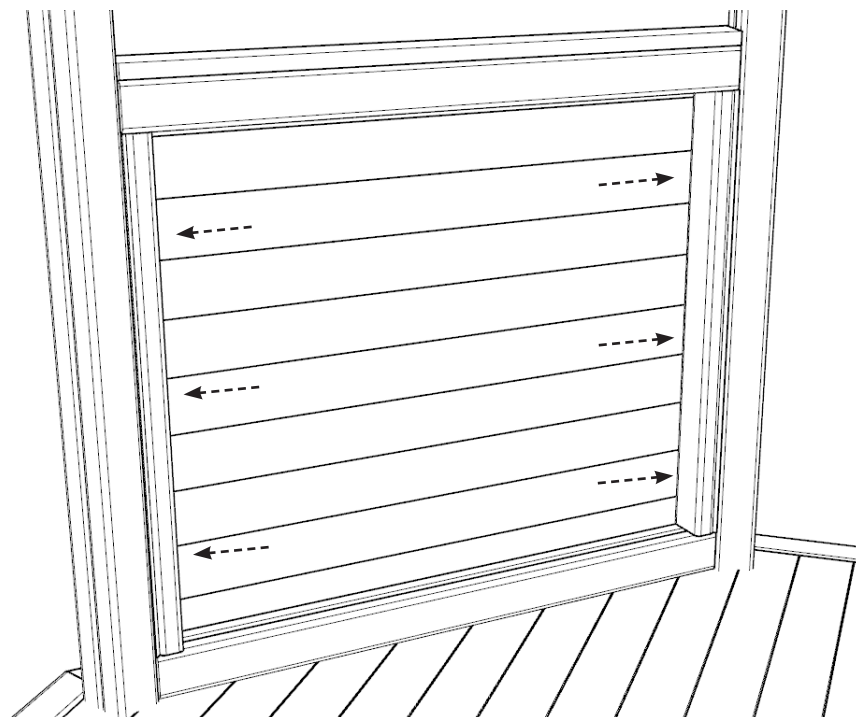

3

REMOVE ALL BRACE TIMBERS FROM OCTAVIA SIDES RECEIVING NEW WINDOW PANELS

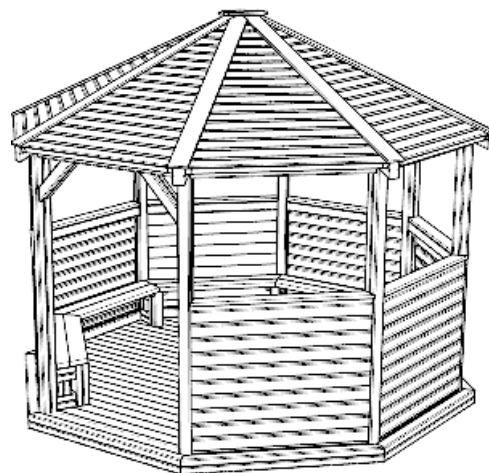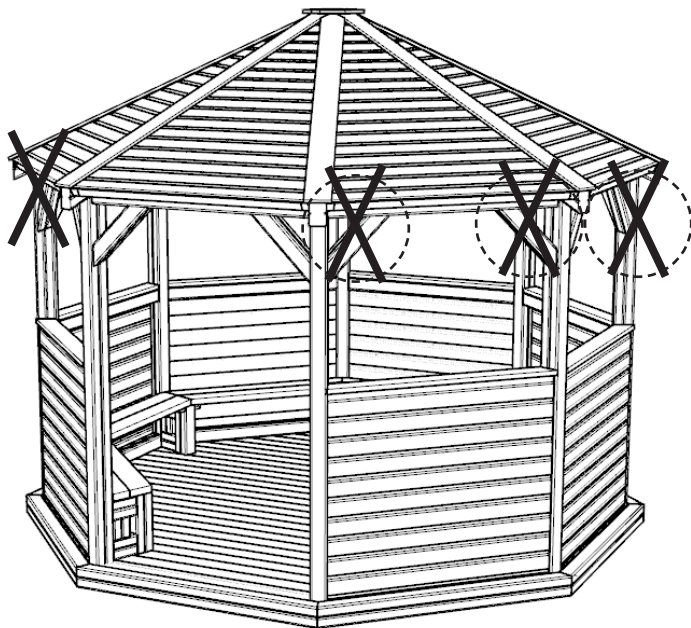**4**

ATTACH WINDOW PANELS ON TOP OF FILLED SIDES AS SHOWN

USING X12 M8X120MM WOOD SCREWS, POSITION AS SHOWN (GREY SHADING = WINDOW TIMBER) ...

