


# **GYM105 - SIT UPS (INCLINED) - JUNIOR**


## ***Installation Instructions***

**creative  
play**

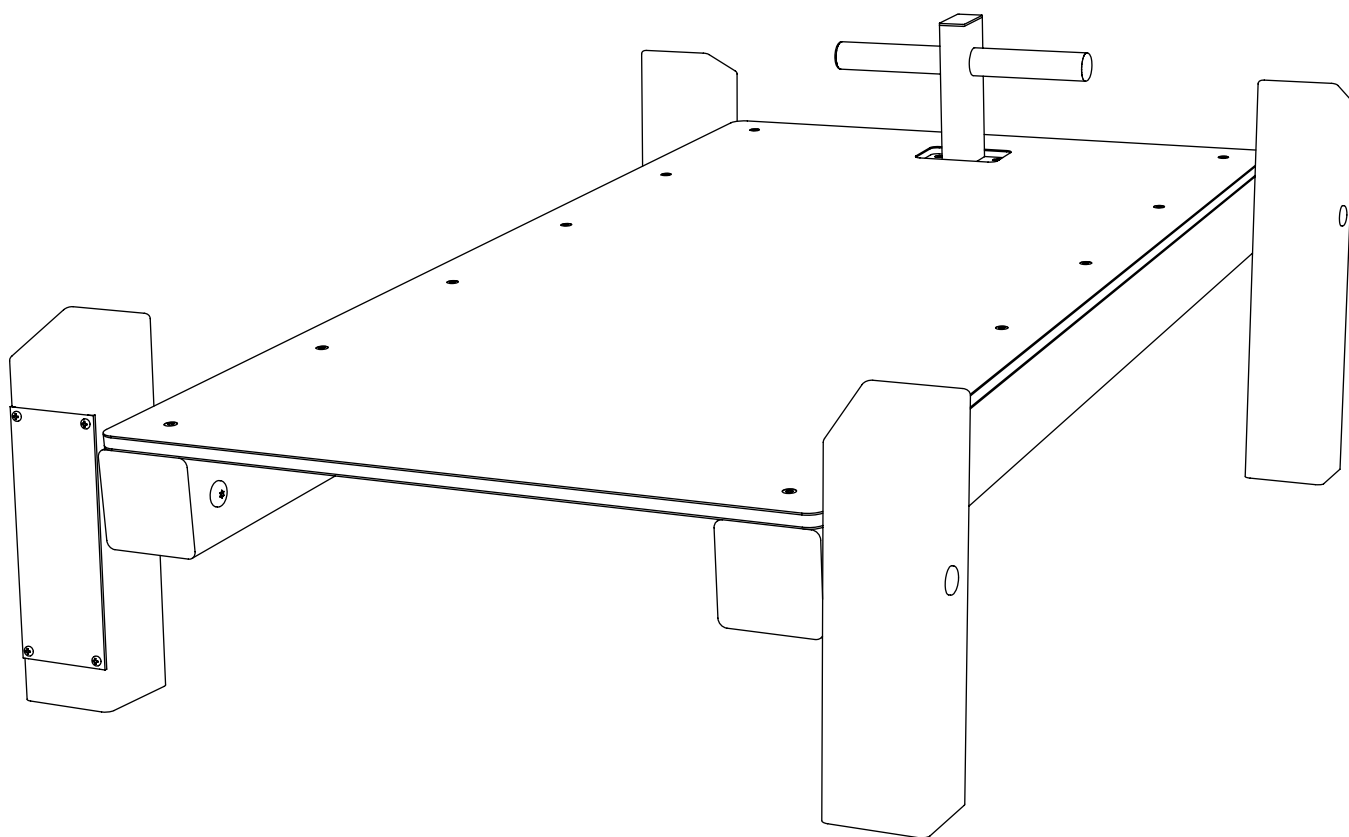


## ***PARTS REQUIRED***

---

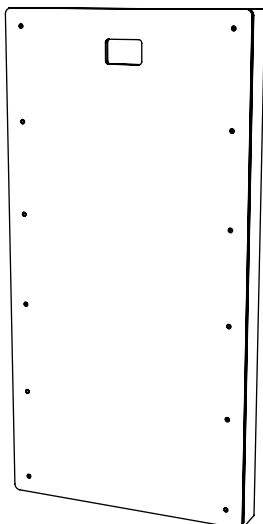


***PRE-ASSEMBLED PANEL***

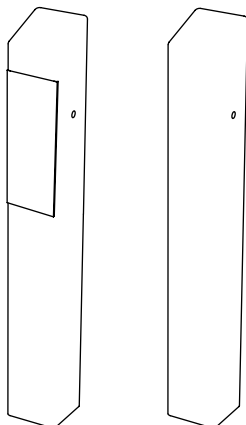


***GYM105H-A & GYM105H-B***




***GYM105H-C [X5]***

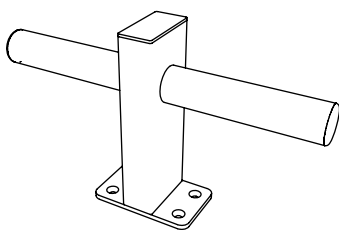

***SIT UP BAR [X1]***




***M8 X 80 SCREWS [X4]***





***M12X240 BOLTS [X4]***

## ***TOOLS REQUIRED***


---

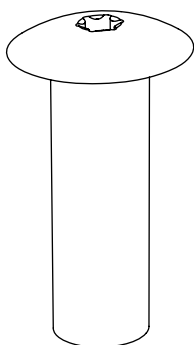

***SOCKET NUTS [X4]***

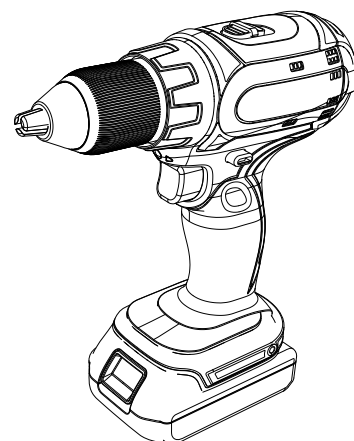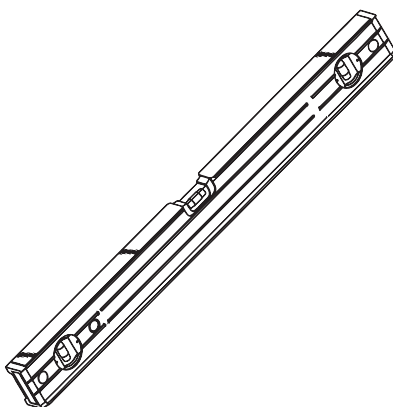

# FOUNDATION DETAIL

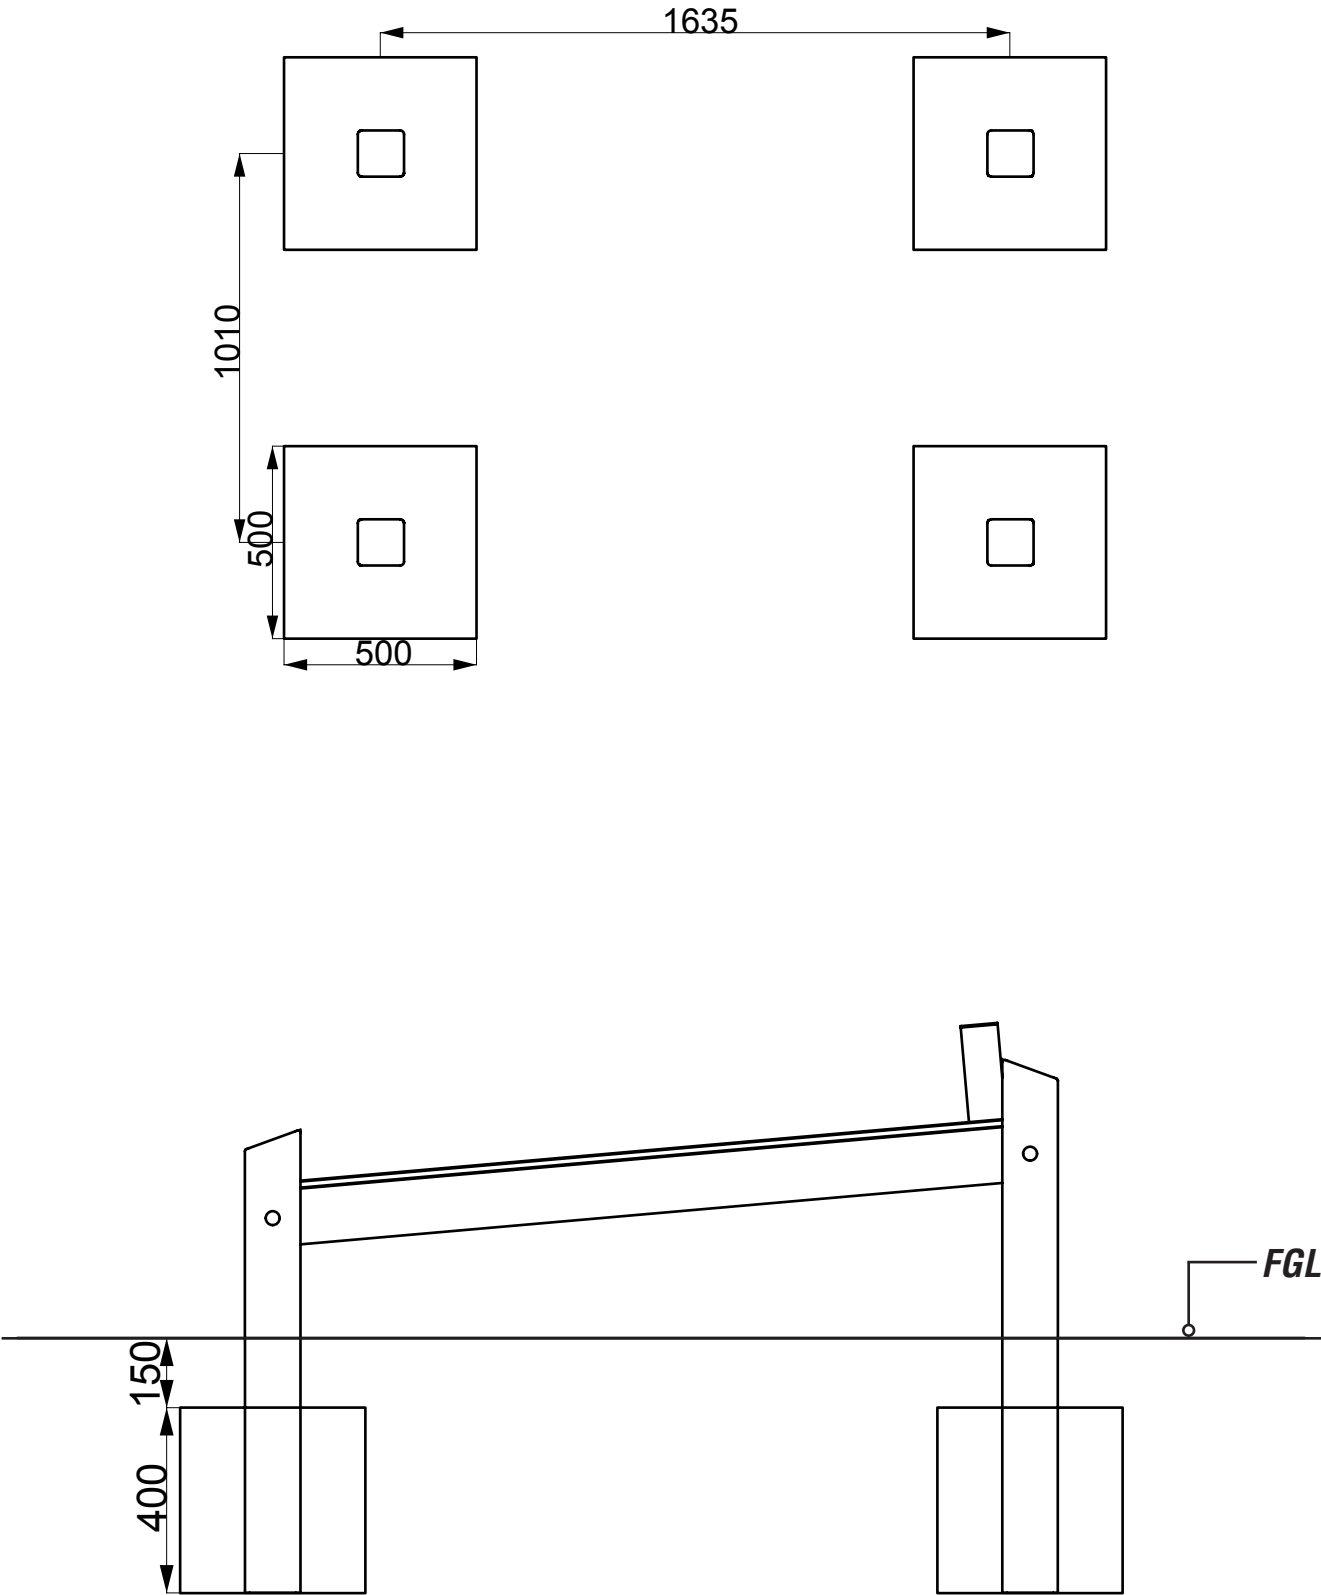


# ***SURFACING - OVERALL AREA***

---

***— = EN16630 STANDARD***

***— = EN11-76/77 STANDARD***

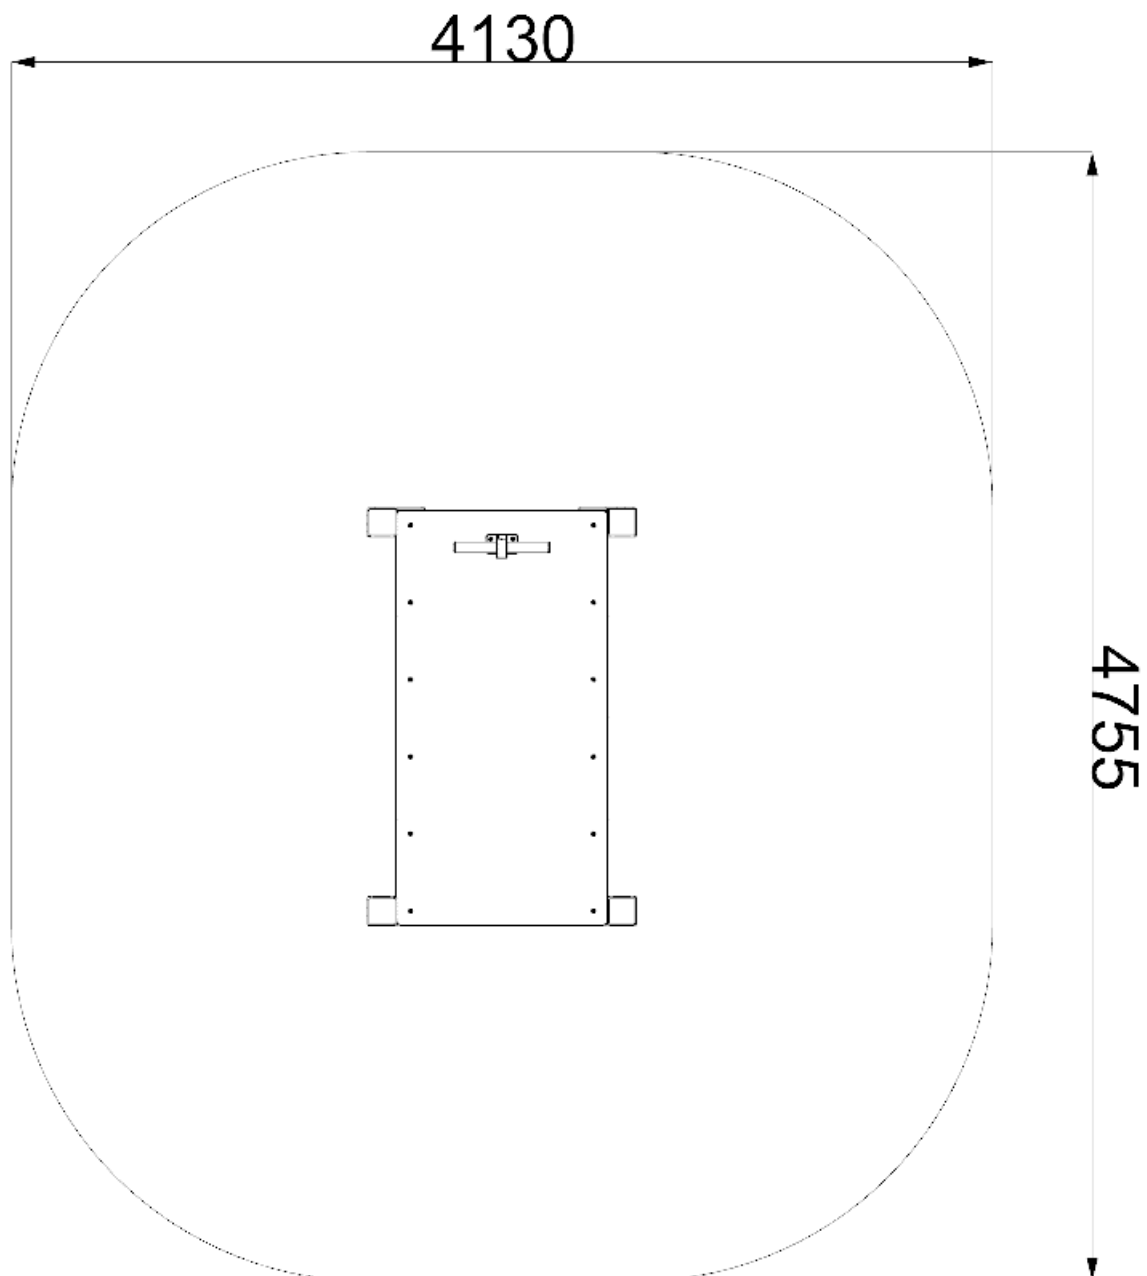


# INSTALLATION INSTRUCTIONS

---


**1**

**ATTACH SIT UP BAR TO PRE-ASSEMBLED PANEL**  
USING M8X80 SCREWS

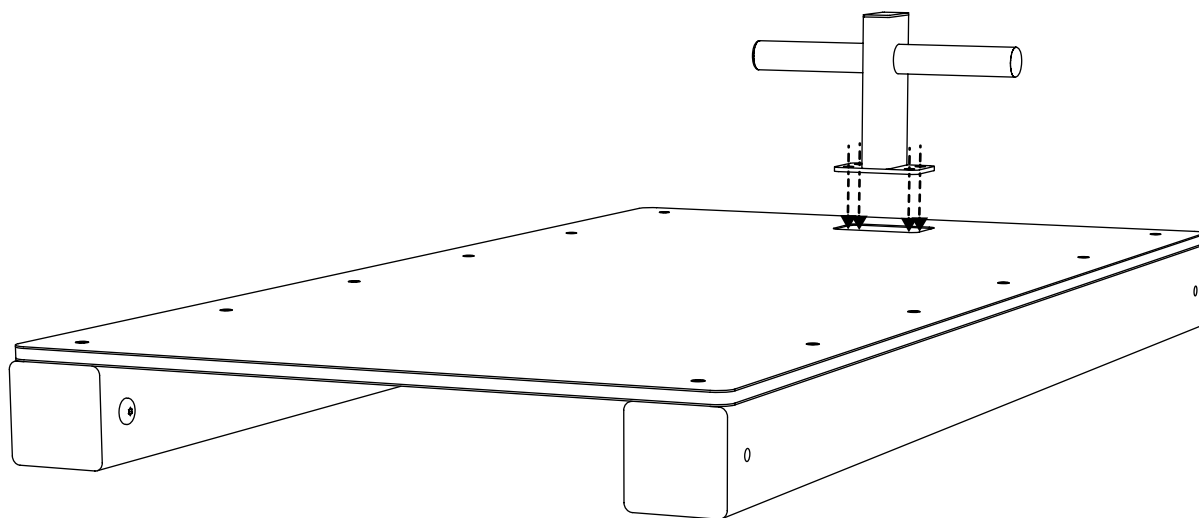

**2**

**ATTACH PRE-ASSEMBLED PANEL TO GM105H-A, GM105H-B AND GM105H-C**  
USING M12X240 BOLTS AND SOCKET NUTS

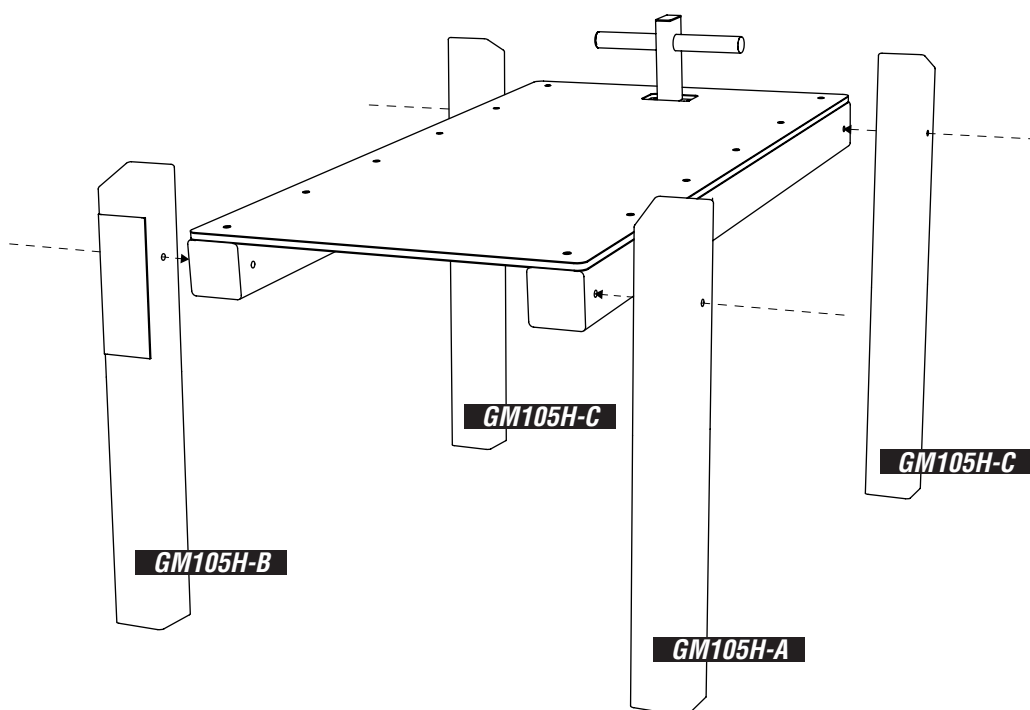


# INSTALLATION INSTRUCTIONS

---

**3**

**INSTALL GM105H INTO THE GROUND**

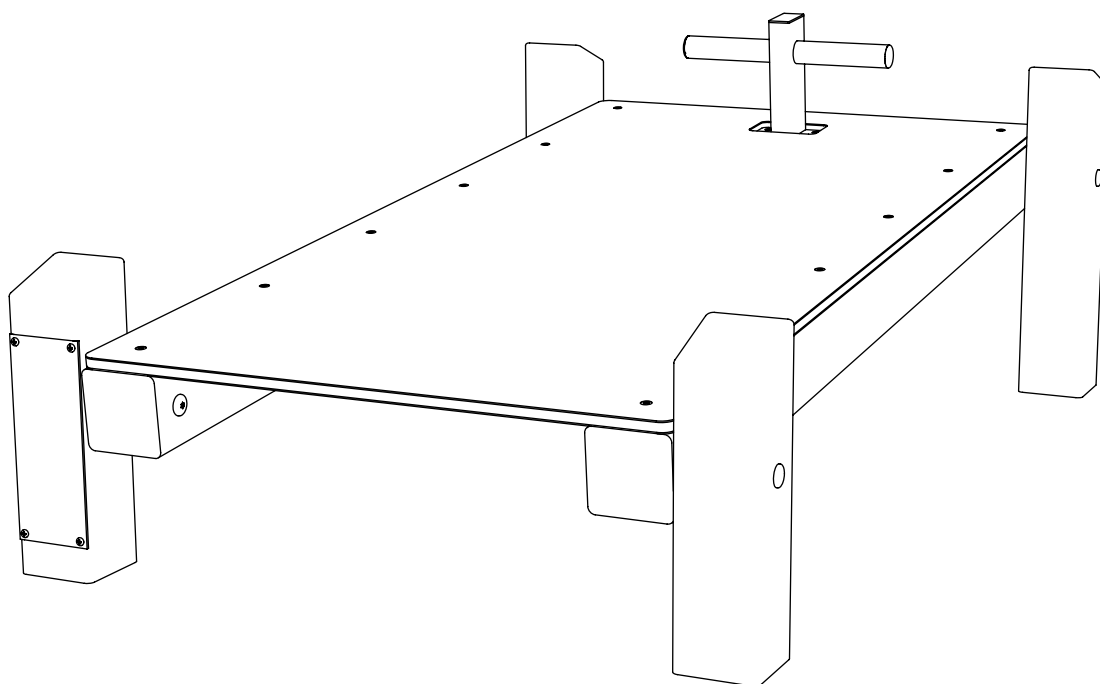

## ***ADDITIONAL MEASUREMENTS***

---

