



CH122-R - NET CROSSING

Installation Instructions

**creative
play**

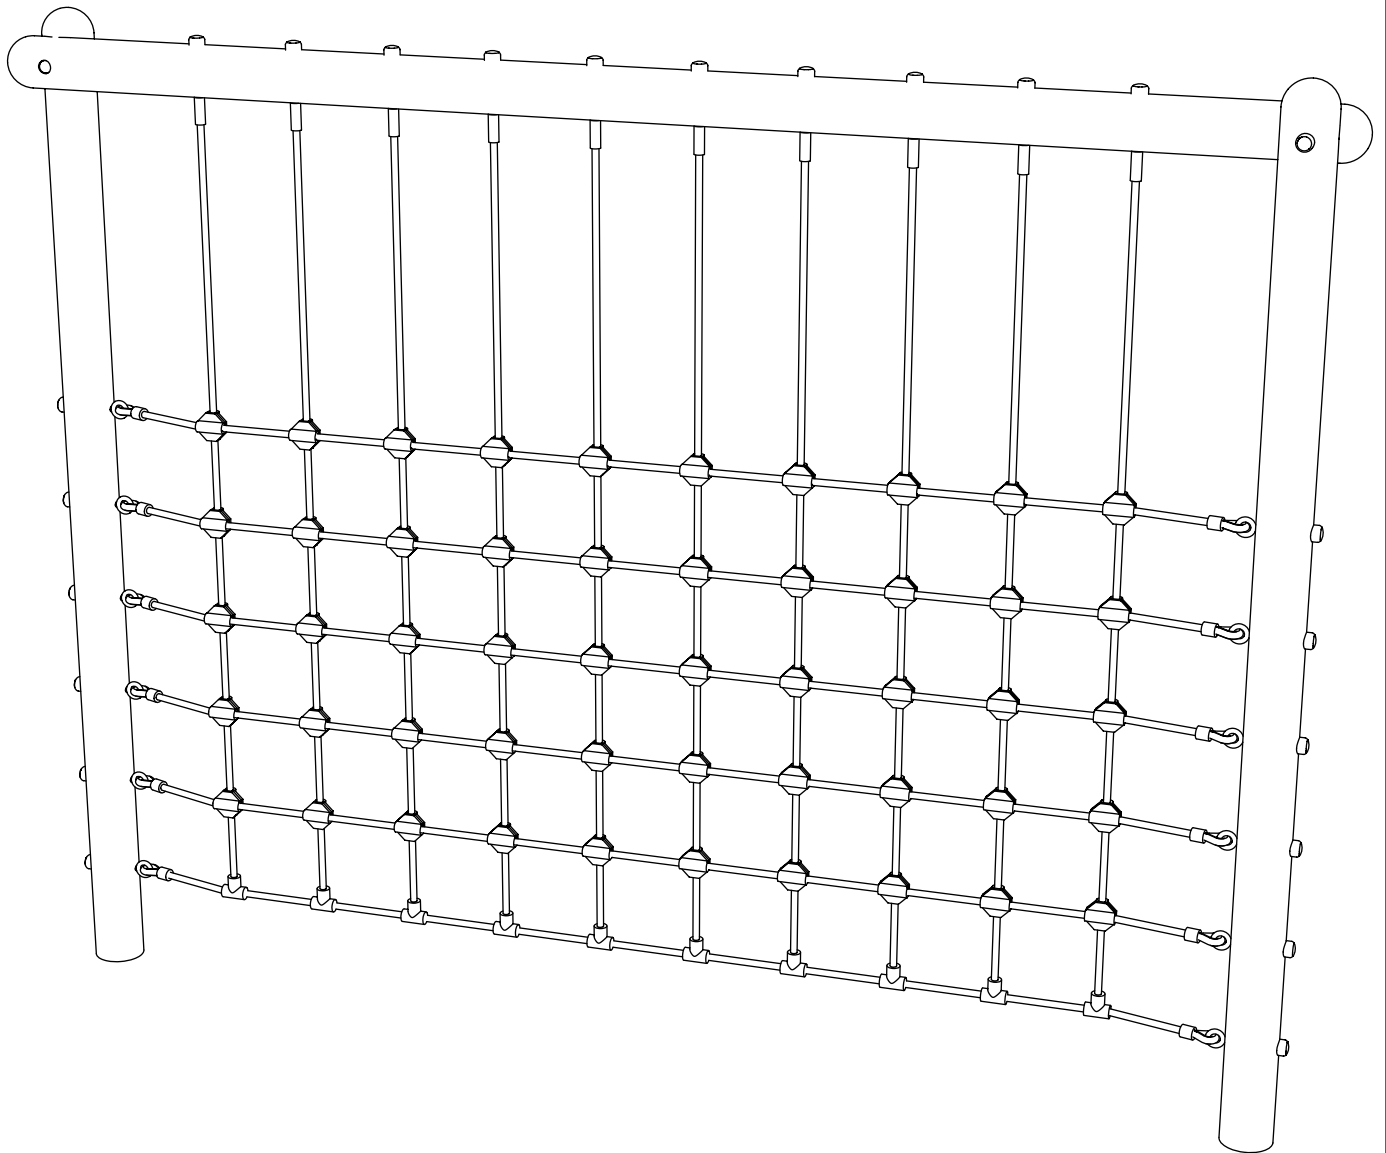


PARTS REQUIRED




R-122A [X2]




R-122B [X1]

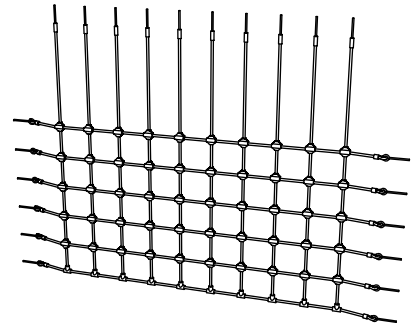



NET ASSEMBLY [X1]

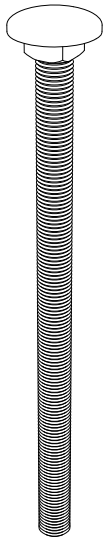

M12 X 200 BOLTS [X2]


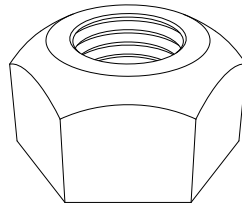


M12 [X12] & M10 [X12] NYLOCS

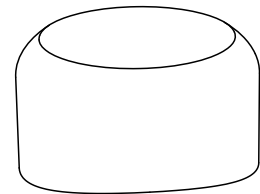
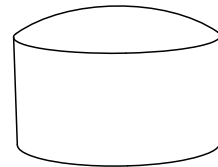


COVERED END R-60 [X24]

TOOLS REQUIRED

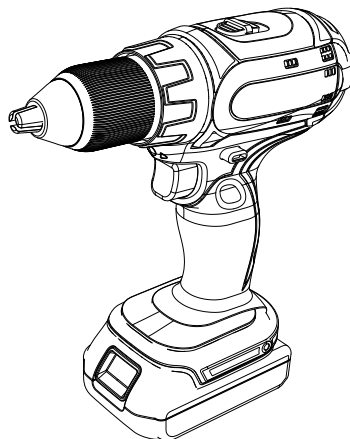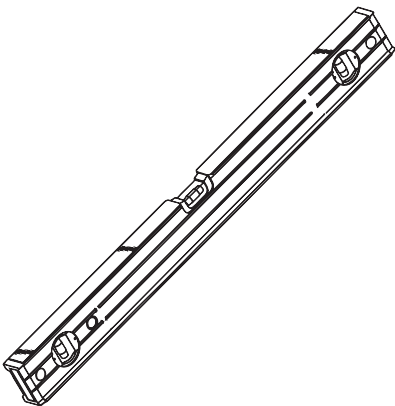

FOUNDATION DETAIL

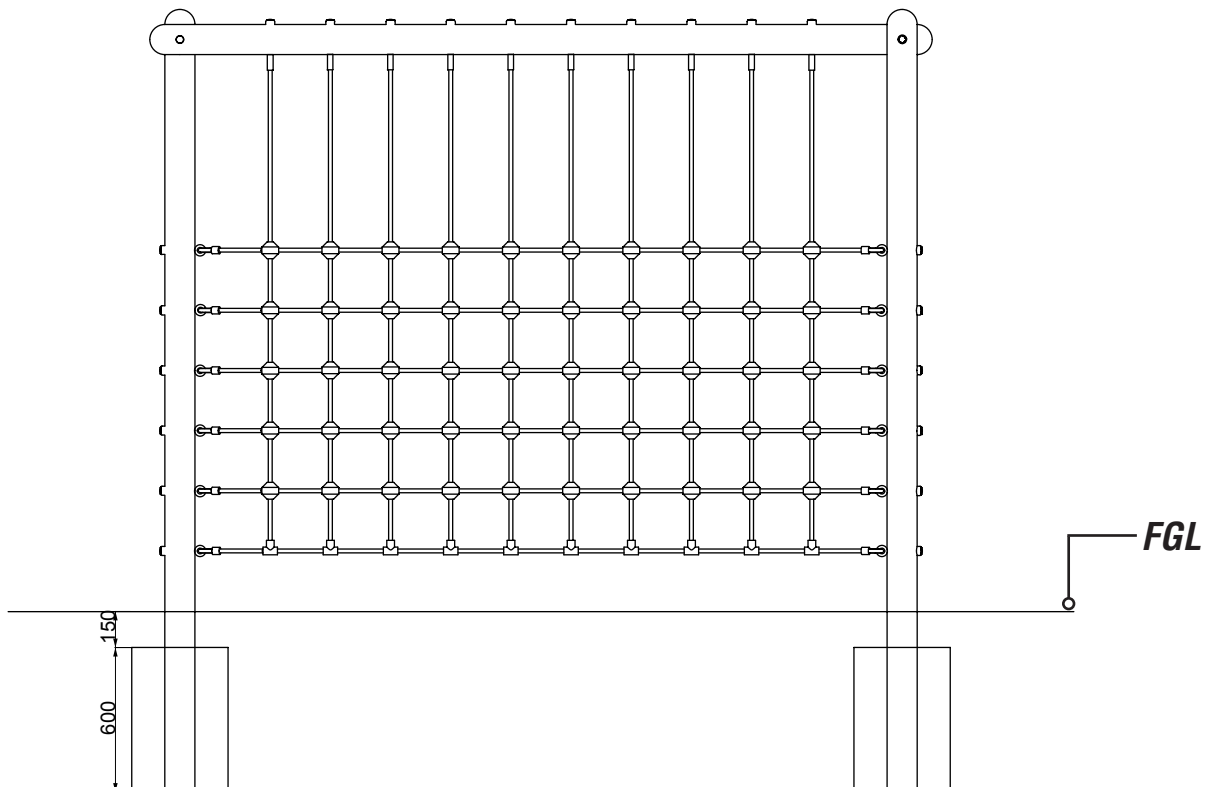
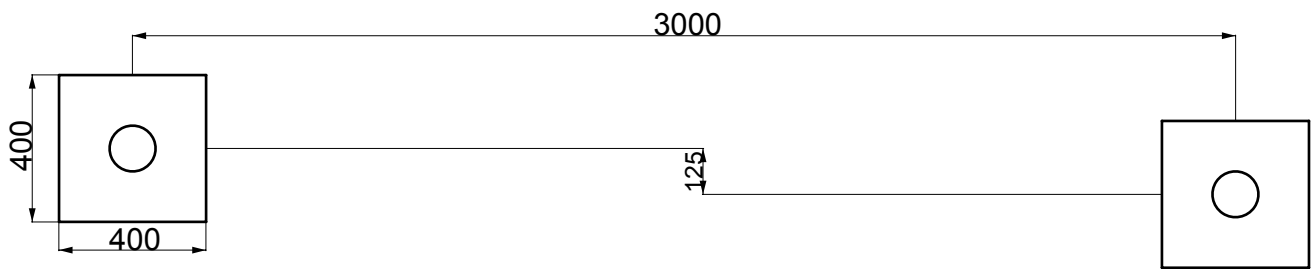


INSTALLATION INSTRUCTIONS

1

INSTALL R-122A INTO THE GROUND


ENSURE TIMBERS ARE INSTALLED AS SHOWN BELOW

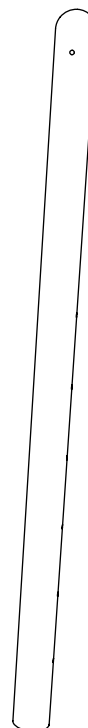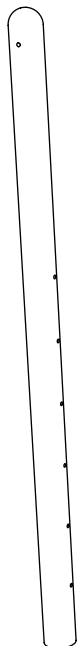

2

FIX R-122B TIMBER TO R-122A TIMBERS


USING M12X200 BOLTS, NYLOCS AND ROUND END CAPS

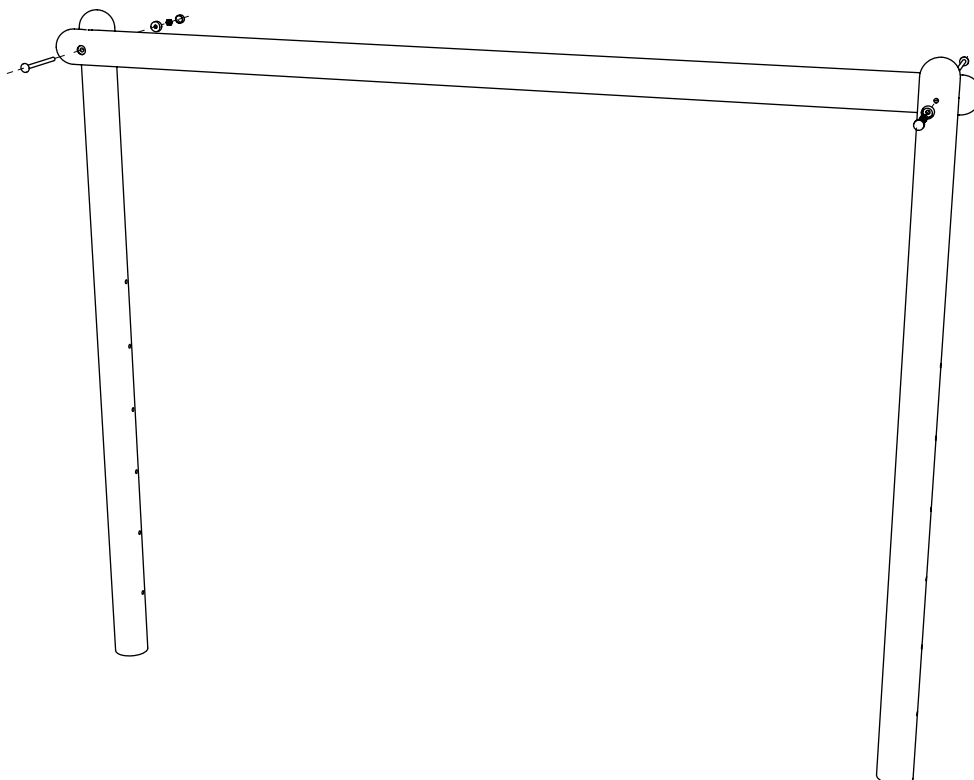

INSTALLATION INSTRUCTIONS

3

FIX NET ASSEMBLY TO R-122A AND R-122B TIMBERS
USING NYLOGS AND END CAPS

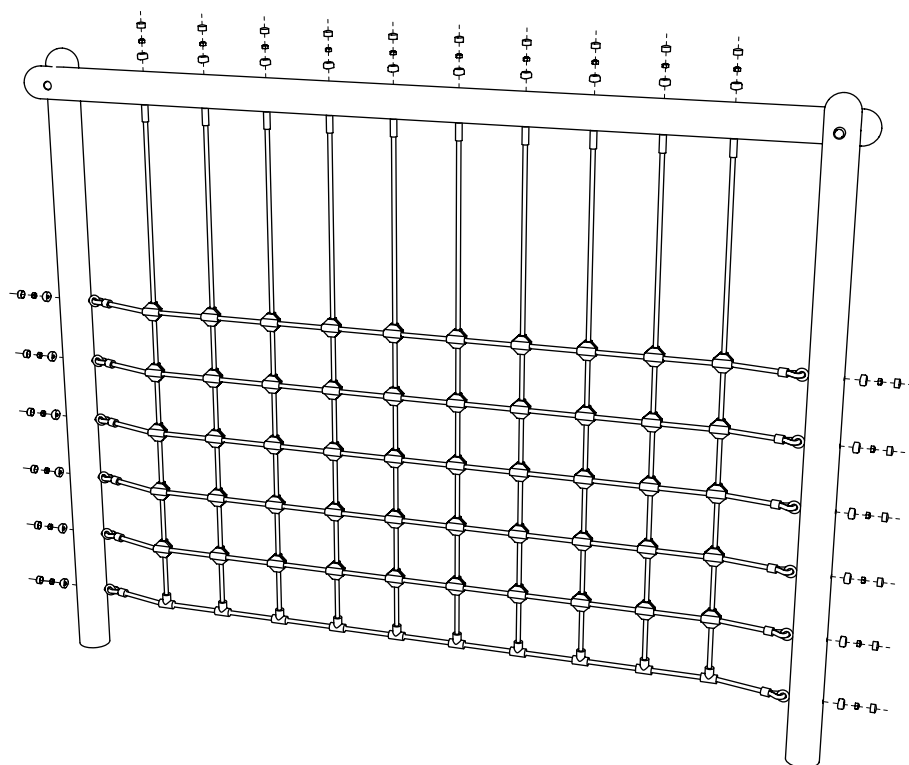

ADDITIONAL MEASUREMENTS

