
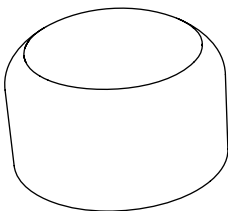



CH145 - INCLINED NET

Installation Instructions

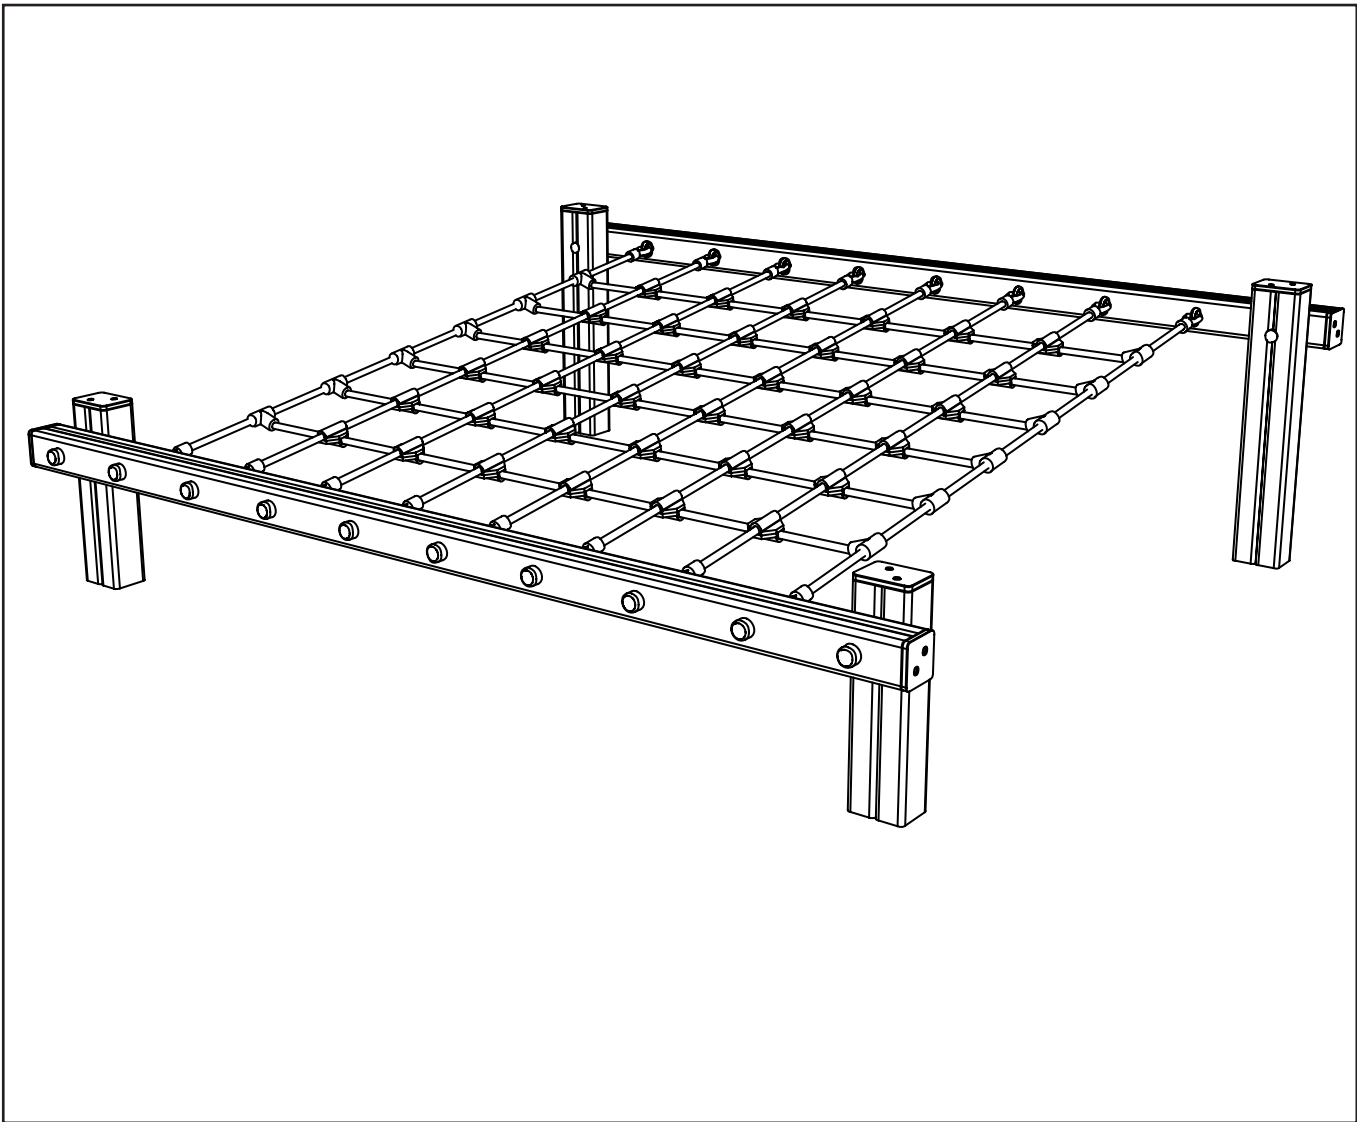


x20

102003-01

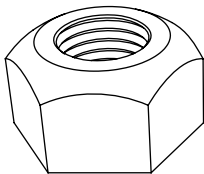


x4

656.M12

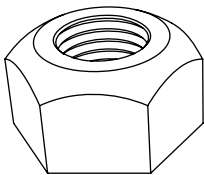

x16

656.M10

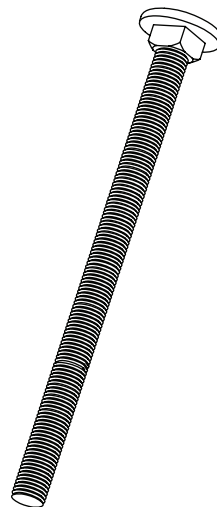

x4


274.M12X200

PARTS REQUIRED CONTINUED...



x2

CH145-B

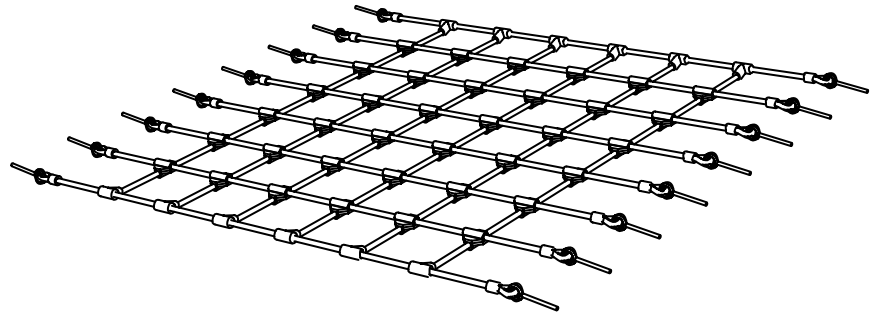


x1

NET ASSEMBLY



x2



CH145-C

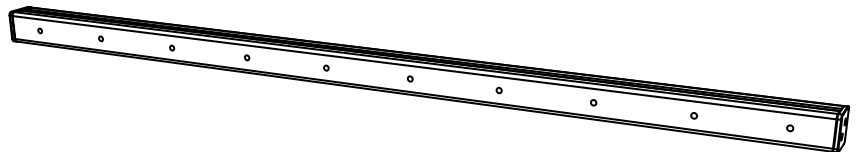


x2

CH145-A

FOUNDATIONS

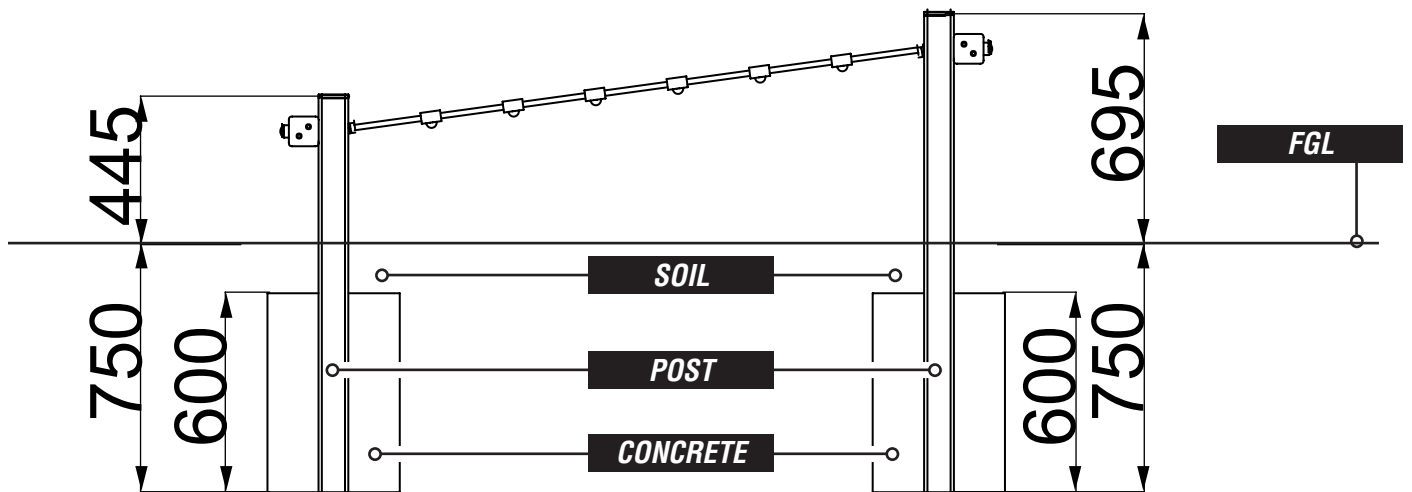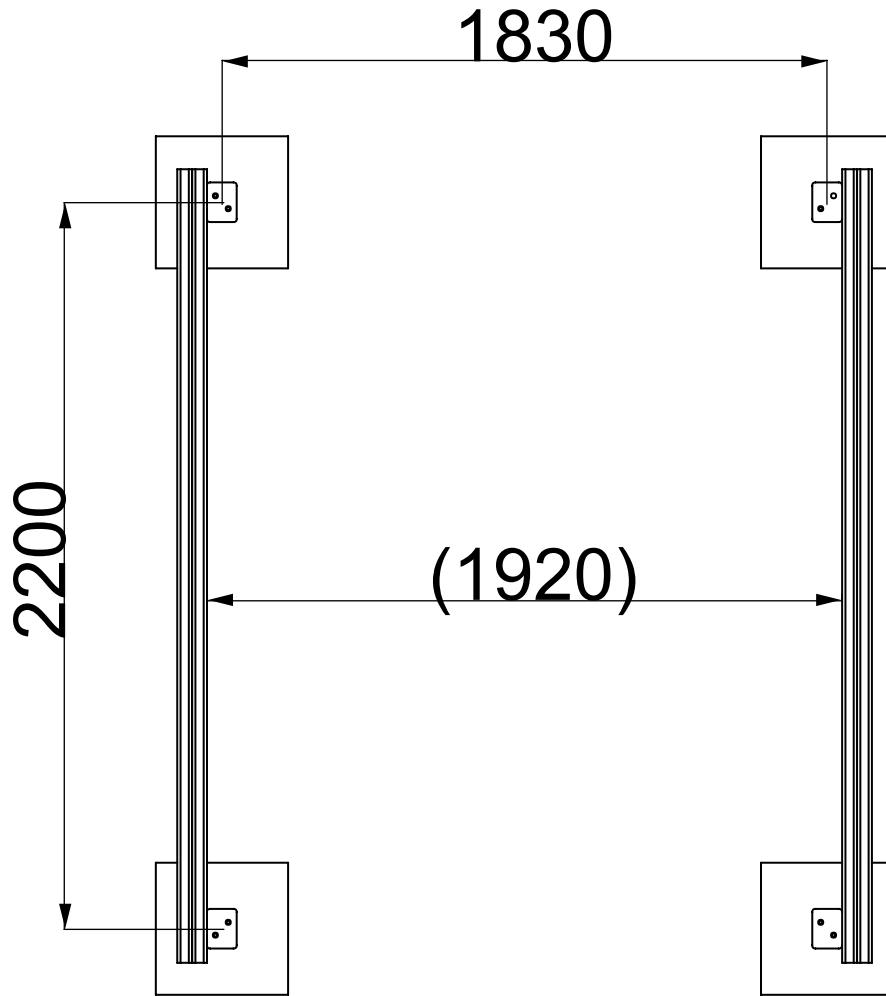

SURFACING

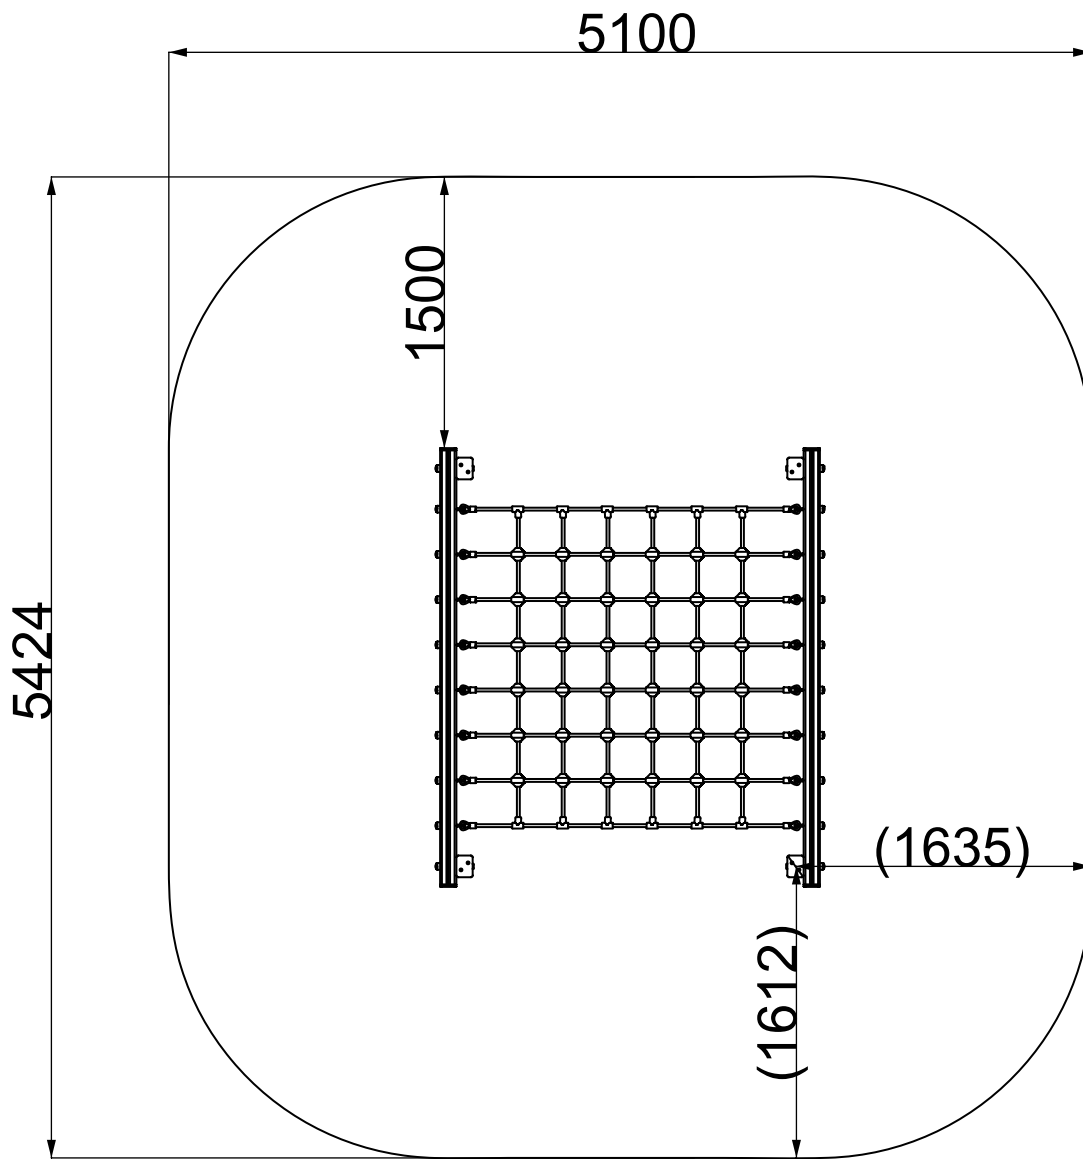


INSTALLATION INSTRUCTIONS

1

BOLT A TIMBERS TO B / C TIMBERS


USING - 274.M12X200 / 656.M12 / 102003-01

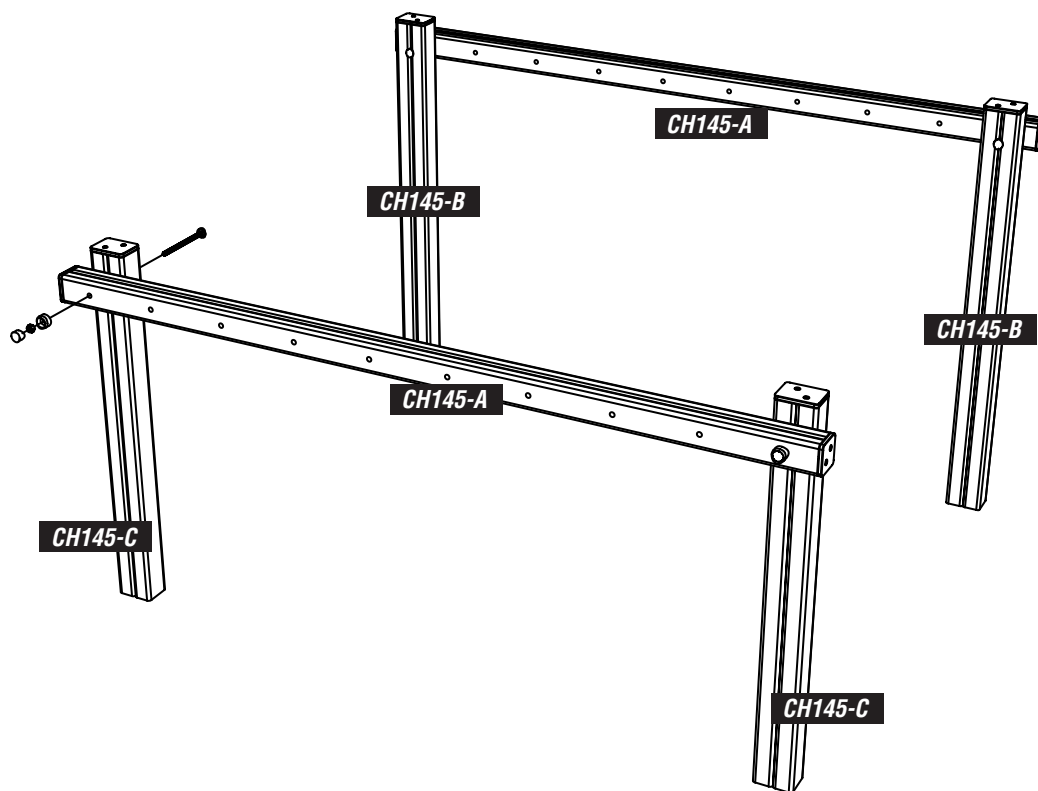

2



ATTACH THE NET ASSEMBLY

USING - 656.M10

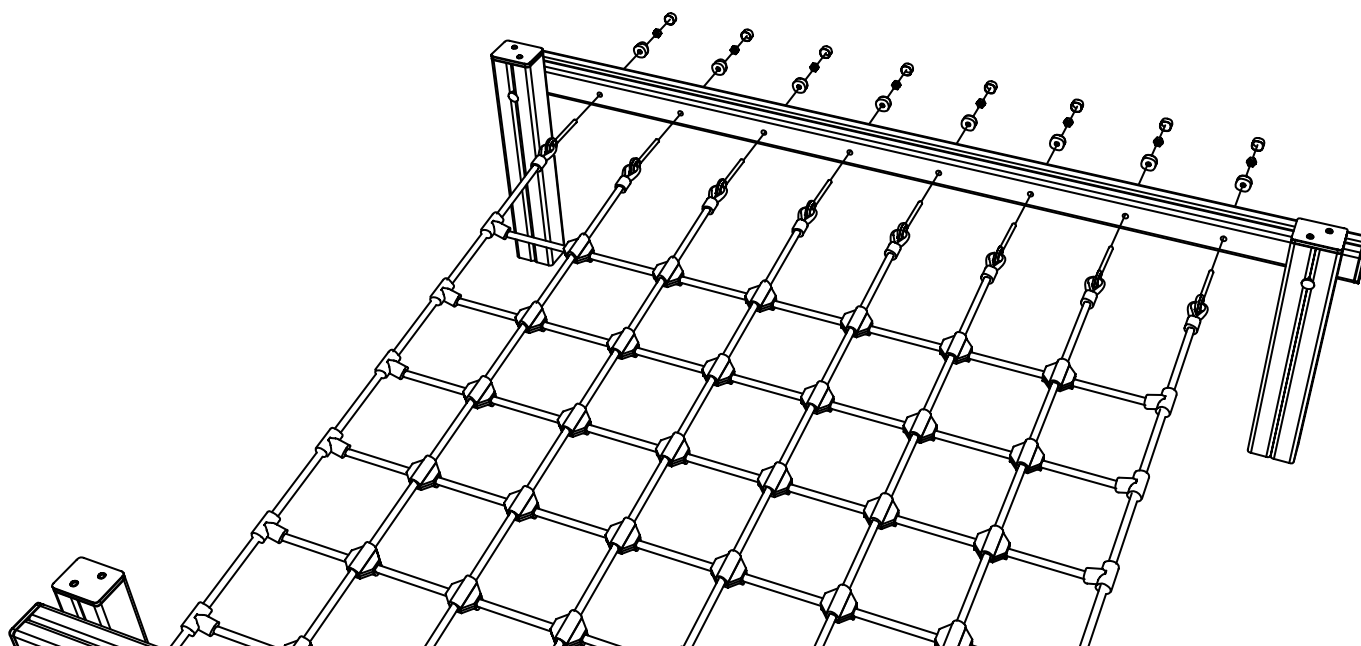

INSTALLATION INSTRUCTIONS

3 REPEAT FOR OPPOSITE SIDE ENSURING THE ROPES ARE TAUGHT

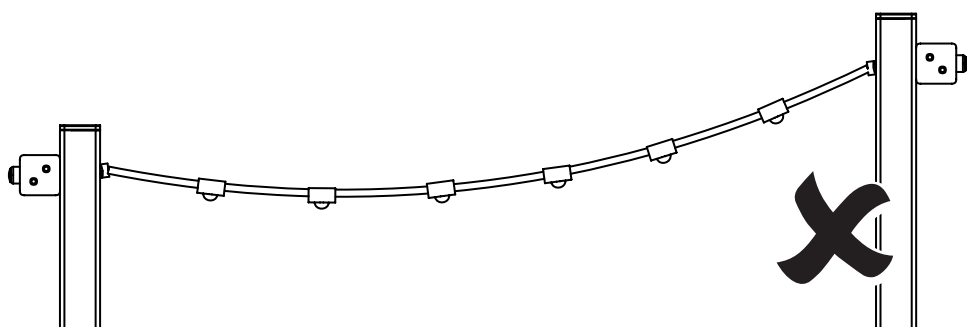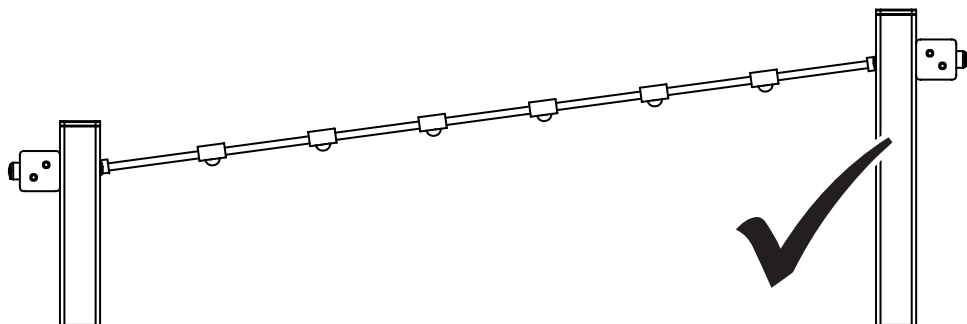

NOTES:
REPOSITION TIMBER FRAME
IF REQUIRED TO ENSURE NET
ASSEMBLY IS TAUGHT