


S115 - DOUBLE SWING (COMBI SEAT)

Installation Instructions

**creative
play**



PARTS REQUIRED

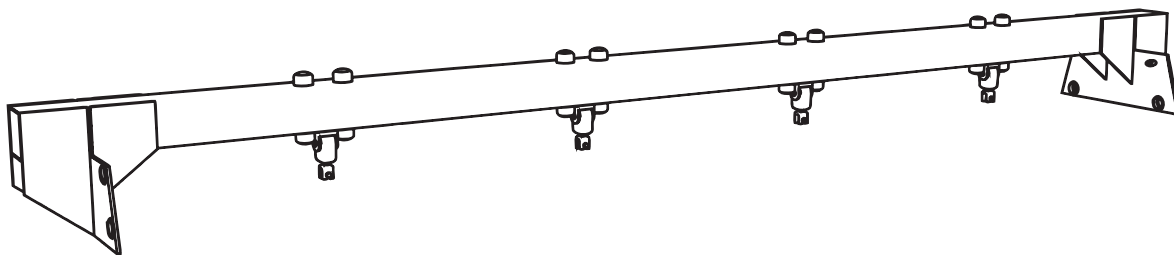


X1

DOUBLE SUPPORT BEAM



X4

M8X80 WOODSCREWS

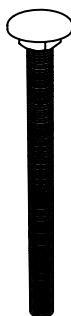

X8

M12X160 BOLT




X8

M12 END CAP



X1

CRADLE SEAT INC CHAINS

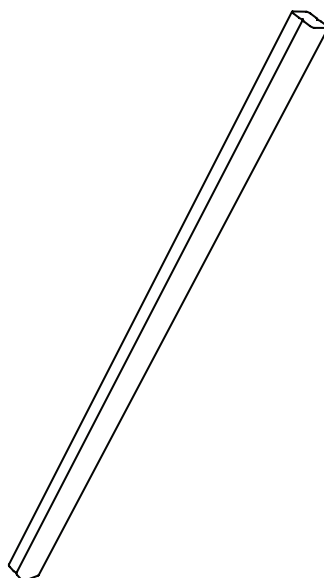

X4

S1 TIMBERS



X1


FLAT SEAT INC CHAINS

PARTS REQUIRED




X8

M8 NUT CAP

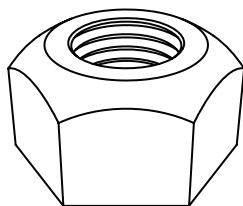

X8



M12 NYLOCS

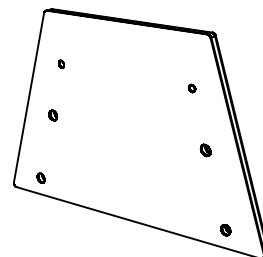




X2


PLAYTEC COVER

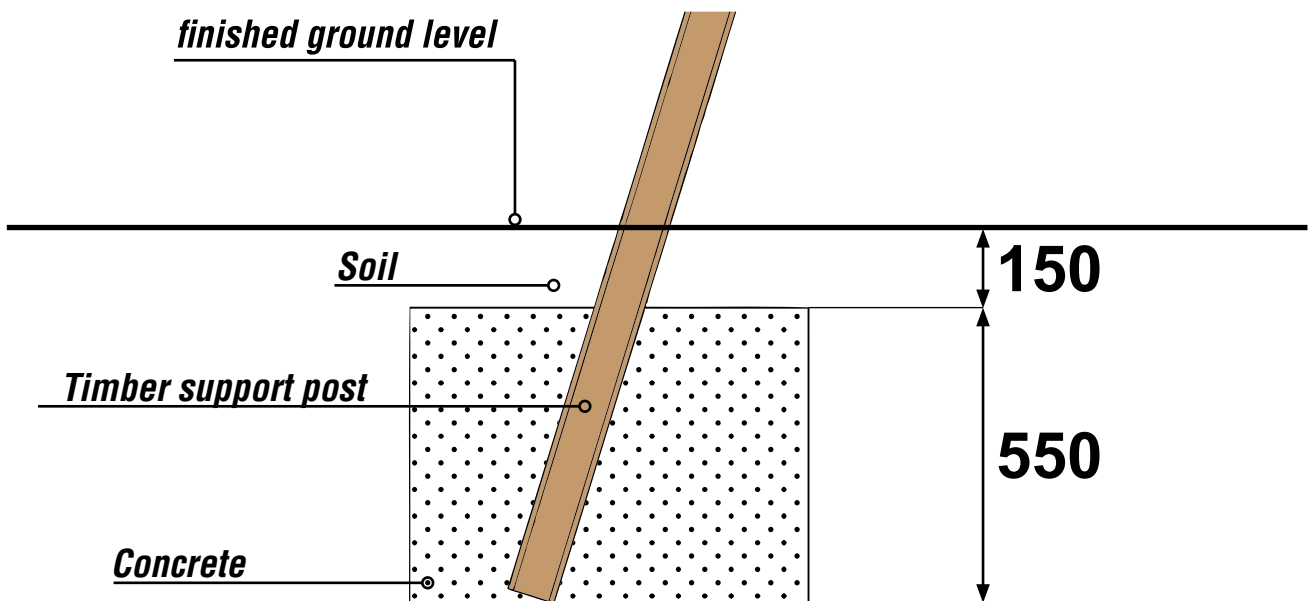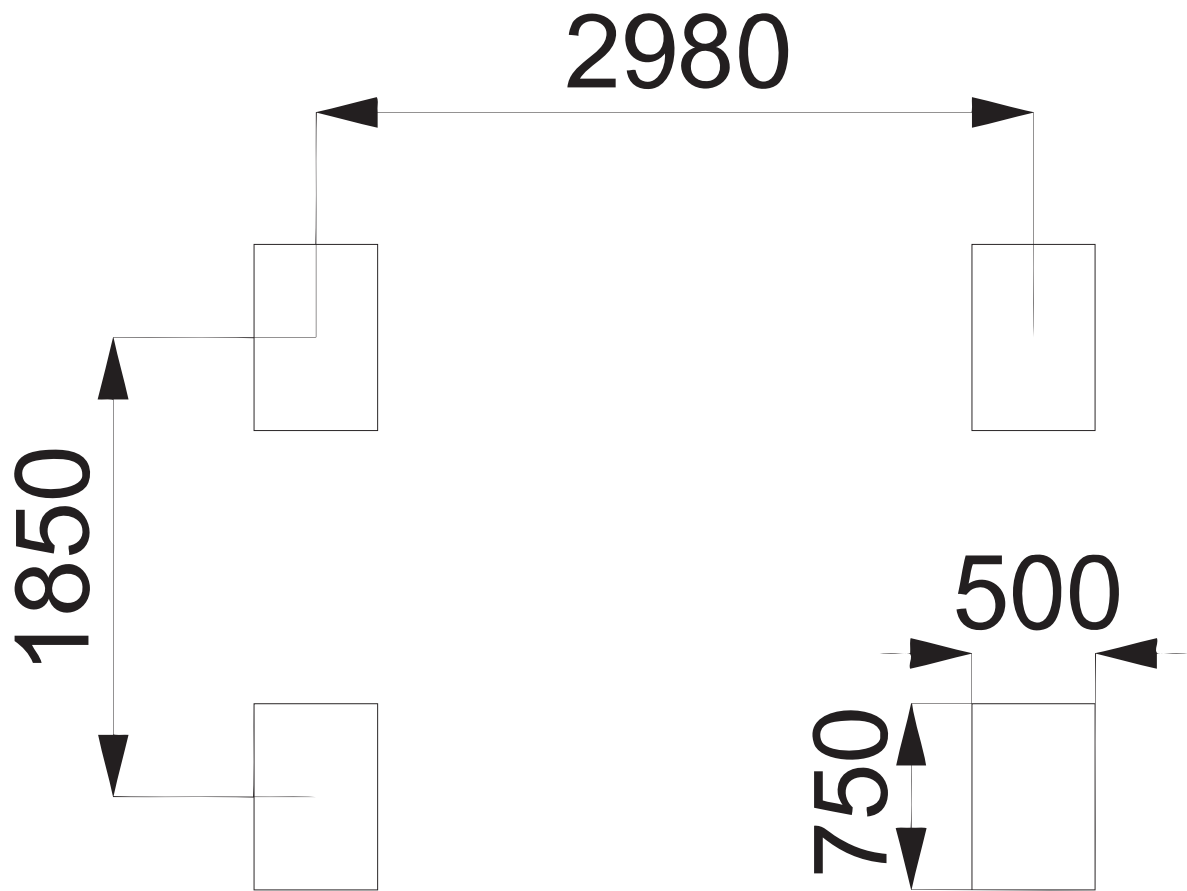FOUNDATION DETAILS




SURFACING DETAILS

-  = **SYNTHETIC**
-  = **LOOSE FILL**
-  = **AREA REQUIRED**

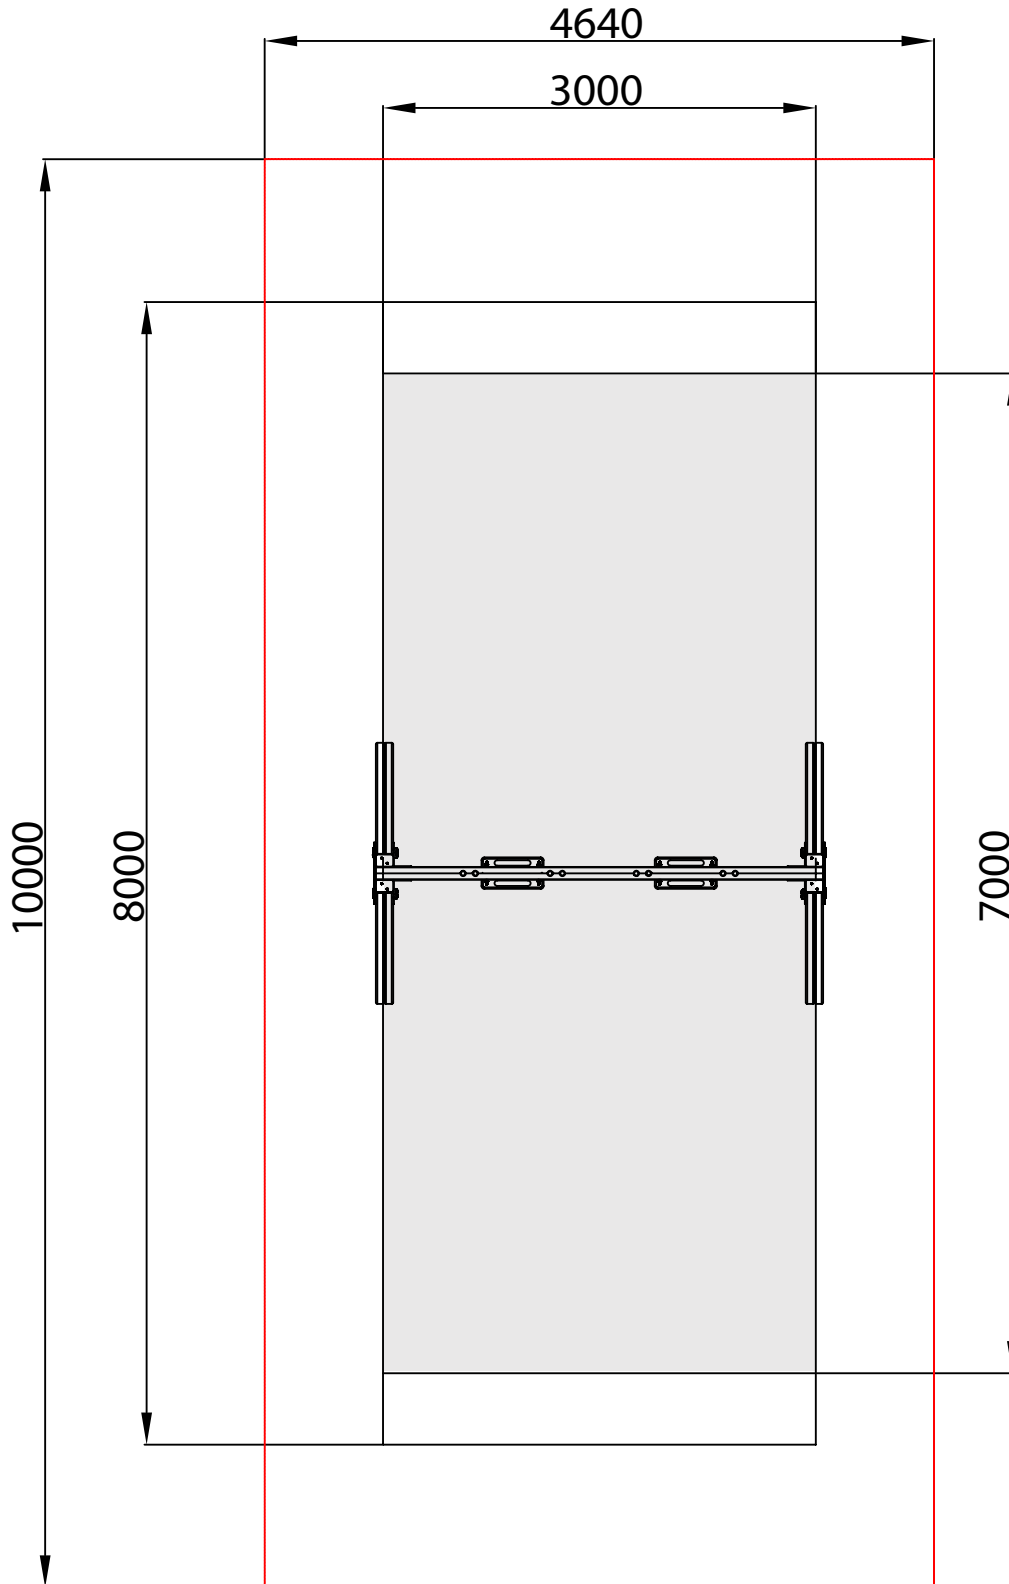


INSTALLATION INSTRUCTIONS

- 1** ATTACH PLAYTEC COVER AND S1 TIMBERS TO SUPPORT THE BEAM
USING M12X160 BOLTS [X8], M12 NYLOCS [X8] AND END CAPS [X8]

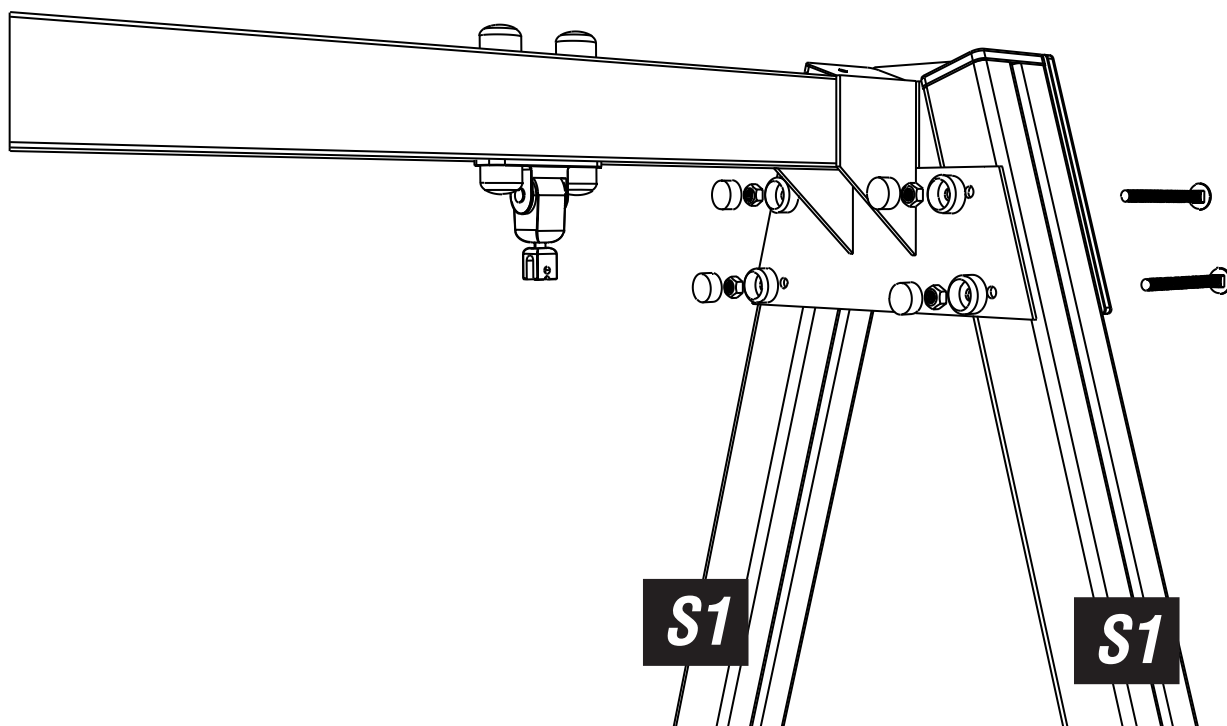


- 2** ATTACH PLAYTEC COVER TO TIMBERS S1
USING M8X80 WOODSCREWS [X4]

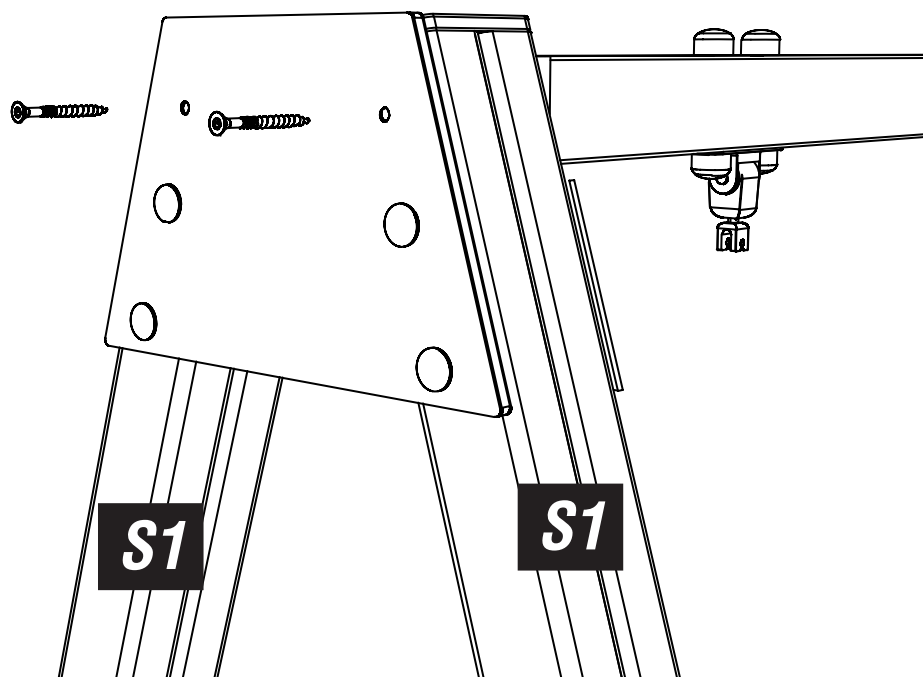


INSTALLATION INSTRUCTIONS

3 INSTALL THE ASSEMBLY FOLLOW FOUNDATION DETAILS

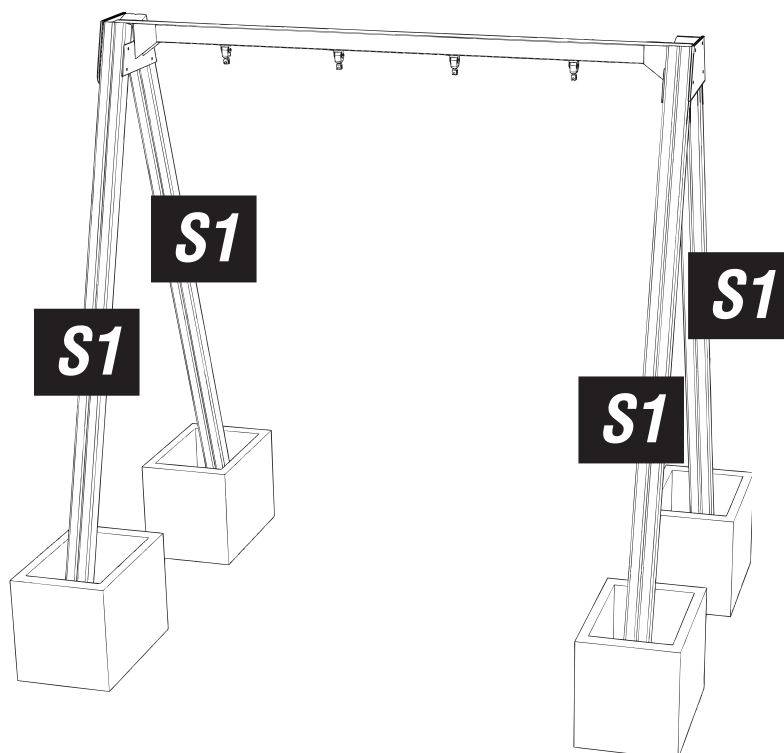

4 ATTACH SEATS TO BEAM FOLLOW DIMENSION DETAILS ON NEXT PAGE

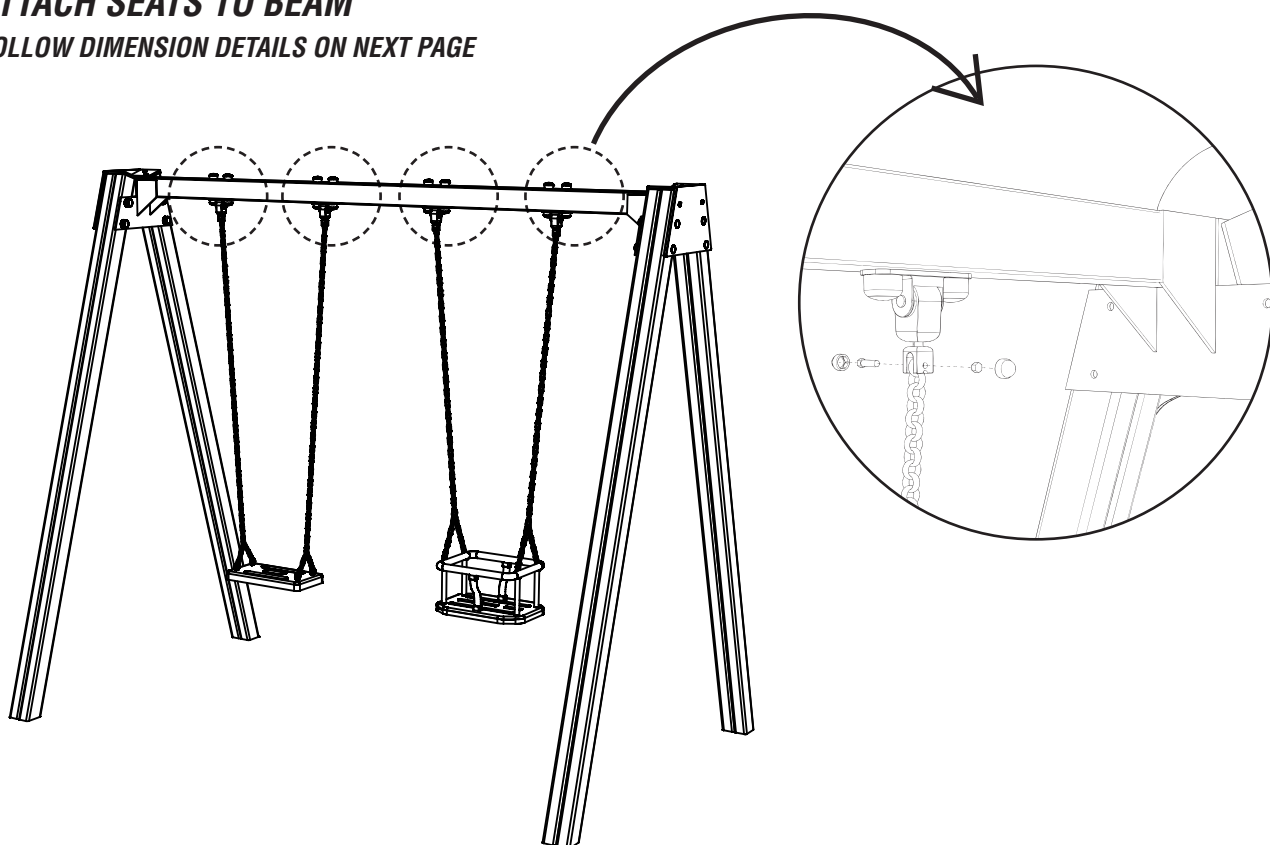

ADDITIONAL DIMENSIONS

