



TIMBER CLIMBING WALL

Installation Instructions

**creative
play**

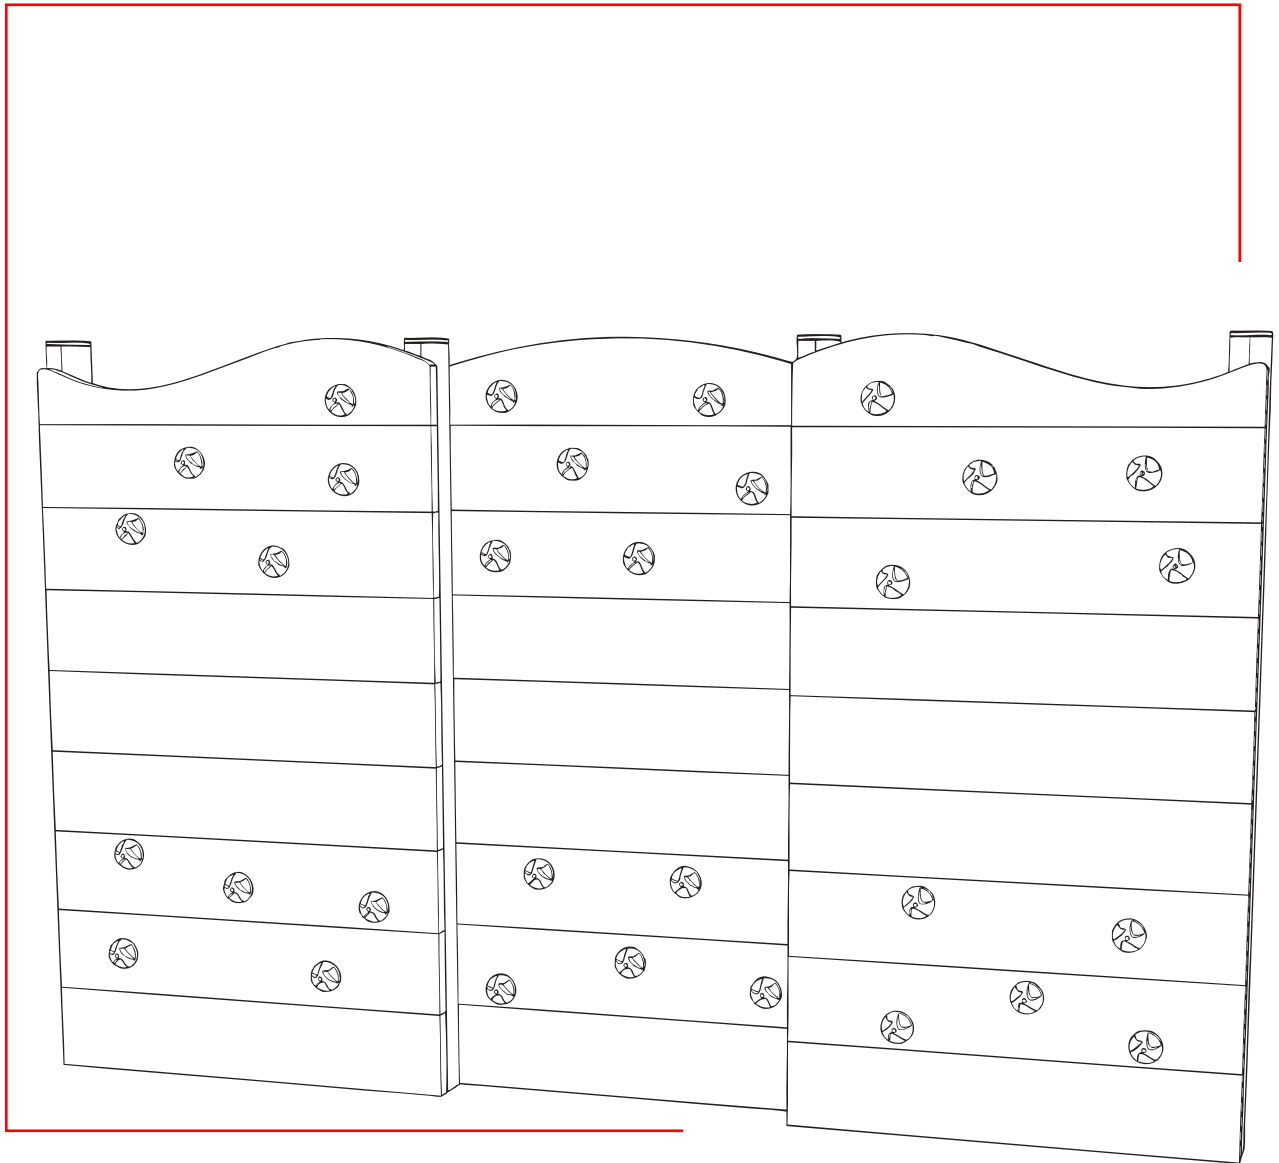

PARTS required

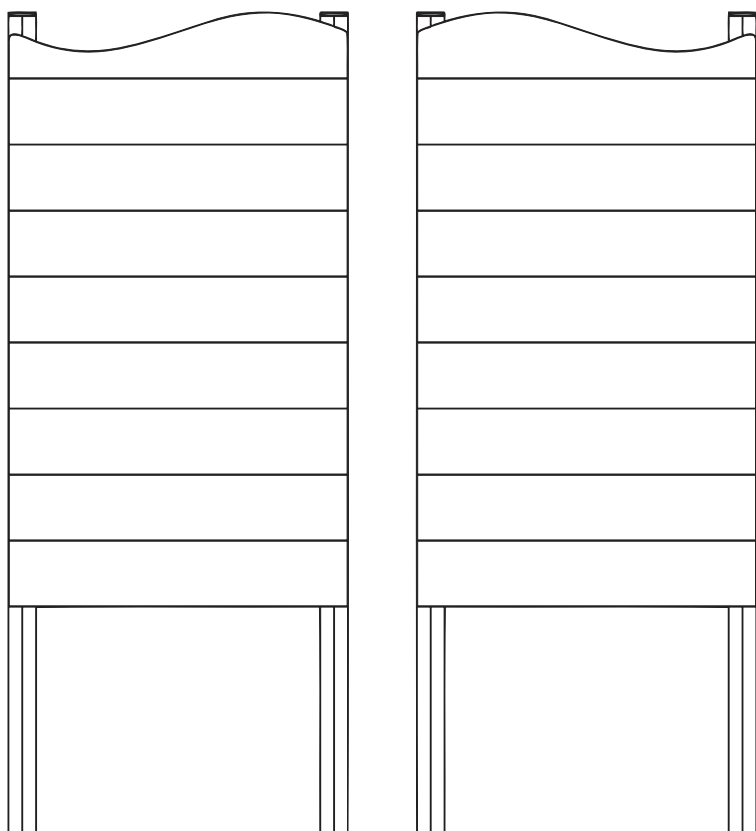

x1 (LEFT PANEL)

x1 (RIGHT PANEL)



RT4 x1



RT2 x8




x30 (CLIMBING BLOCKS)





x36 (FM80 'Brass screws')

TOOLS required

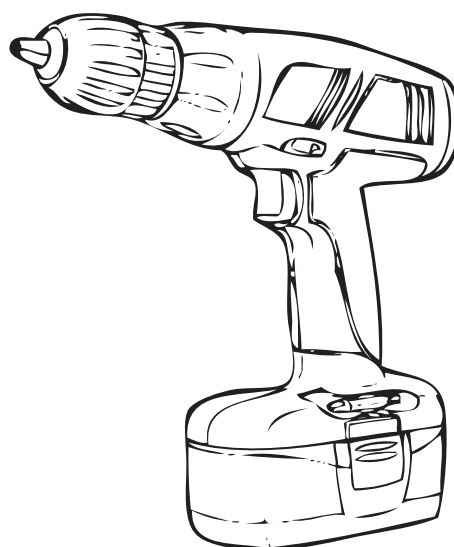


Foundation Details

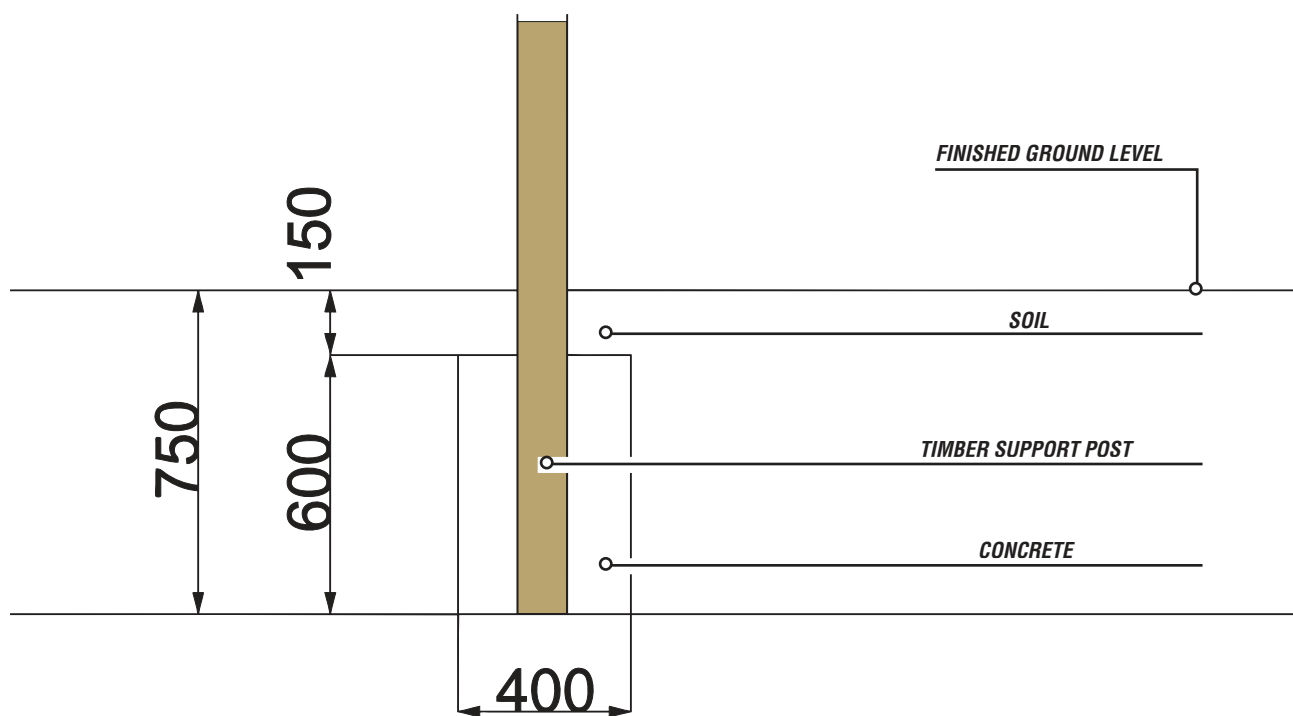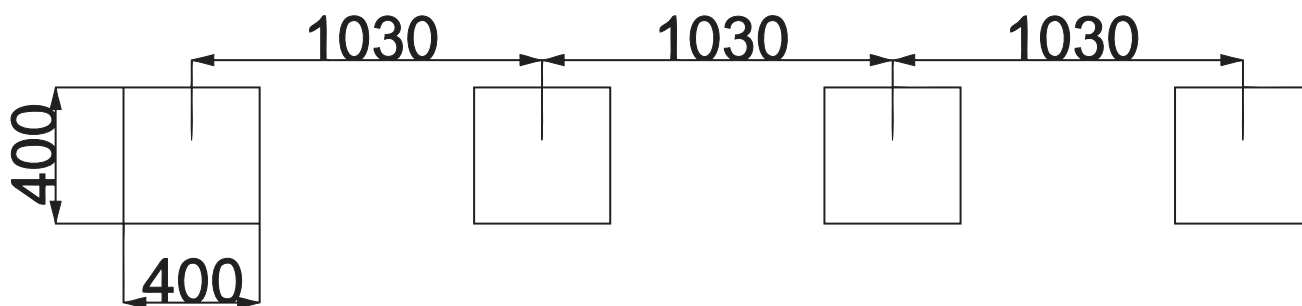

Surfacing Details

- - - - - = MINIMUM SPACE
- = SURFACE AREA

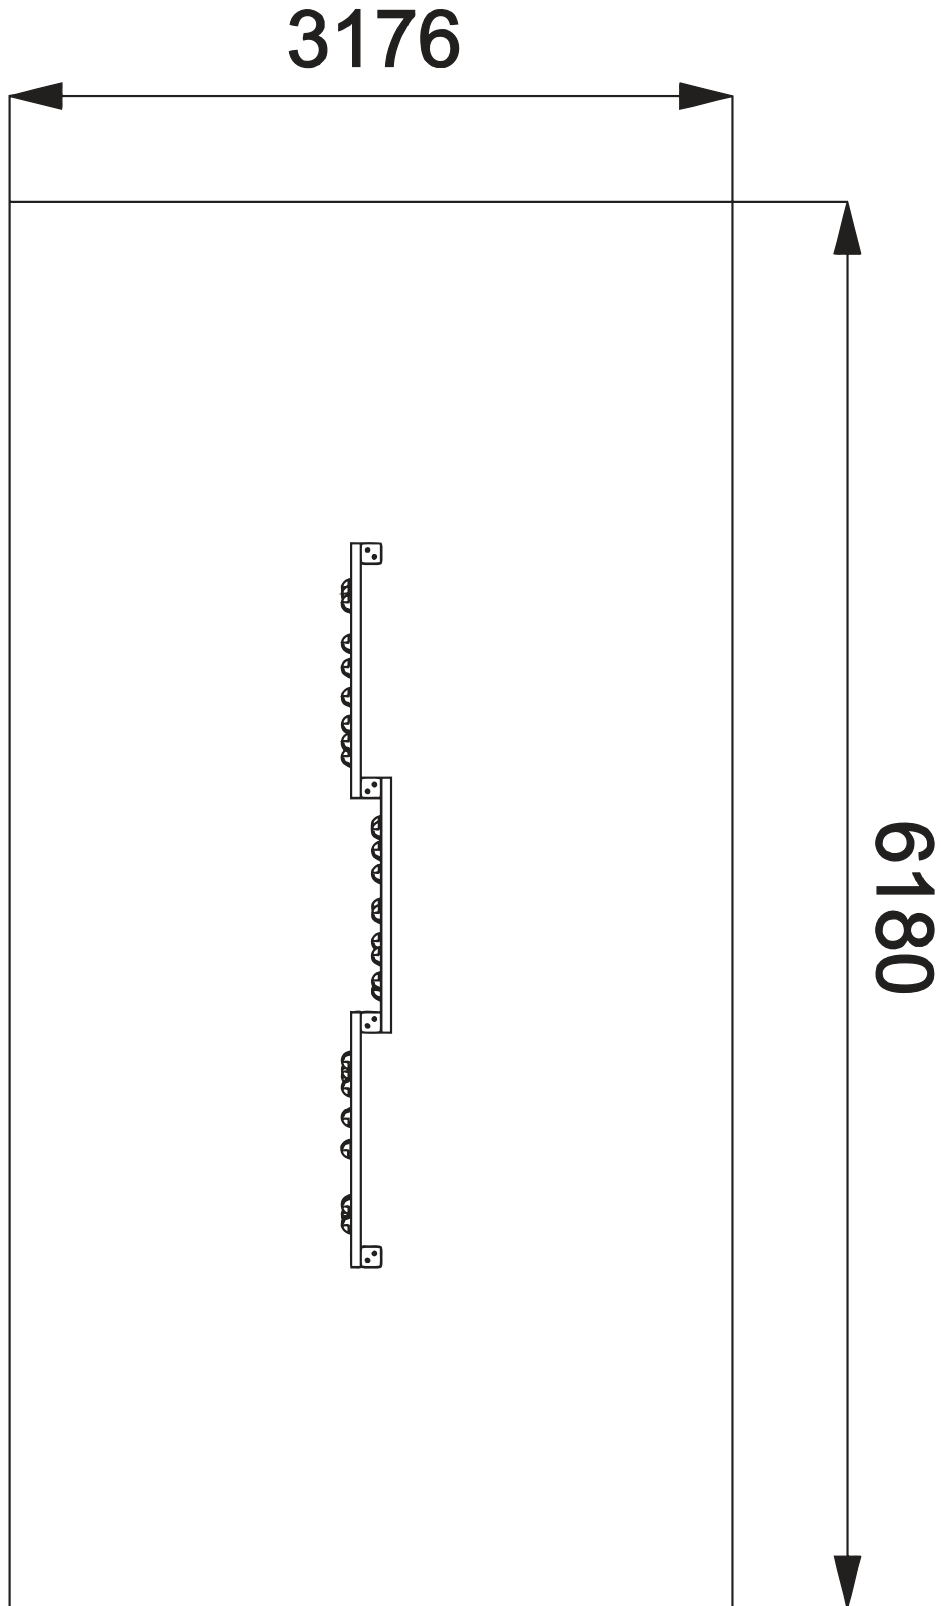


Installation Instructions

1

Install the LEFT and RIGHT PANELS


Follow foundation details

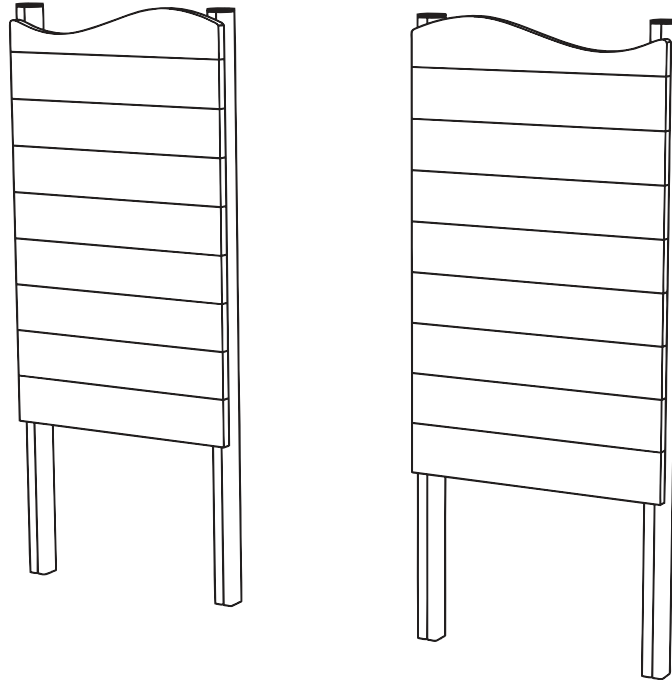

2

Attach TIMBERS RT2/4 to the TIMBERS RT1



Using 36x 'FM80 Brass Screws'

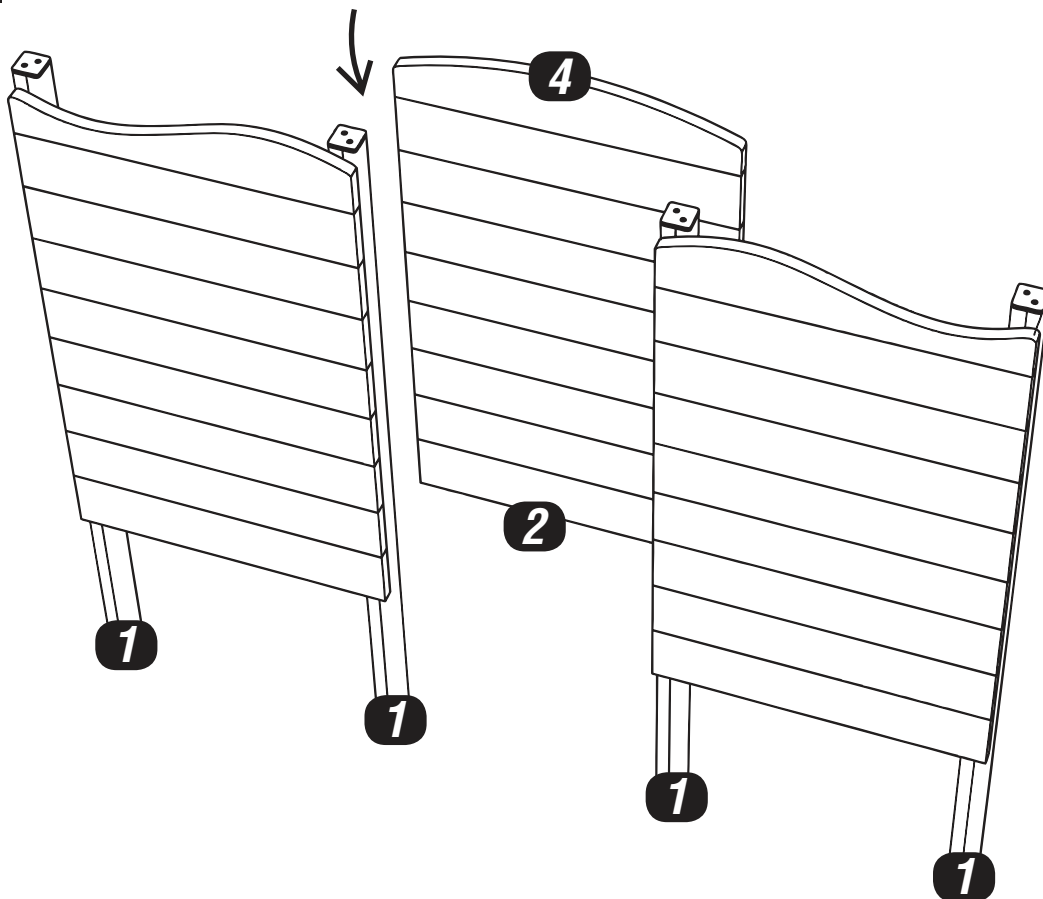

Installation Instructions


3

ATTACH CLIMBIN WALL BLOCKS to the PANELS

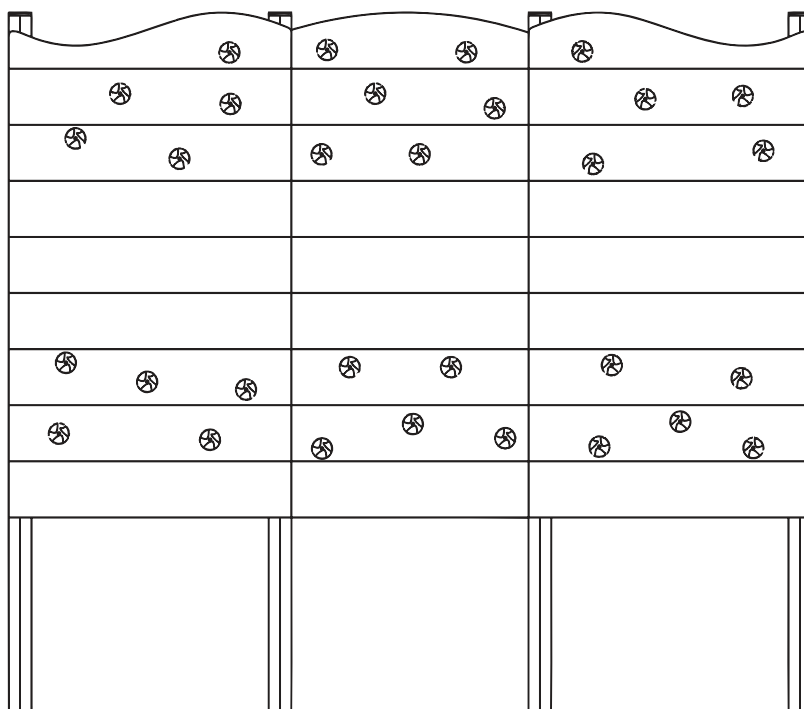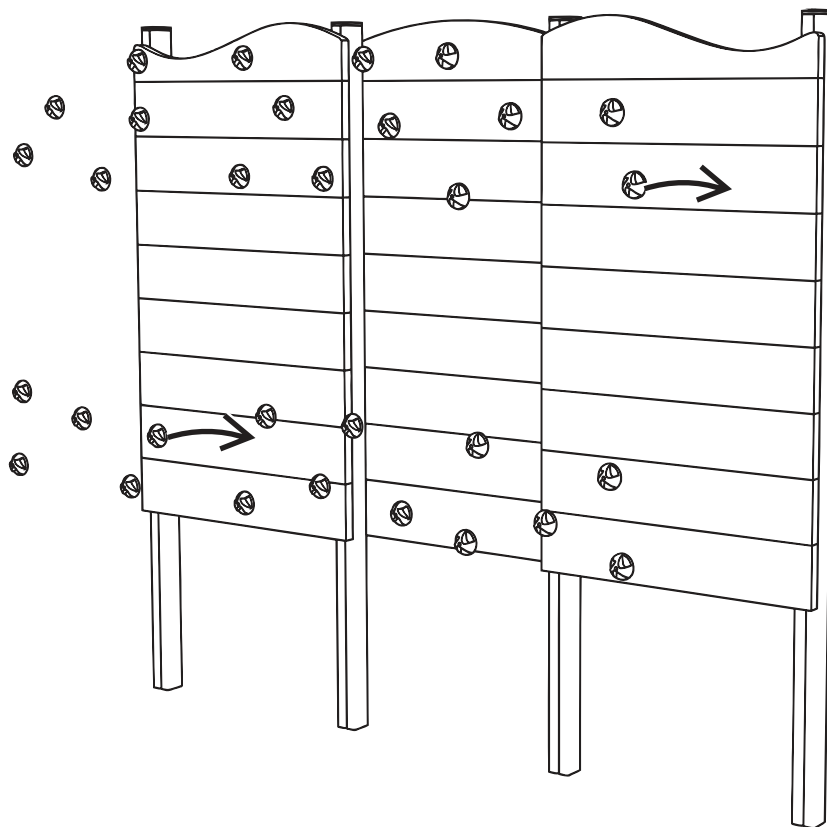

Additional Dimensions

3180

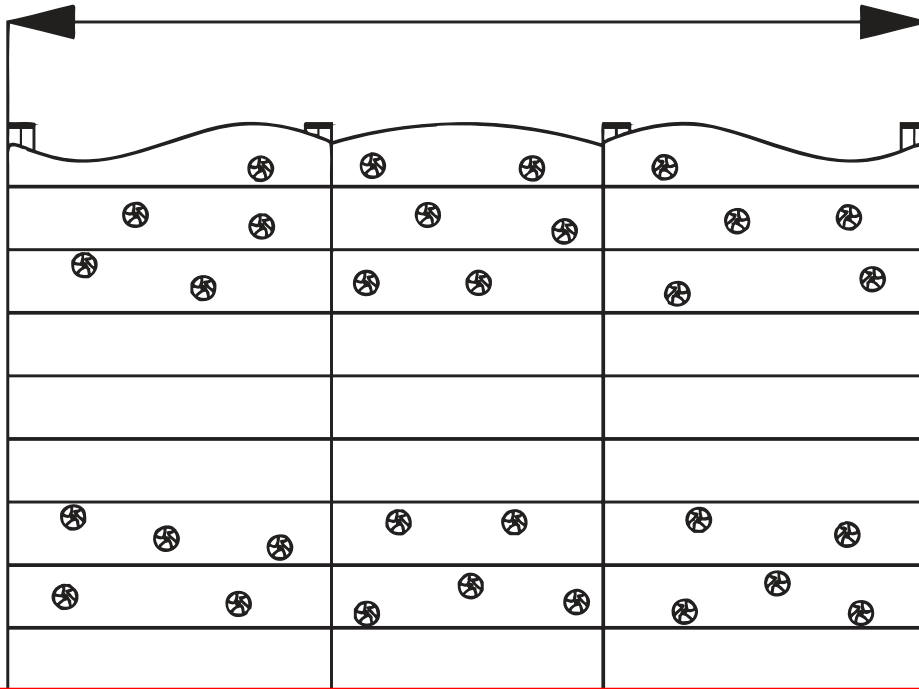

176

1962

