


# ***TIMBER KICK BOARD***


## ***Assembly Instructions***

**creative  
play**

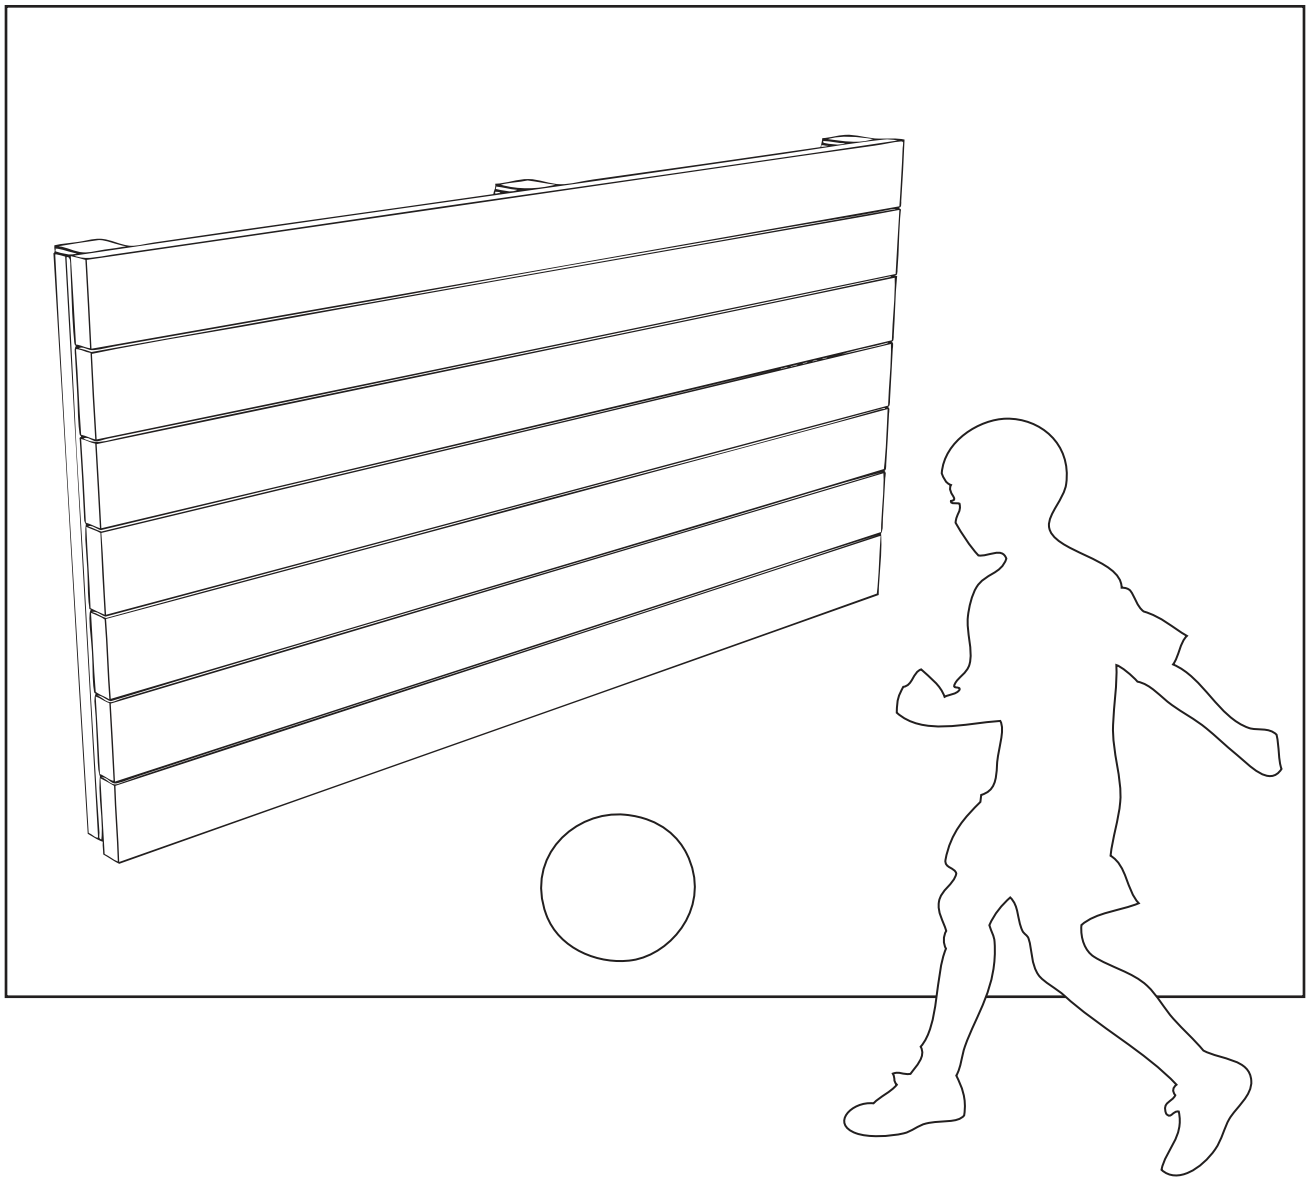

## ***PARTS required***



---

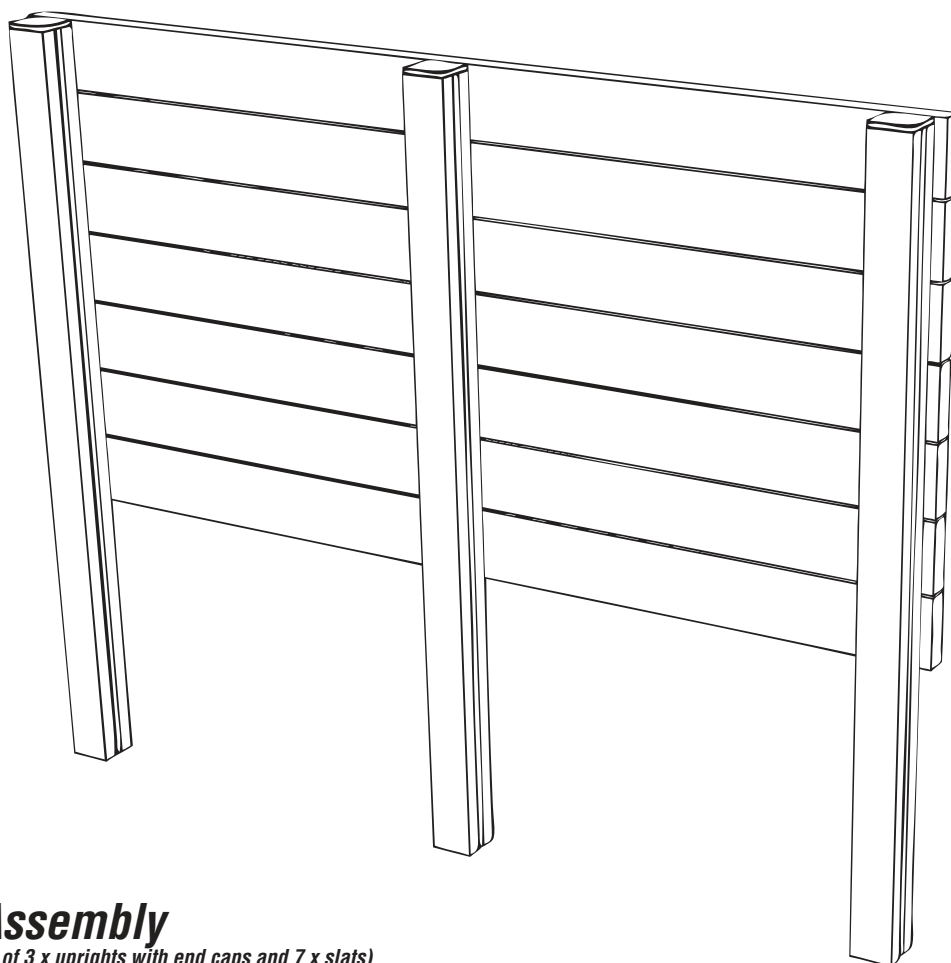

### ***x1 Assembly***

*(consists of 3 x uprights with end caps and 7 x slats)*



# Foundation Details

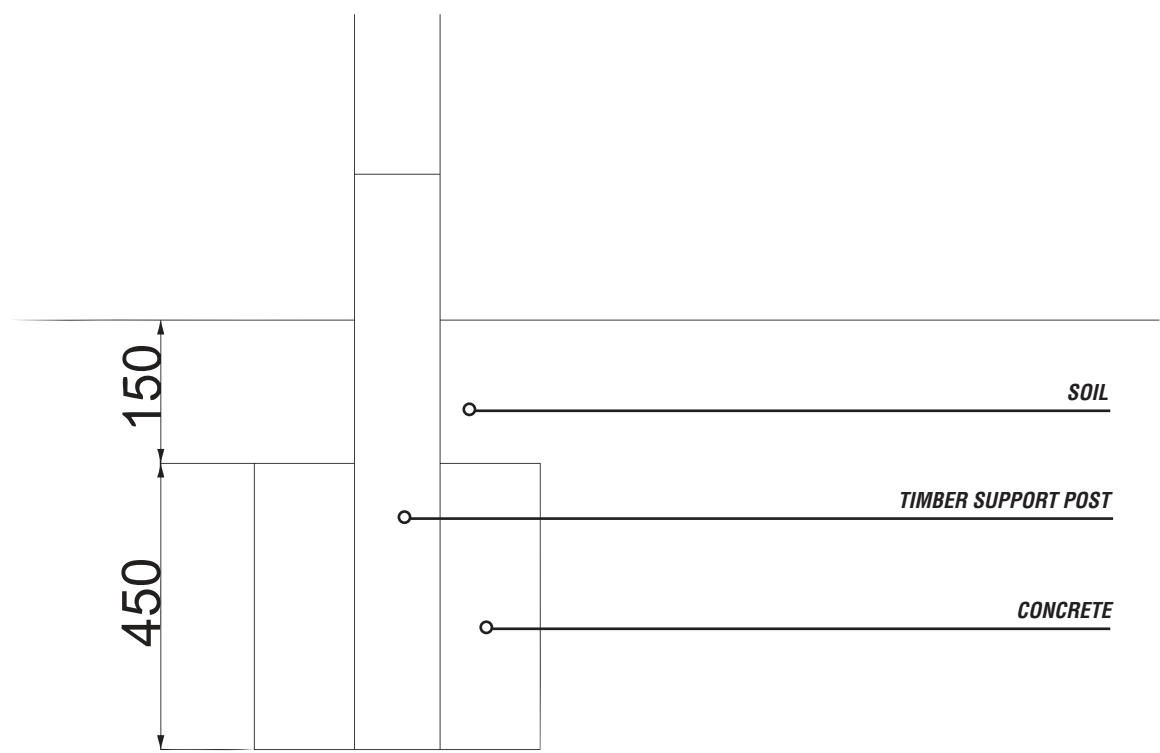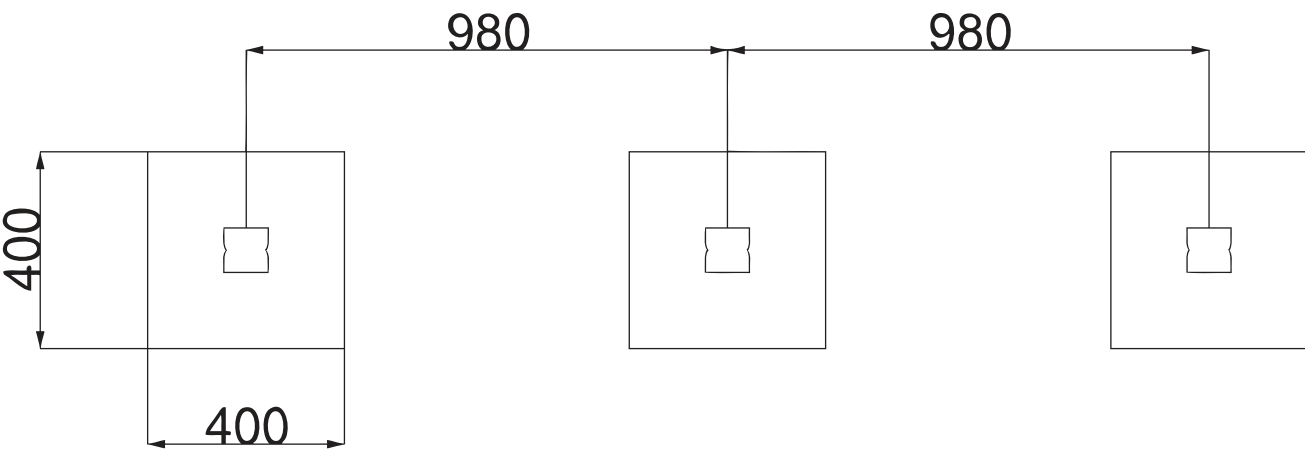

# Assembly Instructions

**1**

**Follow foundation details**  
**If not pre-assembled see additional dimensions below**

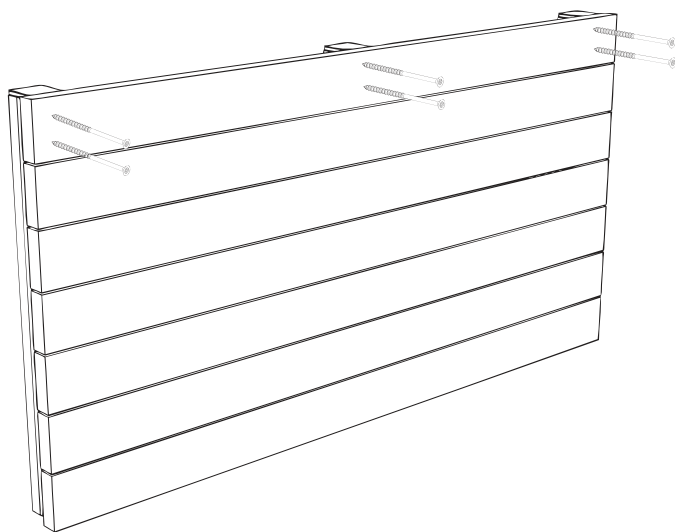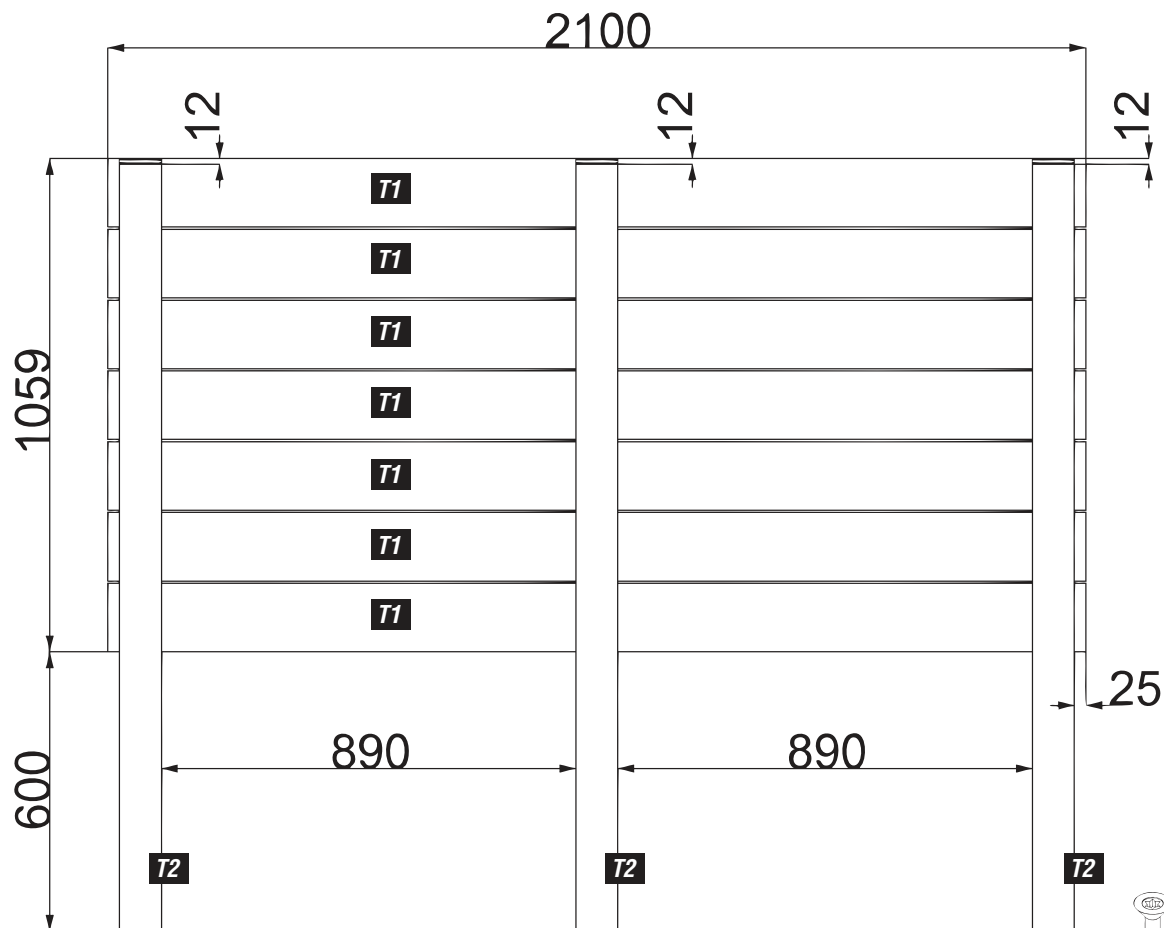

**x42** (120mm brass screws)



**T2 timbers are positioned 12mm BELOW the top T1 timber - This means the PLAYTEC END CAP is flush with the top edge**

**Install the T1 timbers working from the TOP**  
**5mm GAP BETWEEN T1 TIMBERS**