


# **WEAVING PANEL**


## ***Assembly Instructions***

**creative  
play**

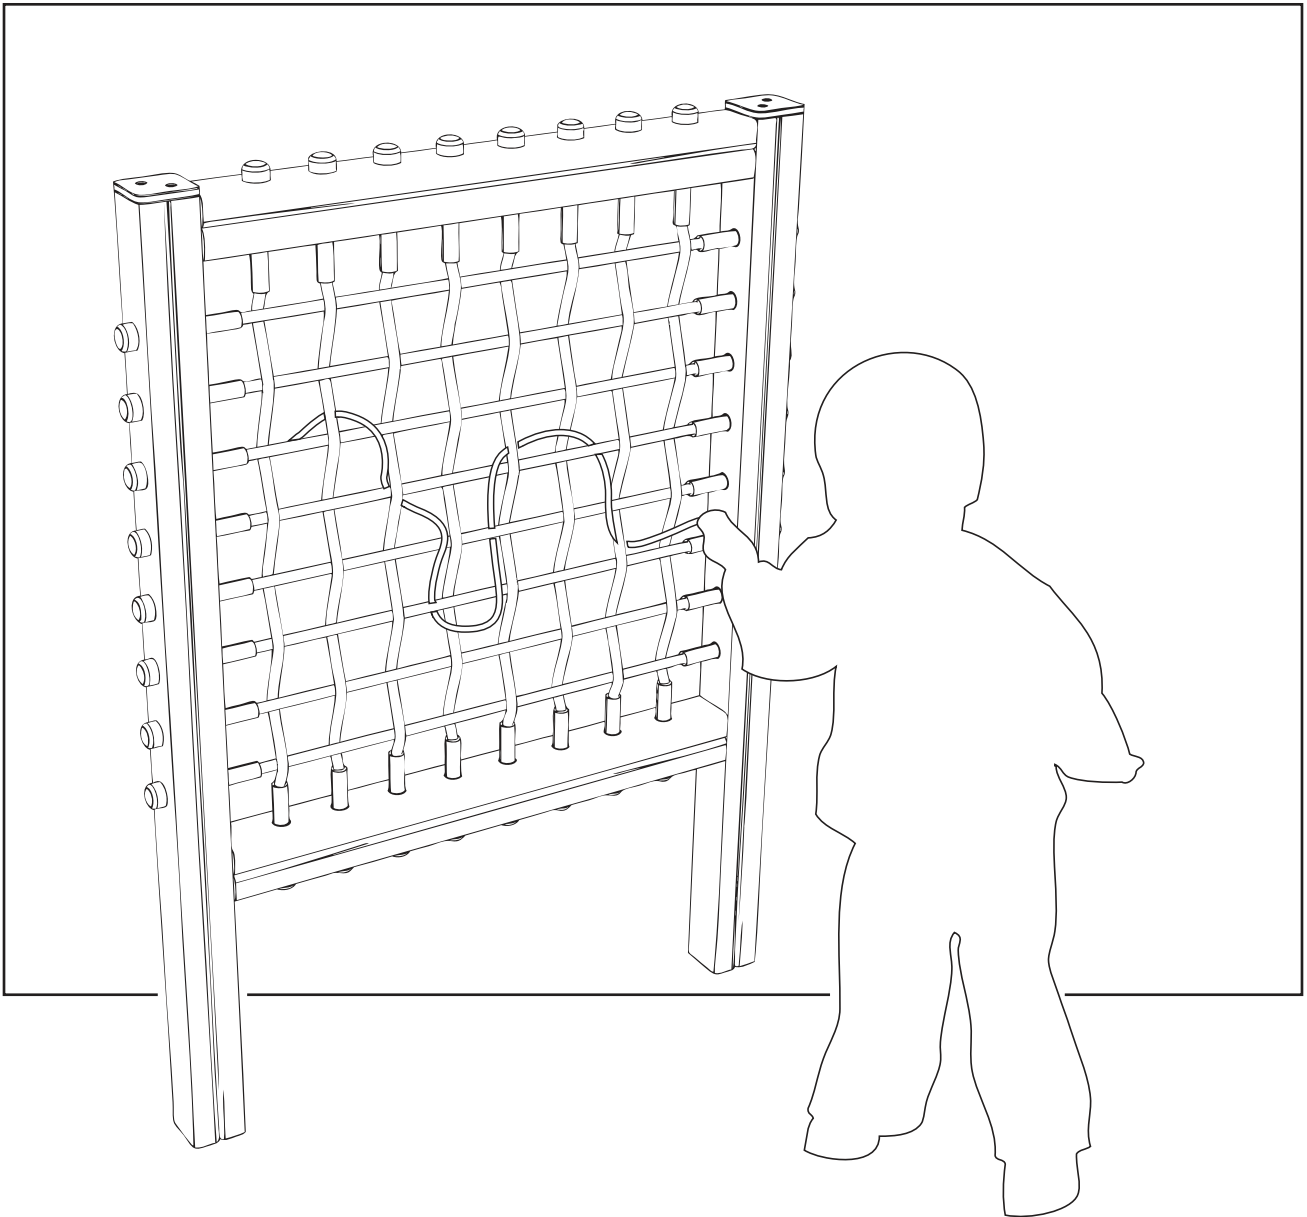

# ***PARTS required***



---

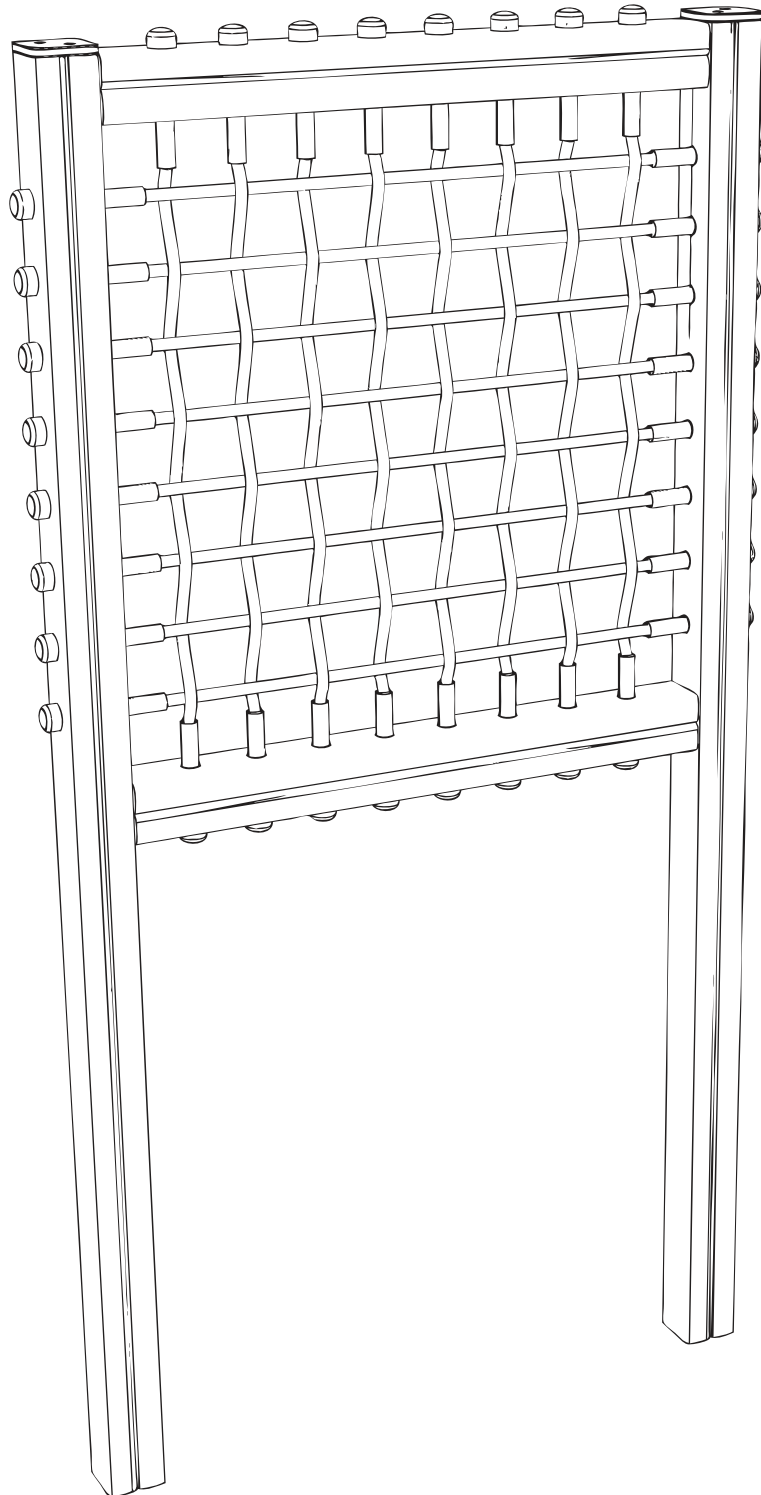

***x1 Assembly***  
*(consists of timber frame and ROPES)*

# Foundation Details


---

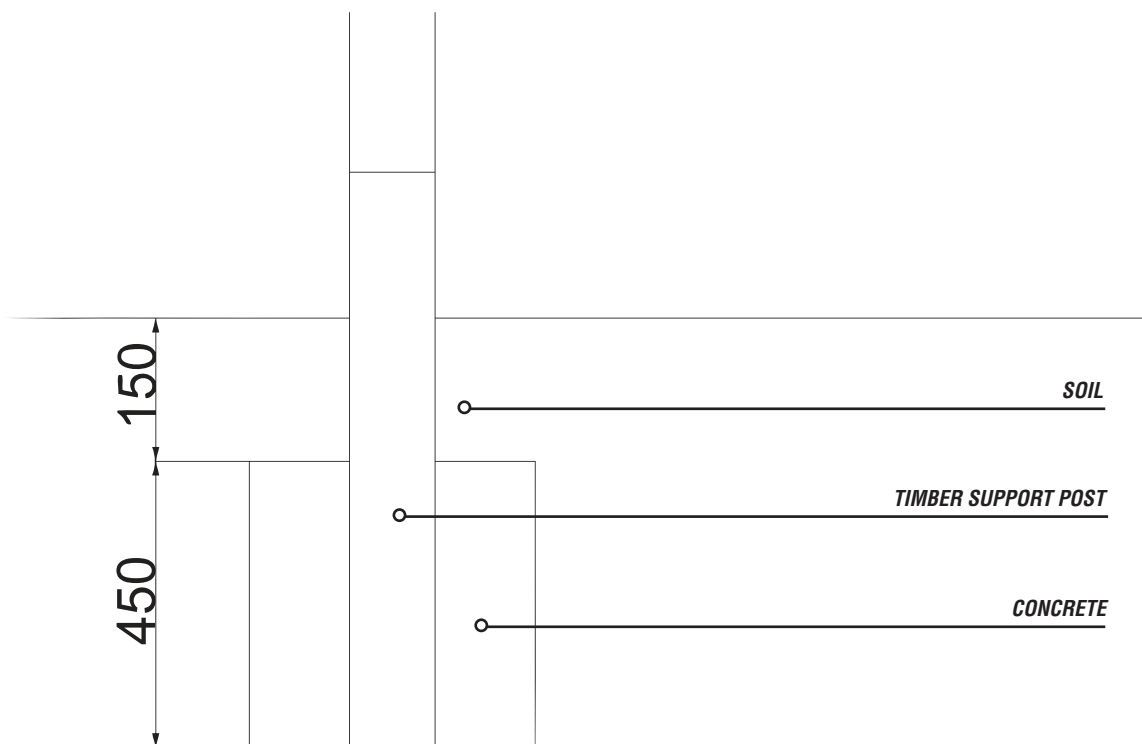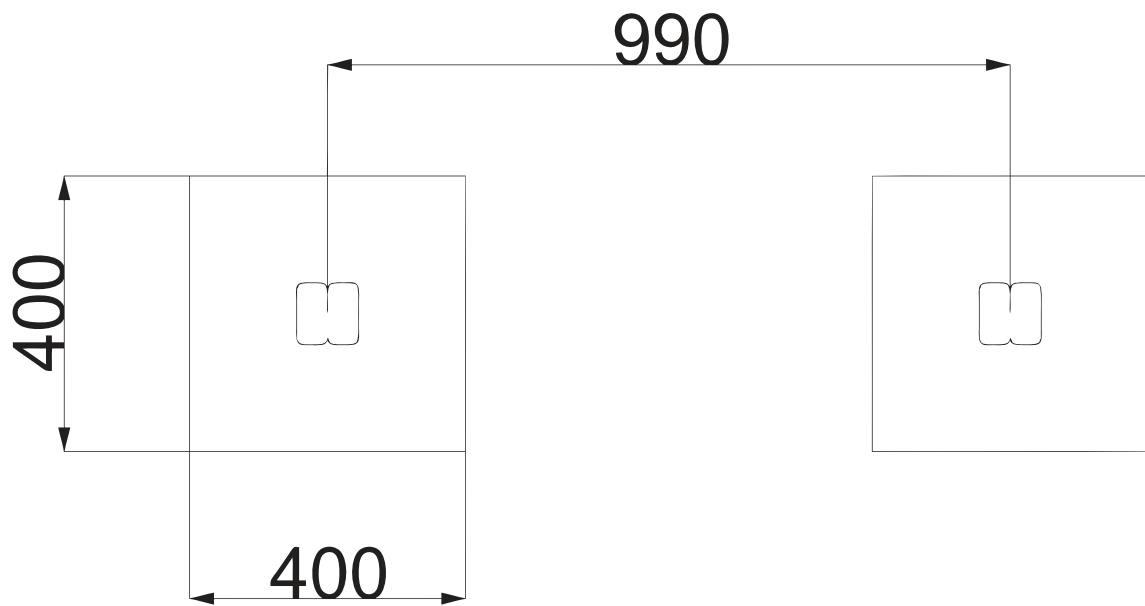

# Assembly Instructions

**1**

**Follow foundation details  
If not pre-assembled see additional details below**

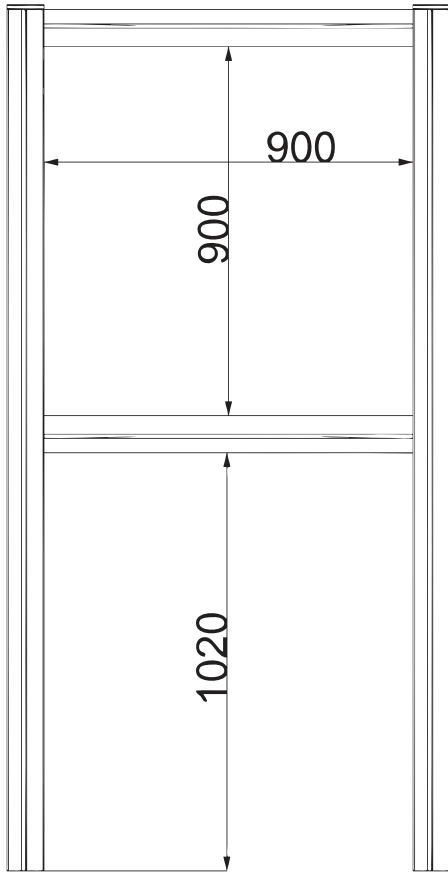

**x8** (120mm brass screws)

## ASSEMBLY

1 - Attach the T1 and T2 timbers together to create the frame  
(side view shows HOLE LOCATIONS)

2 - Attach the 8 x HORIZONTAL ROPES **R1H** FIG.1

\*ENSURE THESE ROPES ARE ABSOLUTELY TAUT / TIGHT

3 - Attach the 1st VERTICAL ROPE **R2V**

\*ENSURE THESE ROPES ARE ABSOLUTELY TAUT / TIGHT

The vertical rope 'WEAVES' in and out of the the HORIZONTAL ROPES see FIG.2

