


PICNIC BENCH


Installation Instructions

**creative
play**

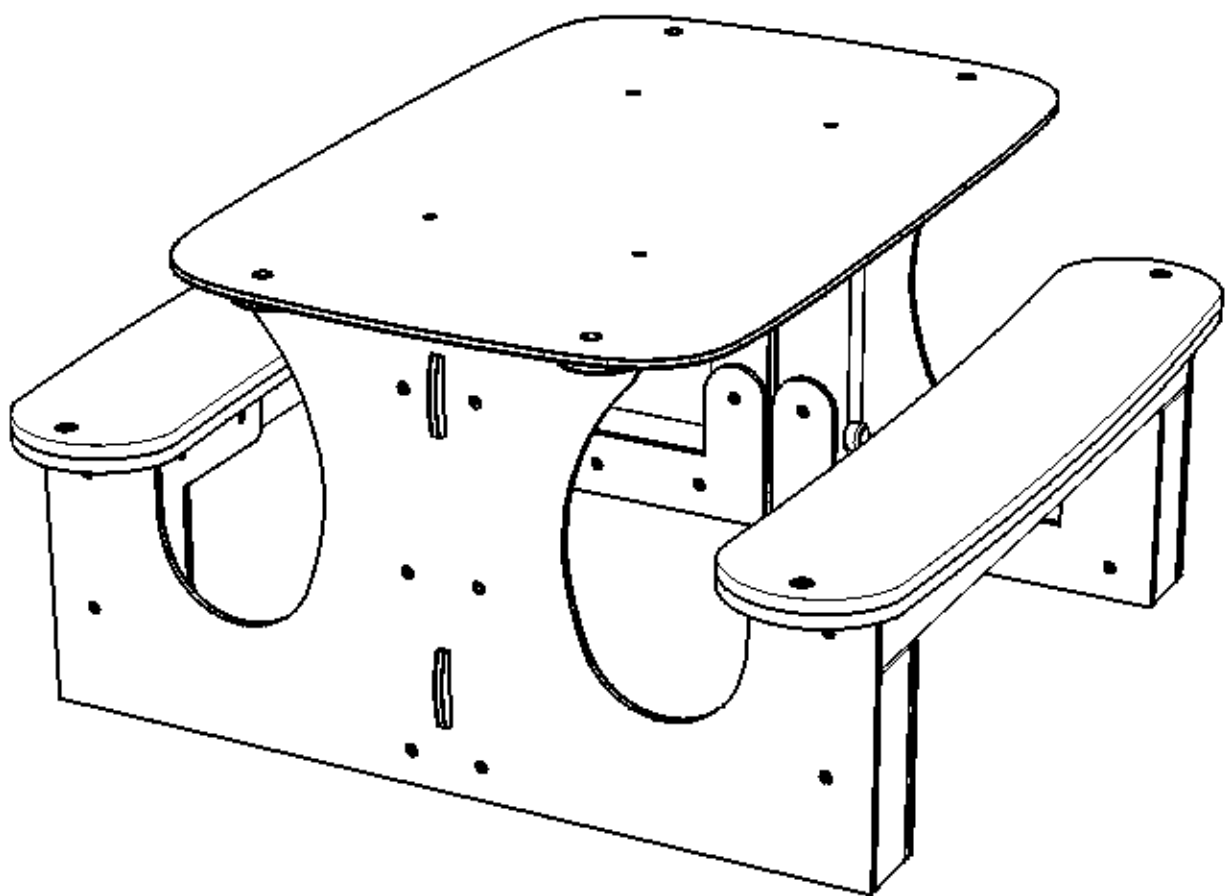

Parts required

TIMBERS

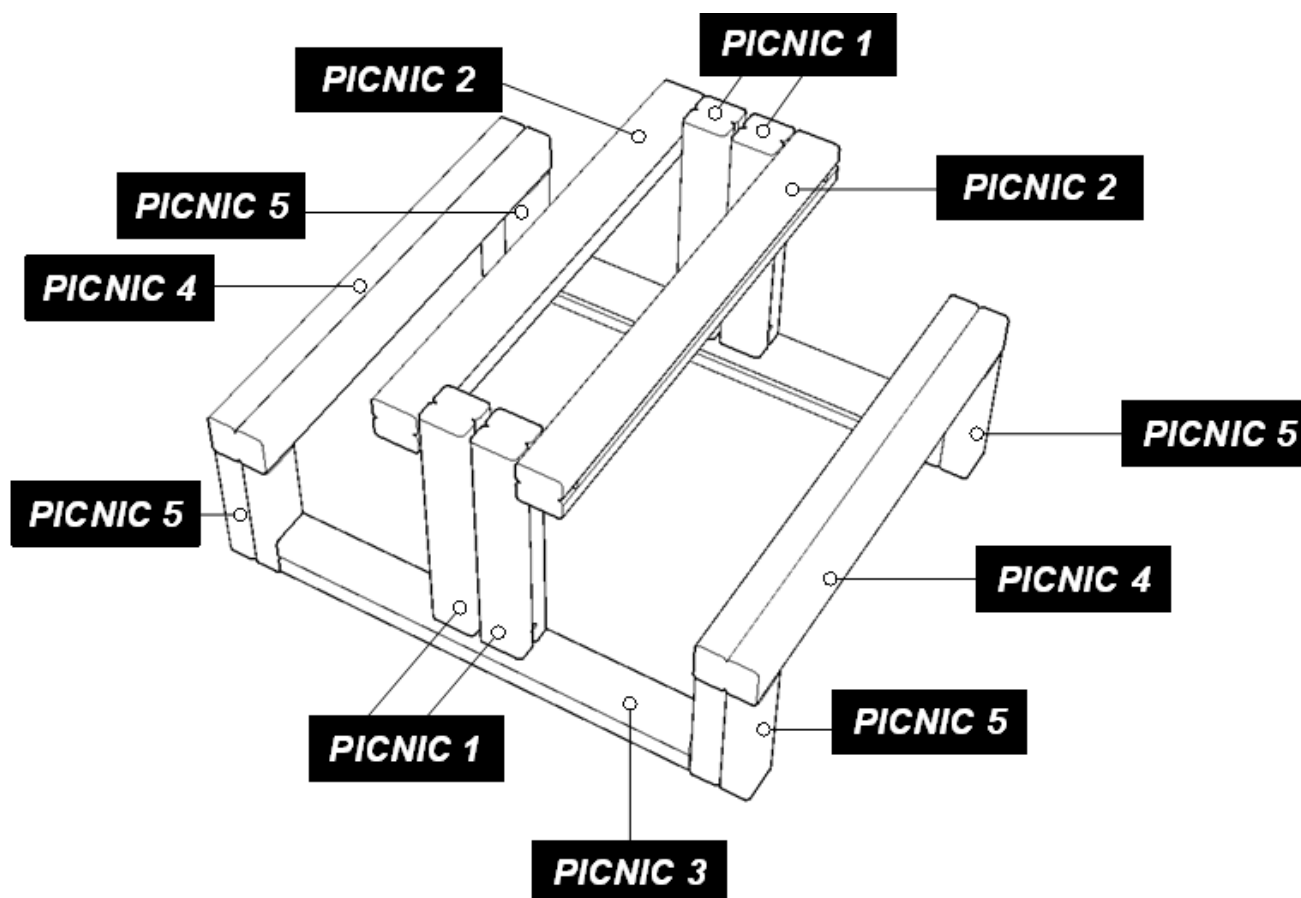

PICNIC 1 QTY x 4
(90mm x 90mm) 525mm


PICNIC 2 QTY x 2
(90mm x 90mm) 972mm

PICNIC 3 QTY x 2
(90mm x 90mm) 880mm


PICNIC 4 QTY x 2
(120mm x 90mm) 972mm

PICNIC 5 QTY x 2
(120mm x 90mm) 275mm


Parts required

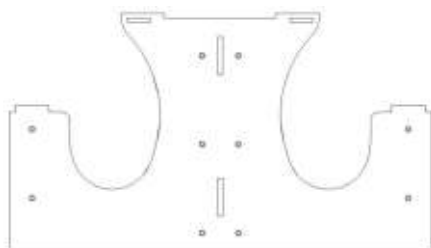

x2 (PLAYTEC PICNIC SIDES)

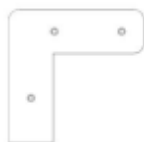


x2 (PLAYTEC 'L' LEFT)

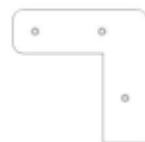


x2 (PLAYTEC 'L' RIGHT)



x2 (HEXBOARD SIT 'A')



x2 (HEXBOARD SIT 'B')

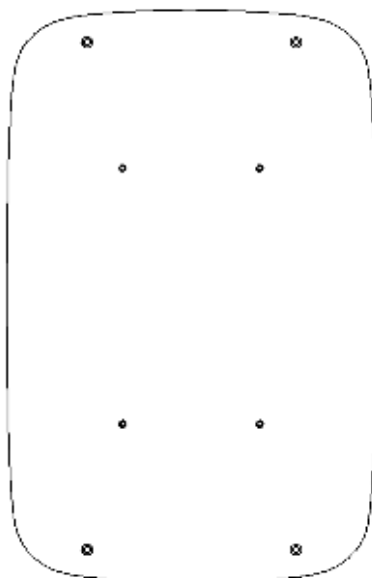


x1 (PLAYTEC TOP 'B')




x2 (PLAYTEC 'U' LEFT)



x2 (PLAYTEC 'U' RIGHT)

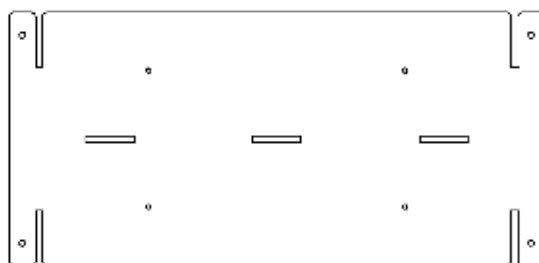

x1 (PLAYTEC TOP 'A')

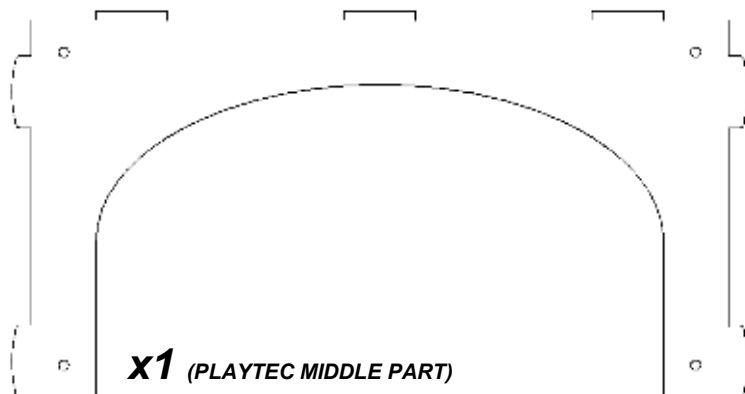

x1 (PLAYTEC MIDDLE PART)



x4 (PLAYTEC 'T' PART)

Parts required



x60 (FM80 'BRASS SCREW')



x2 (M12 x 200 square cup hex bolt)



x6 (M12 NYLOC)



x6 (end caps)



x2 (400 THREAD BAR)



x8 (TORK TAINERS)
4 x 12/12/12
4 x 18/18

TOOLS required




Foundation details

Assembly instructions

1

Attach Playtec MIDDLE piece to the TIMBERS (PICNIC1,PICNIC2)


Using M12 CUP SQUARE BOLTS/THREAD BAR / NYLOCS / END CAPS

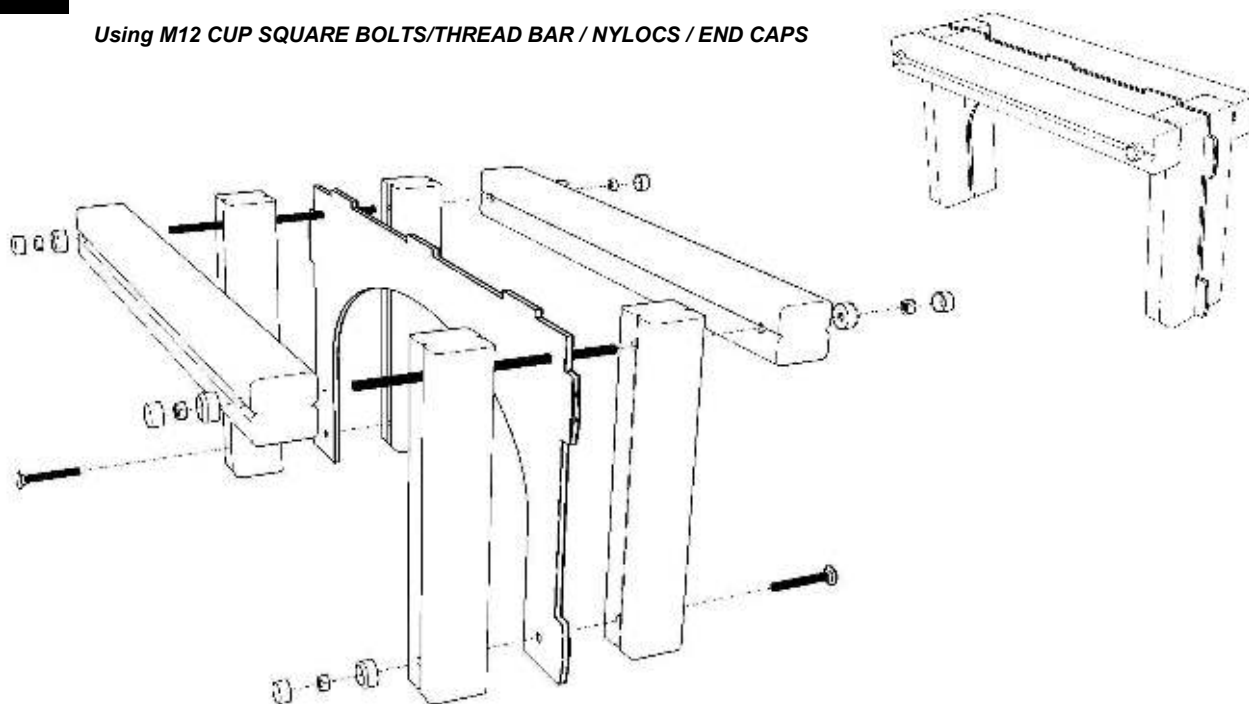

2

Attach Playtec 'U' left/right both sides to the TIMBERS (PICNIC1,PICNIC3,PICNIC5)

Using FM80 BRASS SCREWS

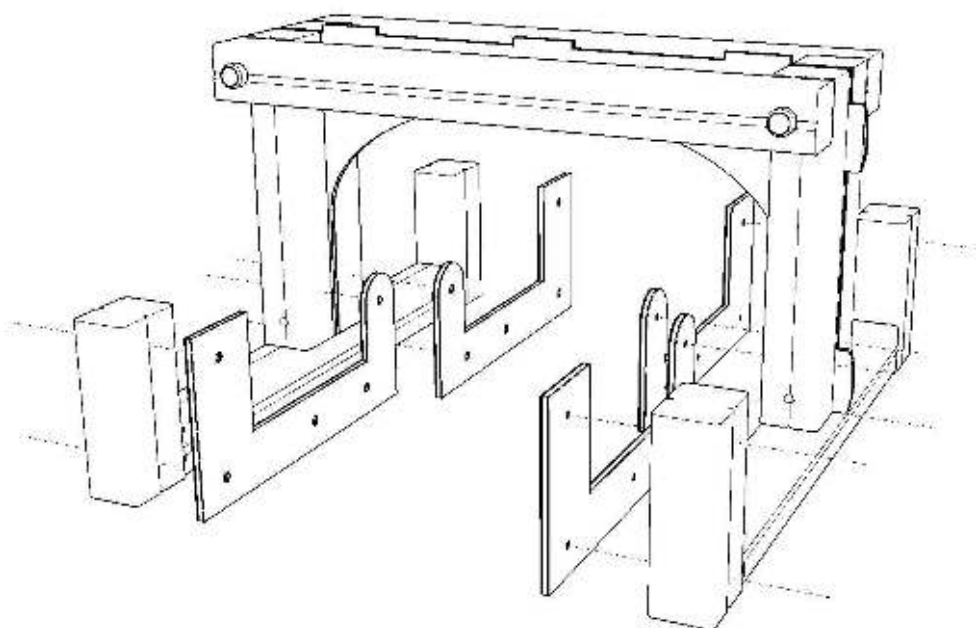


Assembly instructions

3

Attach Playtec 'L' left/right both sides to the TIMBERS (PICNIC4,PICNIC5)


Using FM80 BRASS SCREWS

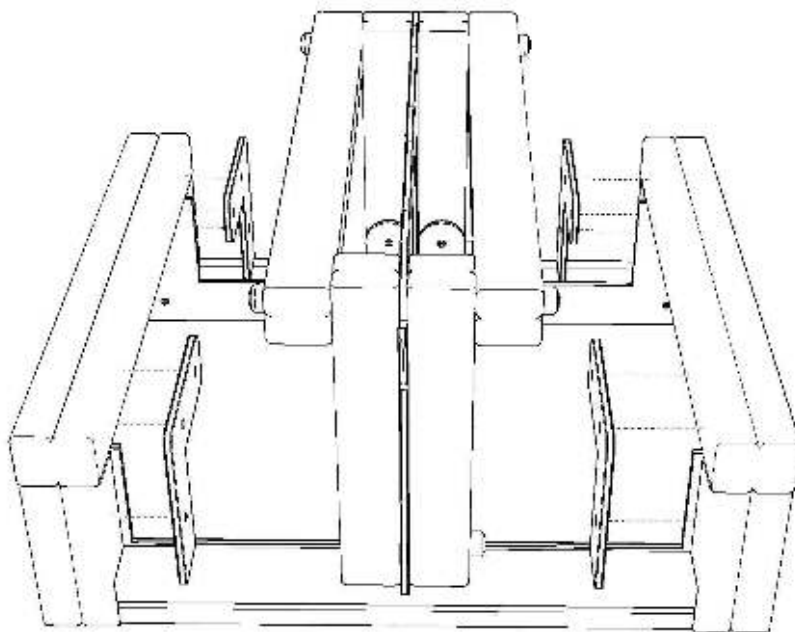

4

Attach Playtec Picnic SIDES to the TIMBERS (PICNIC1,PICNIC3,PICNIC4,PICNIC5)

Using FM80 BRASS SCREWS

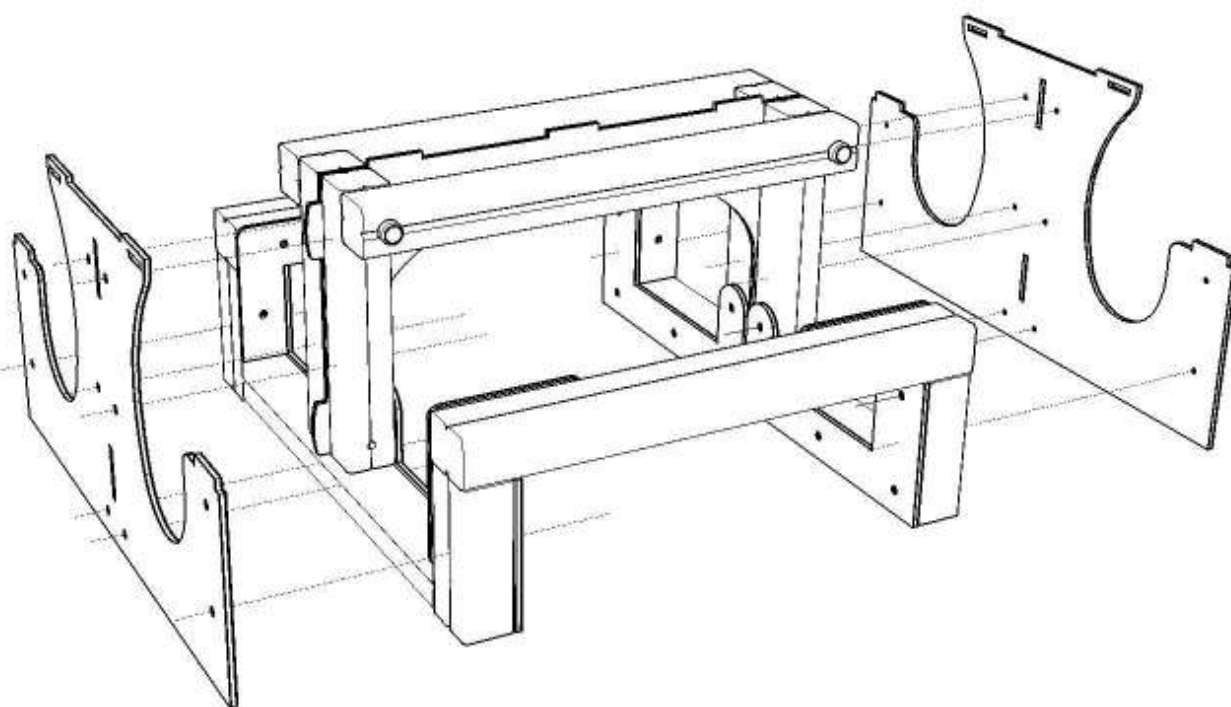


Assembly instructions

5

Attach Playtec TOP 'A' and 'B' to the TIMBER (PICNIC2)


Using FM80 BRASS SCREWS

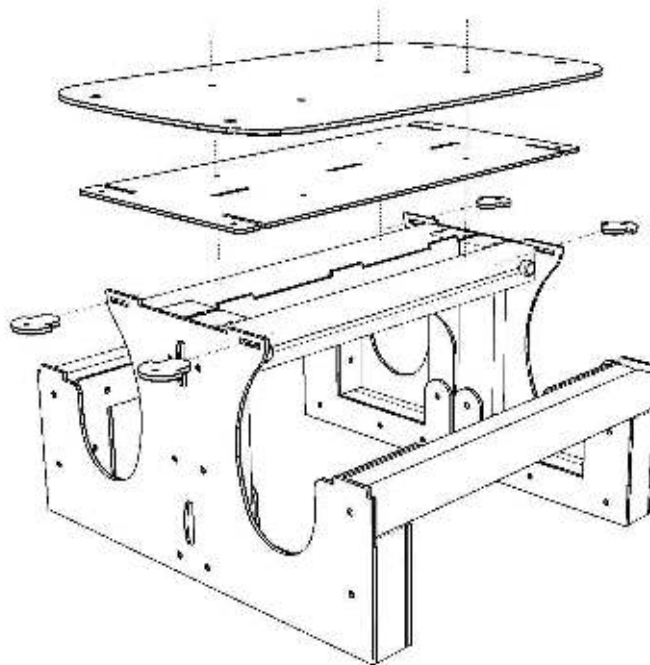

6

Attach Playtecs TOP 'A' , 'B' and 'T' piece

Using TORKTAINERS

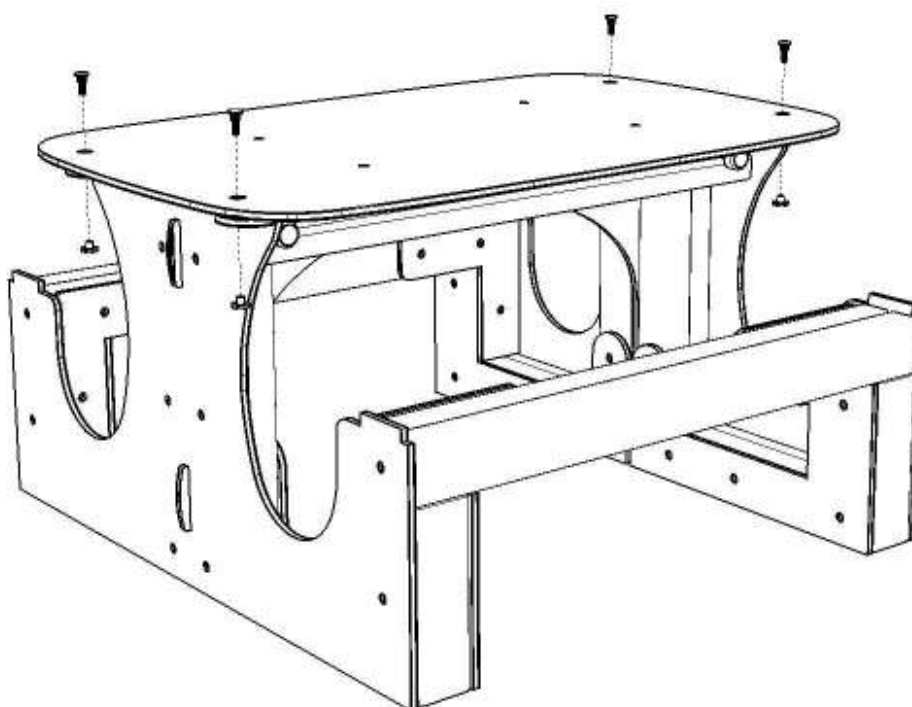


Assembly instructions

7

Attach Hexboard SIT 'A' and 'B' to the TIMBER (PICNIC4)


Using FM80 BRASS SCREWS

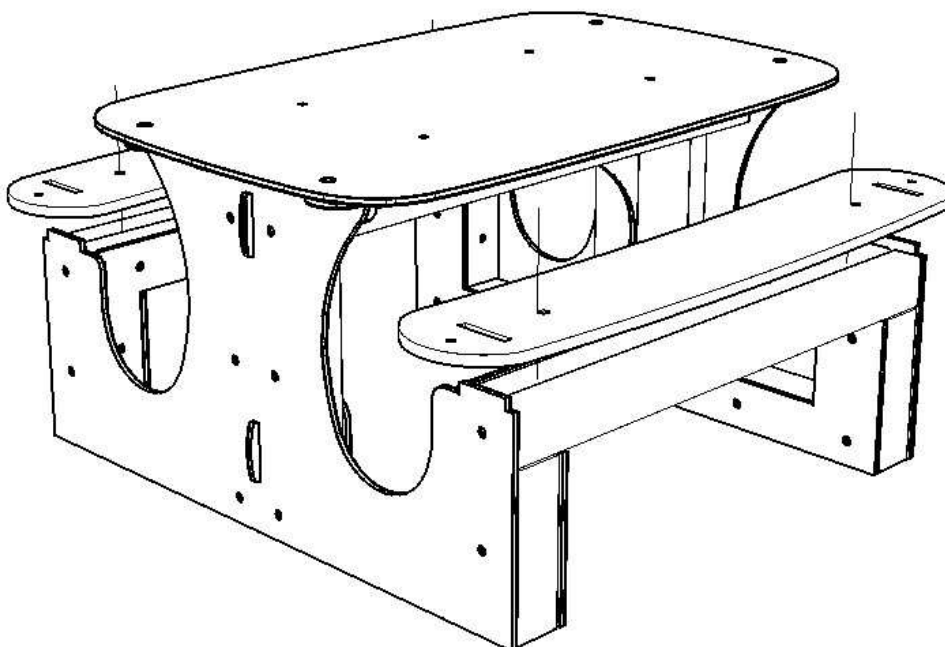


8

Attach Attach Hexboard SIT 'A' to SIT'B'


Using TORKTAINERS and BRASS SCREW

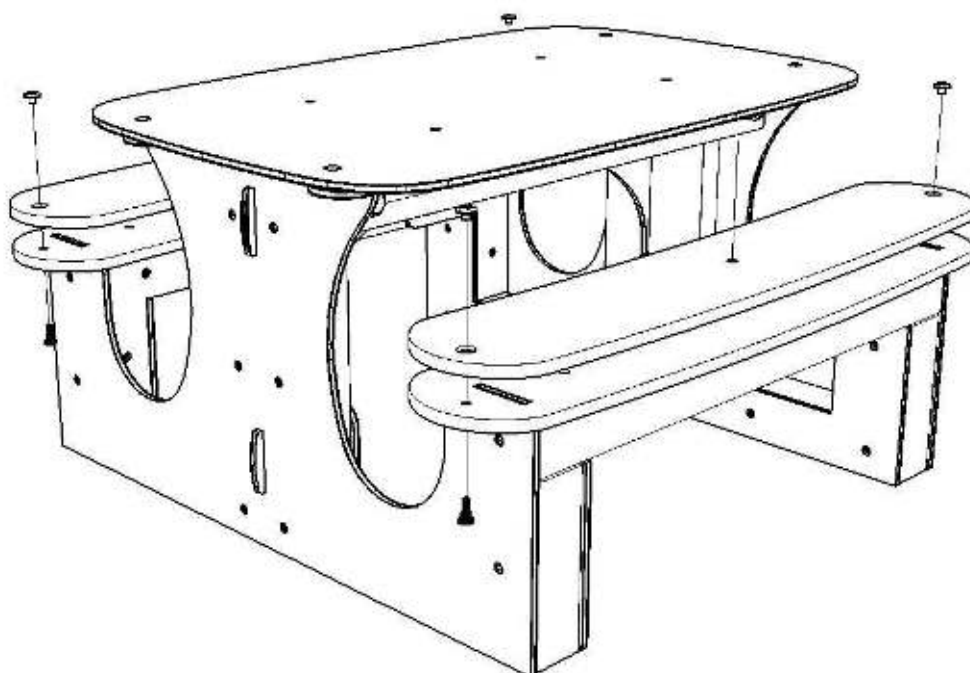

PARTS REQUIRED (GAMES TOP)

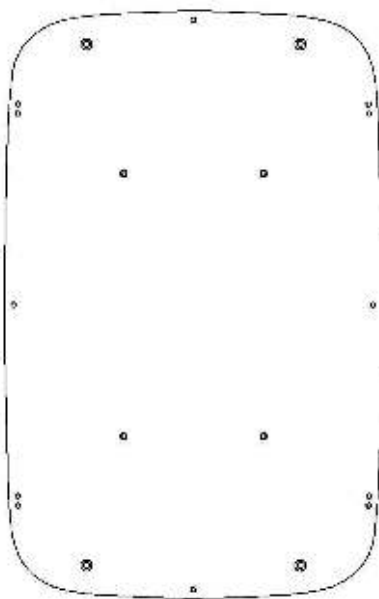

x1 (PLAYTEC TOP 'C')

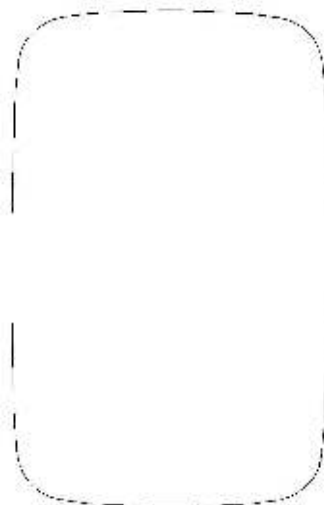


x1 (PERSPEX)

Assembly instructions (GAMES TOP)


1

Attach Playtec top SIDES and Perspex to the PLAYTEC TOP 'C'

Using M8 SOCKET BUTTON BOLT AND NUT

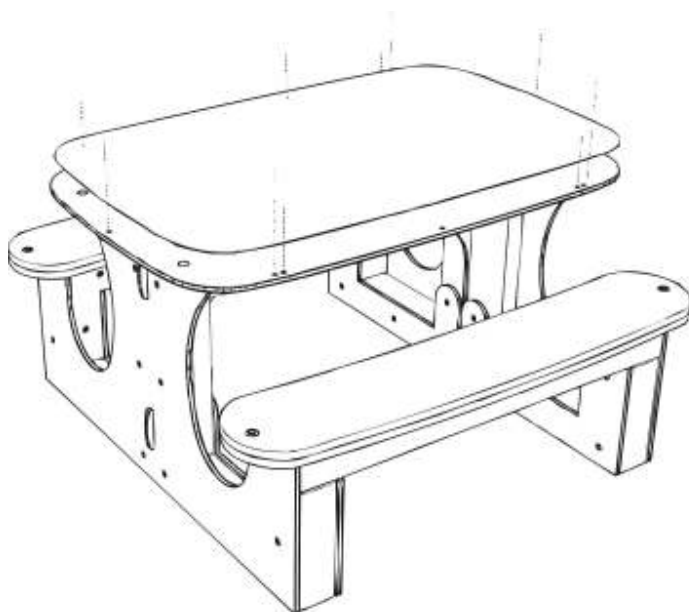

x12
(M8 x 30 socket button bolt)

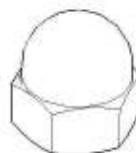

x12
(M8 ACORN NUT)

Additional dimensions

