


# ***WHEELCHAIR PICNIC BENCH***


## ***Installation Instructions***

**creative  
play**

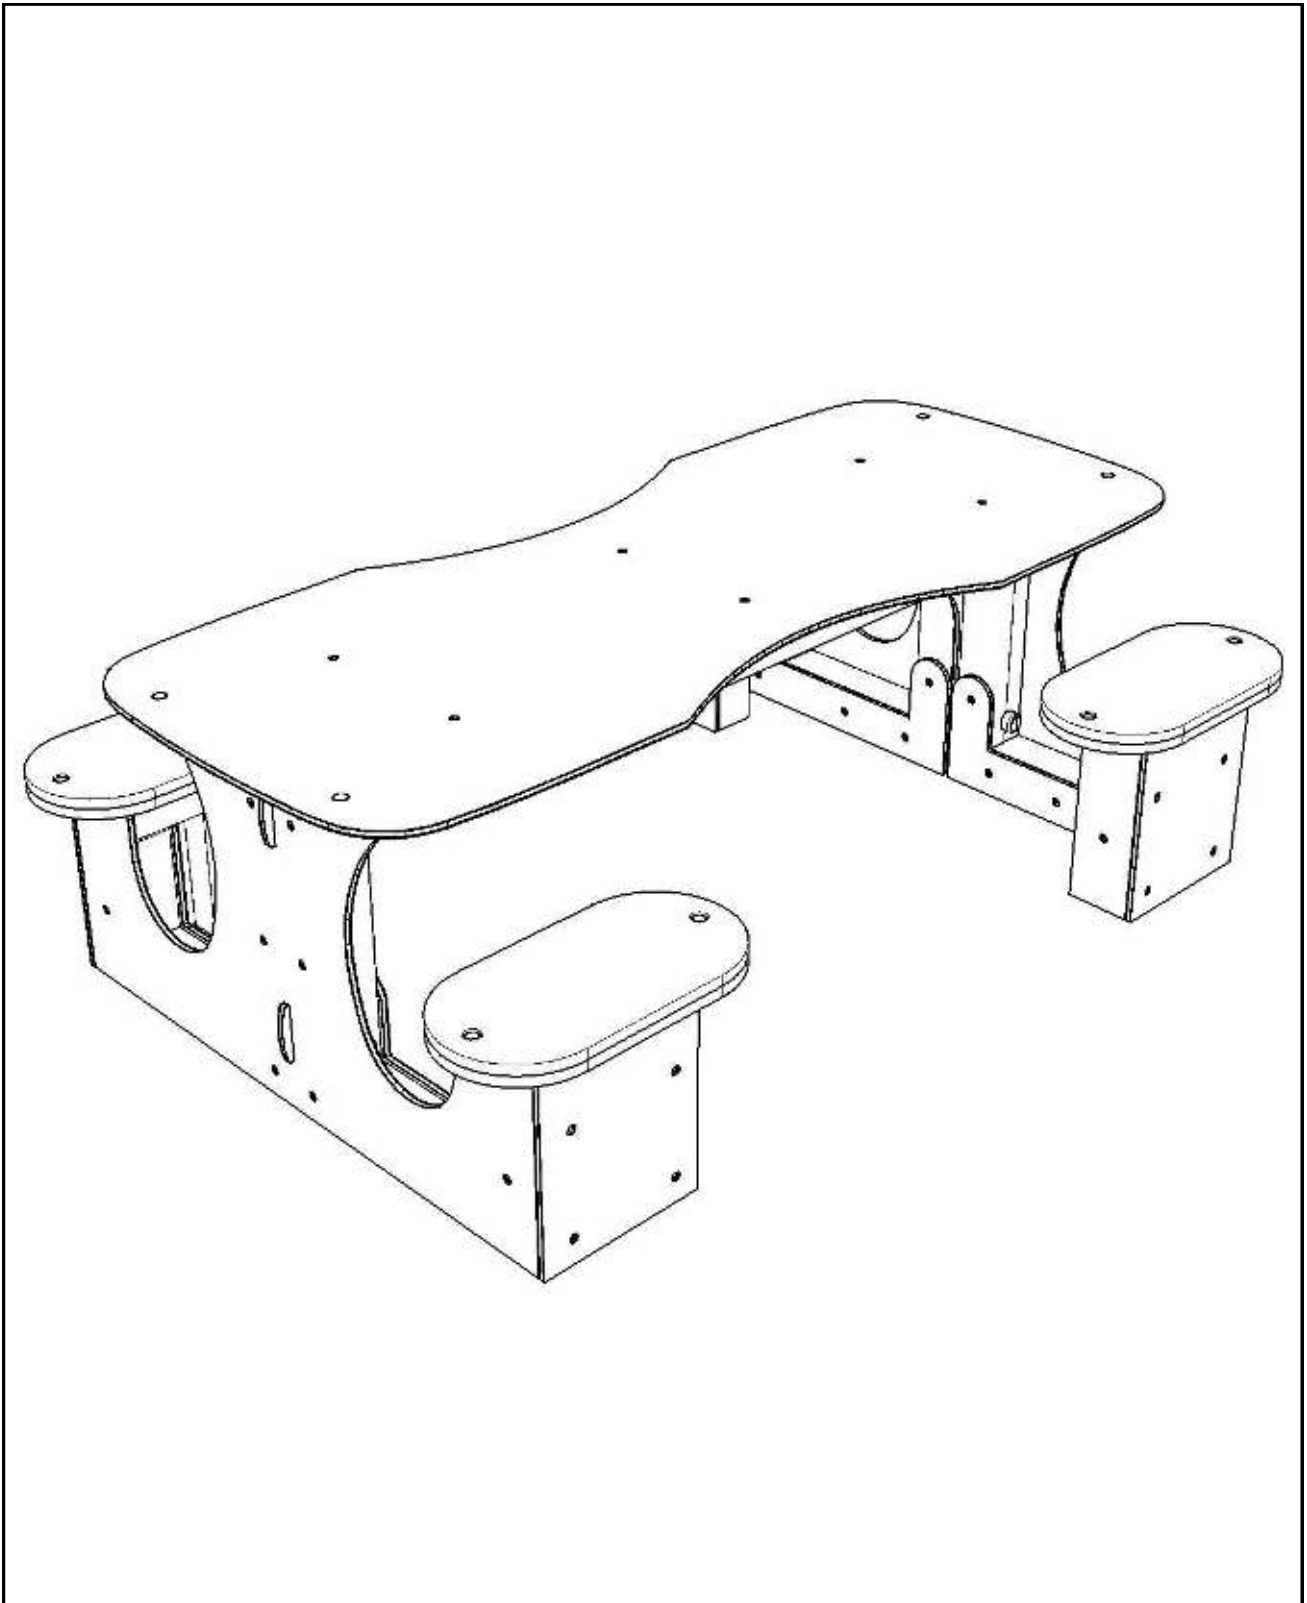

# Parts required

## TIMBERS

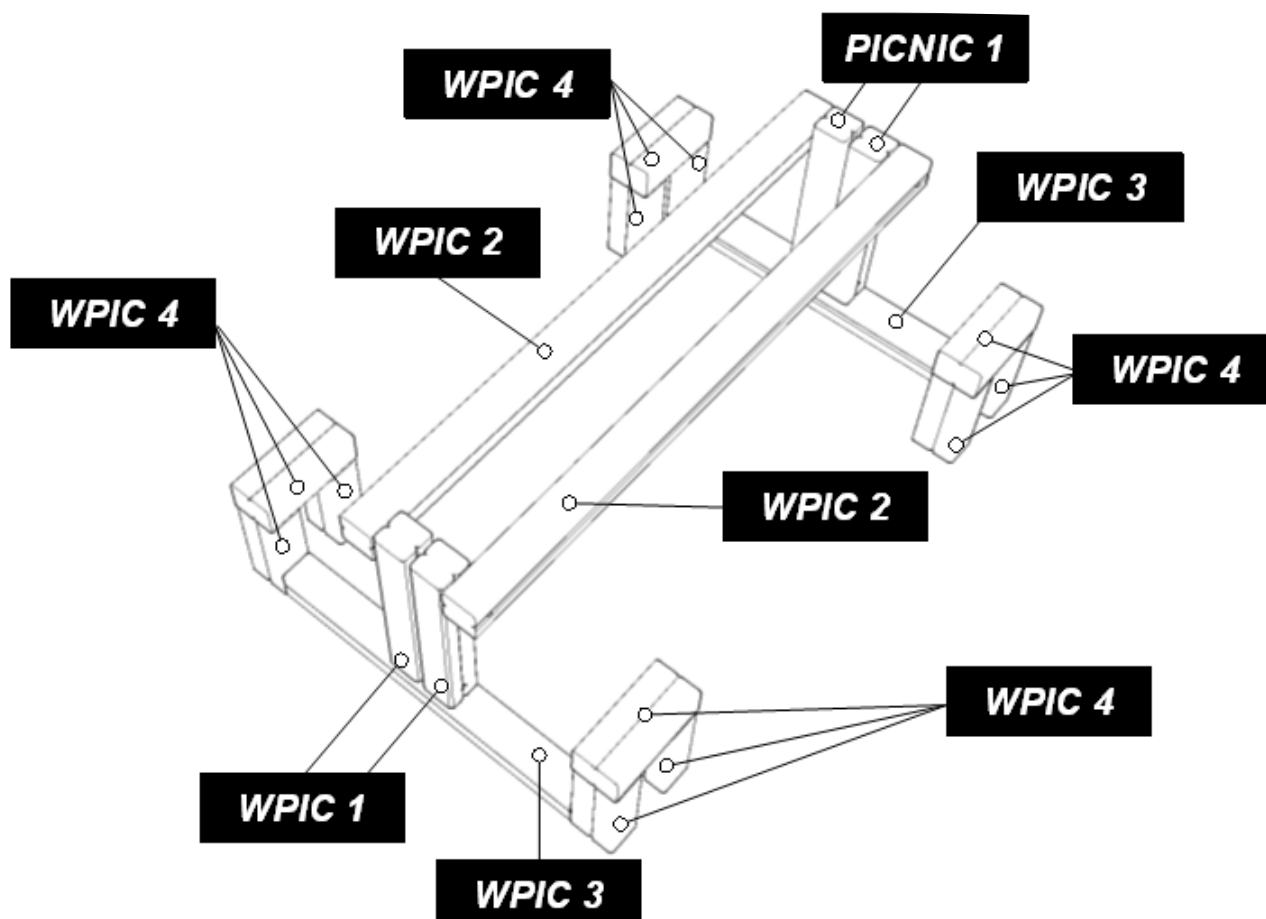


**WPIC 1** QTY x 4  
(90mm x 90mm) 525mm

**WPIC 2** QTY x 2  
(90mm x 90mm) 1632mm

**WPIC 3** QTY x 2  
(90mm x 90mm) 880mm

**WPIC 4** QTY x 12  
(120mm x 90mm) 275mm


# Parts required

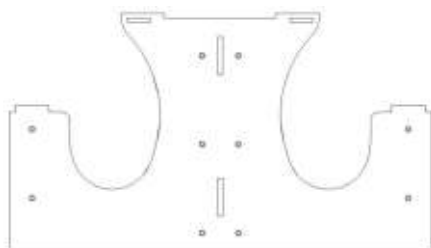


**x2** (PLAYTEC PICNIC SIDES)



**x4** (PLAYTEC INT SIDES)

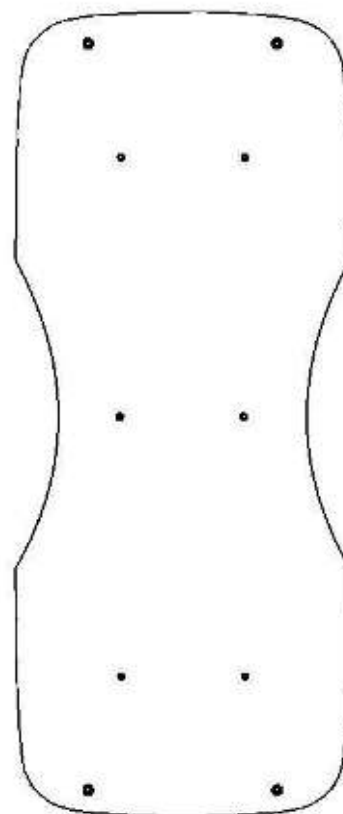

**x1** (PLAYTEC TOP 'B')

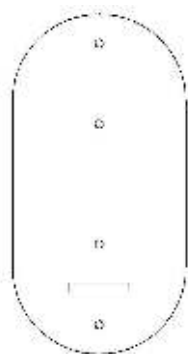

**x4** (HEXBOARD SIT 'A')




**x4** (HEXBOARD SIT 'B')



**x2** (PLAYTEC 'U' LEFT)




**x2** (PLAYTEC 'U' RIGHT)

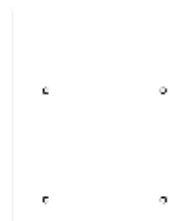


**x4** (PLAYTEC COVER)



**x4** (PLAYTEC 'T' PART)

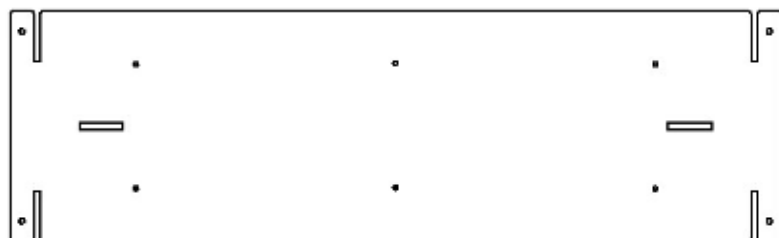

**x1** (PLAYTEC TOP 'A')

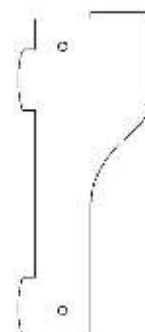

**x2** (PLAYTEC MIDDLE PART)

## Parts required

---



**x78** (FM80 'BRASS SCREW')



**x2** (M12 x 200 square cup hex bolt)



**x6** (M12 NYLOC)



**x6** (end caps)



**x2** (400 THREAD BAR)



**x12** (TORK TAINERS)  
4 x 12/12/12  
8x 18/18

## TOOLS required


---



## **NOTES:**

*Use this block to add additional note....*

# **ANGLE CLEATS**

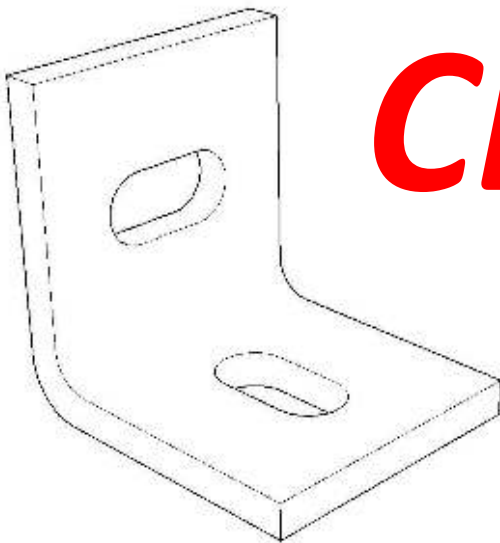


# Assembly instructions

---

**1**

**Attach Playtec MIDDLE piece to the TIMBERS (WPIC1,WPIC2)**


Using M12 CUP SQUARE BOLTS/THREAD BAR / NYLOCS / END CAPS

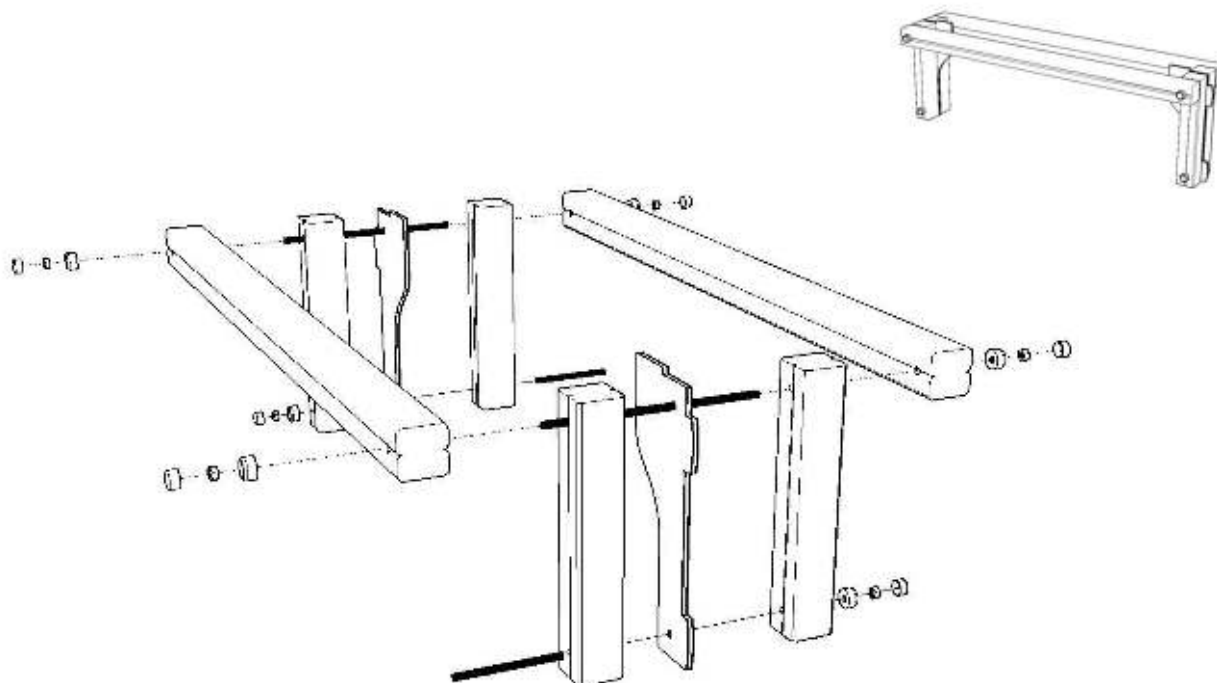

**2**

**Attach Playtec 'U' left/right both sides to the TIMBERS (WPIC1,WPIC3,WPIC4)**

Using FM80 BRASS SCREWS

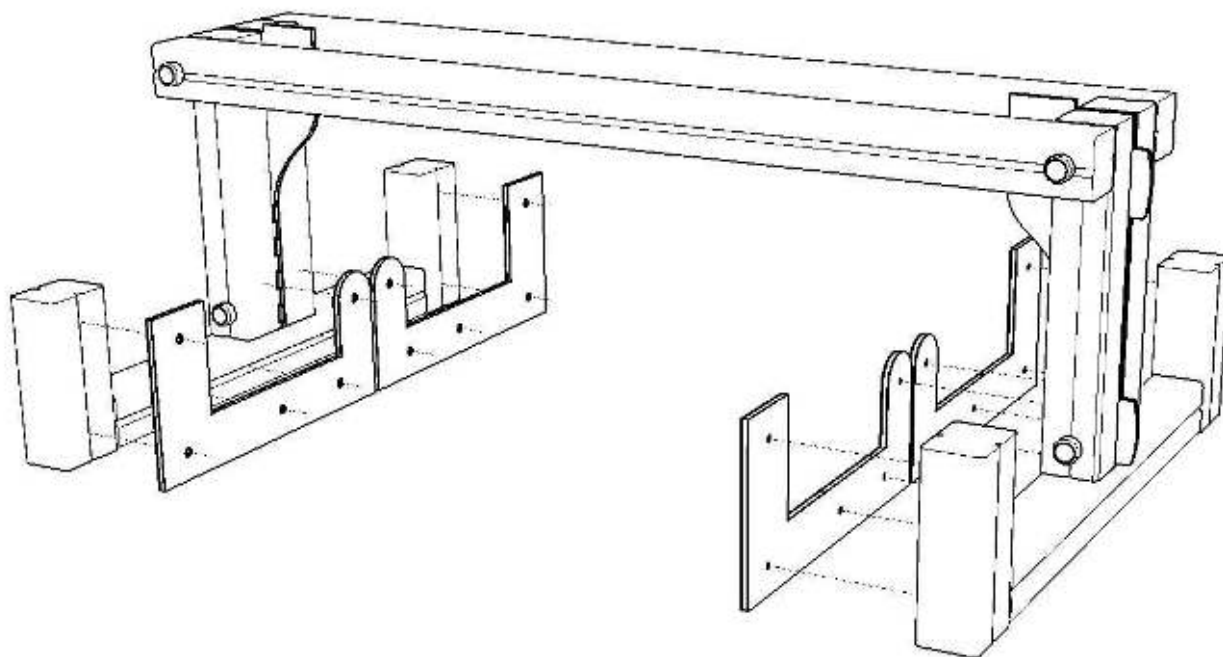


# Assembly instructions

---

**3**

**Attach Playtec INT SIDES and COVER to the TIMBERS (WPIC4)**


Using FM80 BRASS SCREWS

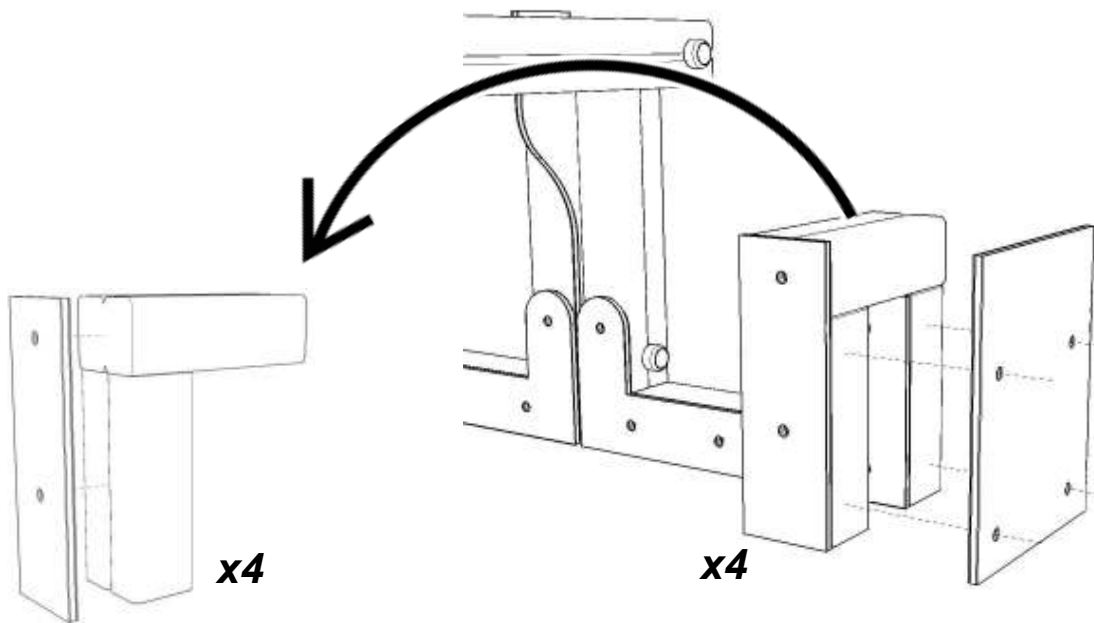

**4**

**Attach Playtec Picnic SIDES to the TIMBERS (WPIC1,WPIC3,WPIC4)**

Using FM80 BRASS SCREWS

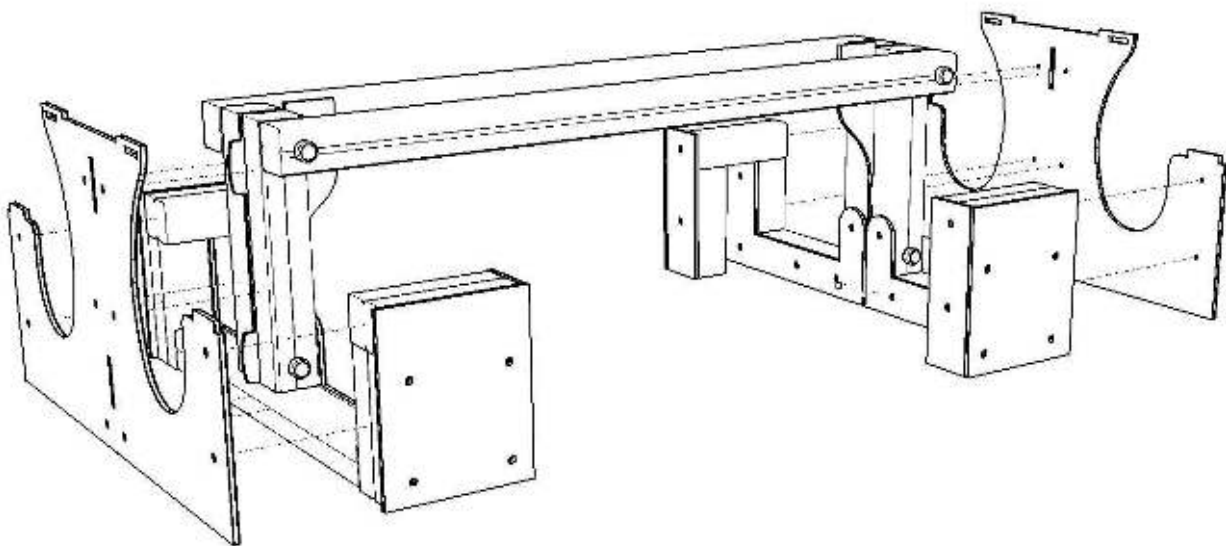


# Assembly instructions

---

**5**

**Attach Playtec TOP 'A' and 'B' to the TIMBER (PICNIC2)**


Using FM80 BRASS SCREWS

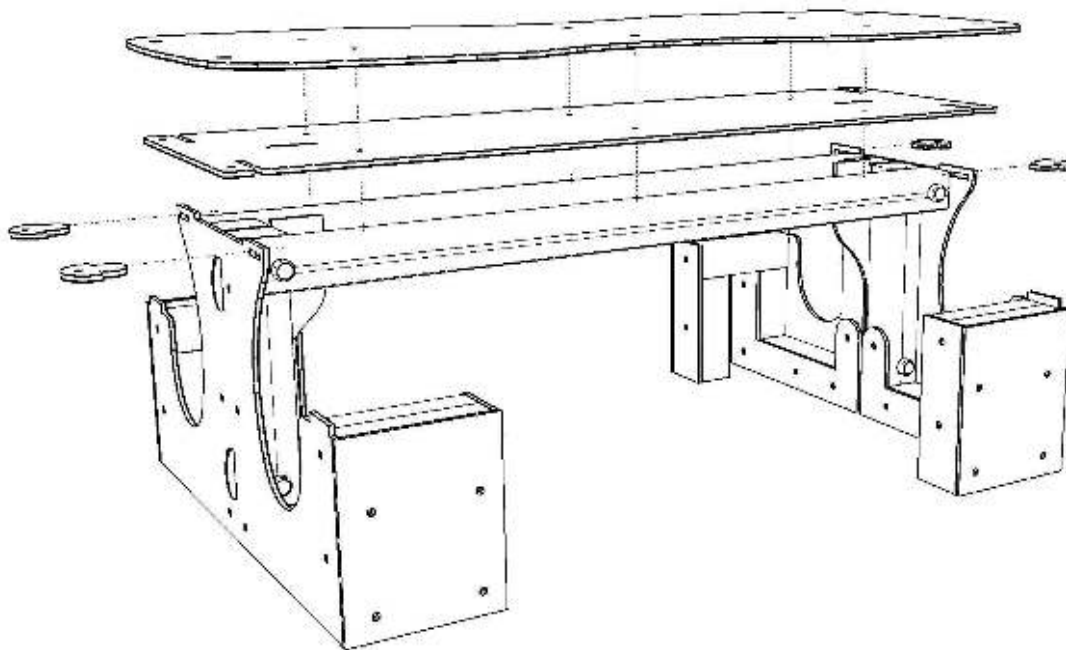

**6**

**Attach Playtecs TOP 'A' , 'B' and 'T' piece**

Using TORKTAINERS

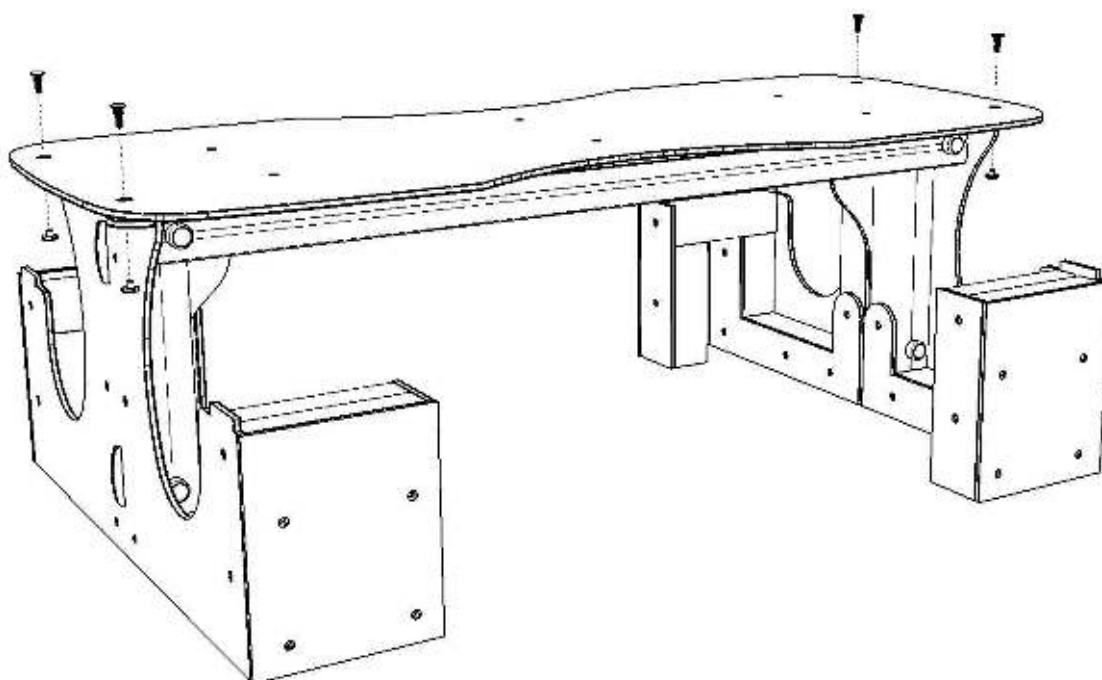




# Assembly instructions

---

**7**

**Attach Hexboard SIT 'A' and 'B' to the TIMBER (WPIC4)**


Using FM80 BRASS SCREWS

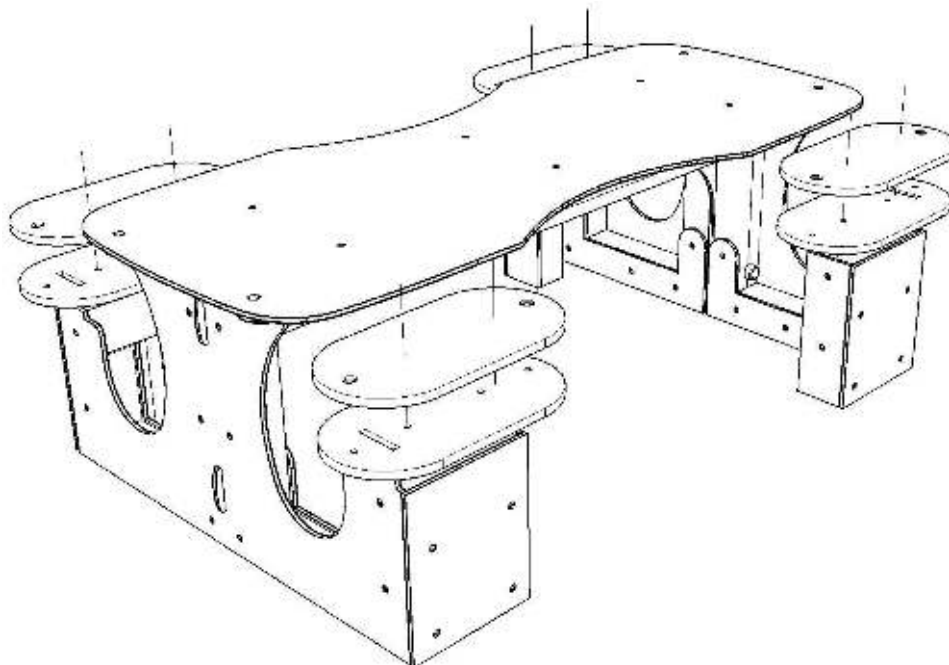


**8**

**Attach Attach Hexboard SIT 'A' to SIT'B'**


Using TORKTAINERS

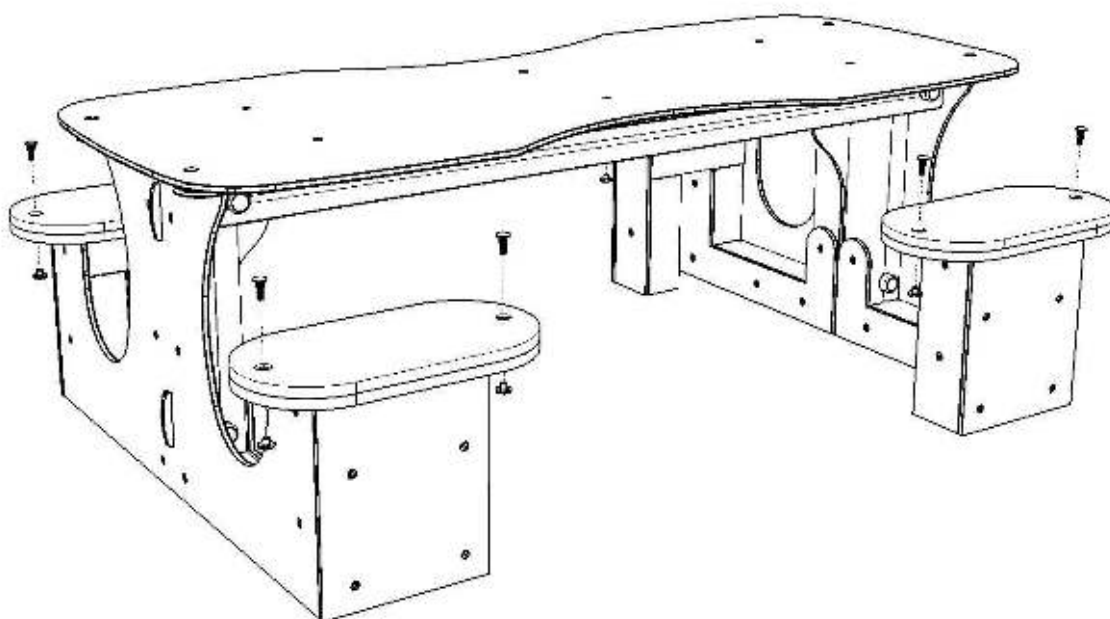


# PARTS REQUIRED (GAMES TOP)

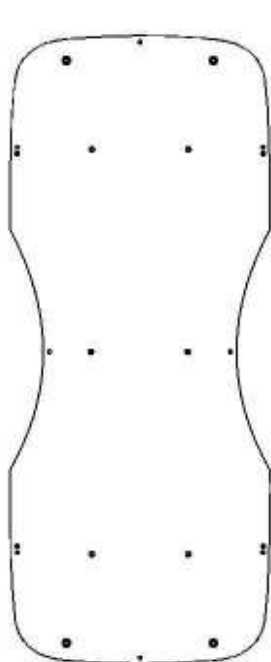

**x1** (PLAYTEC TOP 'C')

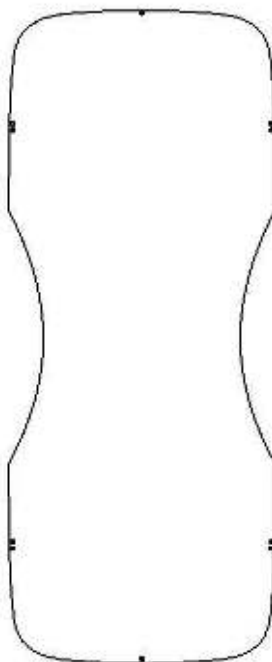

**x1** (PERSPEX)

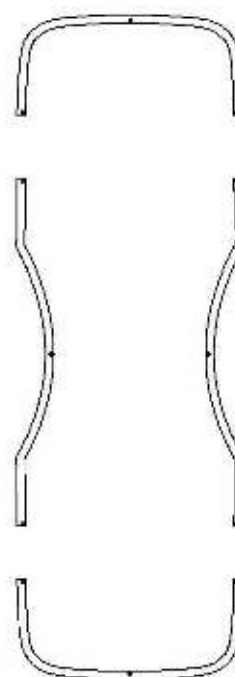


**x1** (TOP SIDES)

## Assembly instructions (GAMES TOP)

**1**

**Attach Playtec top SIDES and Perspex to the PLAYTEC TOP 'C'**

Using M8 BOLTS AND NUTS

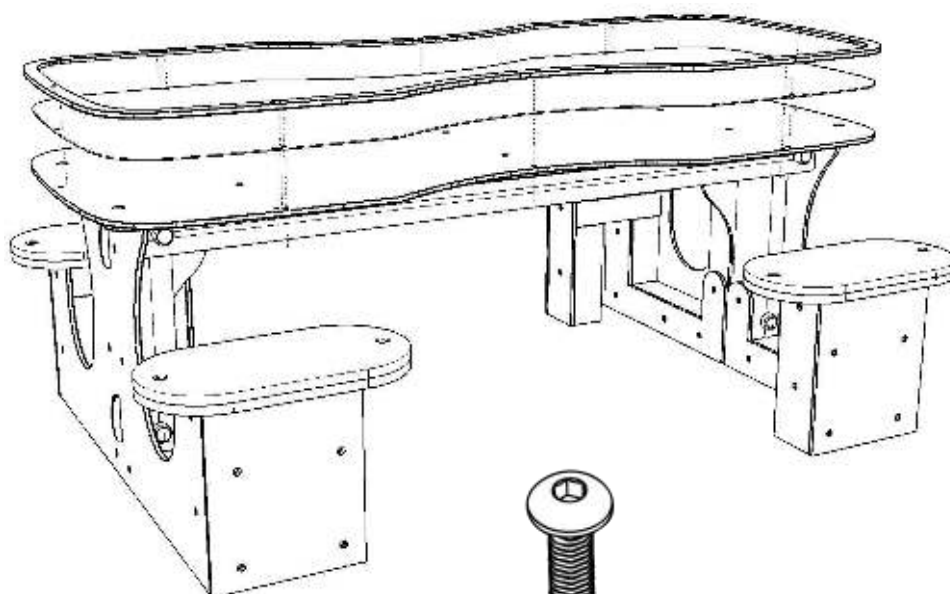

**x12**

(M8 x 30 socket button bolt)



**x12**

(M8 ACORN NUT)

# Additional dimensions

