









# **BASKET SWING**

## ***Installation Instructions***


**creative  
play**

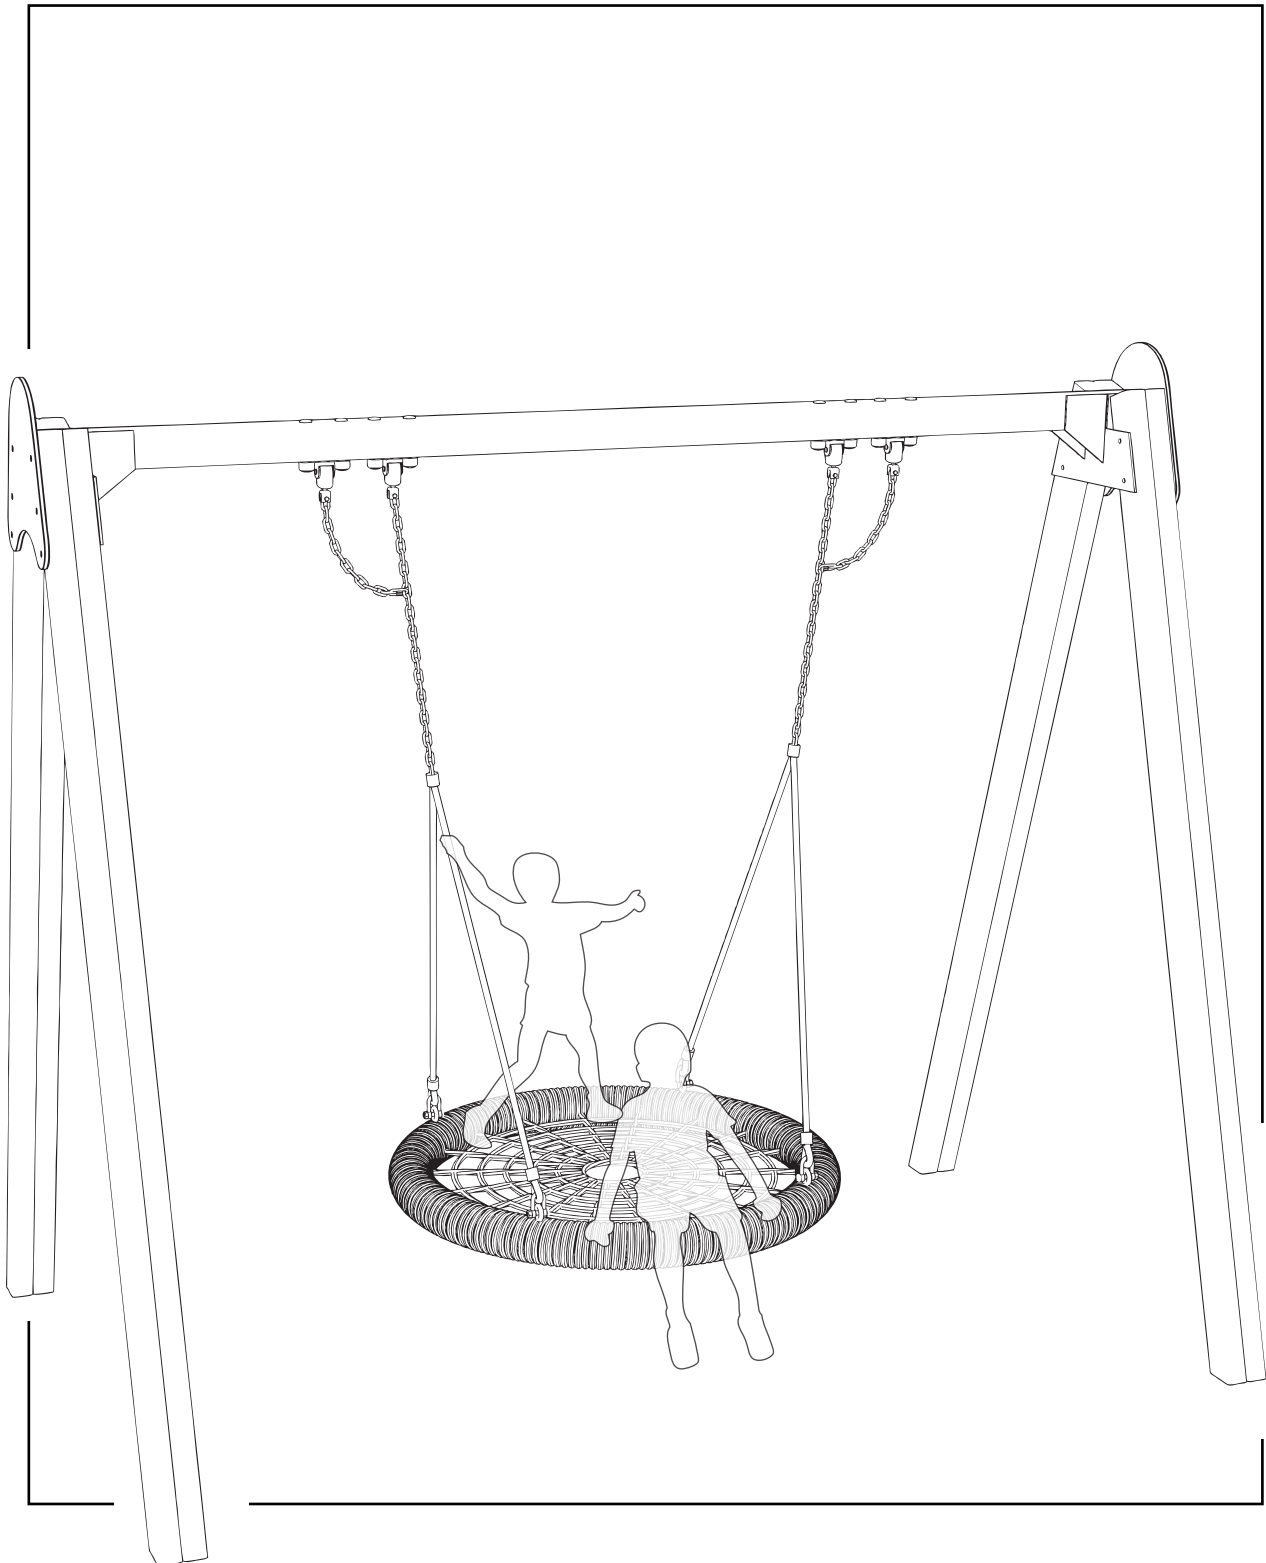



# PARTS required

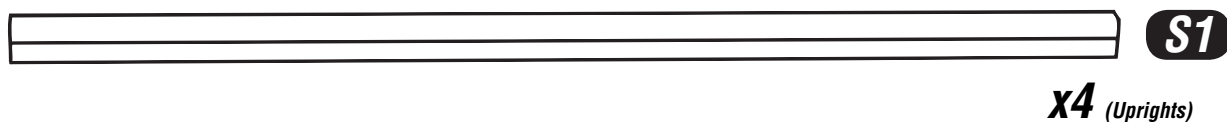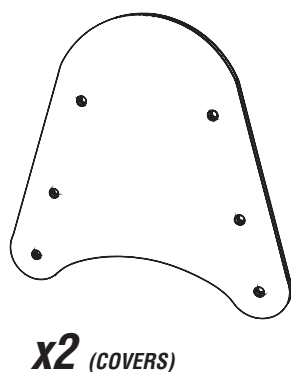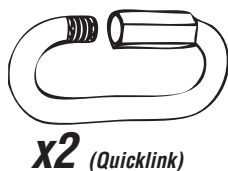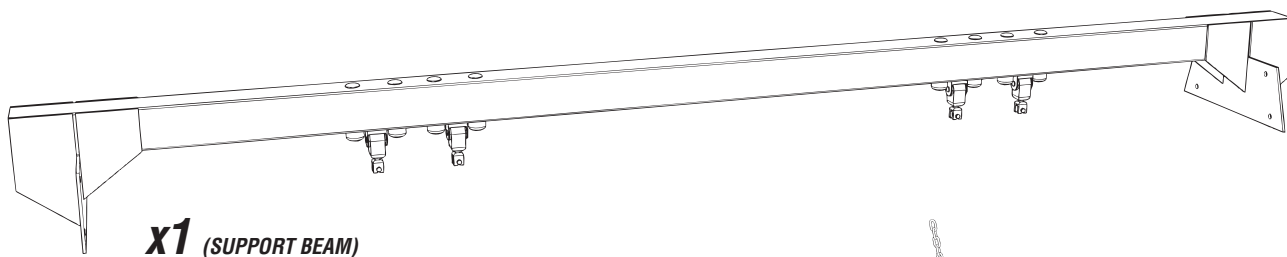



# TOOLS required

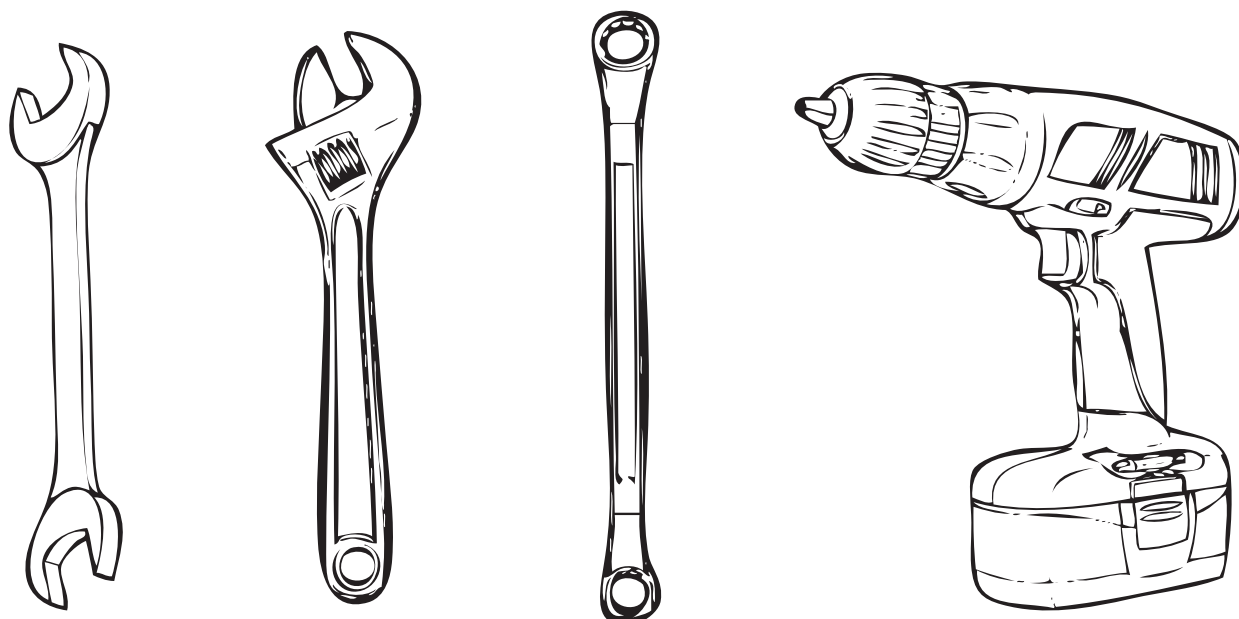


# Foundation Details

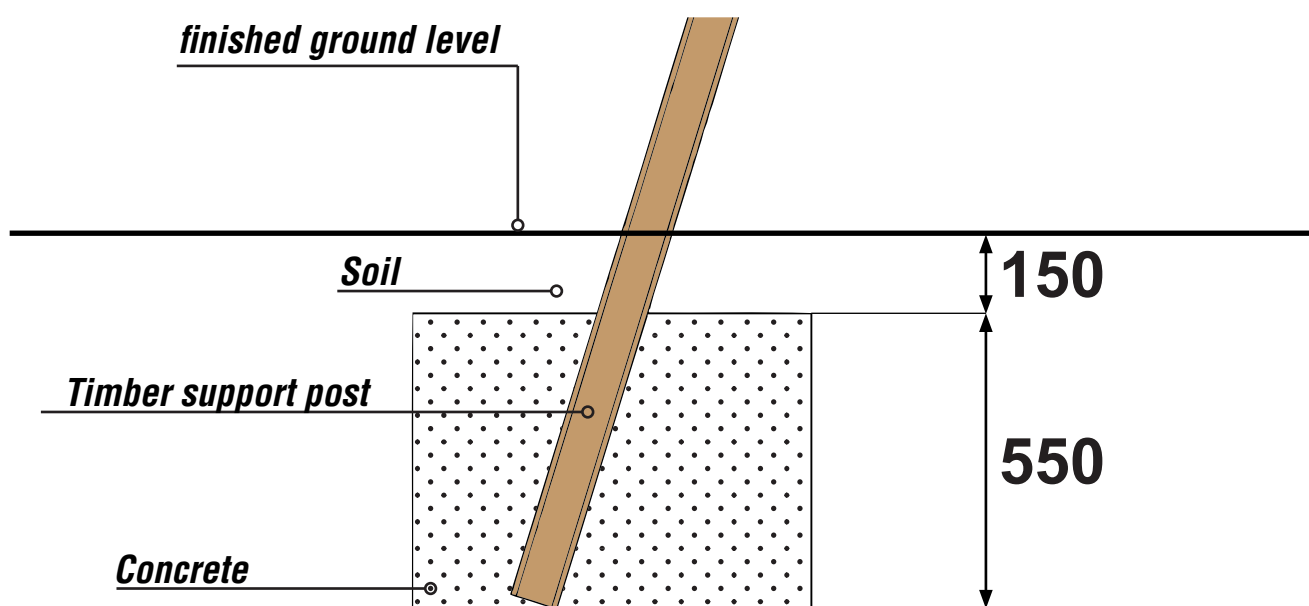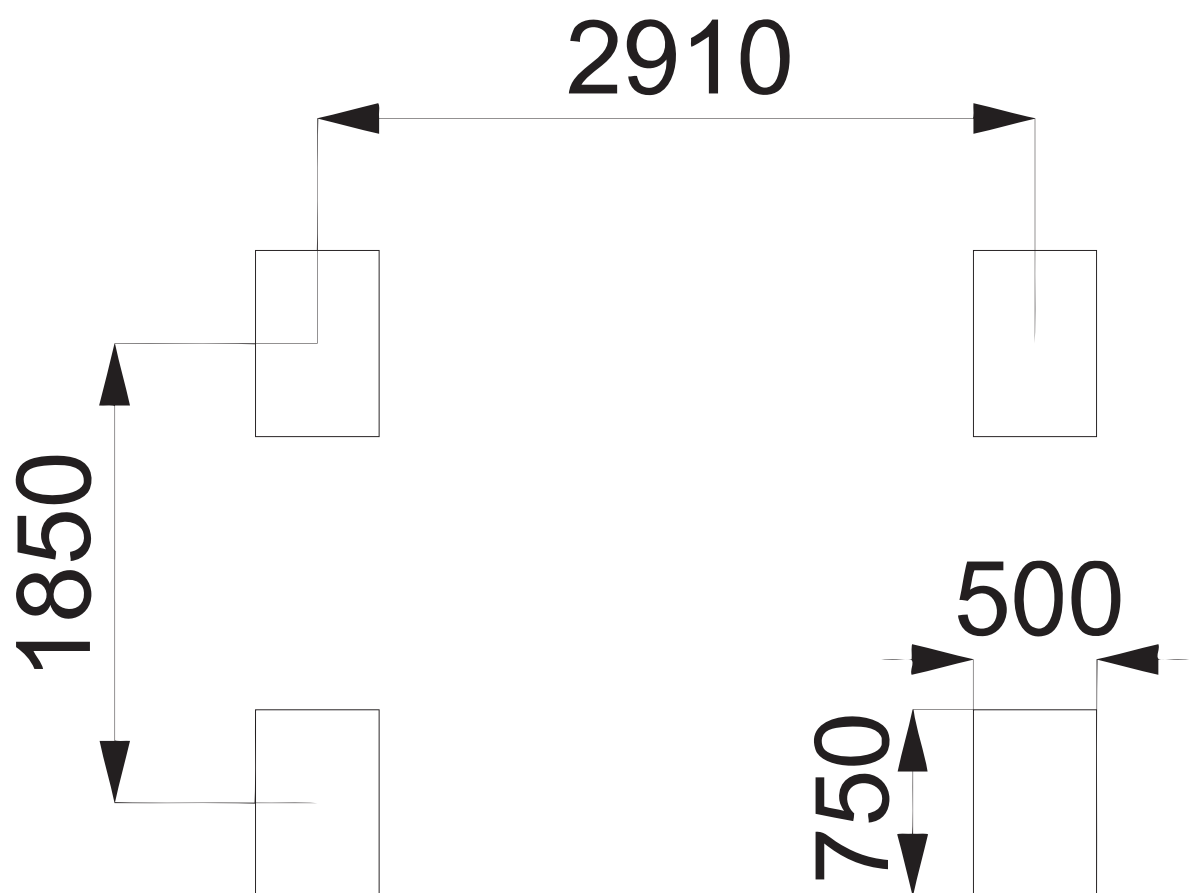

# Surfacing Details

 = *SYNTHETIC*  
 = *LOOSE FILL*

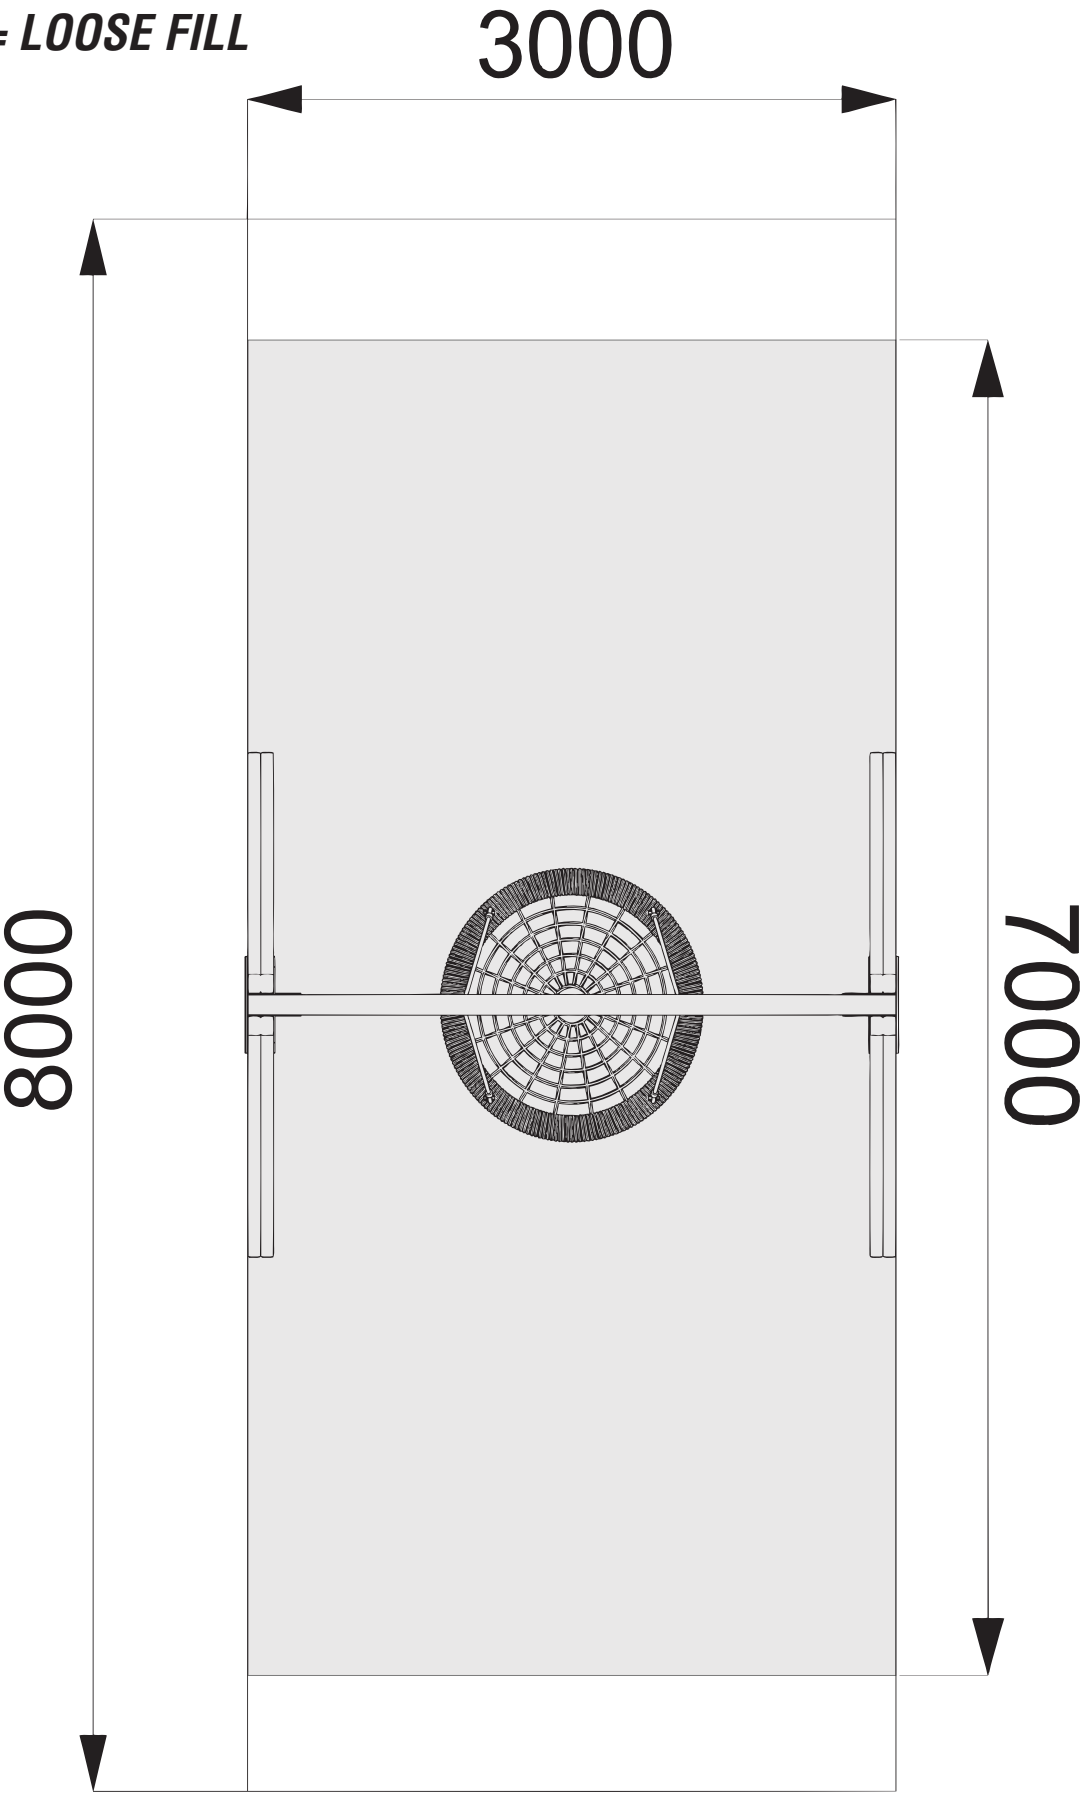

# Installation Instructions


**1**

## **Attach the TIMBERS S1 to the SUPPORT BEAM**

Using 8x FM 80 'Brass Screws' / 10x SMALL CAPS

### **NOTES:**

EACH SIDE

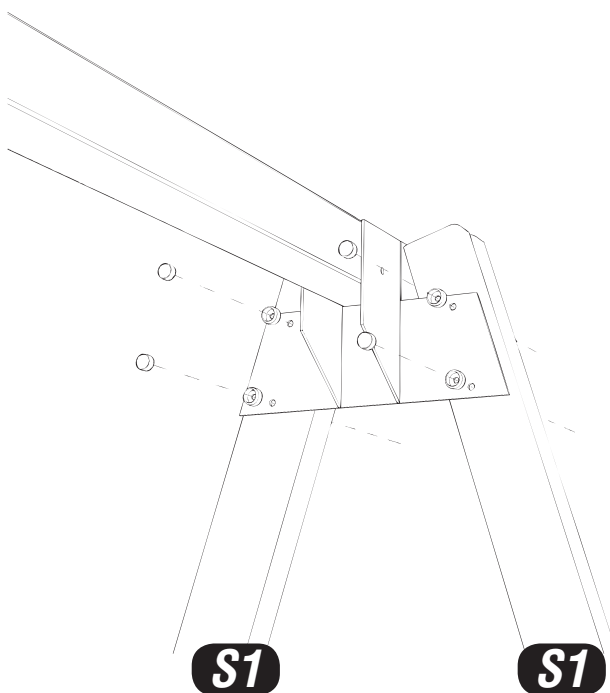

**2**

## **Attach PLAYTEC COVER to the TIMBERS S1**

Using 12x FM 80 'Brass Screws'

### **NOTES:**

EACH SIDE




# Installation Instructions

**3**

## Install the assembly


Follow Foundation details

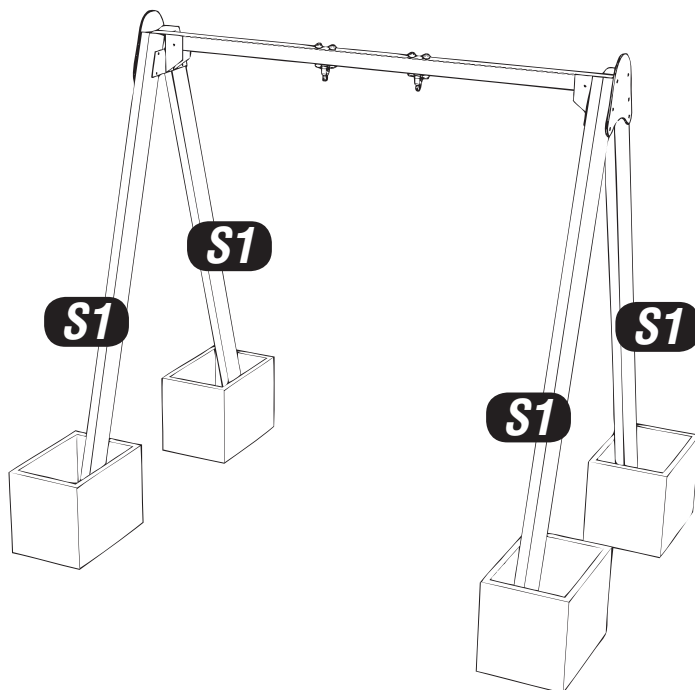

**4**

## Install BASKET SWING & SAFETY CHAIN

Using Chain and Quicklink supplied

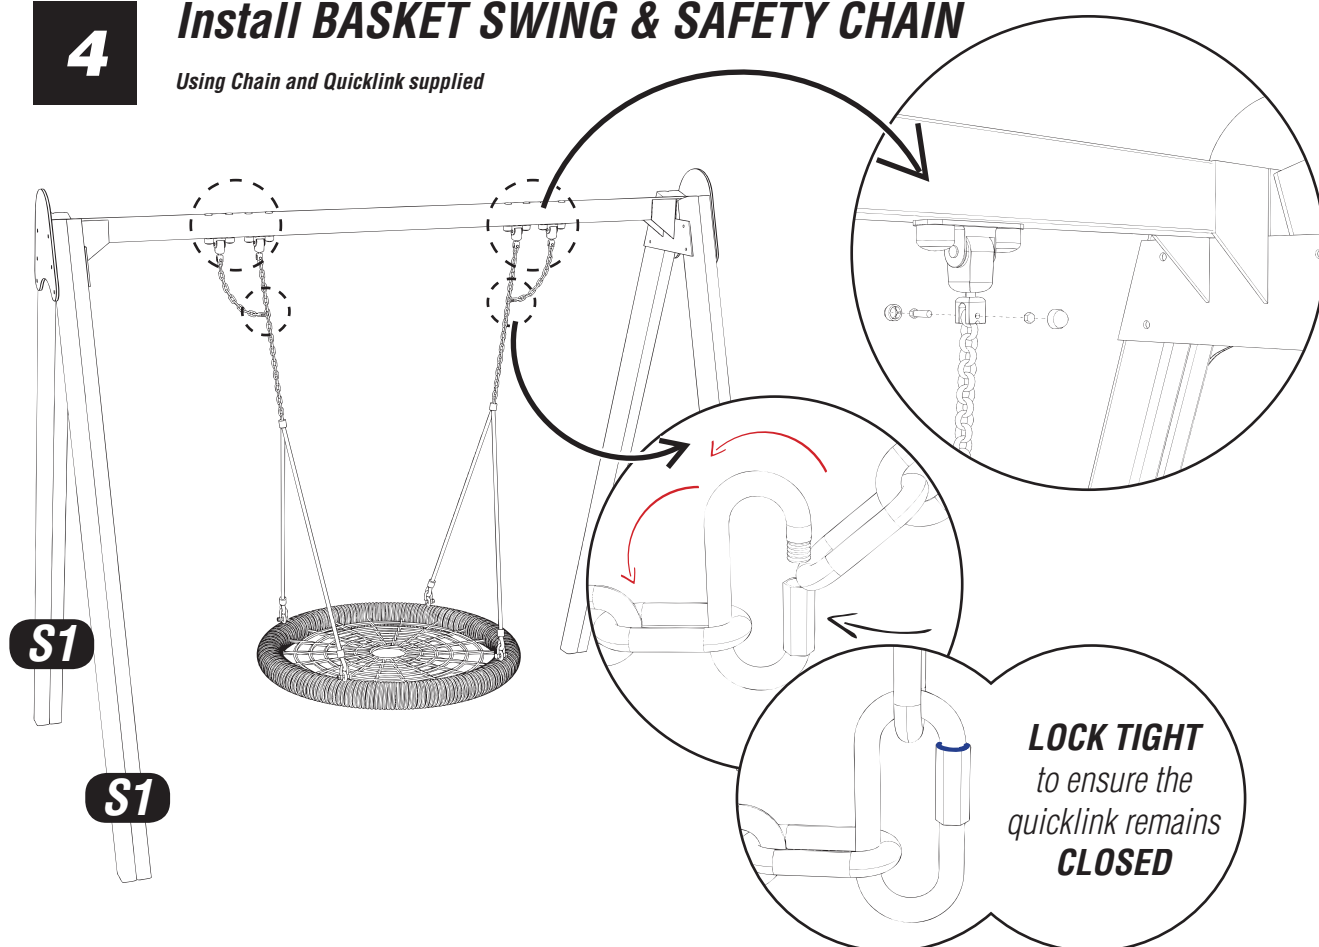

## ***Additional Dimensions***

---

