



TRELLIS ARCHWAY

Installation Instructions


**creative
play**

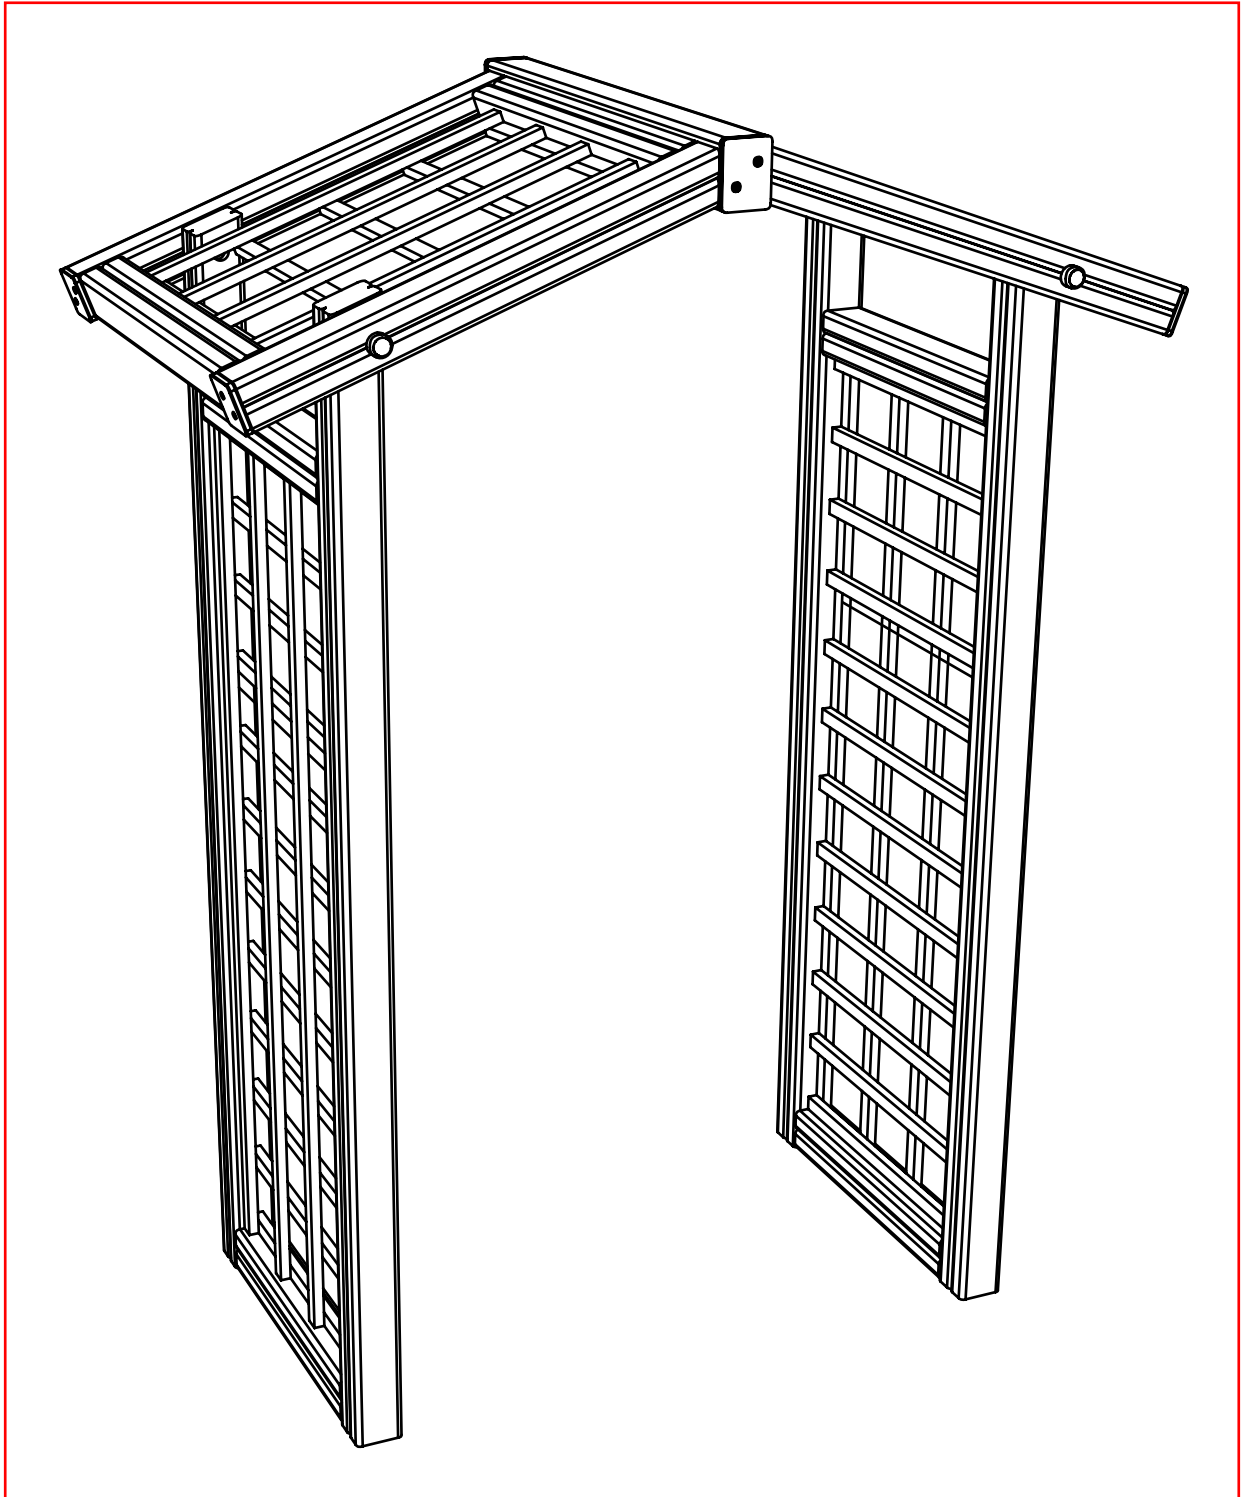

PARTS required


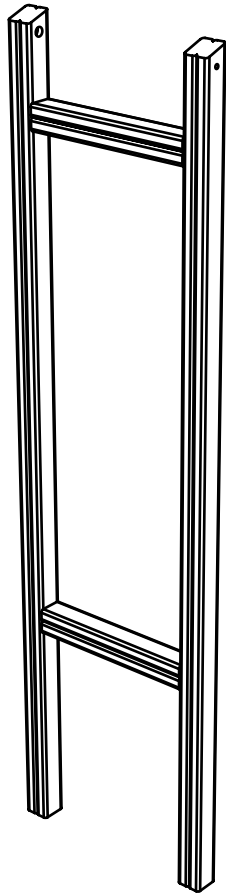


x2 (LARGE PANEL SUPPORTS)

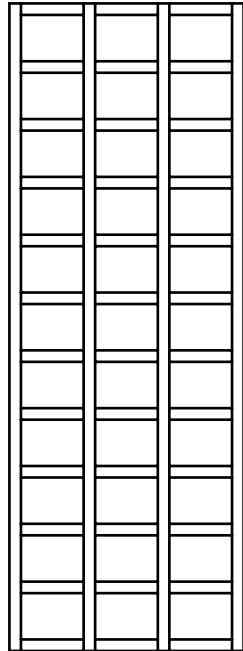


x2 (LARGE TRELLIS PANEL)


x2 (SMALL PANEL SUPPORTS / ROOF)

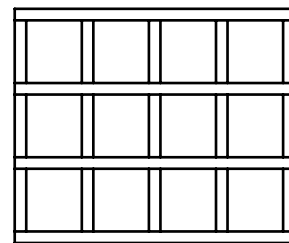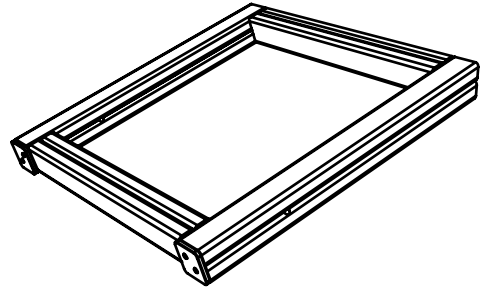

x2 (SMALL TRELLIS PANEL)

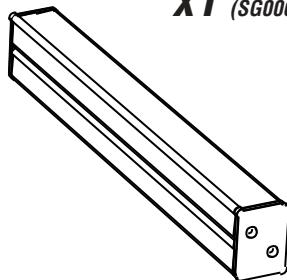

x1 (SG006f - RIDGE BEAM)



x4 (M12 x 180 Square Cup bolt)




x10 (FM80 'WOOD SCREWS')
6 required

x50 (4.5x63MM DECKTITE SCREW)
48 required





x4 (M12 'NYLOC')





x4 (end caps)

TOOLS required

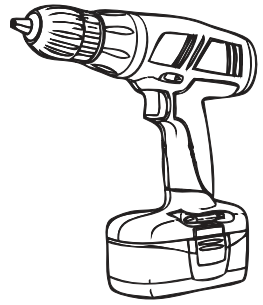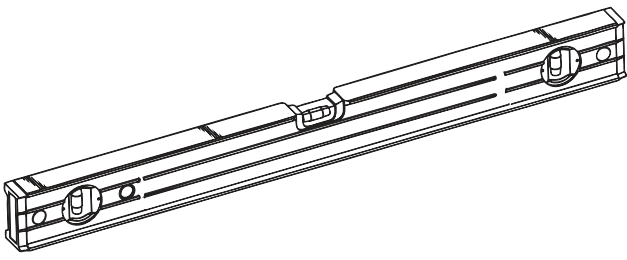

Foundation Details

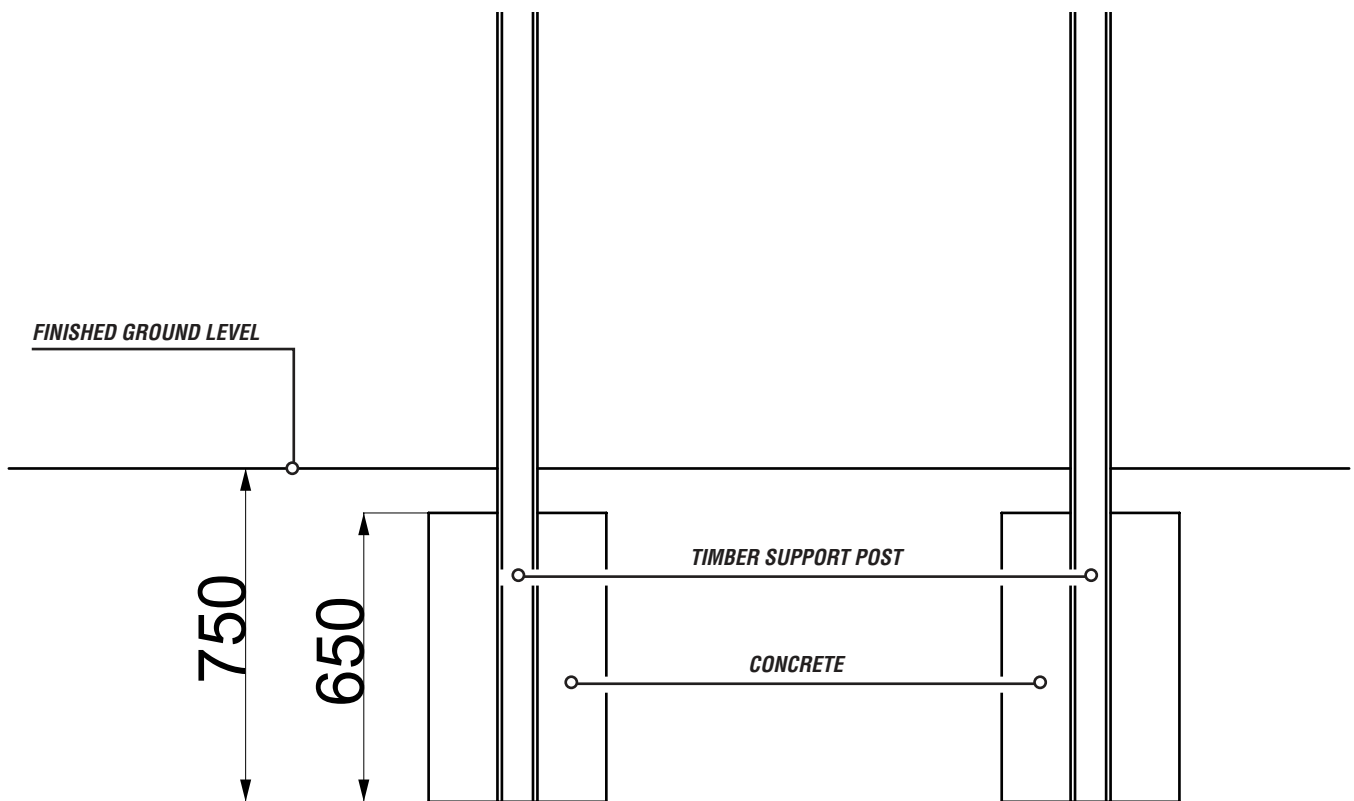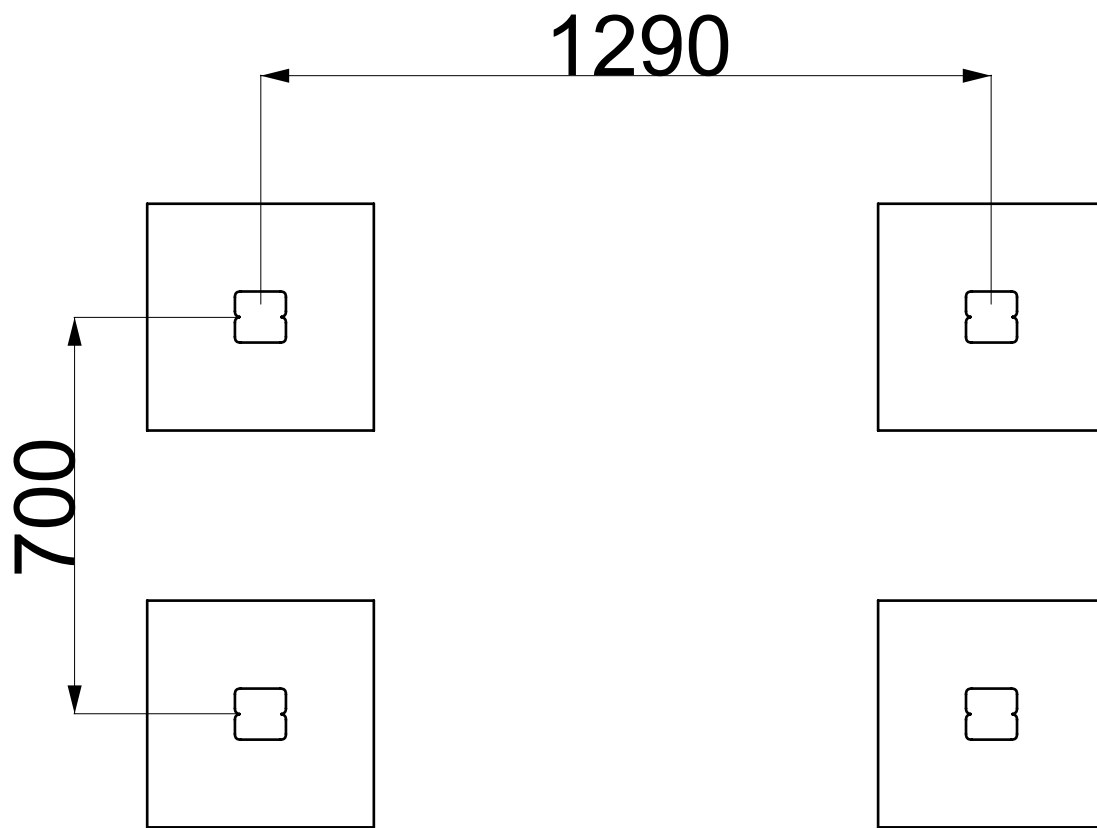


Installation Instructions

1

Position the 2 x LARGE PANEL SUPPORTS


As shown on the FOUNDATION INSTRUCTIONS
(1200mm between SUPPORTS)

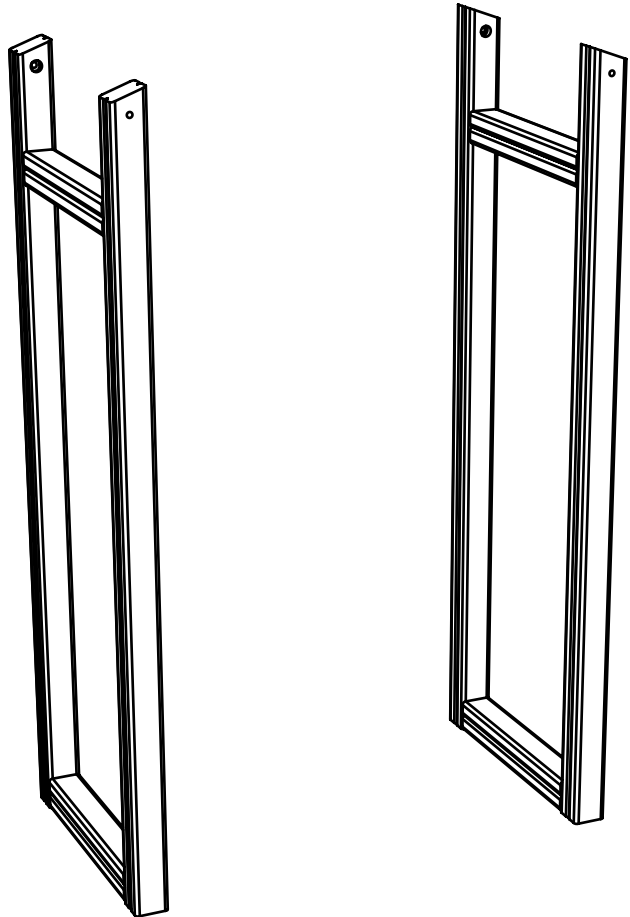

2

Attach the SMALL PANEL SUPPORTS & RIDGE BEAM

Using 4 x M12x200 CUP SQUARE BOLTS / M12 NYLOCS / COVERED END CAPS & 6 x FM80 WOOD SCREWS

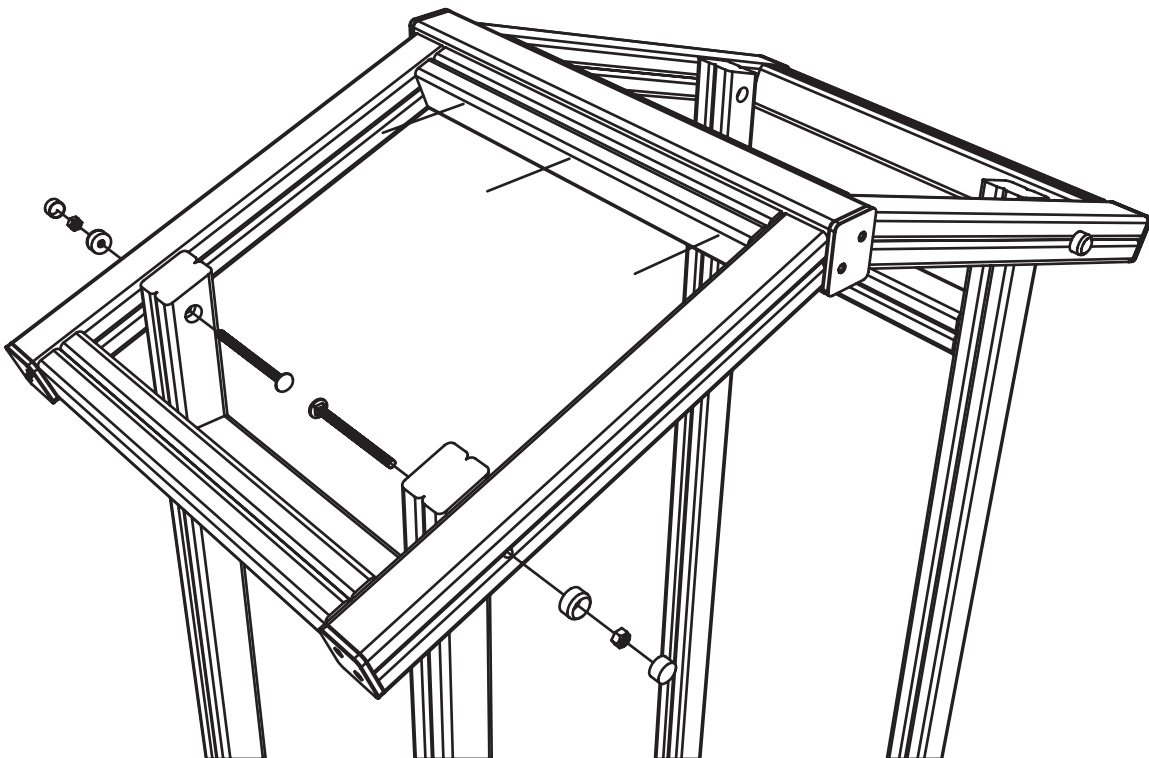


Installation Instructions

3

Attach the 2 x SMALL TRELLIS PANELS


Using 12 x 4.5x63MM DECKTITE SCREW (DECKING SCREW)

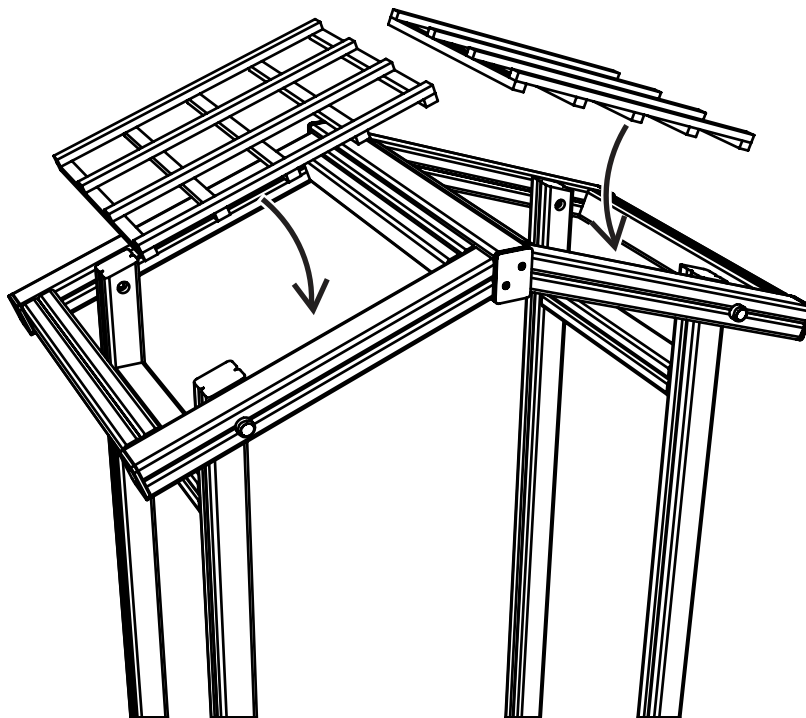

4

Attach the 2 x LARGE TRELLIS PANELS

Using 36 x 4.5x63MM DECKTITE SCREW (DECKING SCREW)

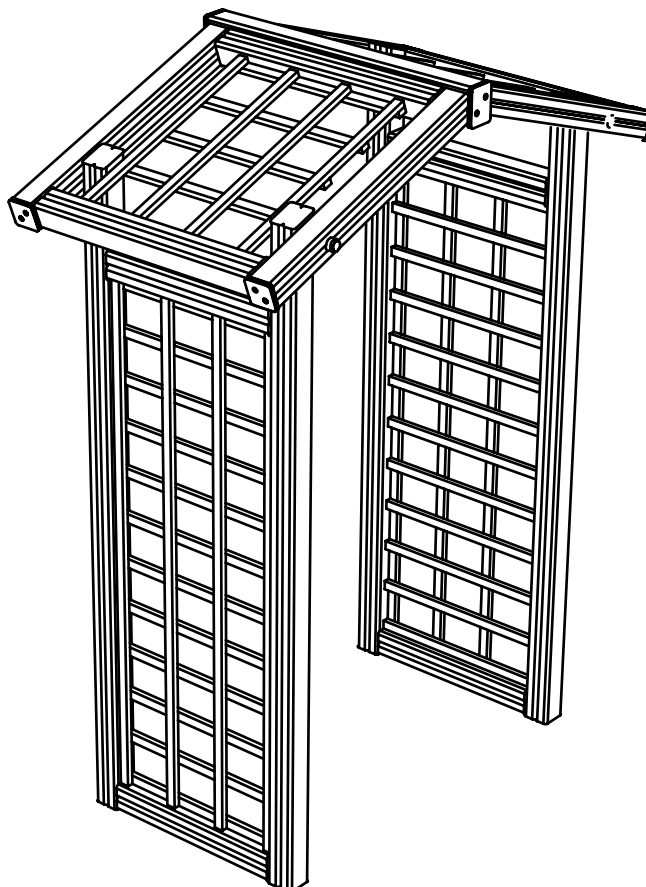

Additional Dimensions

