



# **TRIKE STORE**

## ***Assembly + Installation Instructions***

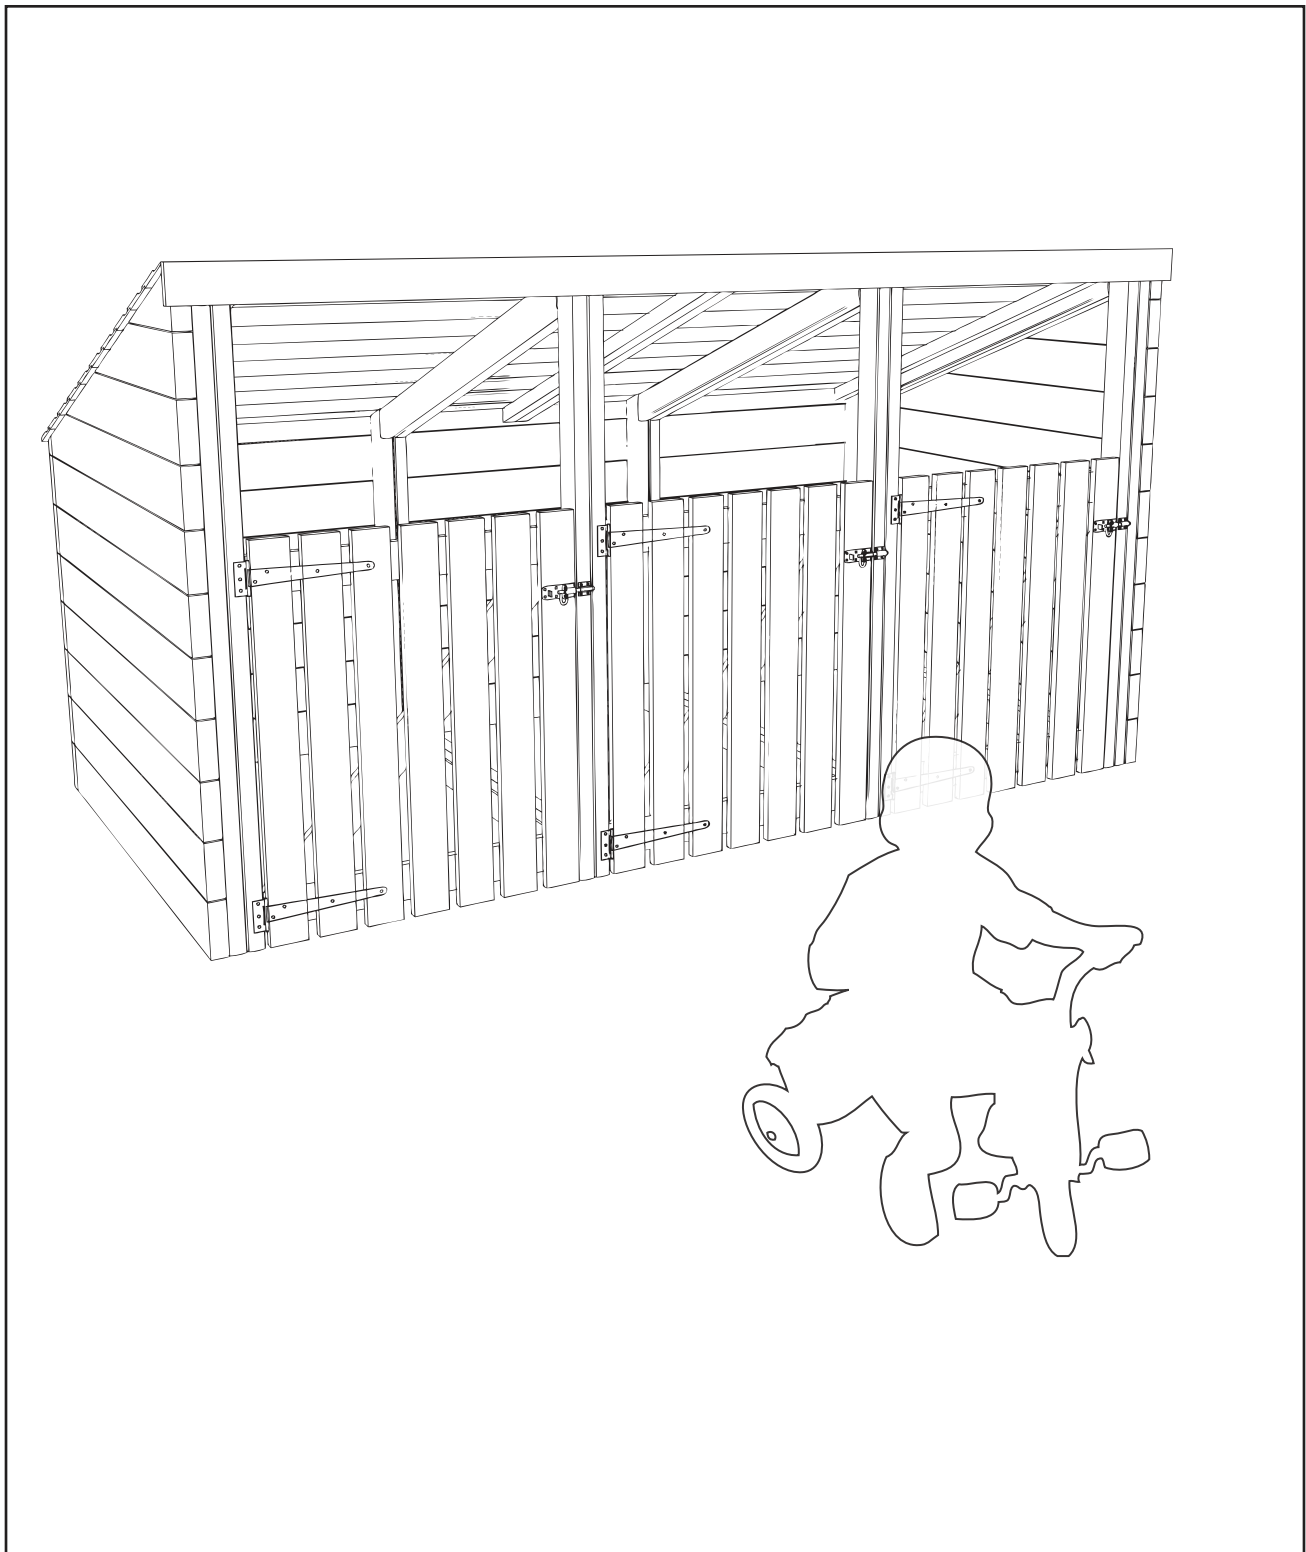

# PARTS required

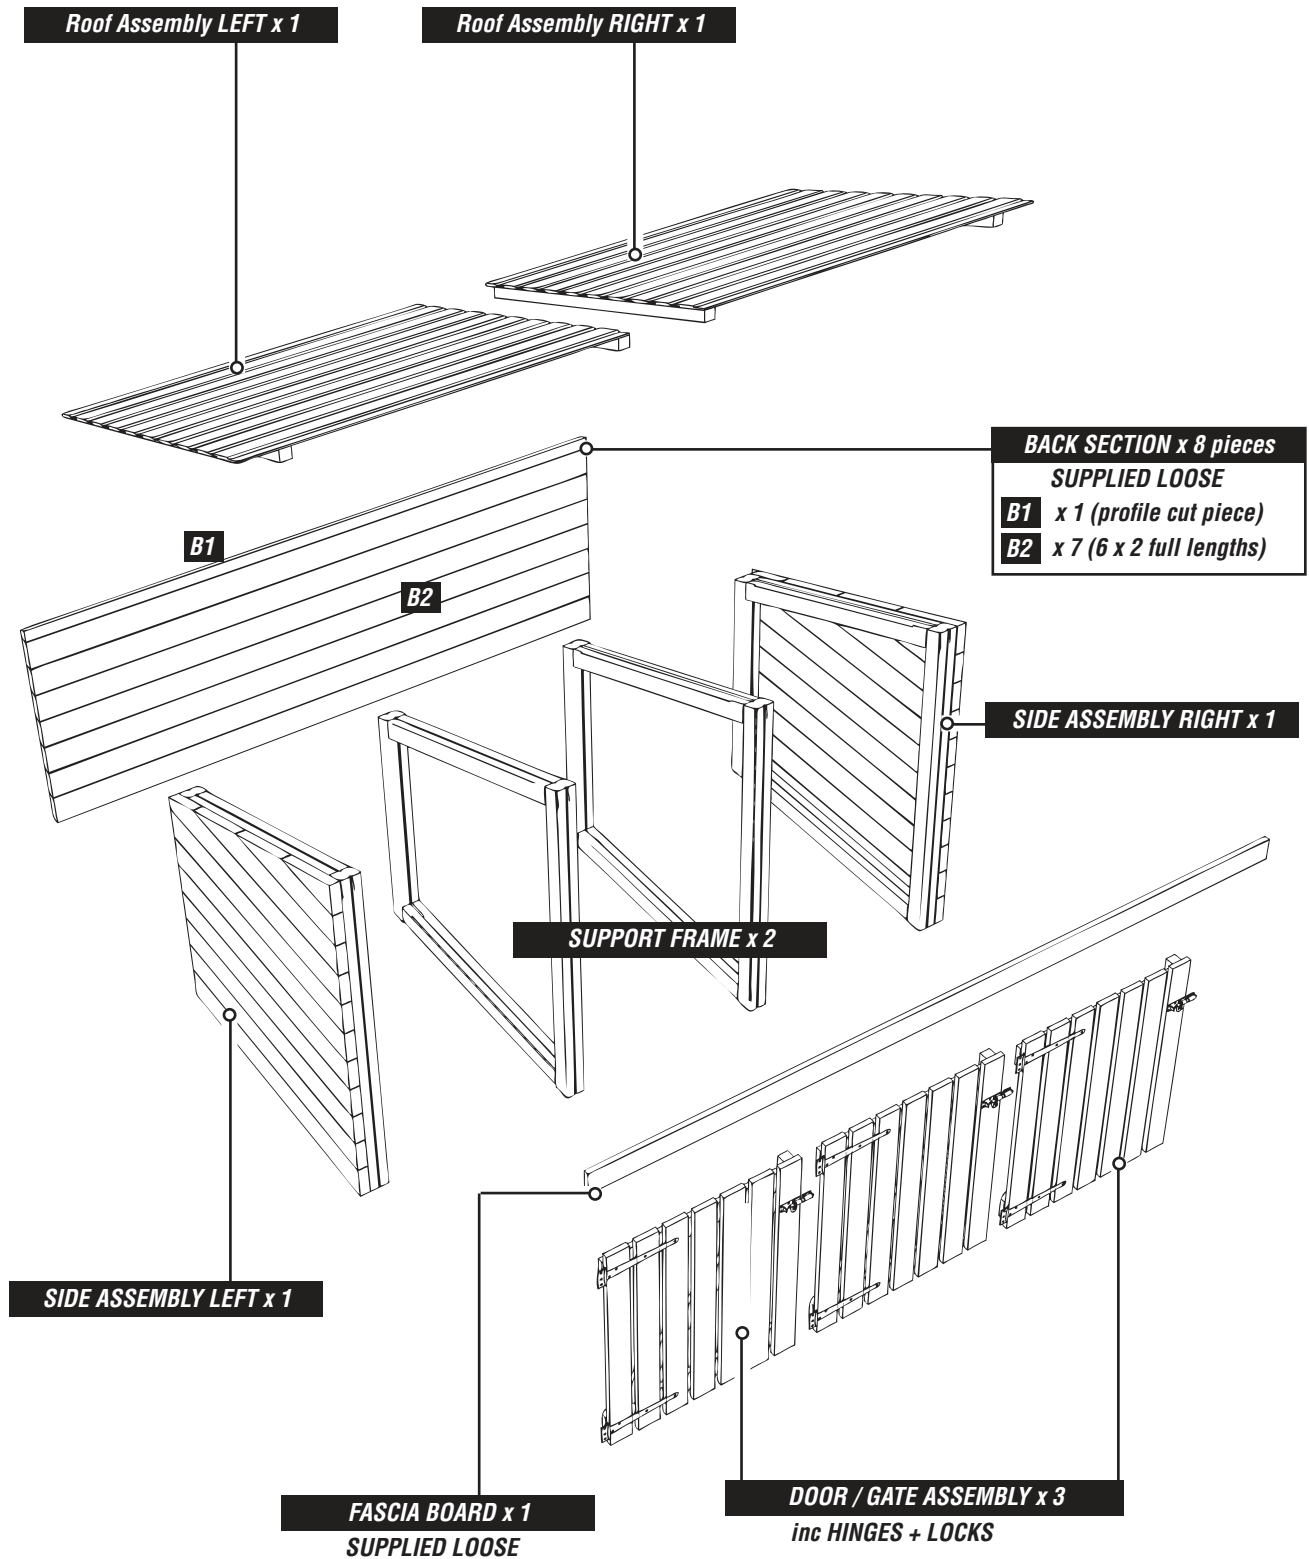

**NOT SHOWN ABOVE - x3** (DOOR STOPPERS - 2" x 2" timbers @ 920mm)

# ***PARTS required***

---




**x39** (FM80 'Brass screws')


**x80** (FM120 'Brass screws')



**x30** (5x30mm WOOD SCREW)

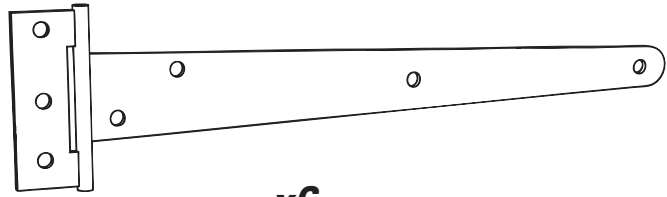


**x6** (TEE HINGE 305mm - WILL BE ATTACHED TO DOOR/GATE ASSEMBLY)

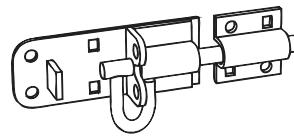

**x3** (LOCKABLE PAD BOLT)


# ***TOOLS required***

---

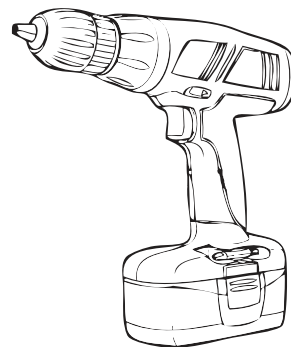

# Foundation Details

---

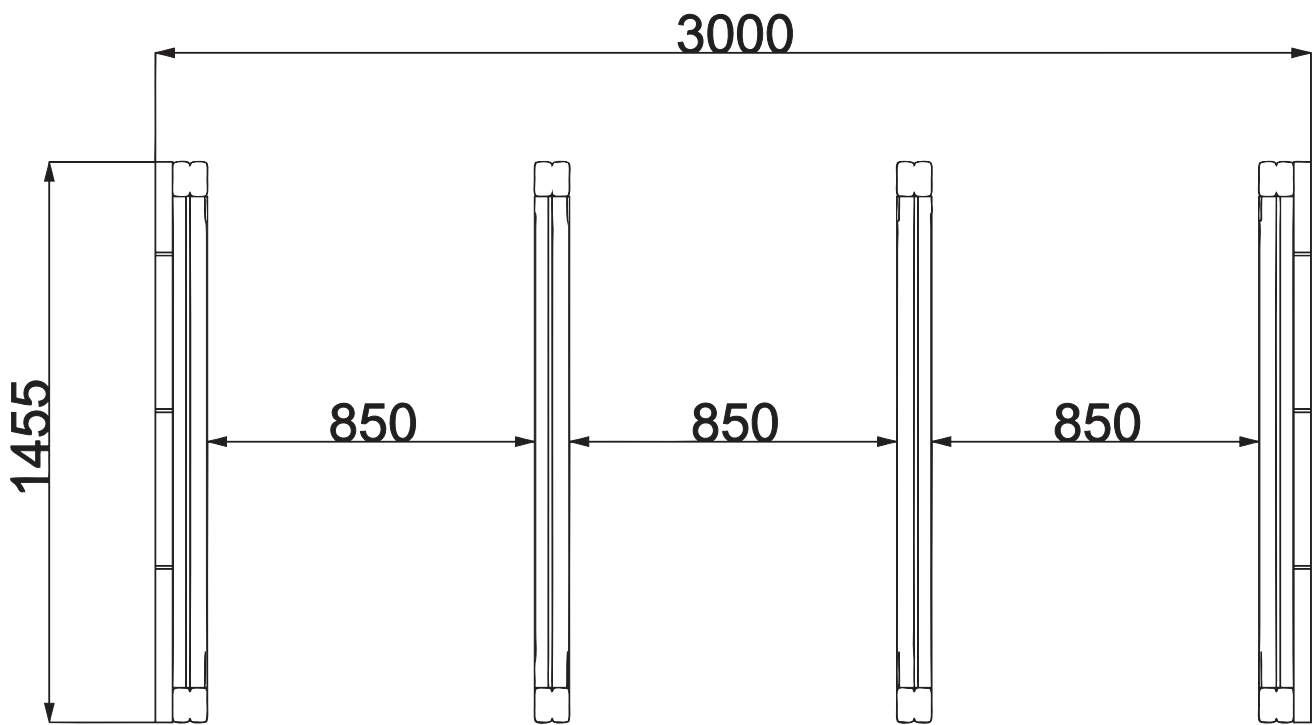


***DOES NOT REQUIRE CONCRETE FOUNDATIONS***

# Assembly Instructions

1


**POSITION the LEFT & RIGHT sides and SUPPORT FRAMES**

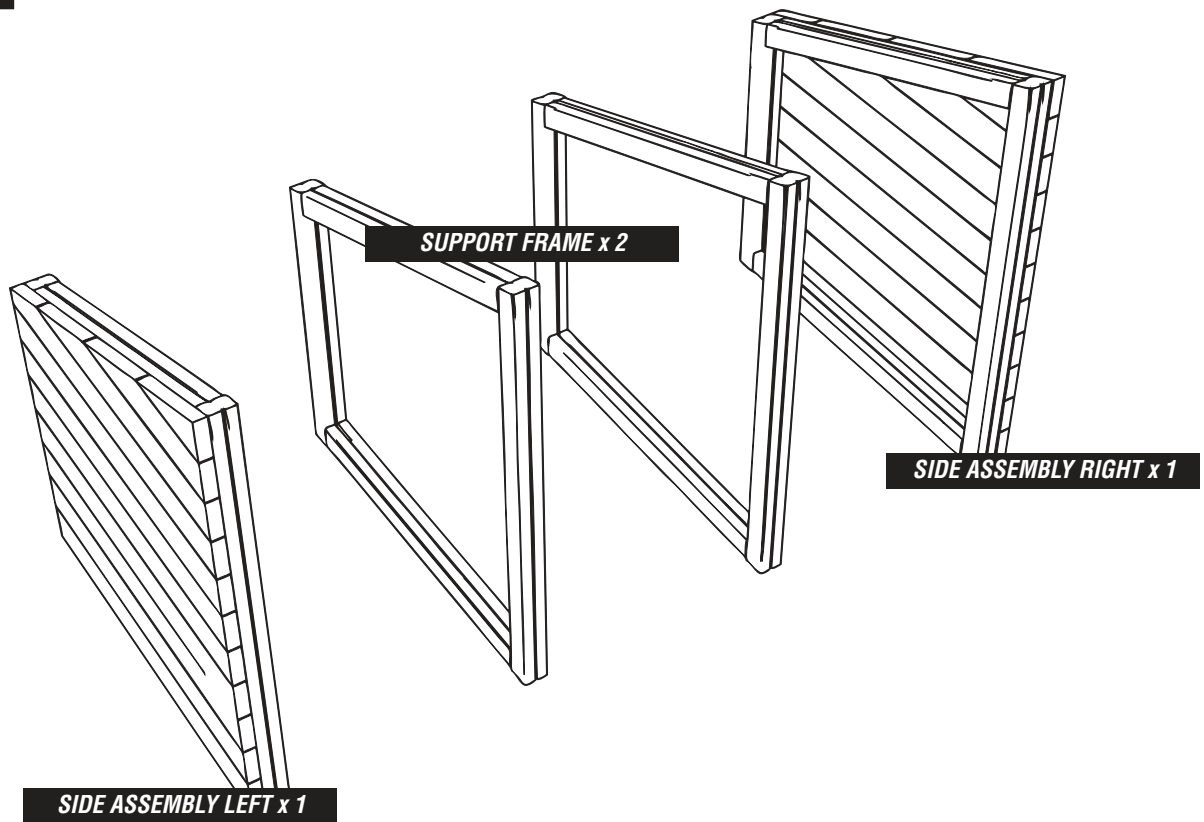

2

**ATTACH the BACK timbers B1 & B2 timbers**

Using FM120 'BRASS SCREWS' - 8 per B2 TIMBER / 4 per B1 timber

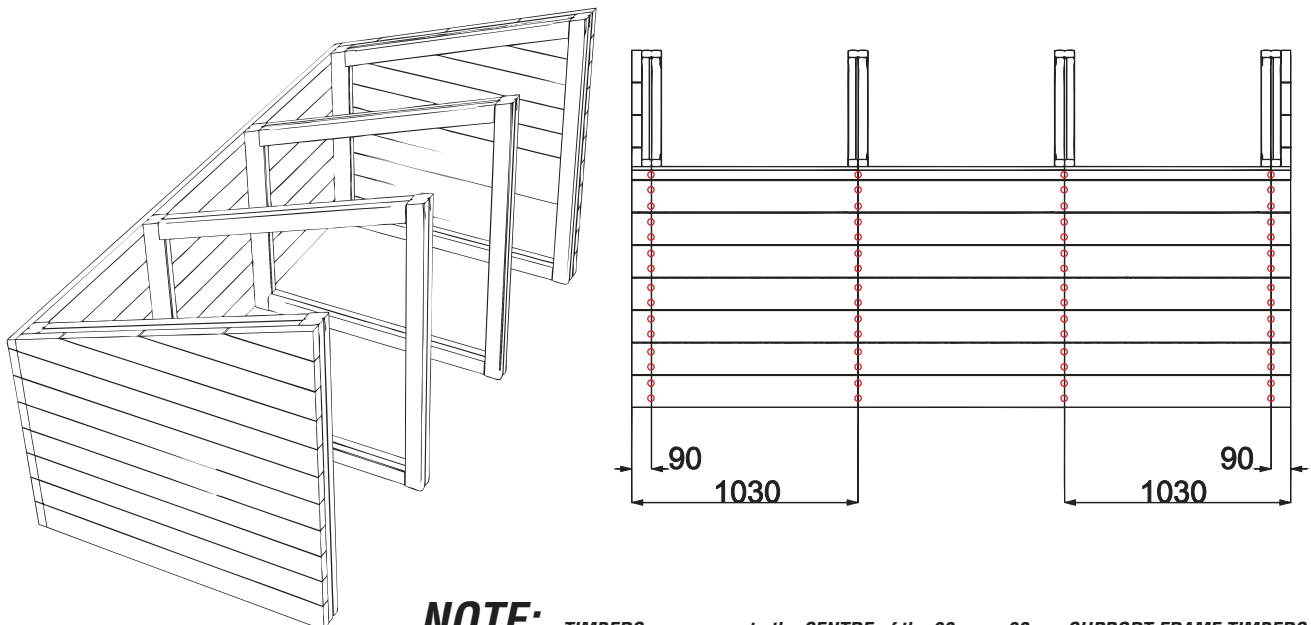


**NOTE:** - TIMBERS are screws to the CENTRE of the 90mm x 90mm SUPPORT FRAME TIMBERS  
- SCREW HOLES LOCATIONS SHOWN RED ABOVE

# Assembly Instructions

**3**

## Attach the LEFT ROOF ASSEMBLY


Using 80mm brass screws - LEFT SIDE WILL OVERHANG 15mm CIRCLED RED

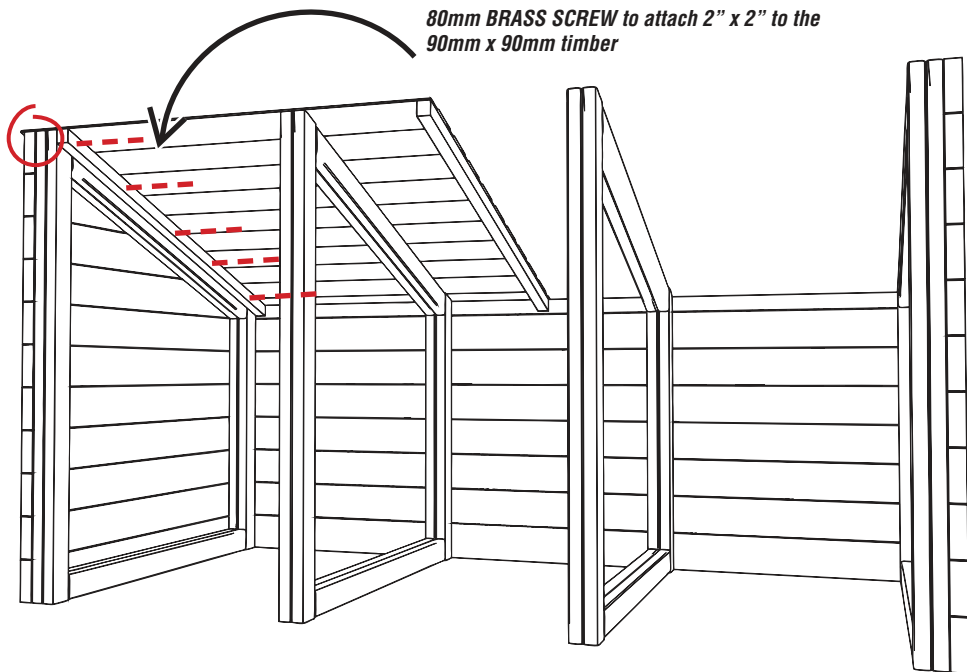

**4**

## Repeat for the RIGHT ROOF ASSEMBLY

Using 80mm brass screws - IN ADDITION ATTACH the CENTRE 2" x 2" TIMBERS together - RIGHT SIDE WILL OVERHANG 15mm CIRCLED RED

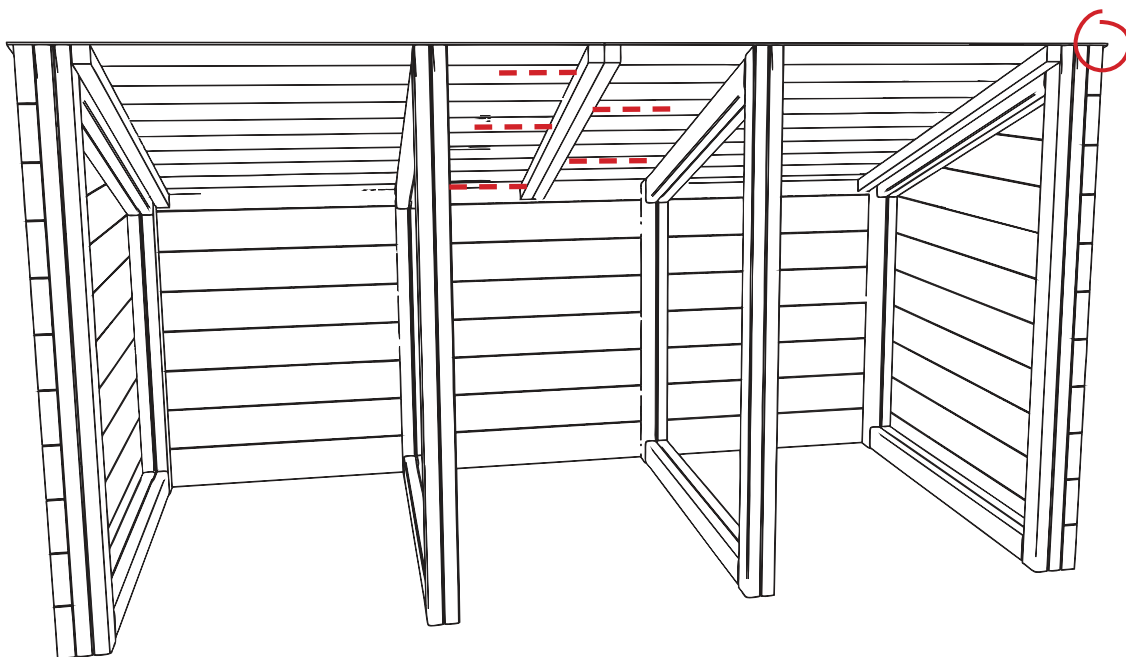


# Assembly Instructions

**5**

## Screw through the SHIPLAP into the SUPPORT FRAMES


Using 120mm brass screws

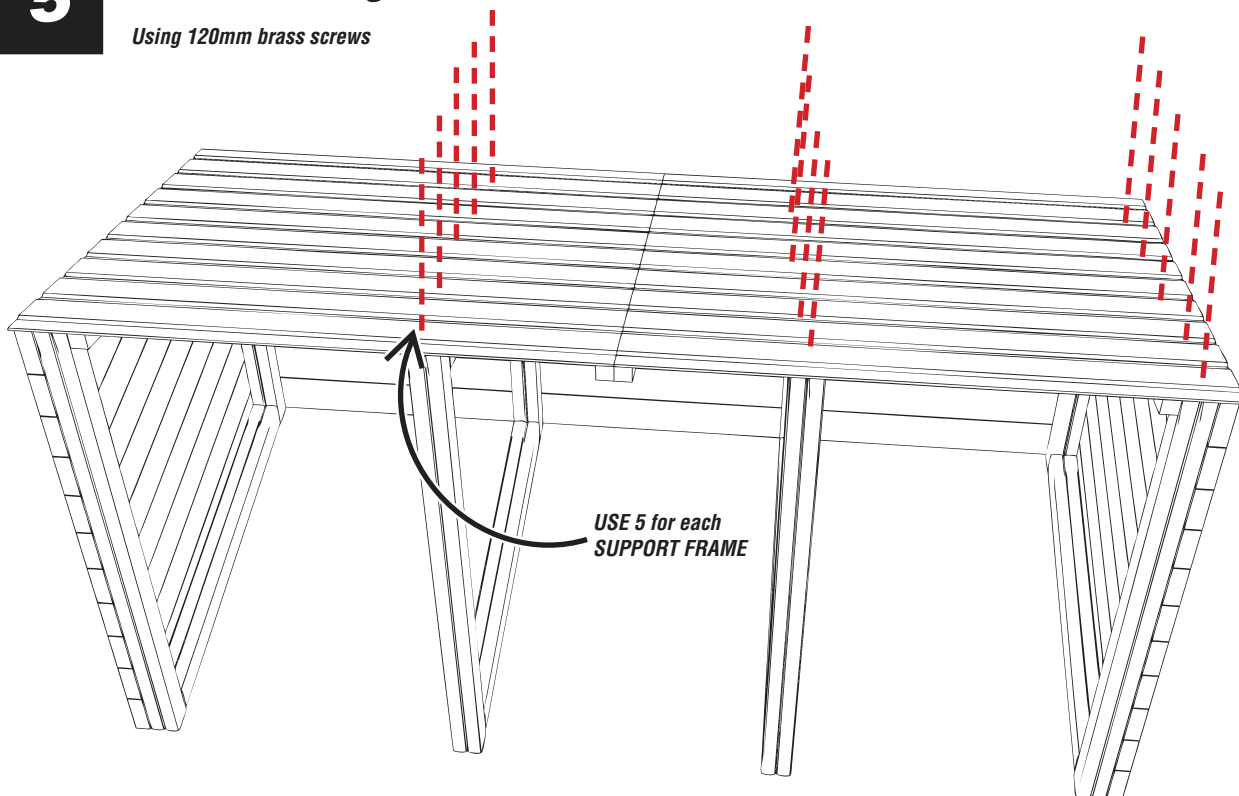

**6**

## Attach the FASCIA board to the SUPPORT FRAMES

Using 80mm brass screws

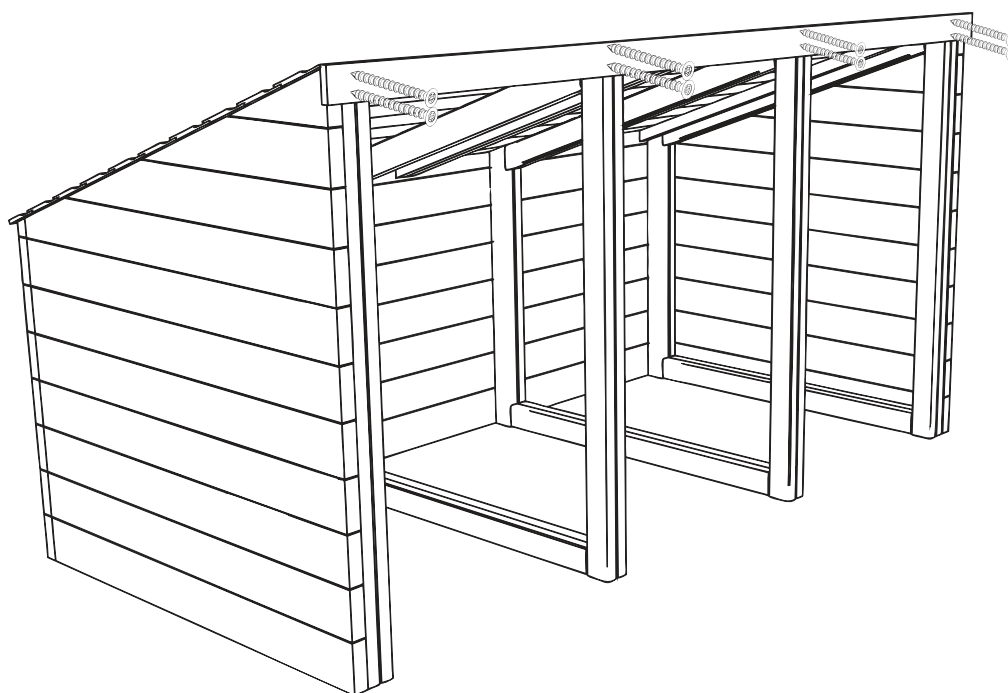


# Assembly Instructions

**7**

## Attach the DOOR ASSEMBLY and DOOR STOP

Using 80mm brass screws

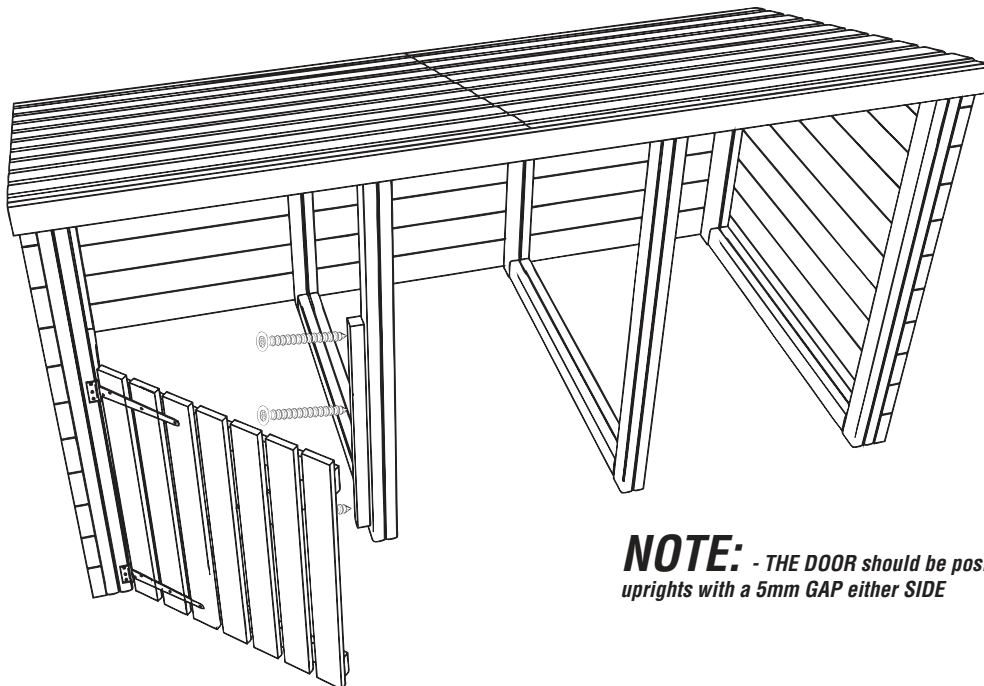


**NOTE:** - THE DOOR should be positioned BETWEEN the 90mm x 90mm uprights with a 5mm GAP either SIDE

**8**

## Repeat for the 2 remaining DOORS ASSEMBLIES

Using wood screws

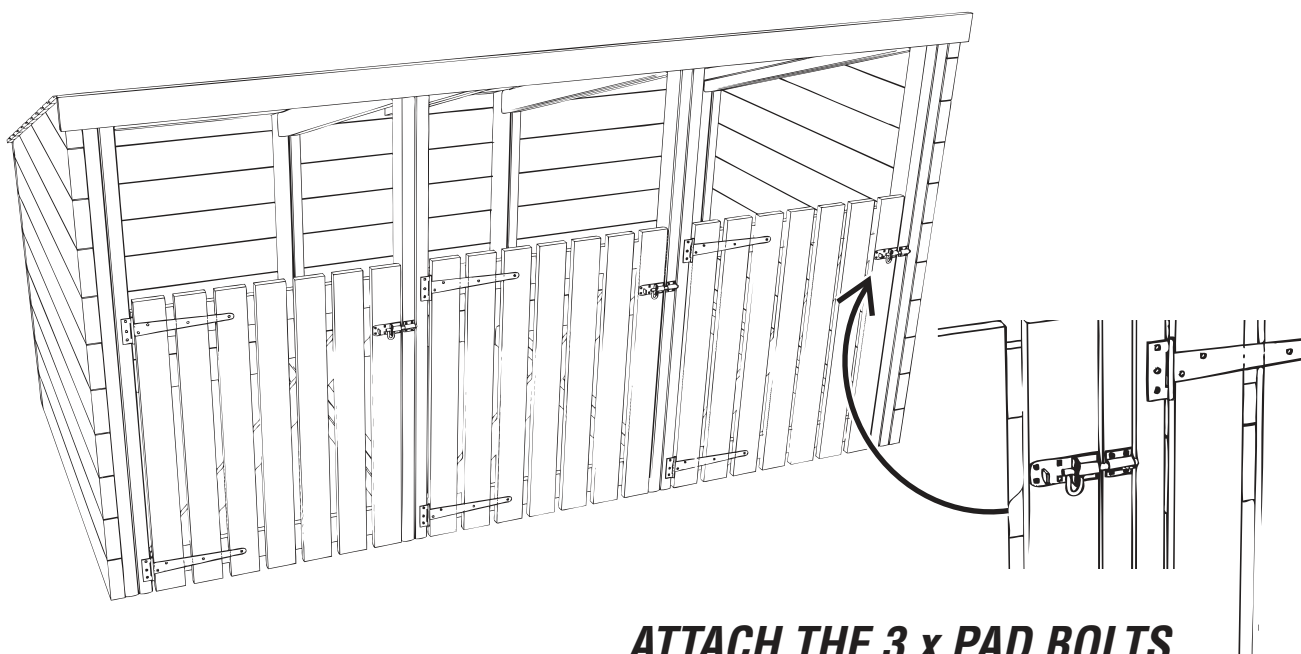

**ATTACH THE 3 x PAD BOLTS**



# Additional Dimensions

---

