

### **NUMBERS WALL PANEL**

## Installation Instructions

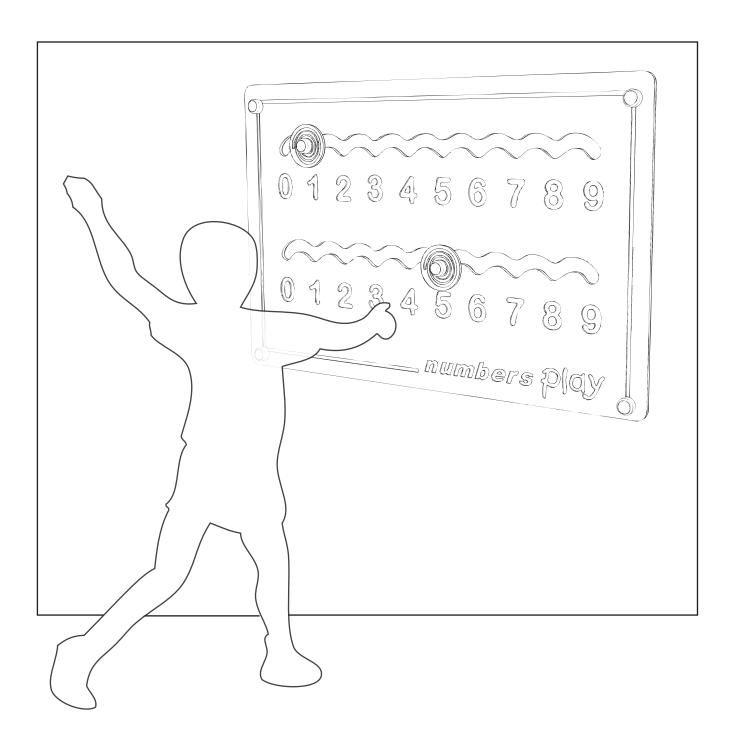


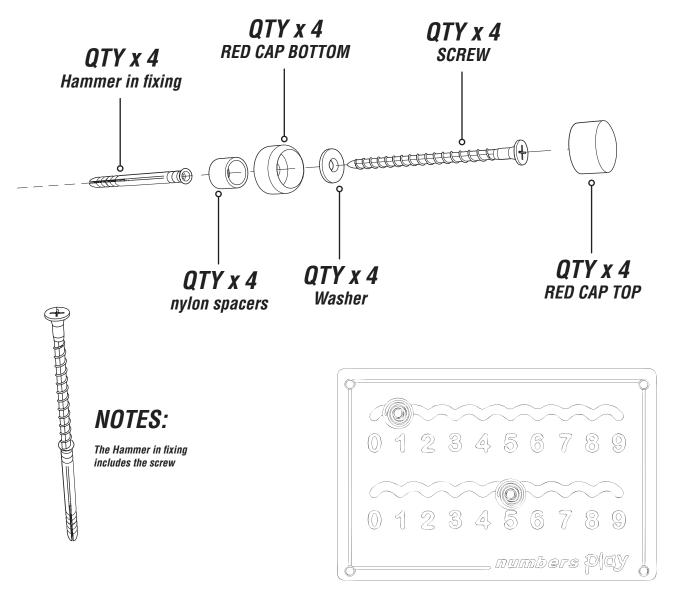



x1 Numbers board


# TOOLS required

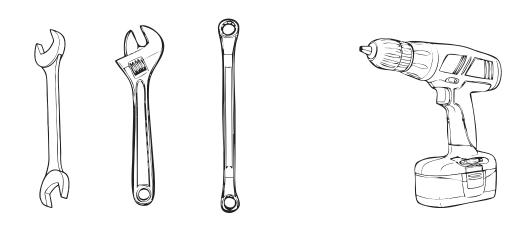




#### Attach the NUMBERS BOARD to the WALL


Using M12 CUP HAMMER IN FIXING / SPACERS/ SCREWS / END CAPS

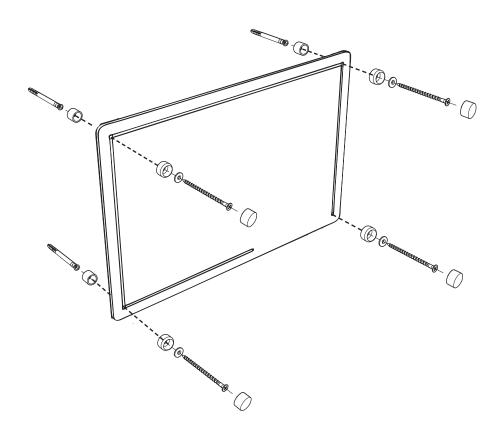

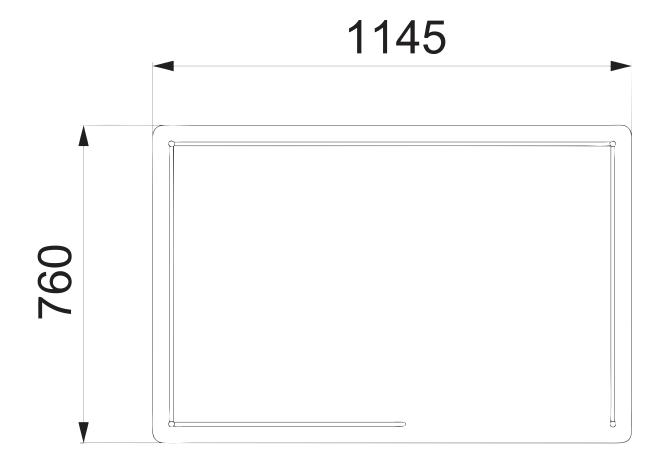

## **OPTION for POSTS**

# PARTS required

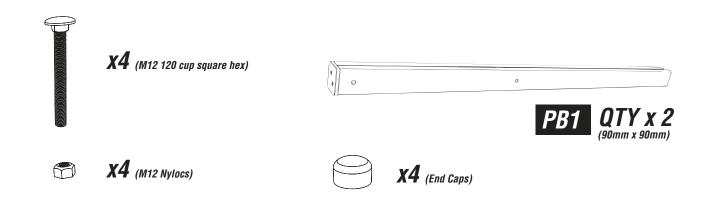

### Installation Instructions



#### Attach the NUMBERS BOARD to the PB1 timbers

Using M12 CUP SQUARE BOLTS / NYLOCS / END CAPS

