



SHAPES WALL PANEL

Installation Instructions

**creative
play**

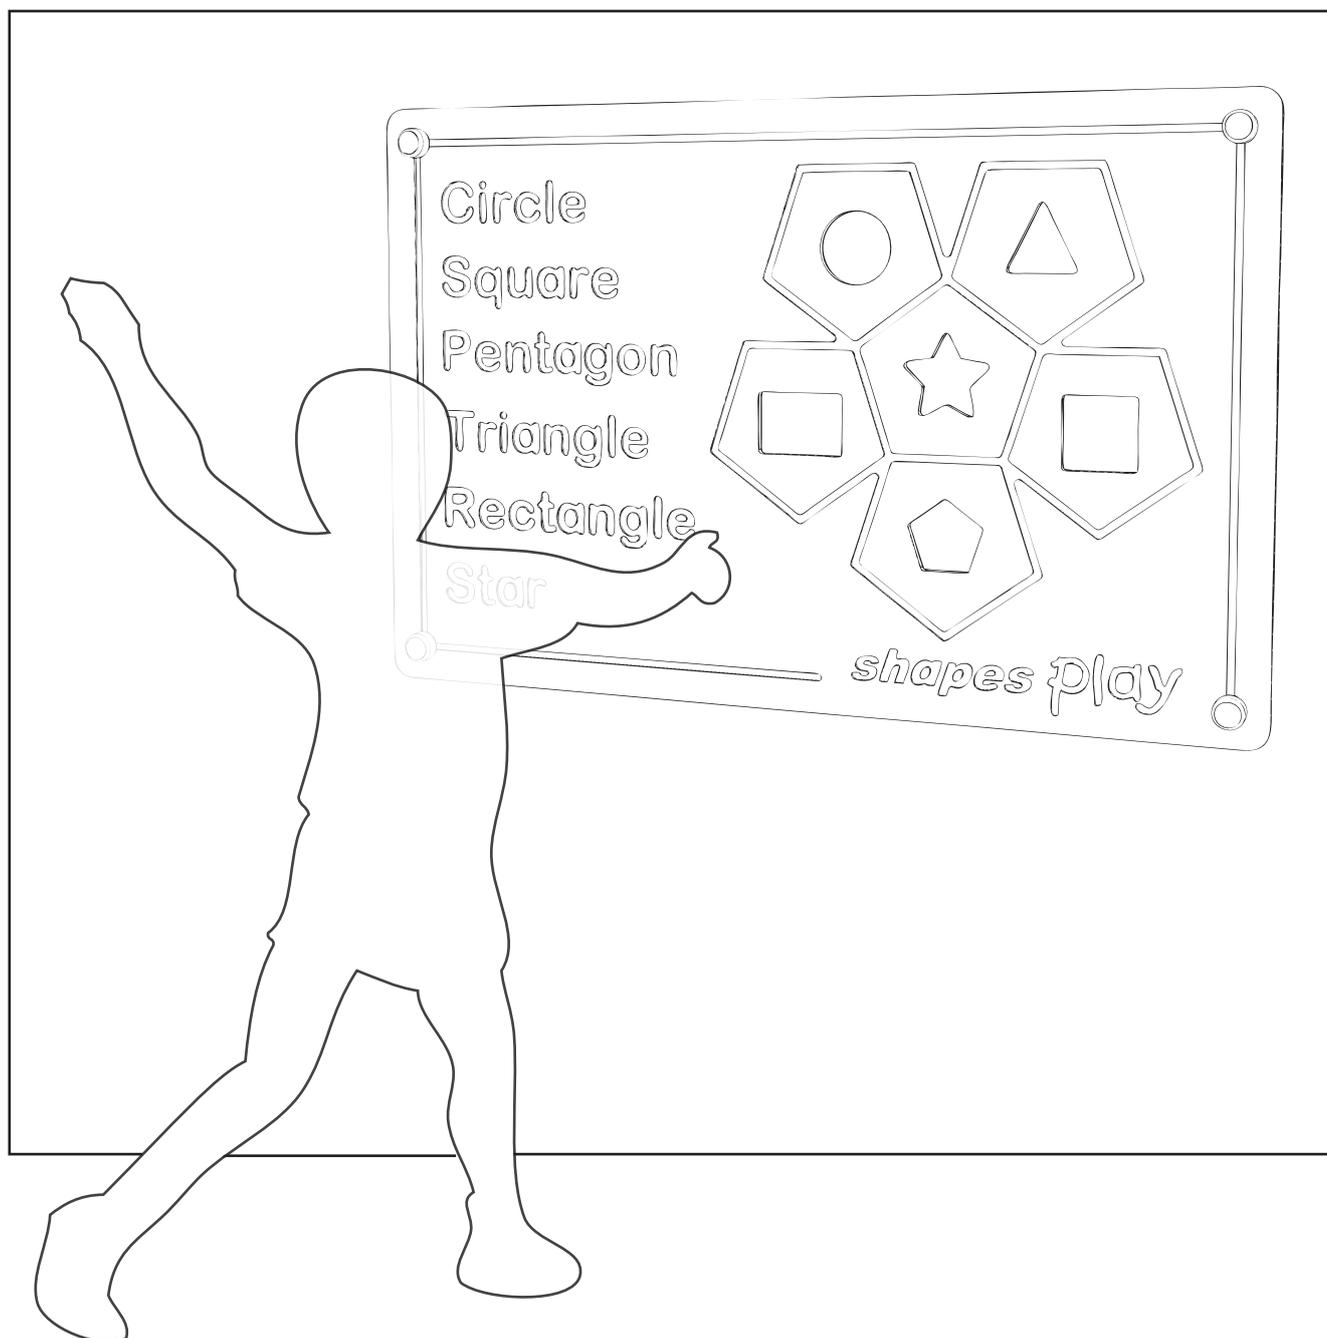


PARTS required

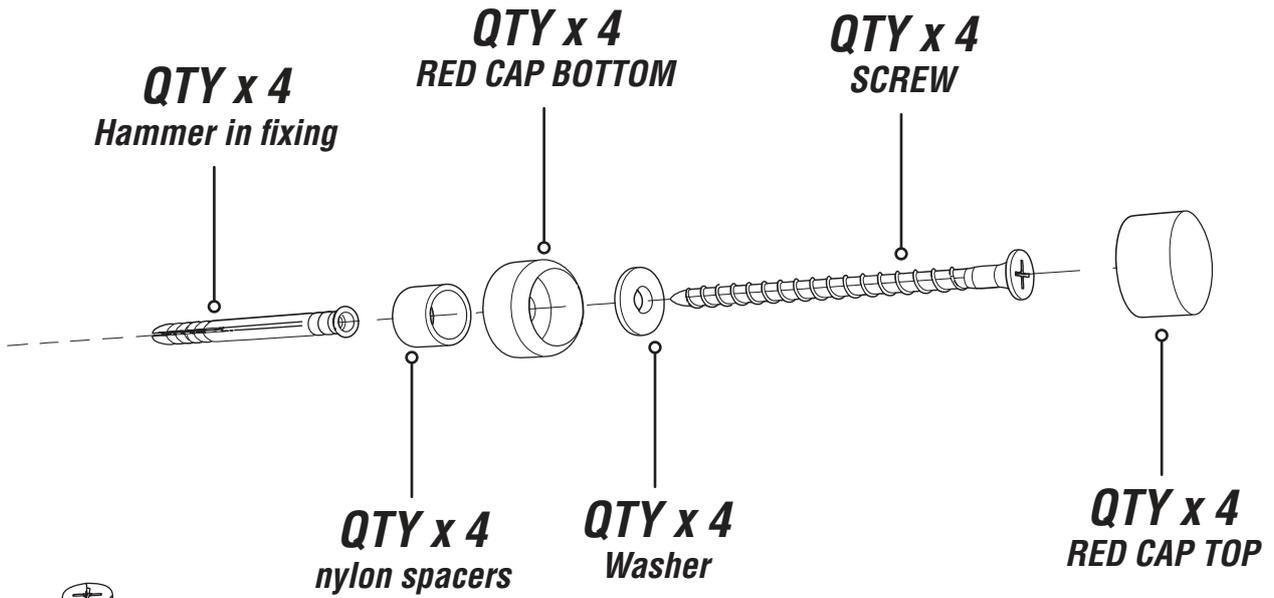


NOTES:

The Hammer in fixing includes the screw

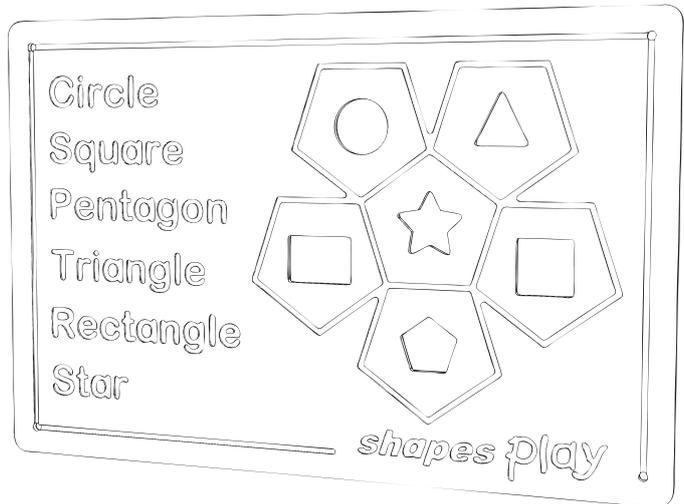

x1 shapes board

TOOLS required

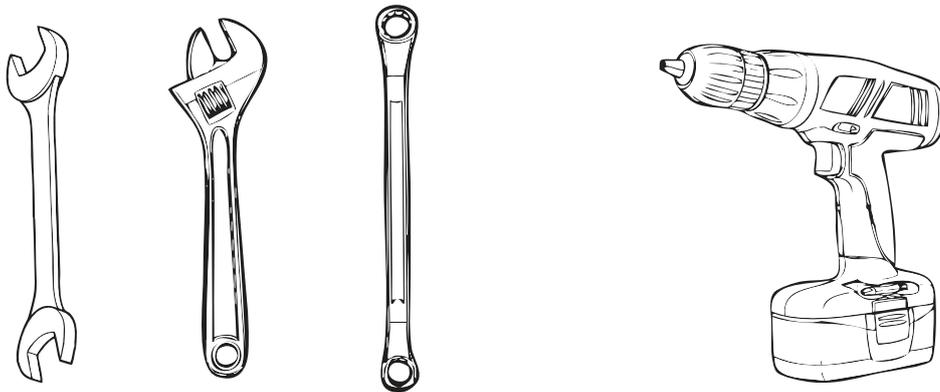


Installation Instructions


1

Attach the SHAPES BOARD to the WALL

Using M12 CUP HAMMER IN FIXING / SPACERS / SCREWS / END CAPS

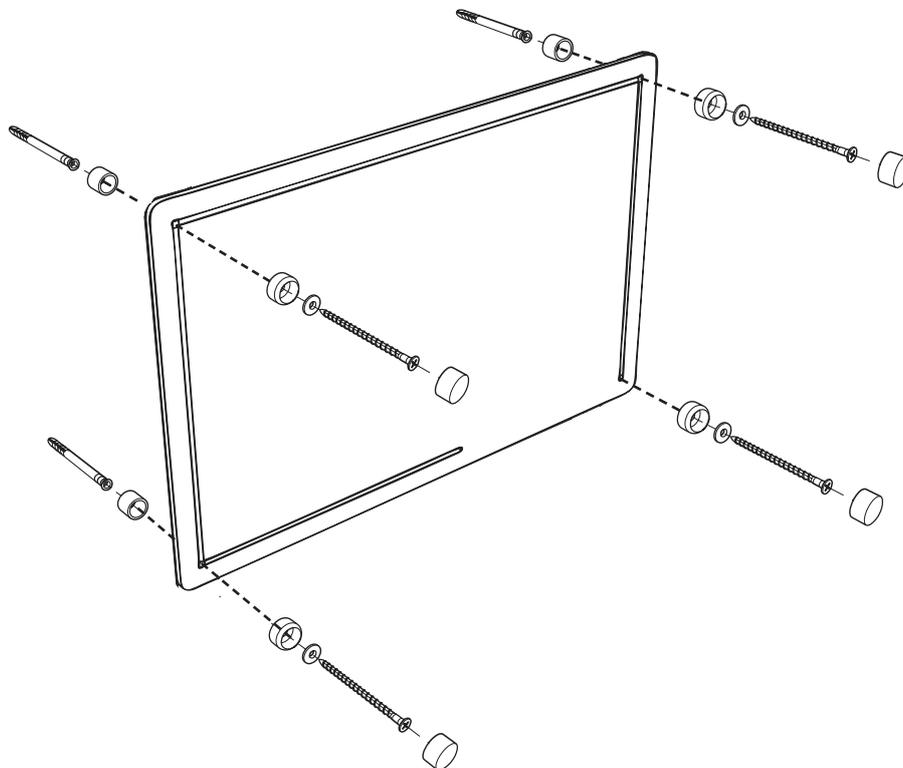

Additional Dimensions

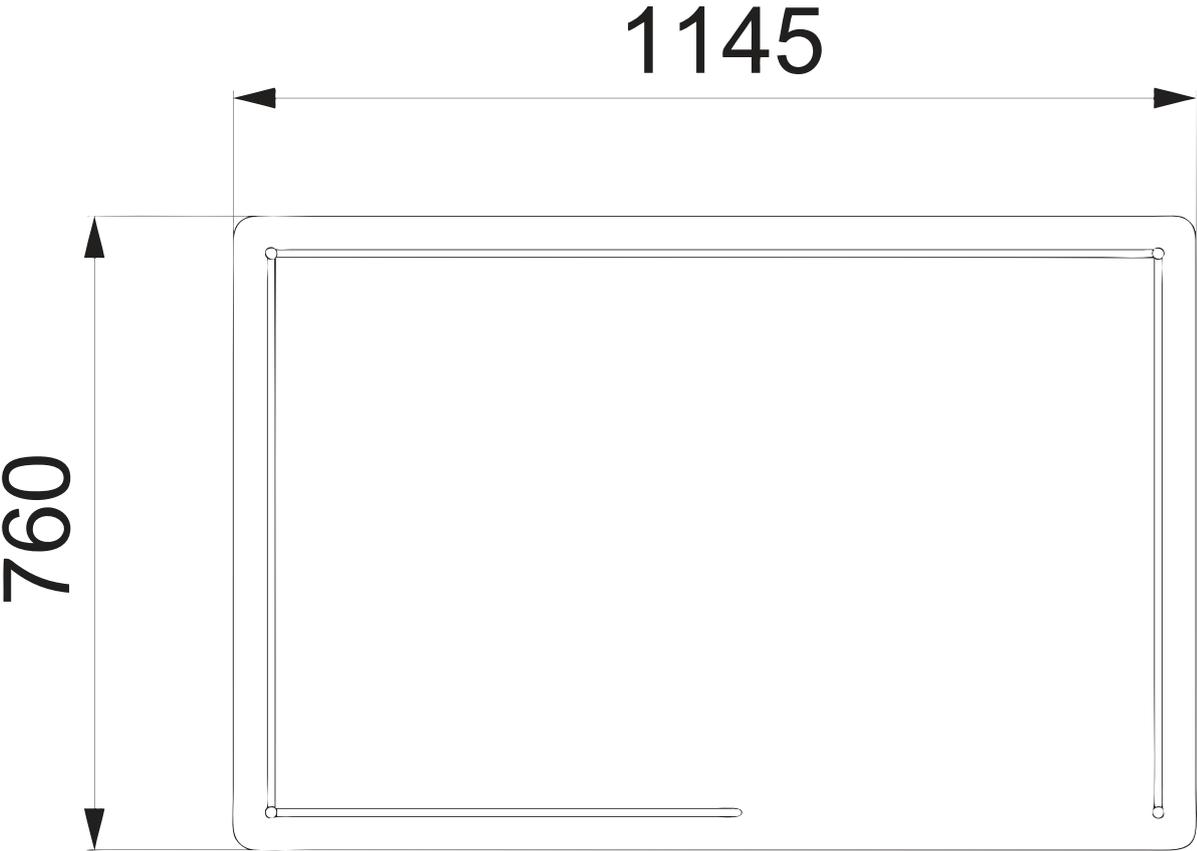


OPTION for POSTS

PARTS required



x4 (M12 120 cup square hex)



PB1 QTY x 2
(90mm x 90mm)



x4 (M12 Nylocs)




x4 (End Caps)

Installation Instructions

1


Attach the SHAPES BOARD to the PB1 timbers

Using M12 CUP SQUARE BOLTS / NYLOCS / END CAPS


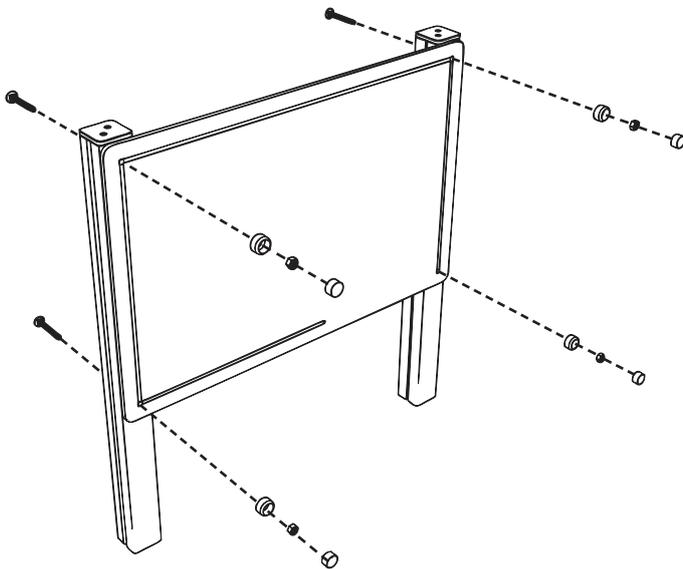


NOTES:

RED END CAP MUST BE POSITIONED AT THE FRONT of the panel

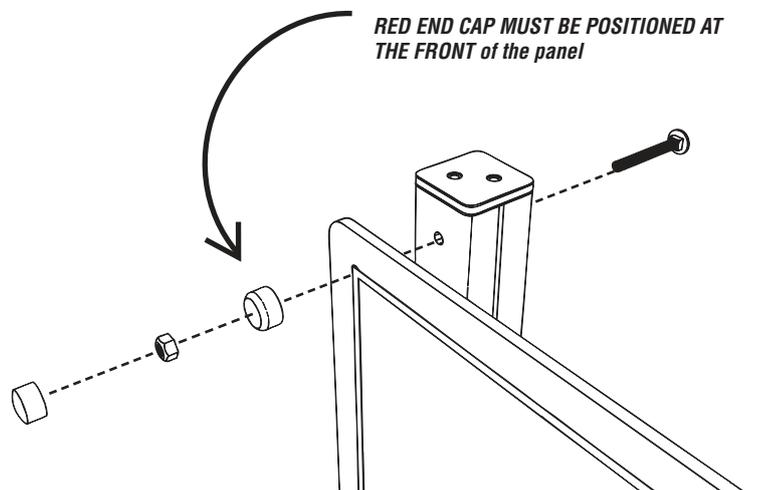

Foundation Details

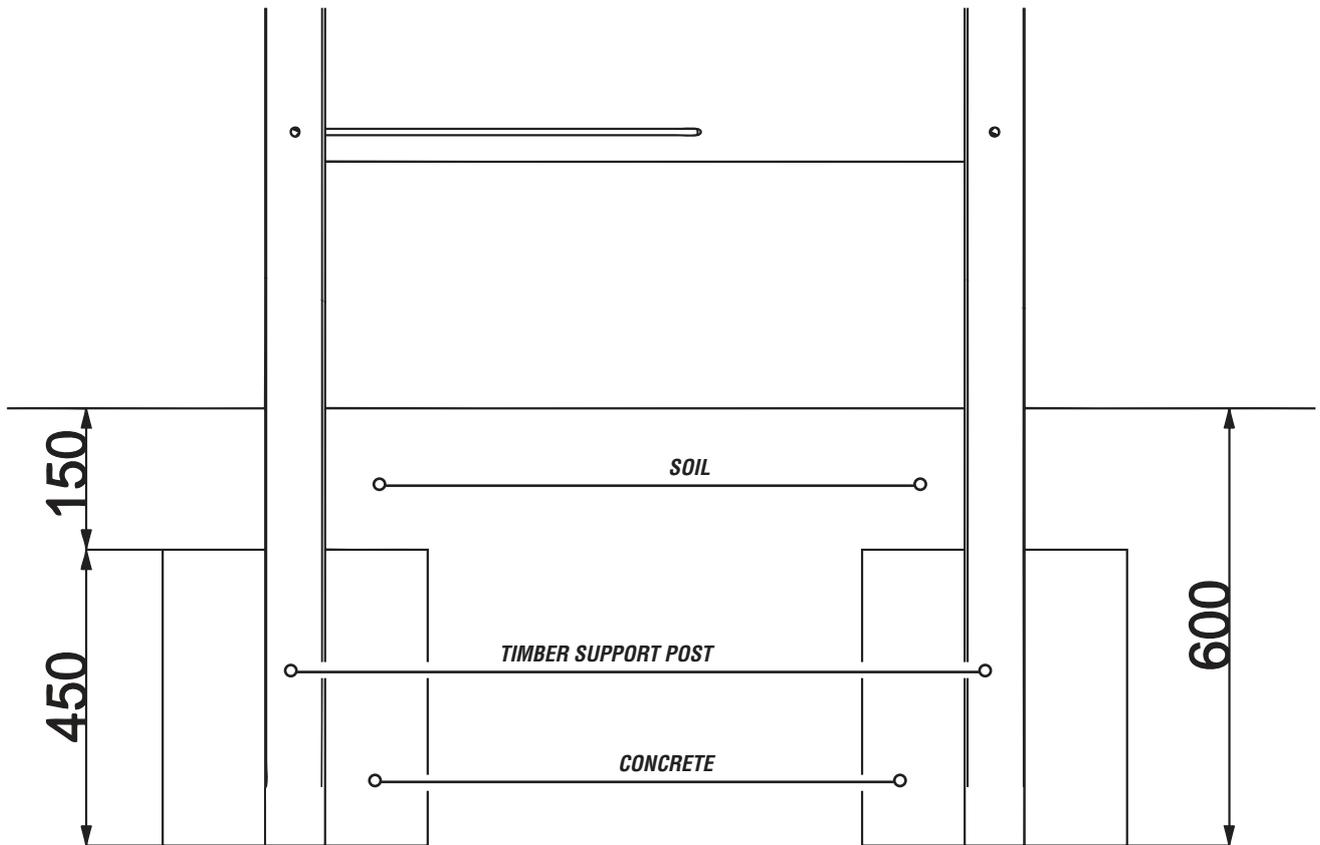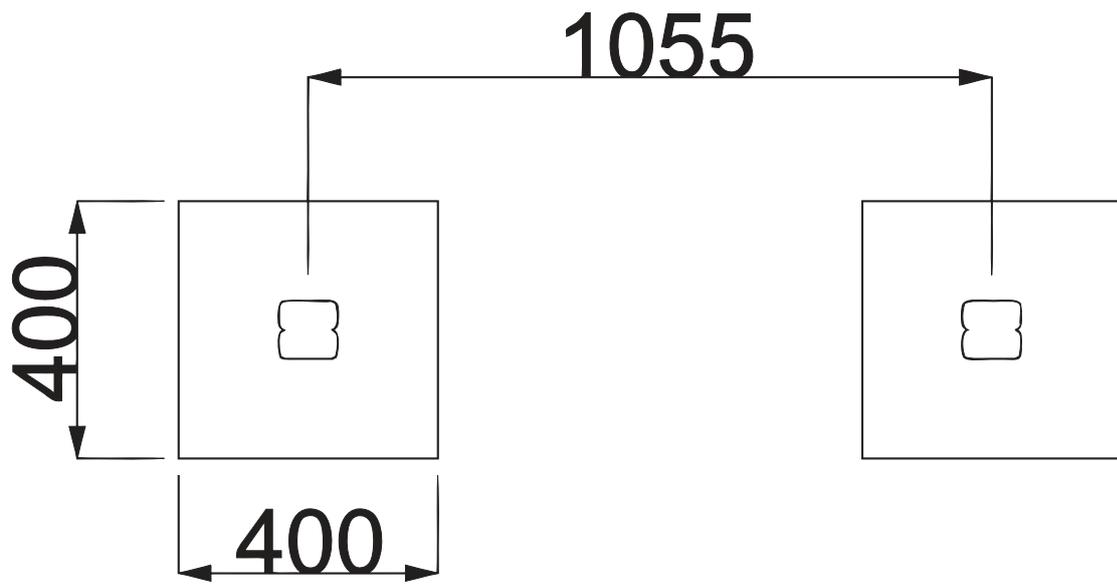

Additional Dimensions

