



**CP067(D) - TIMBER KICK BOARD INC**  
**BASKETBALL & TARGET**  
*Installation Instructions*

*creative  
play*

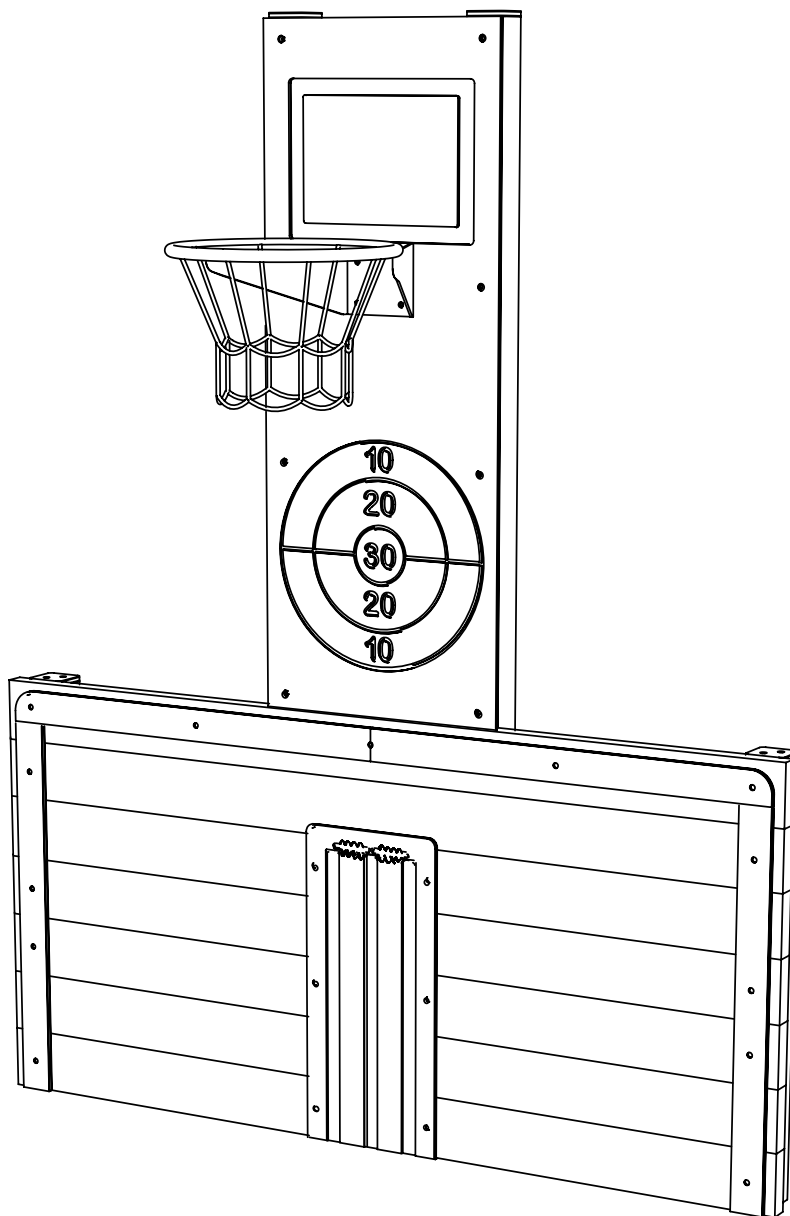


# ***PARTS REQUIRED***

---

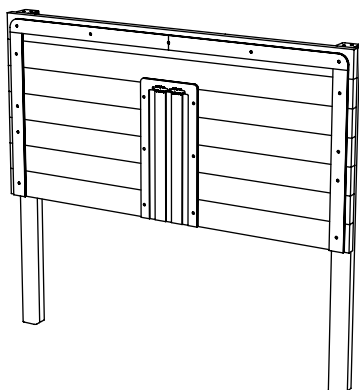



***CP067(D)***

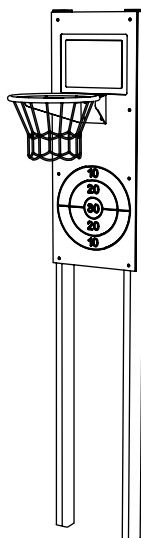



***CP067(D)***

# ***TOOLS REQUIRED***

---

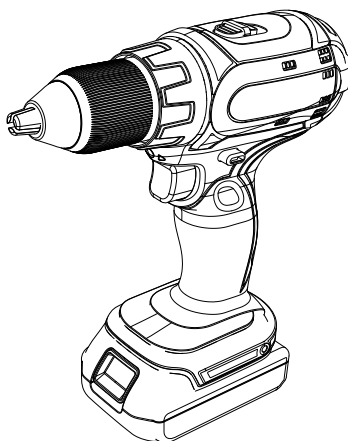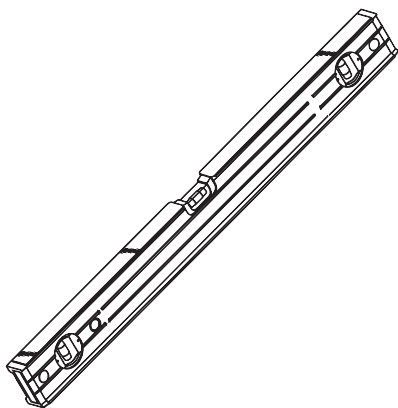


# FOUNDATION DETAIL

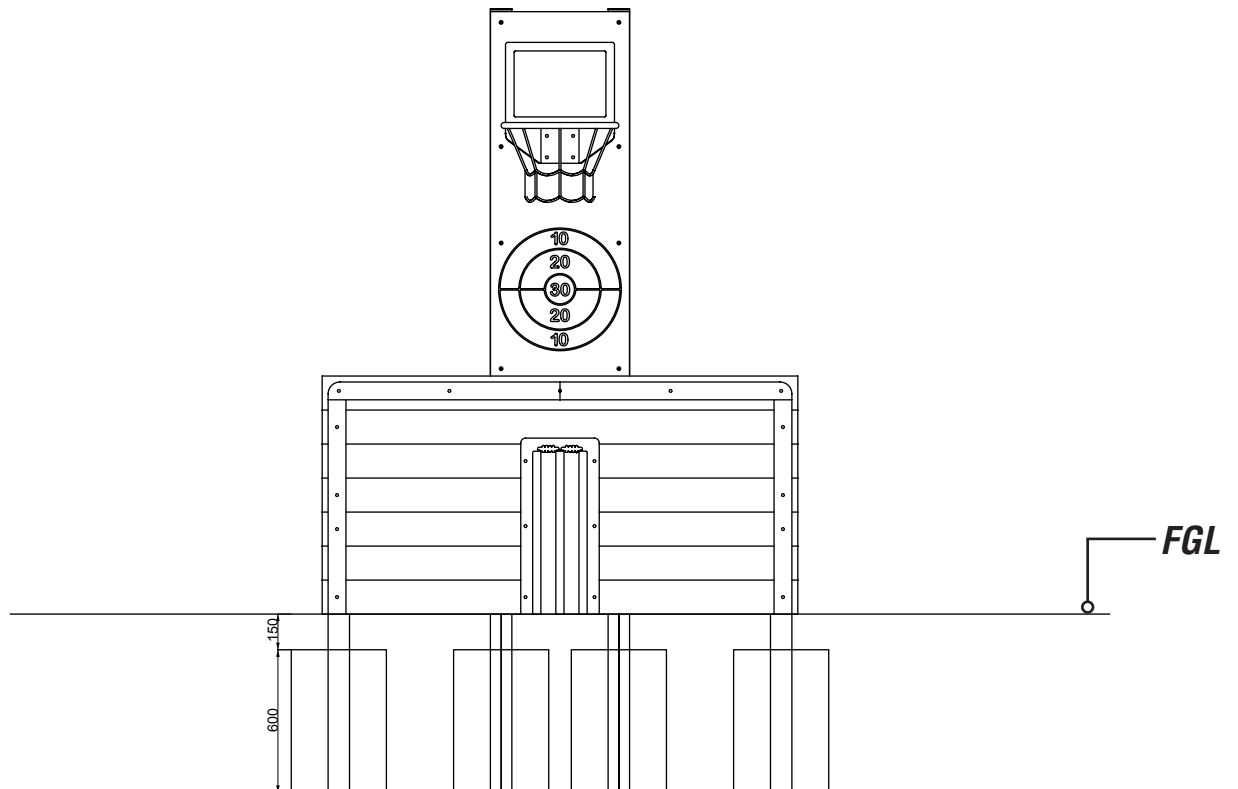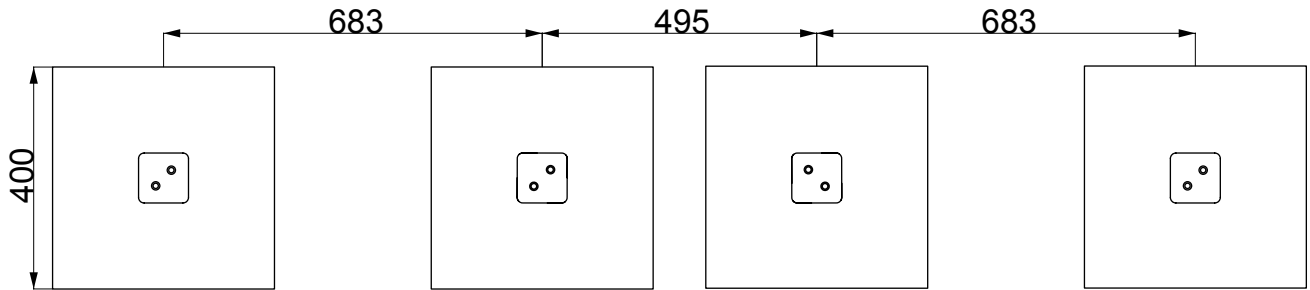

# INSTALLATION INSTRUCTIONS


**1**

**ATTACH BASKETBALL TARGET CENTRALLY TO KICKBOARD  
USING M8X80 SCREWS**

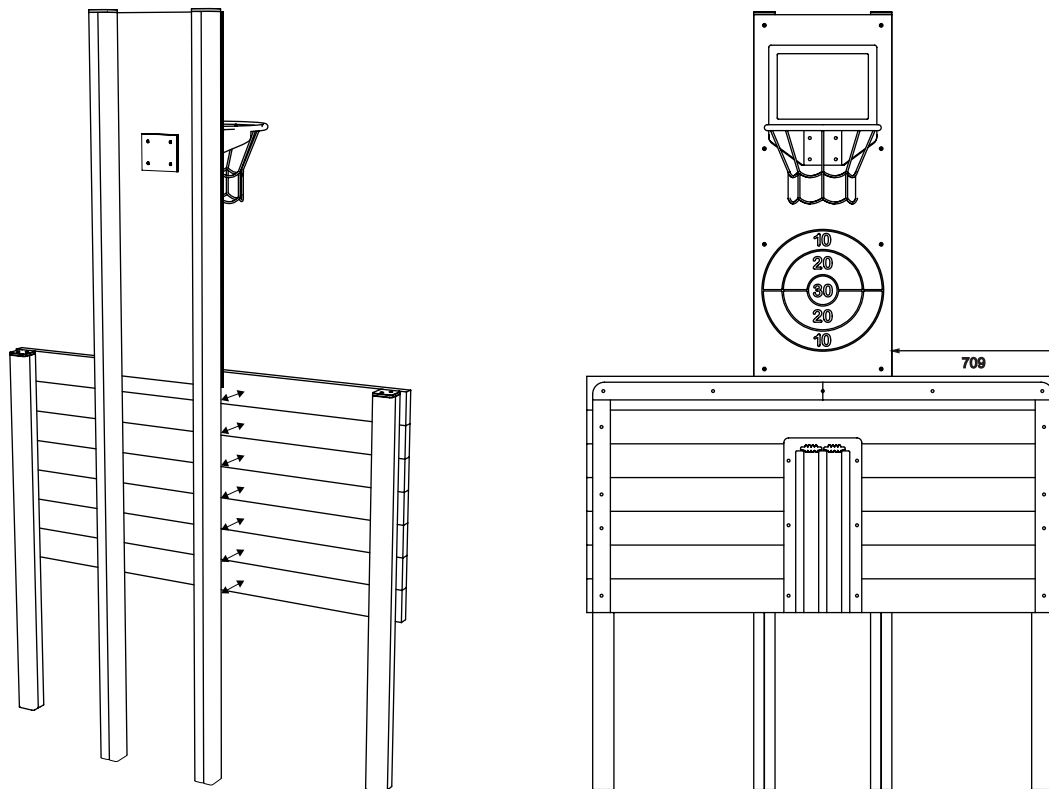

**2**

**INSTALL CP067(D) INTO THE GROUND**

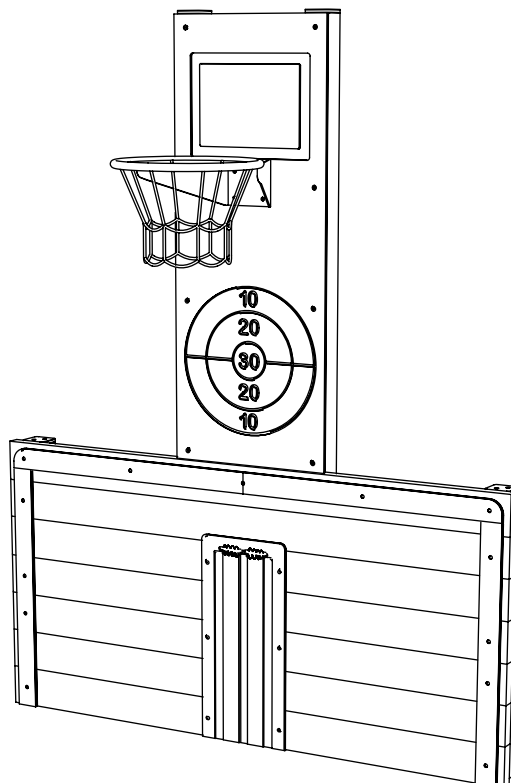

# ADDITIONAL MEASUREMENTS

