



S119 - QUAD SWING

Installation Instructions

**creative
play**

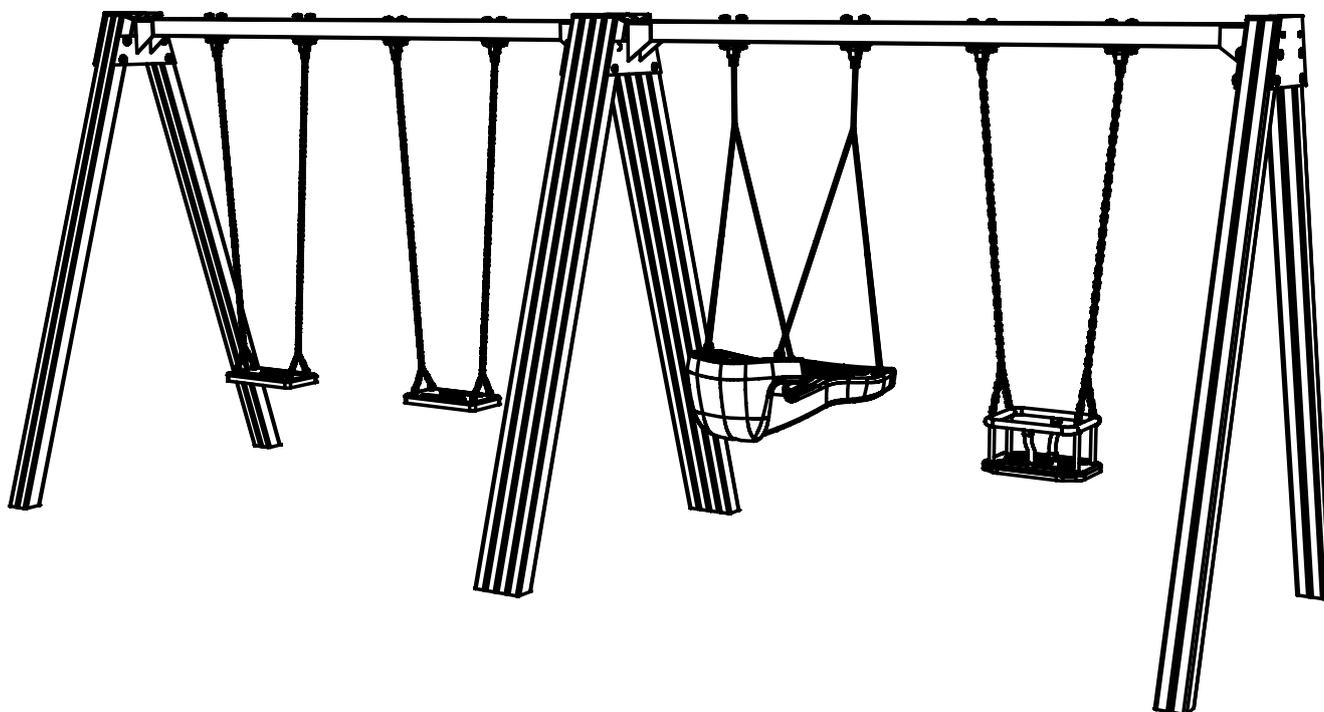


PARTS REQUIRED

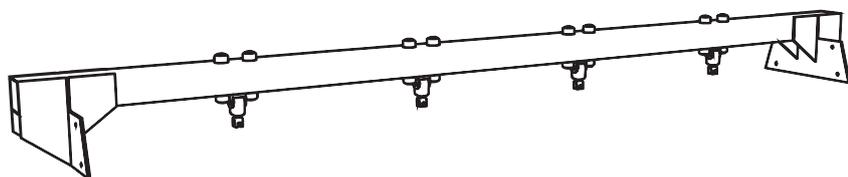

X2

DOUBLE SUPPORT BEAM

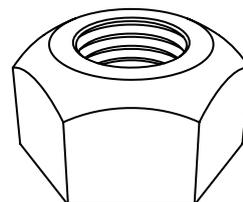

X12

M12 NYLOCS




X4

M8X80 WOODSCREWS



X8

M12X160 BOLT

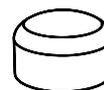


X12

M12 END CAP




X4

M12X260 BOLT

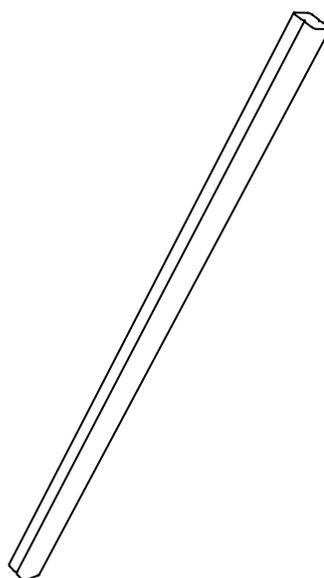

X8


S1 TIMBERS

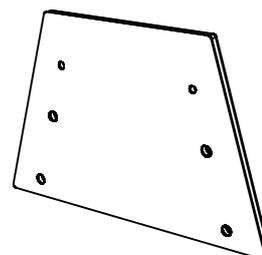

X2

PLAYTEC COVER

PARTS REQUIRED

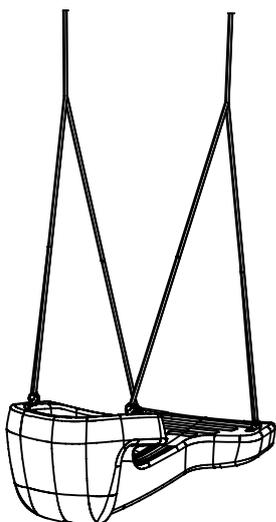

X1

TANGO SEAT INC CHAINS



X2

FLAT SEAT INC CHAINS



X1



CRADLE SEAT INC CHAINS




X16


M8 NUT CAP

FOUNDATION DETAILS

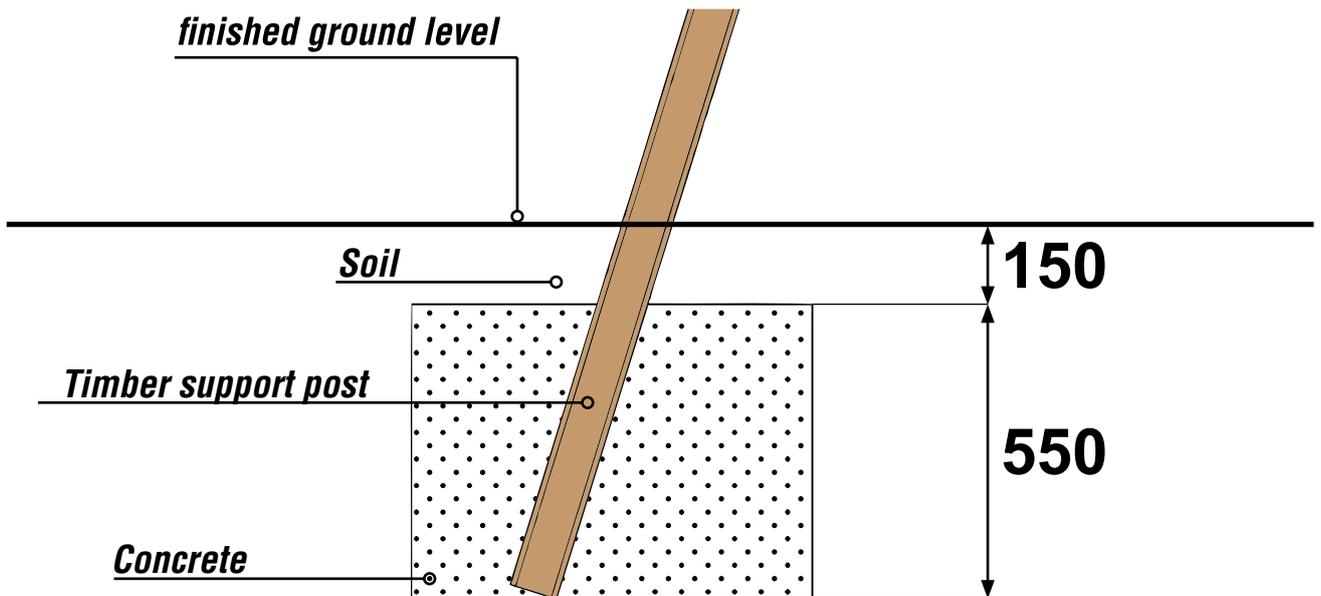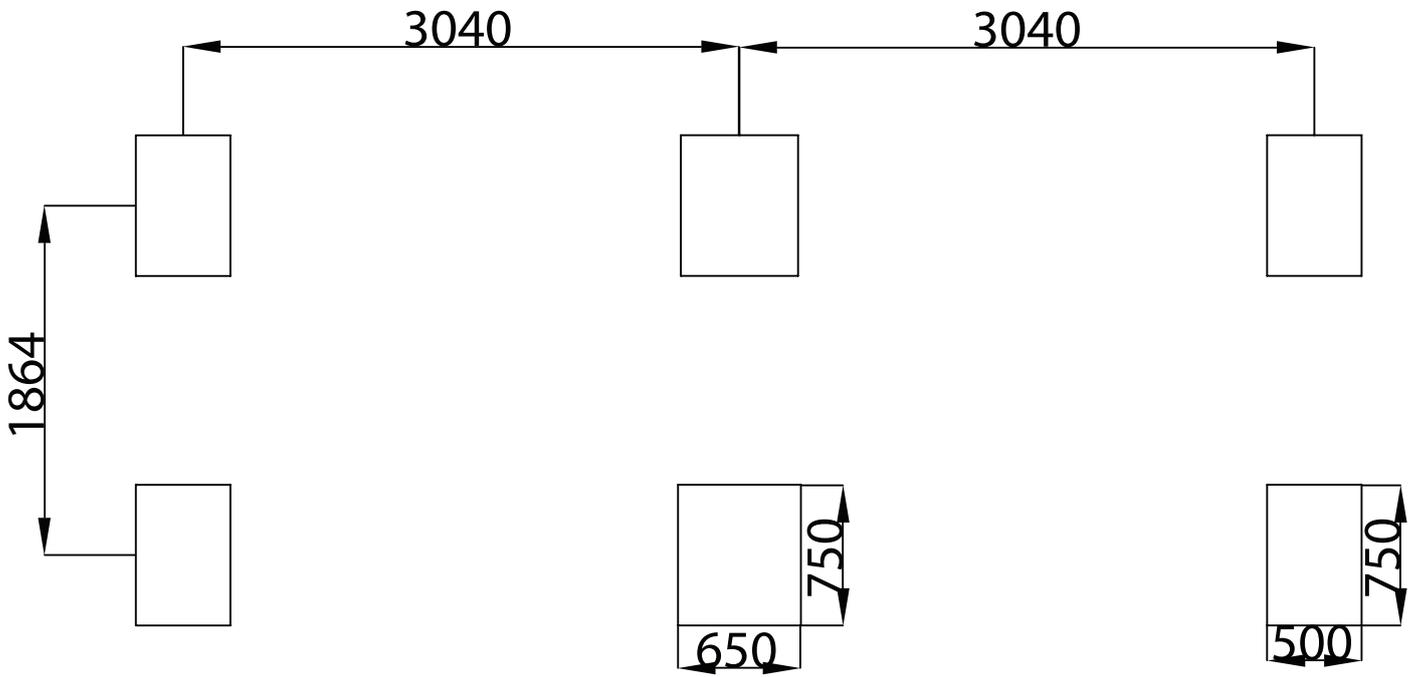

SURFACING DETAILS

-  = **SYNTHETIC**
-  = **LOOSE FILL**
-  = **AREA REQUIRED**

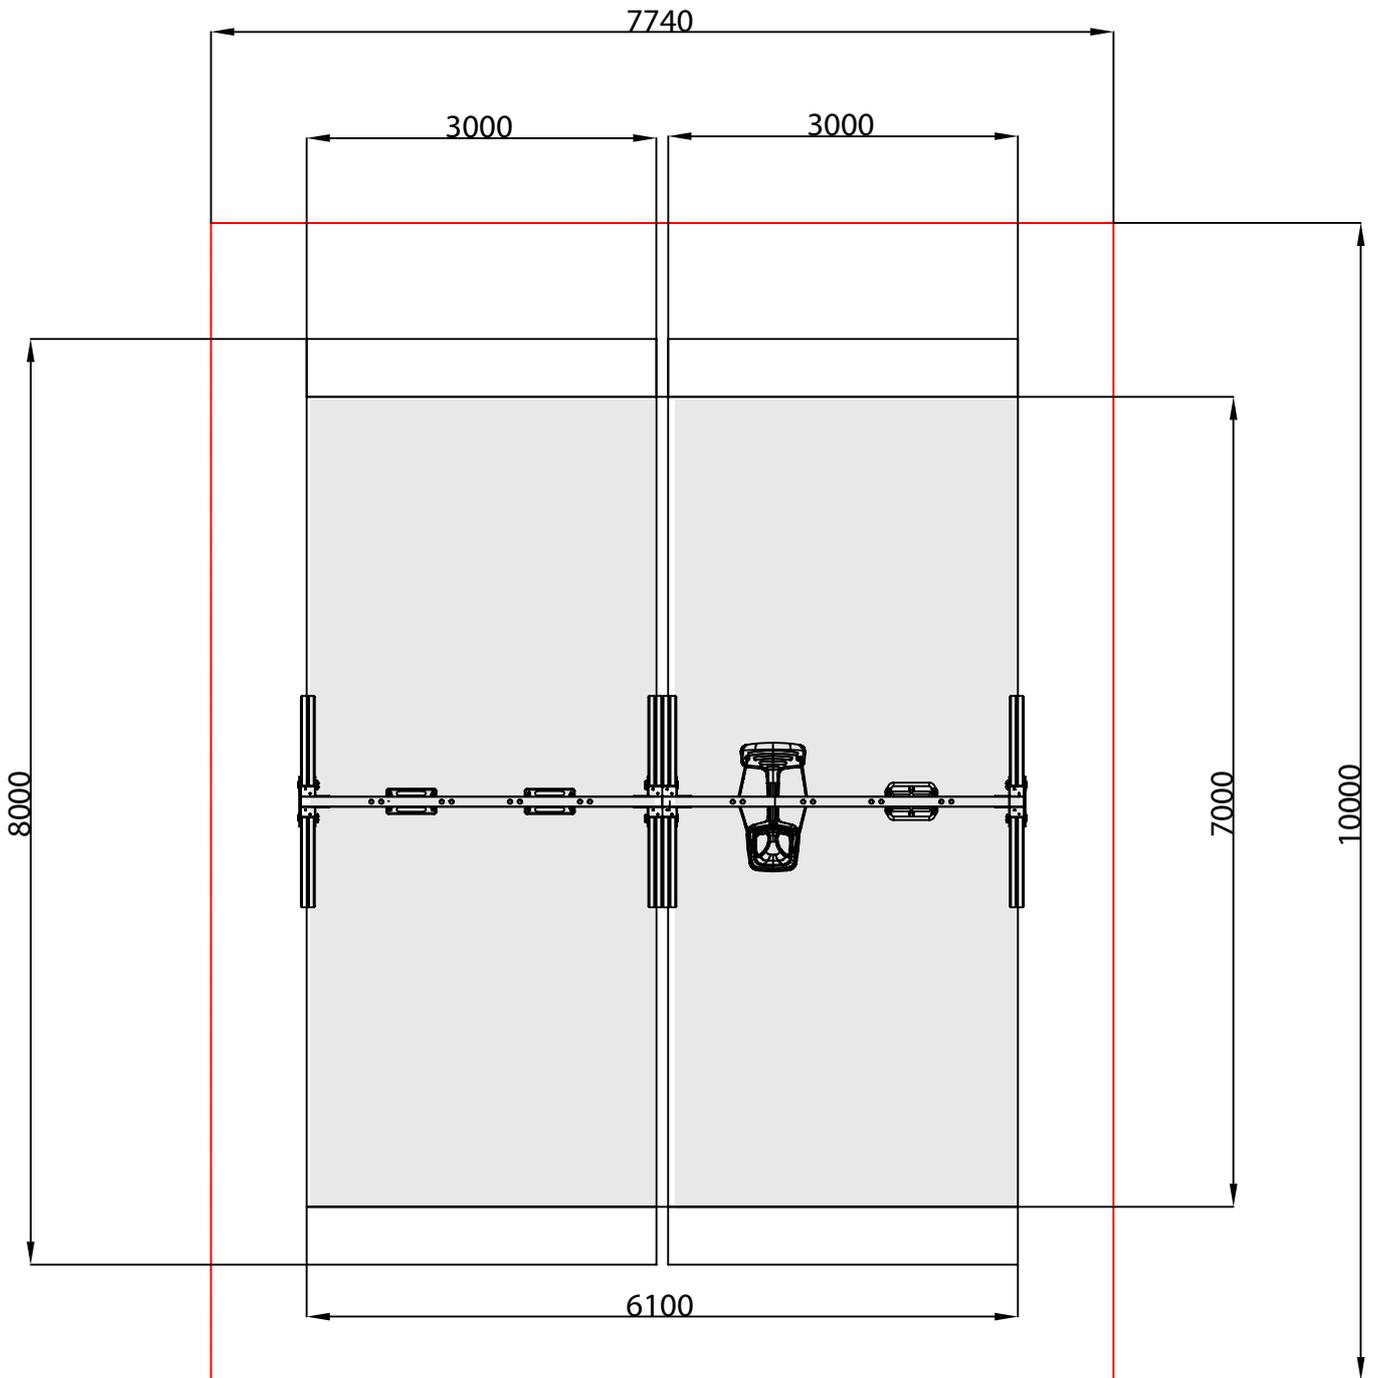


INSTALLATION INSTRUCTIONS

1

ATTACH PLAYTEC COVER AND S1 TIMBERS TO ONE END OF EACH BEAM


USING M12X160 BOLTS [X8], M12 NYLOGS [X8] AND END CAPS [X8]

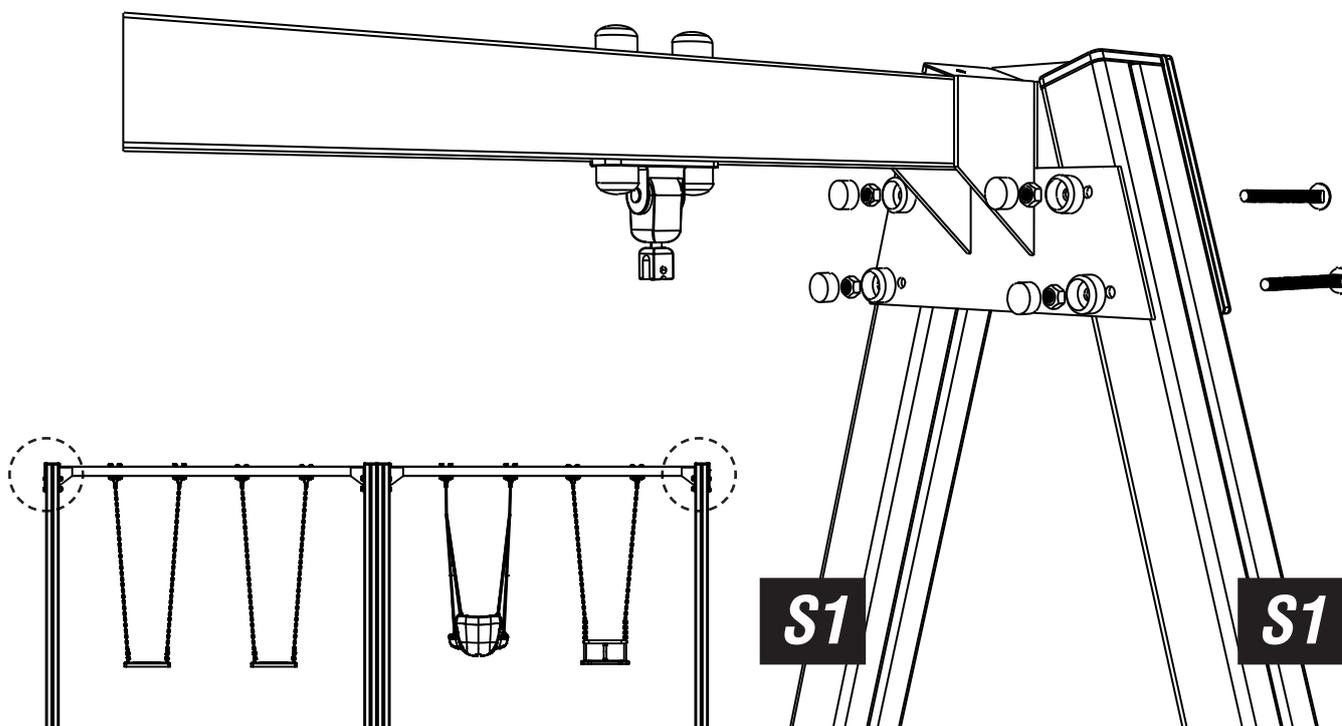

2

ATTACH PLAYTEC COVER TO TIMBERS S1

USING M8X80 WOODSCREWS [X4]

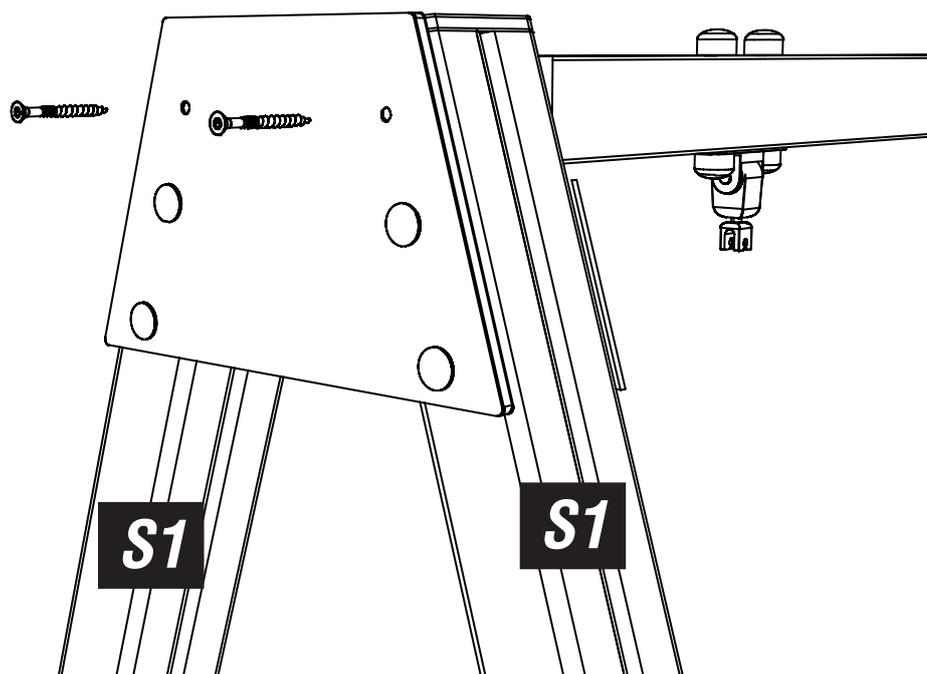


INSTALLATION INSTRUCTIONS

3

SECURE BOTH BEAMS AND MIDDLE TIMBERS TOGETHER


USING M12X260 BOLTS [X4], M12 NYLOGS [X4] AND END CAPS [X4]

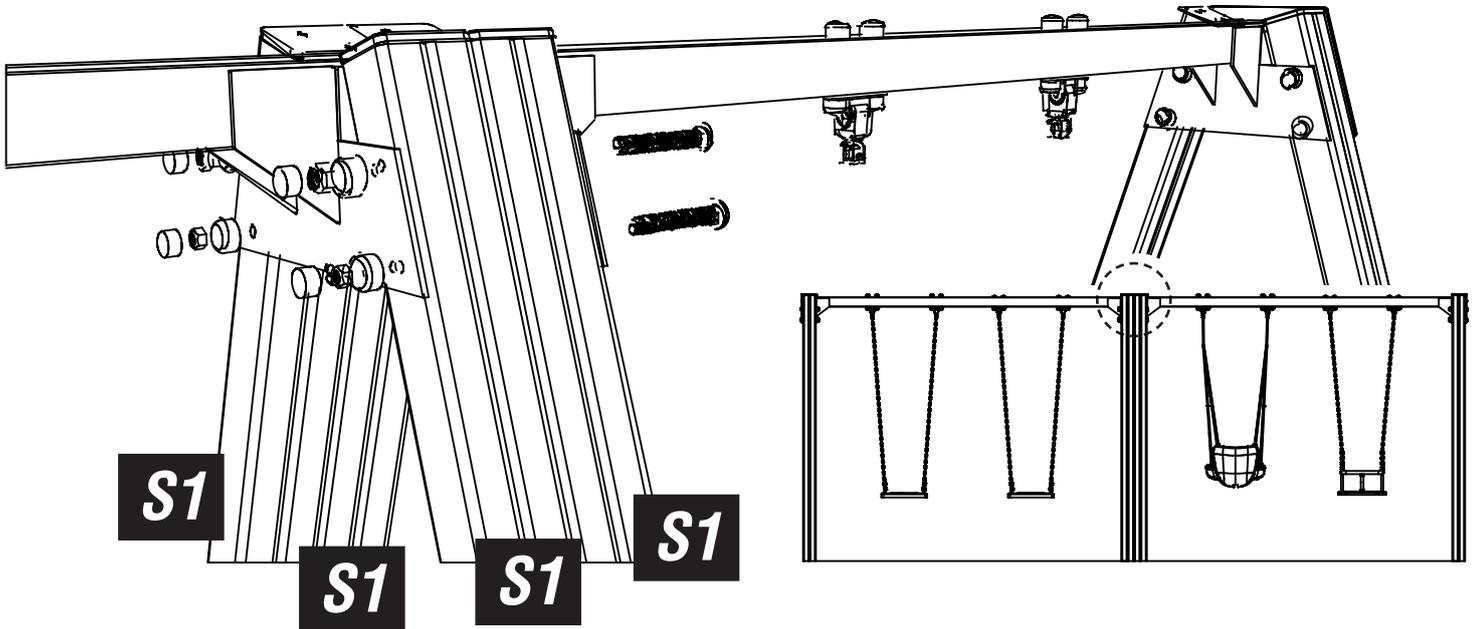

4

INSTALL THE ASSEMBLY

FOLLOW FOUNDATION DETAILS

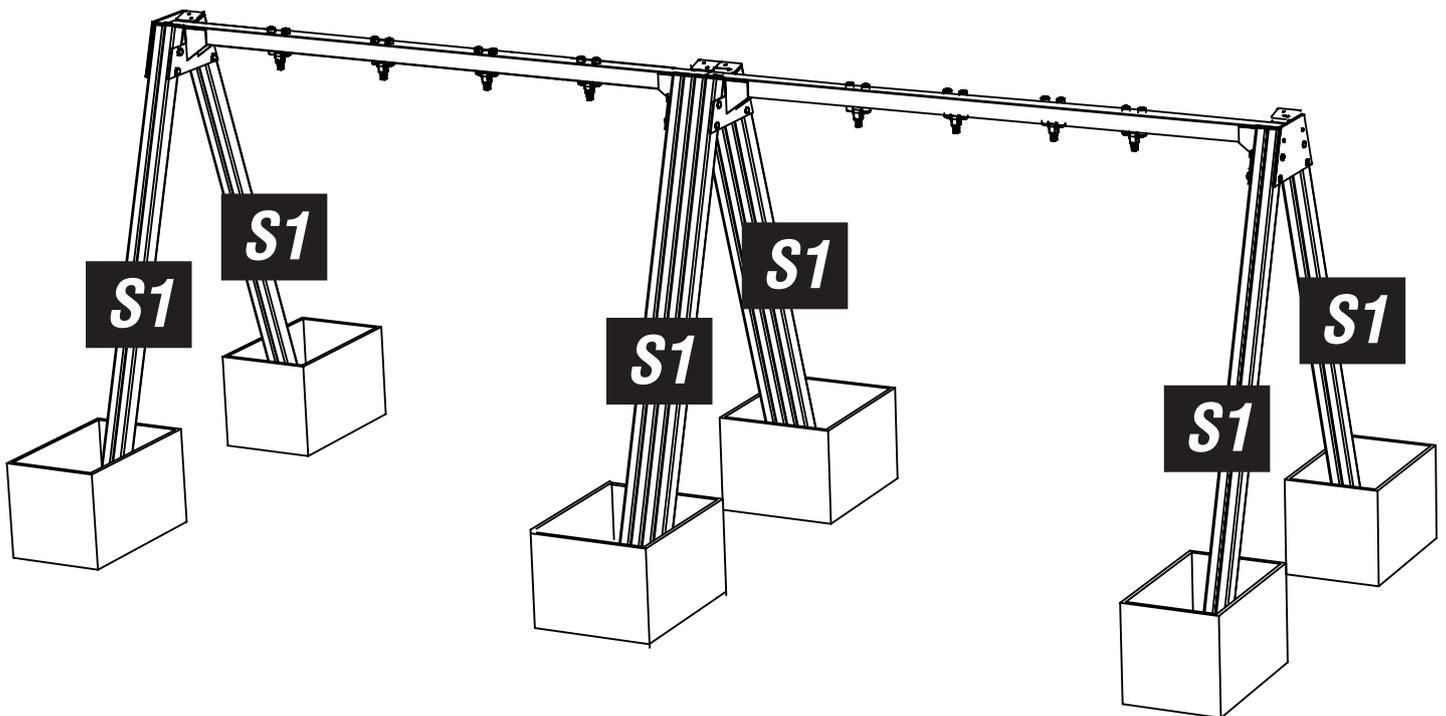


INSTALLATION INSTRUCTIONS

5

ATTACH SEATS TO BEAM

FOLLOW DIMENSION DETAILS ON NEXT PAGE

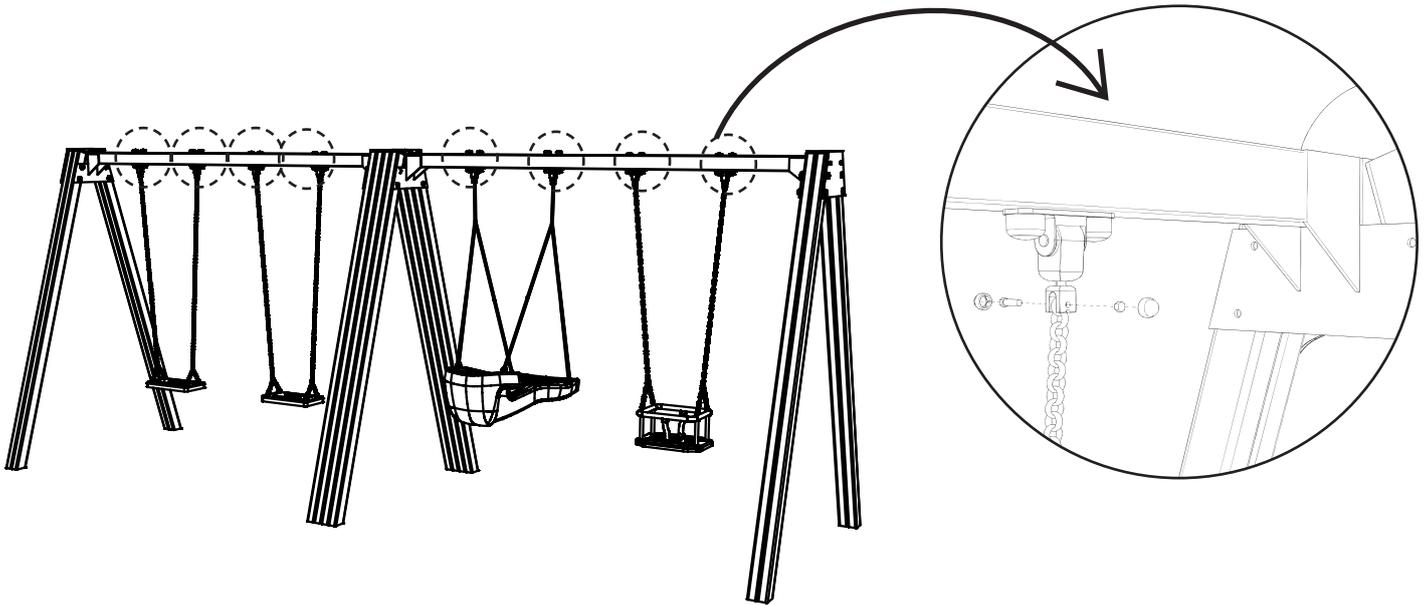

ADDITIONAL DIMENSIONS

