



PF101- TIMBER PALISADE FENCING 1.0M Installation Instructions

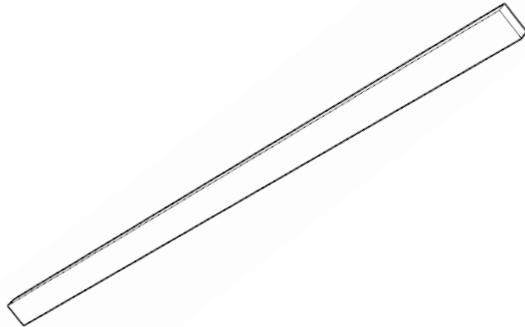

x2

UPRIGHTS -PF101-A

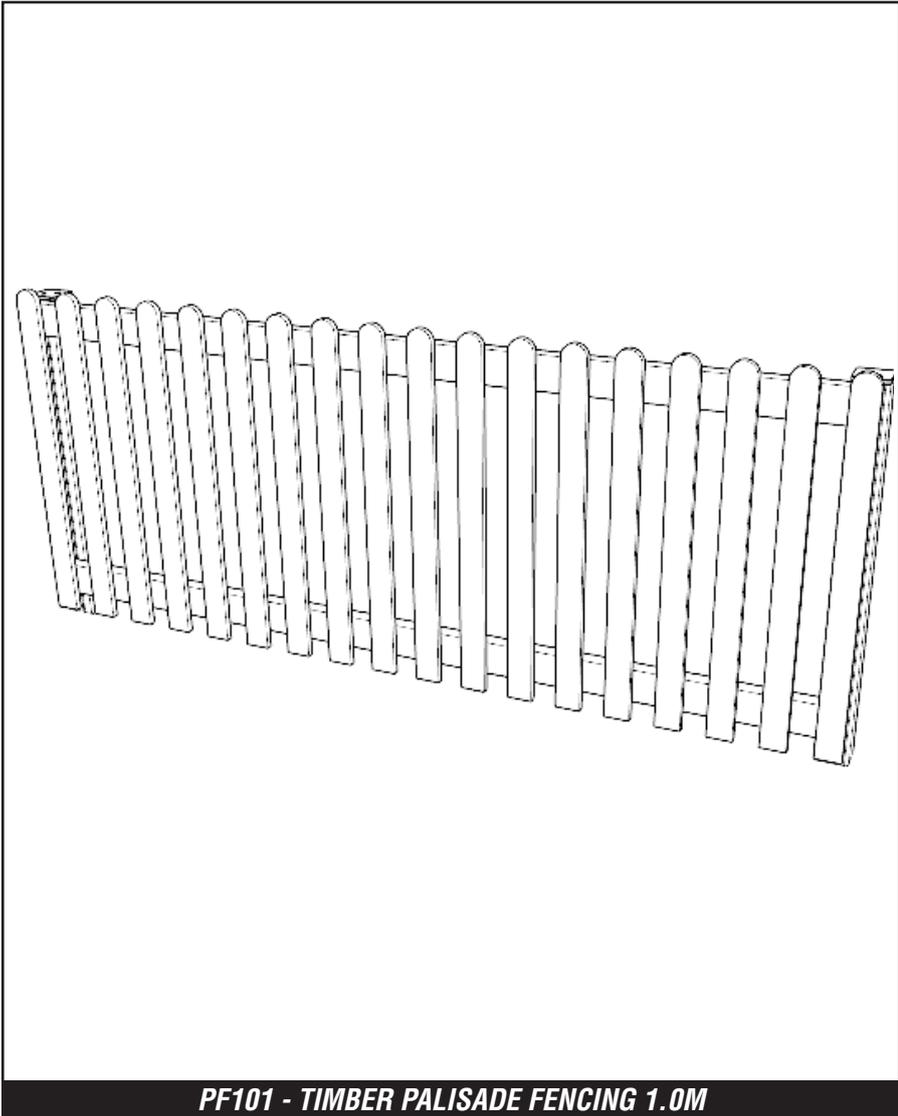

x8

M8X80



x72

M6X40



x18



SLATS



x2

UPRIGHTS -PF101-B

FOUNDATION DETAILS

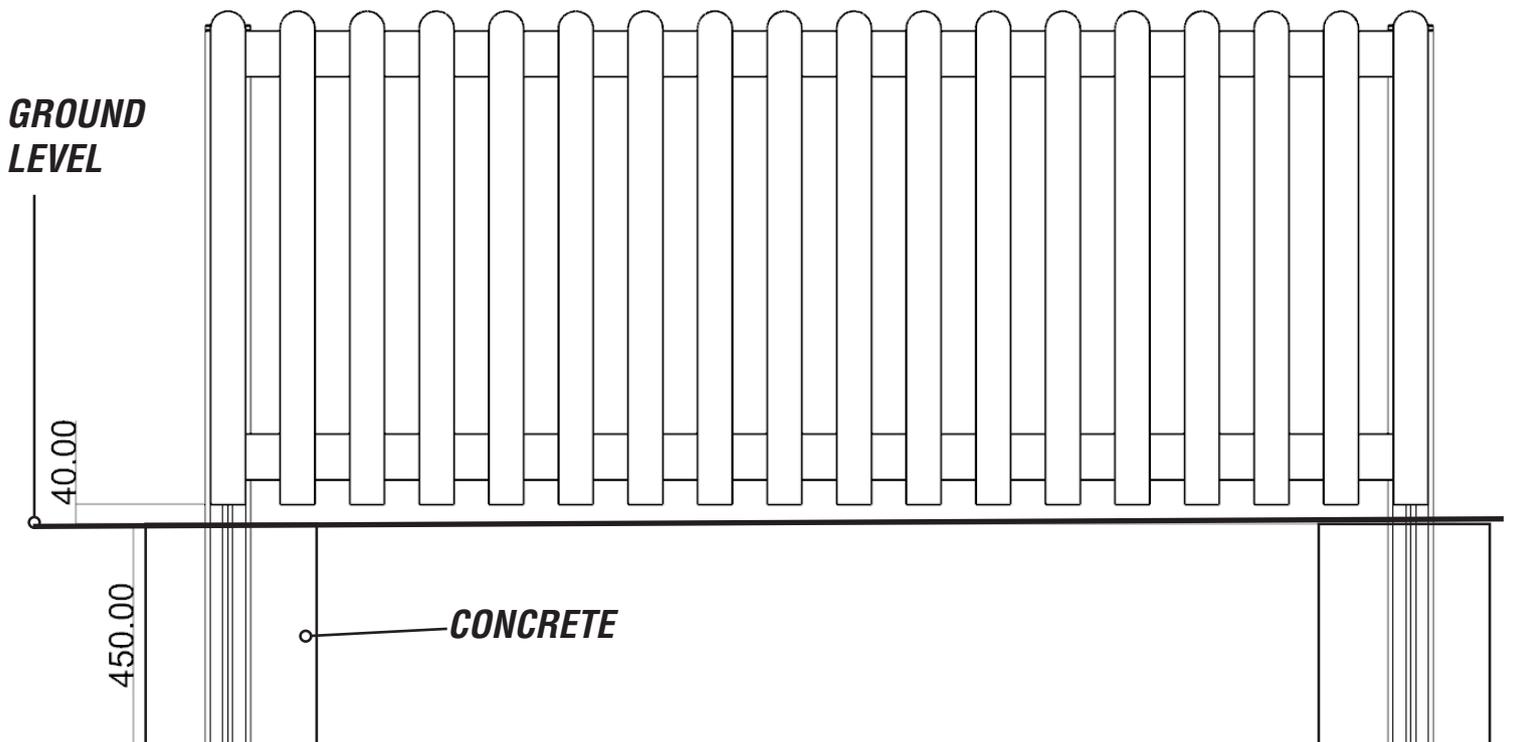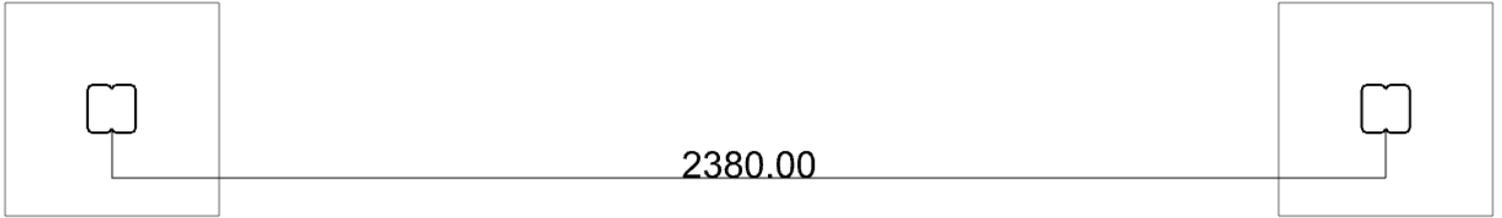



INSTALLATION INSTRUCTIONS

1 INSTALL UPRIGHTS INTO THE GROUND





2 POSITION THE GUARD RAIL / PANEL AS SHOWN BELOW USING - M8X80 [X8]

**SCREW TIMBER OFF CENTRE 45MM
USING M8X80 X8**

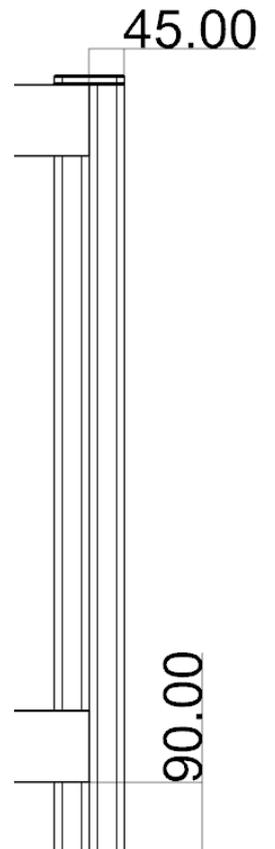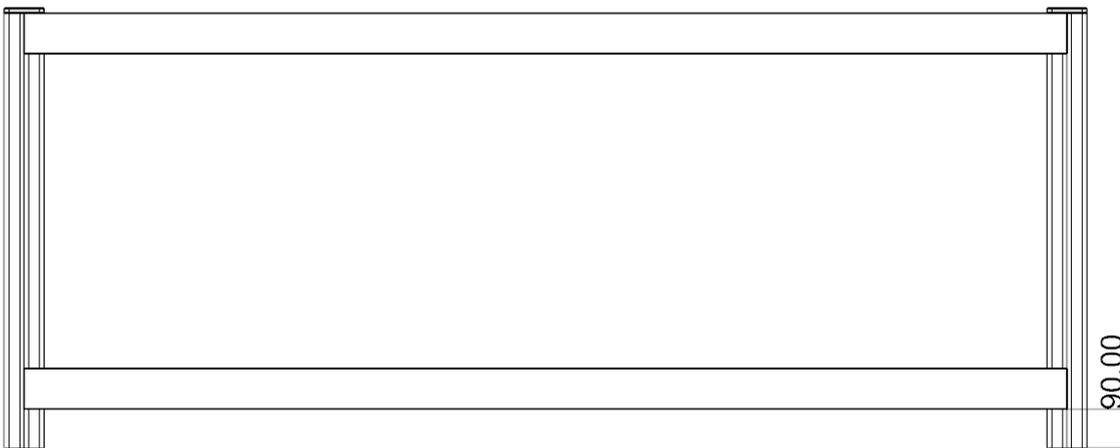

INSTALLATION INSTRUCTIONS

3 ATTACH SLATS TO THE FRAME USING M6 X 40 WOOD SCREWS [X72]

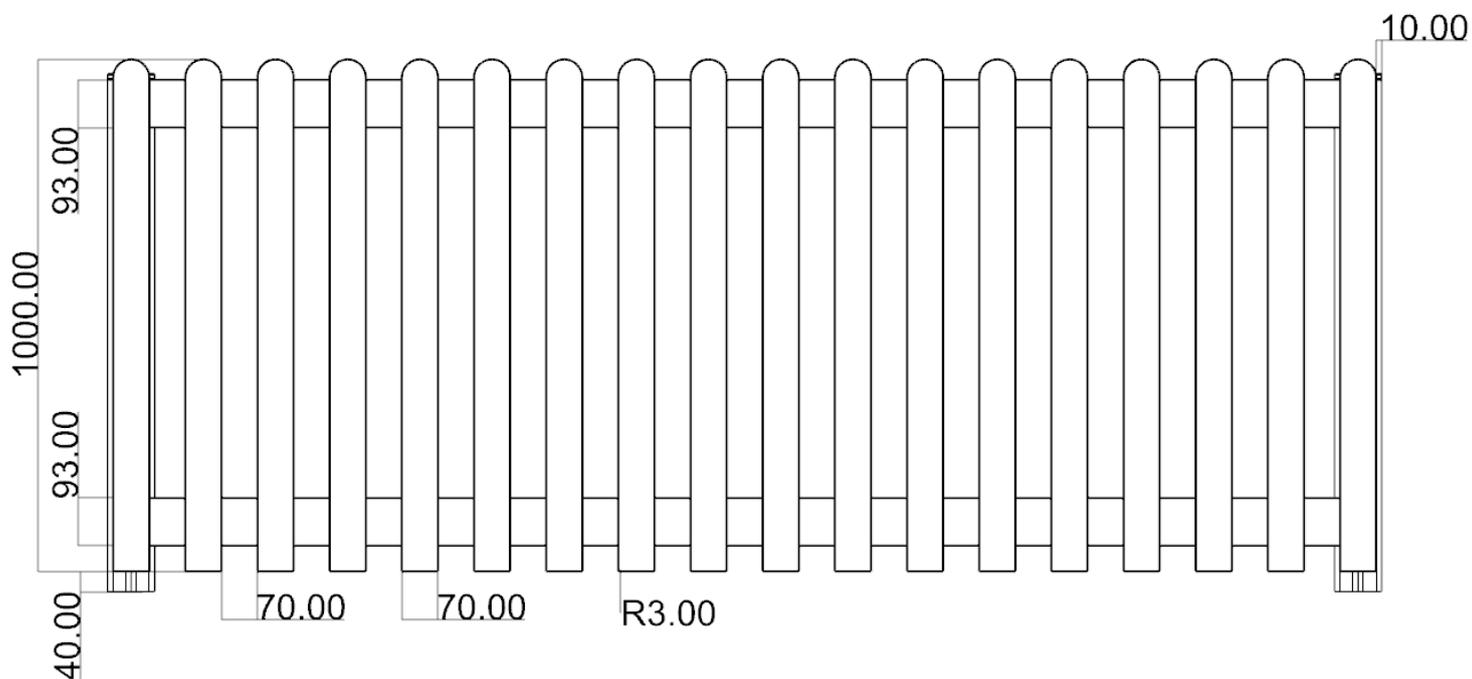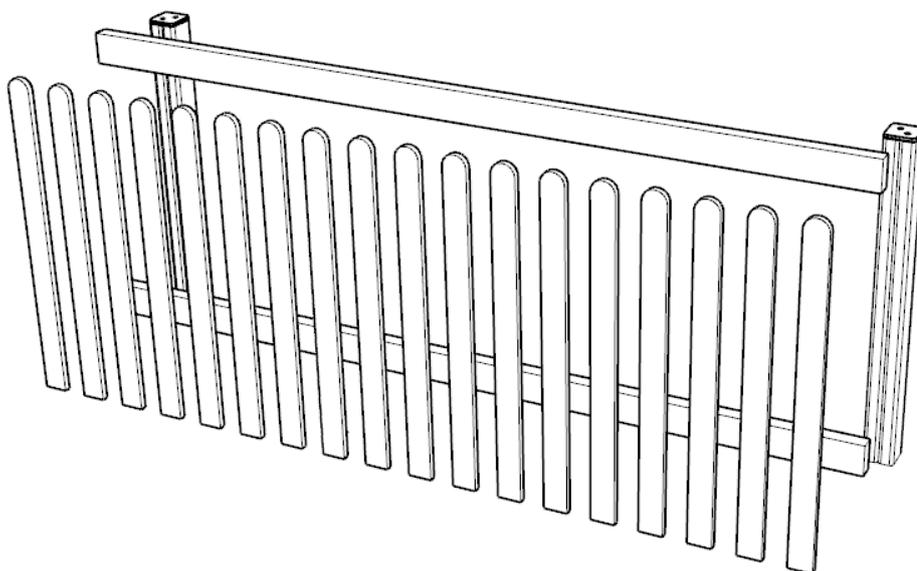

(SPACING BETWEEN SLATS 70MM)

ADDITIONAL DIMENSIONS

