

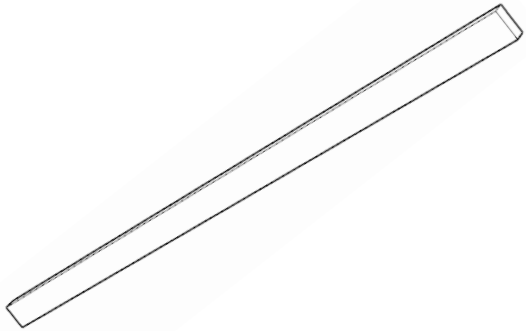


PF103- MULTI-COLOURED PLAYTEC FENCING 1.0M

Installation Instructions

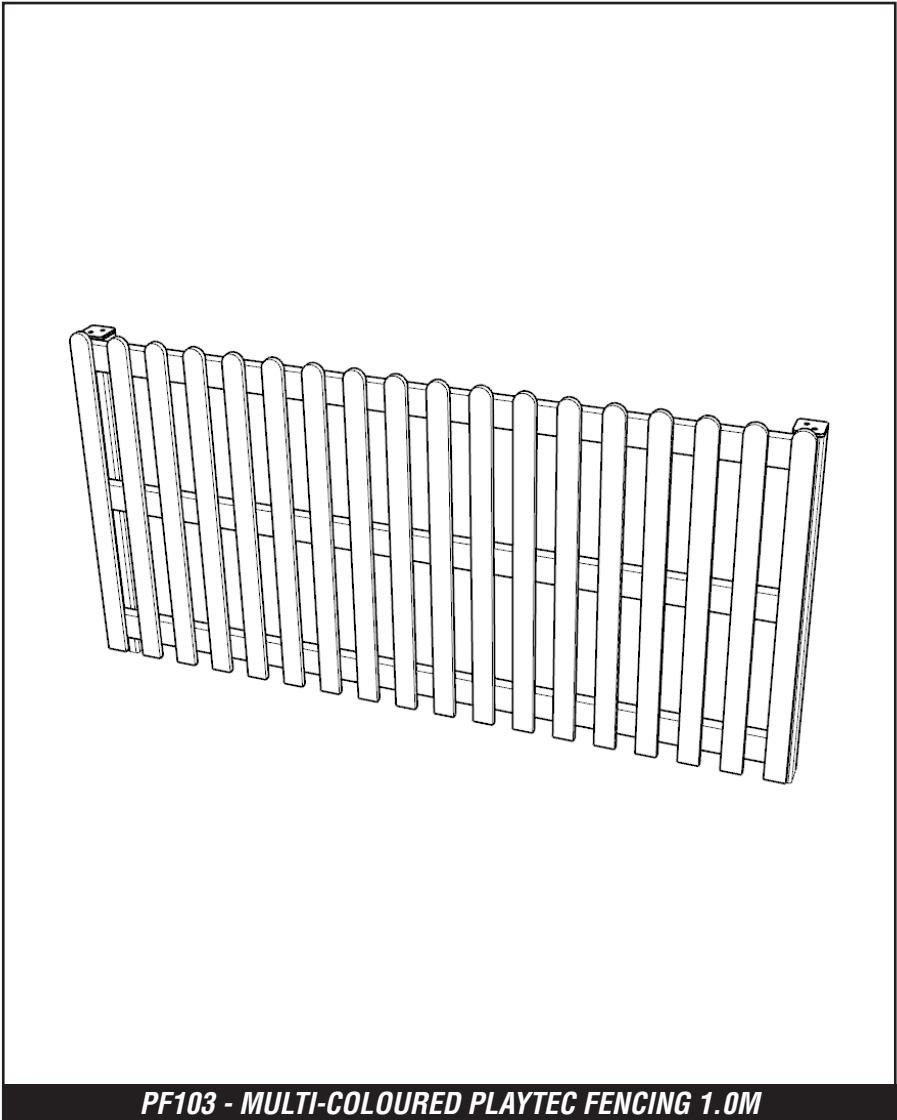

x3
HORIZONTAL -PF103-A

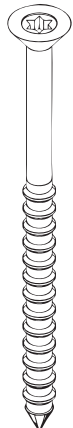


x12
M8X80



x54
M6X40





x18
COLOURED PLAYTEC SLATS

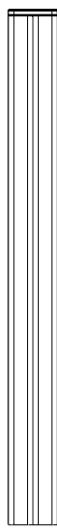

x2
UPRIGHTS -PF103-B

FOUNDATION DETAILS

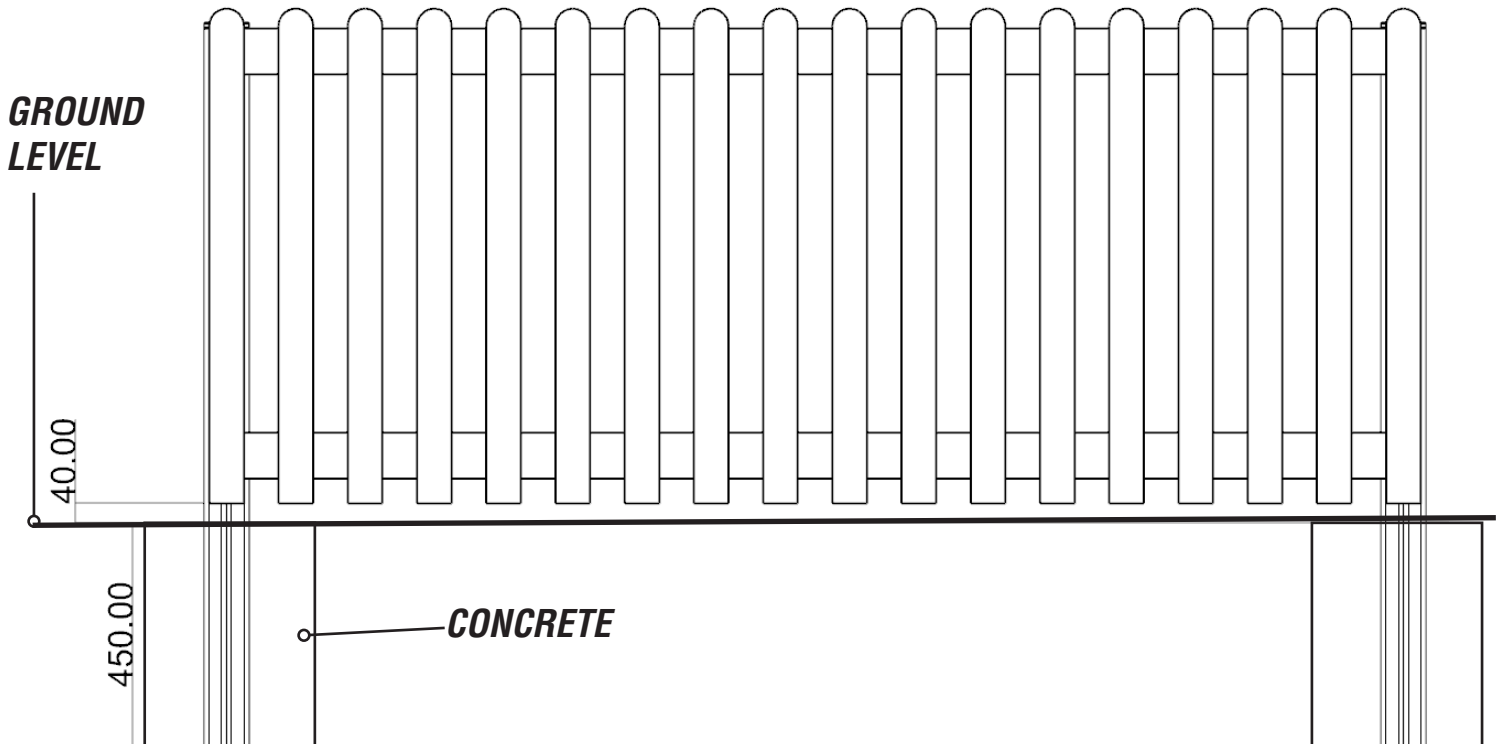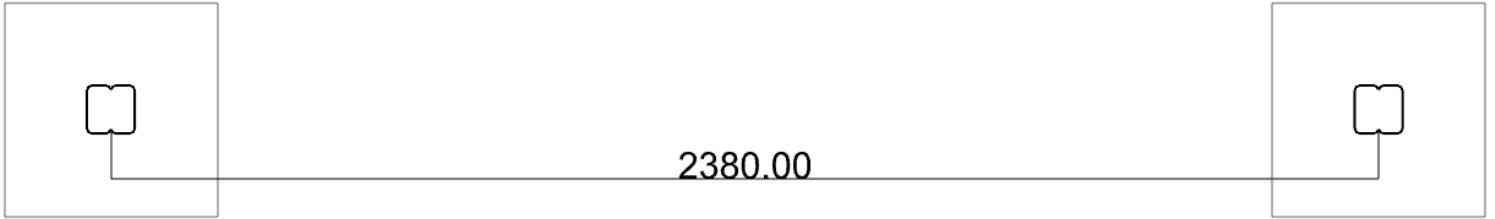

INSTALLATION INSTRUCTIONS


1 INSTALL UPRIGHTS INTO THE GROUND



2 POSITION THE GUARD RAIL / PANEL AS SHOWN BELOW



USING - M8X80 [X12]

SCREW TIMBER OFF CENTRE 45MM
USING M8X80 X12

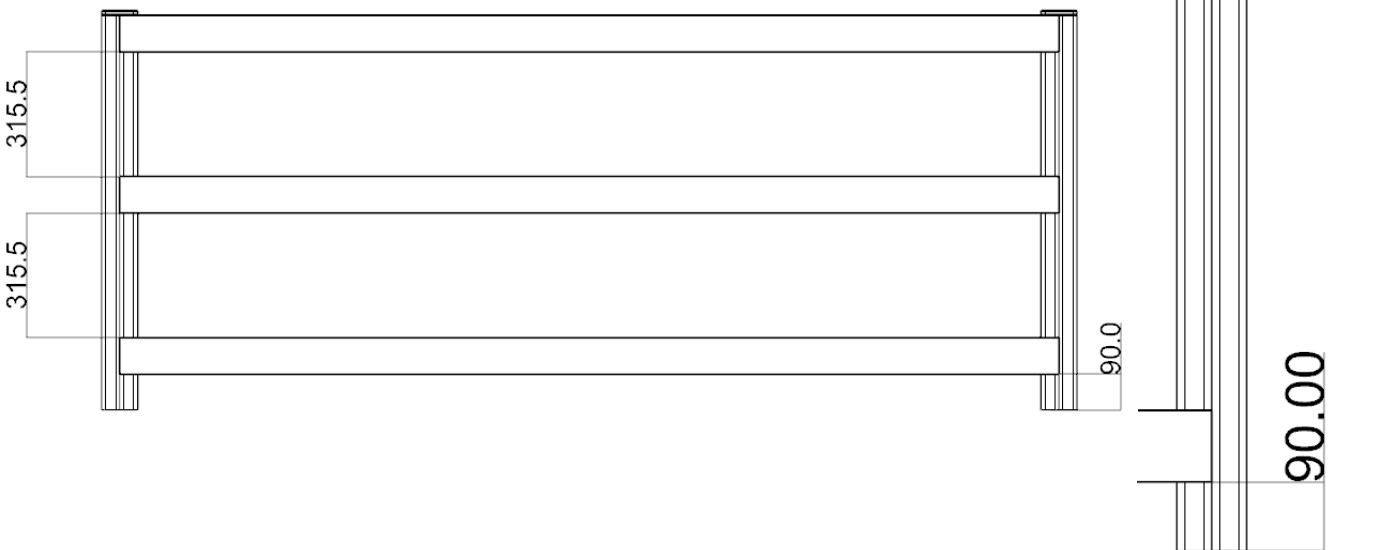

INSTALLATION INSTRUCTIONS

3 ATTACH SLATS TO THE FRAME USING M6 X 40 WOOD SCREWS [X72]

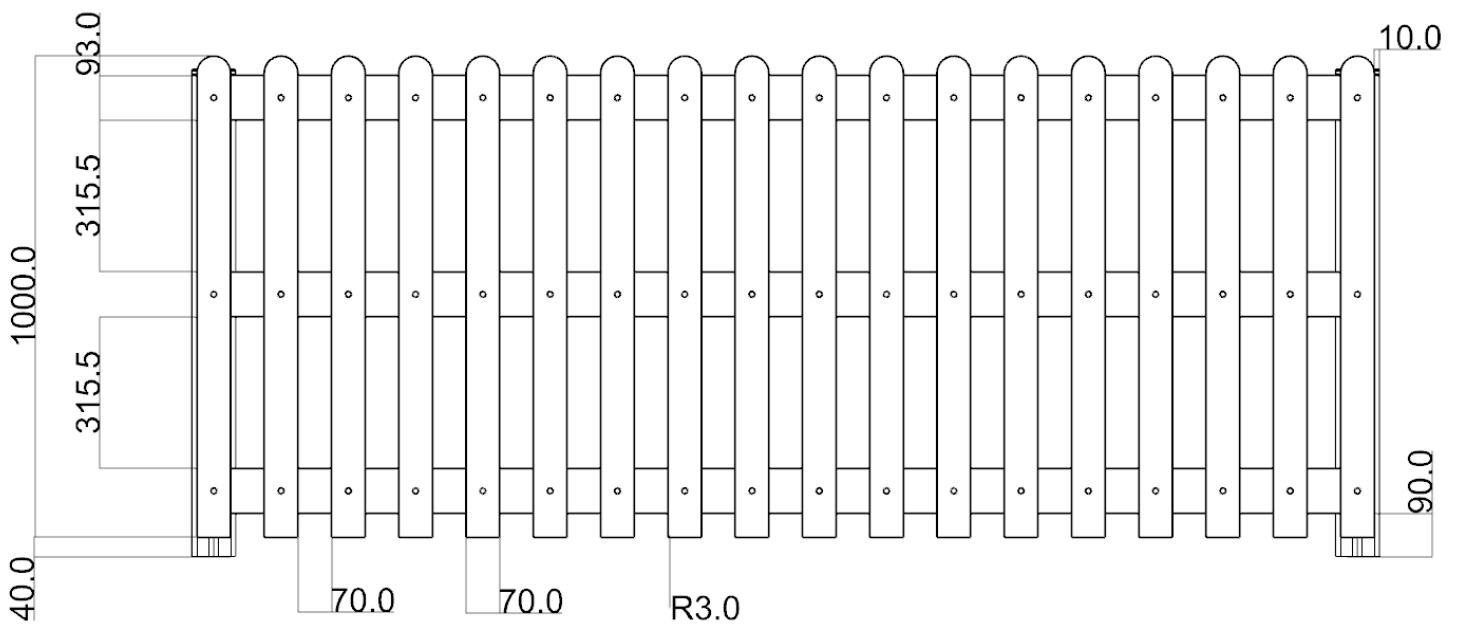
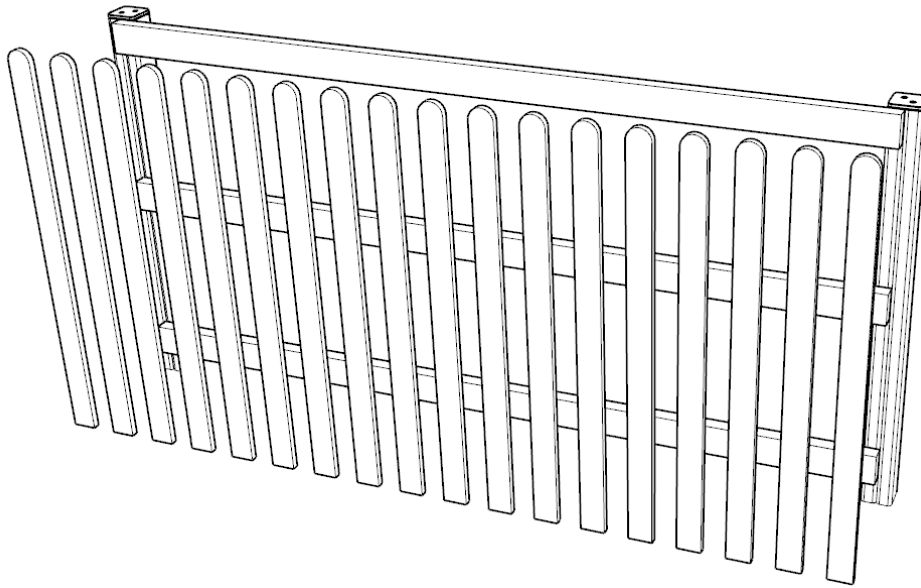


(SPACING BETWEEN SLATS 70MM)

INSTALLATION INSTRUCTIONS

4

**IF JOINING MULTIPLE FENCES
USING M6 X 40 WOOD SCREWS [X4]**

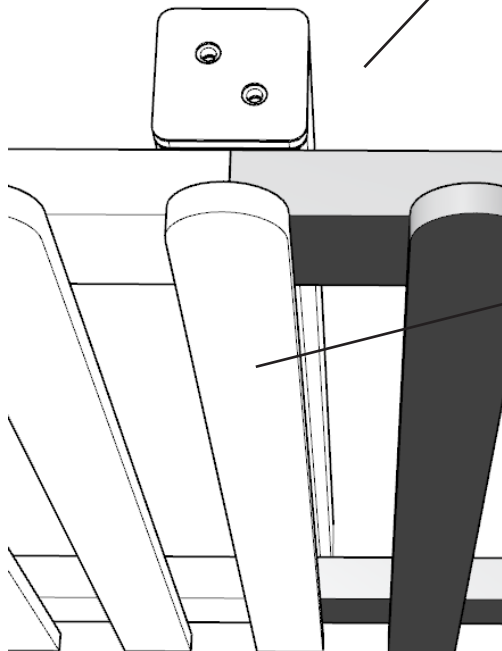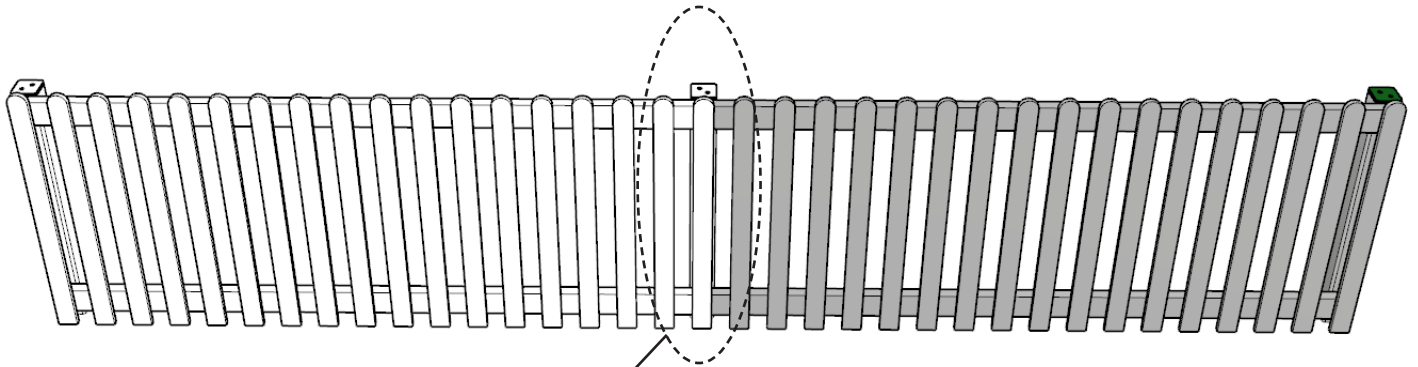

**CONNECTING FENCES WILL SHARE
THE SAME MIDDLE POST AS SHOWN.**

**THE SLAT AT THIS JOINING POINT
WILL NOT BE REQUIRED ON 2ND
FENCE.**

**ONLY 1 EXTRA POST REQUIRED IN
GROUND PER ADDITIONAL FENCE
ADDED.**

ADDITIONAL DIMENSIONS

