
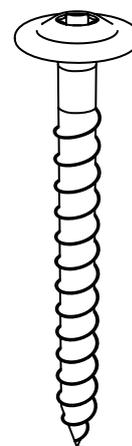


HR119(6) - 6M FILLED SIDES - HIPPED ROOF Installation Instructions

creative
play


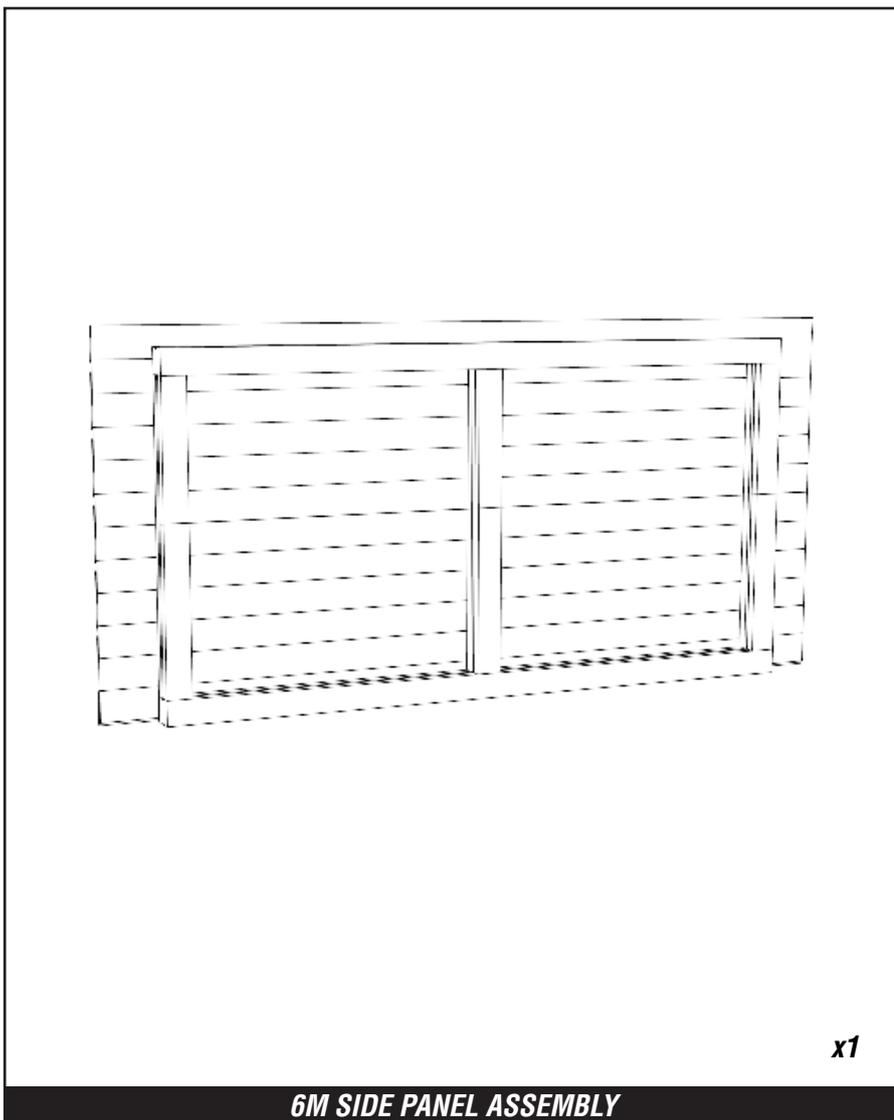


x16

97.M8X180FH

INSTALLATION INSTRUCTIONS

- 1** **FIX PANEL ON TO SHELTER. SCREW INTO ROOF TIMBER AND LOWER SIDE PANEL.**
USING M8X180 WOODSCREWS X 16

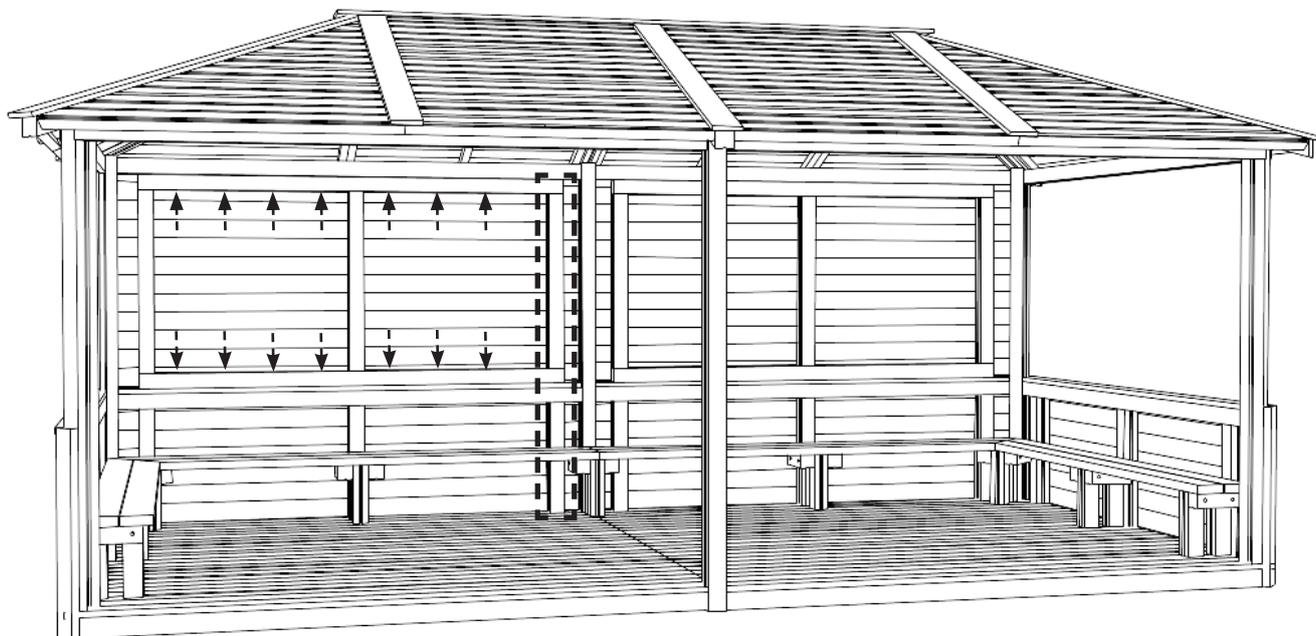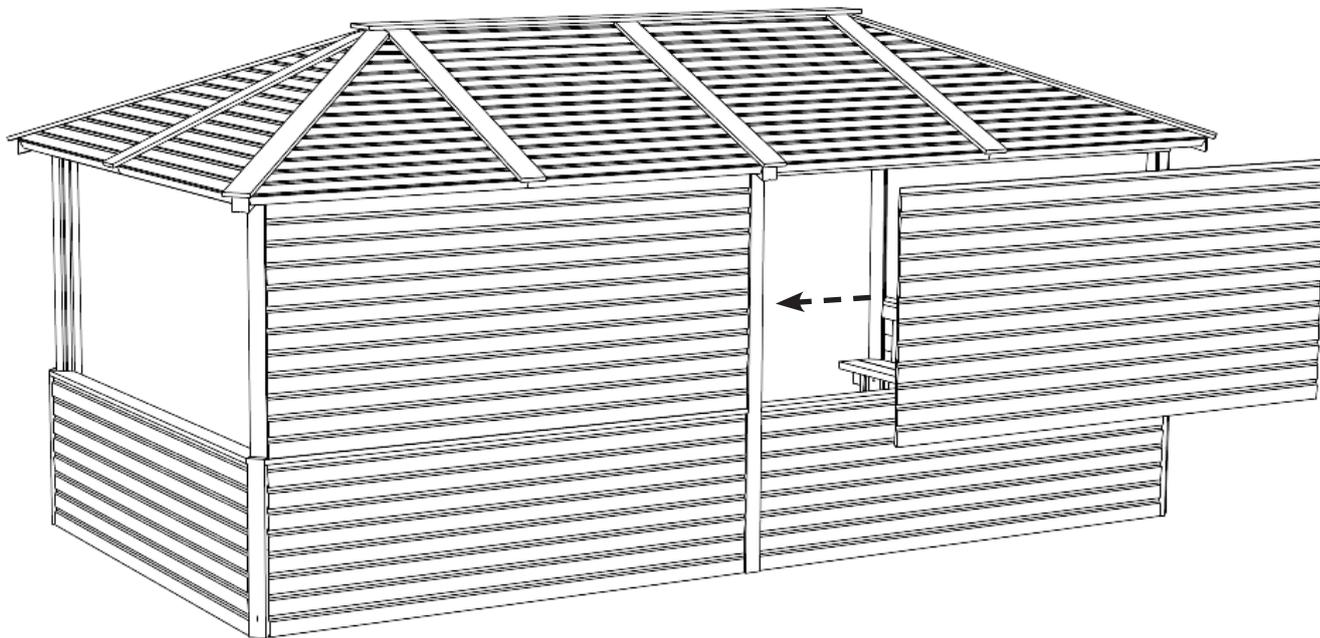

NOTE: ENSURE PANEL TIMBERS ARE ALIGNED WITH LOWER PANEL TIMBERS