



HR119(8) - 8M FILLED SIDES - HIPPED ROOF Installation Instructions

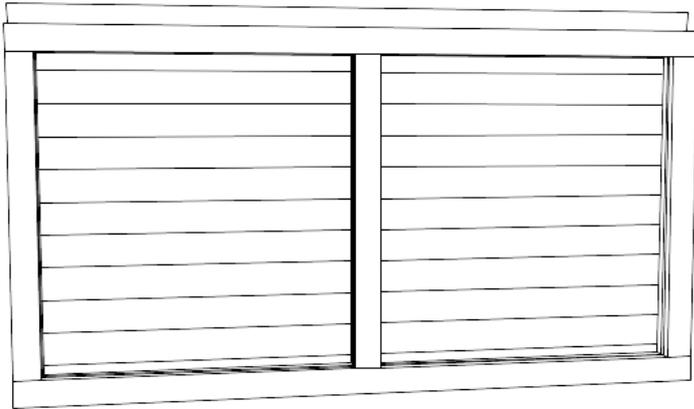


x1

8M SIDE PANEL ASSEMBLY (A)

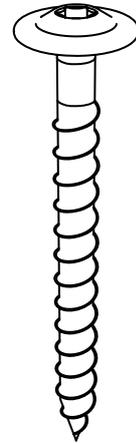

x32

97.M8X180FH


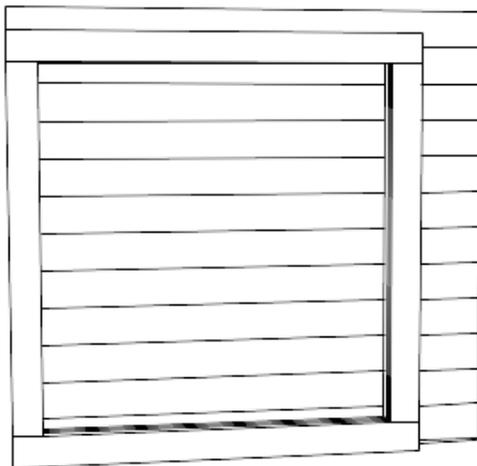


x1

8M SIDE PANEL ASSEMBLY (B)

INSTALLATION INSTRUCTIONS

- 1** **FIX PANEL A & B ON TO SHELTER. SCREW INTO ROOF TIMBER AND LOWER SIDE PANEL.**
USING M8X180 WOODSCREWS X 32

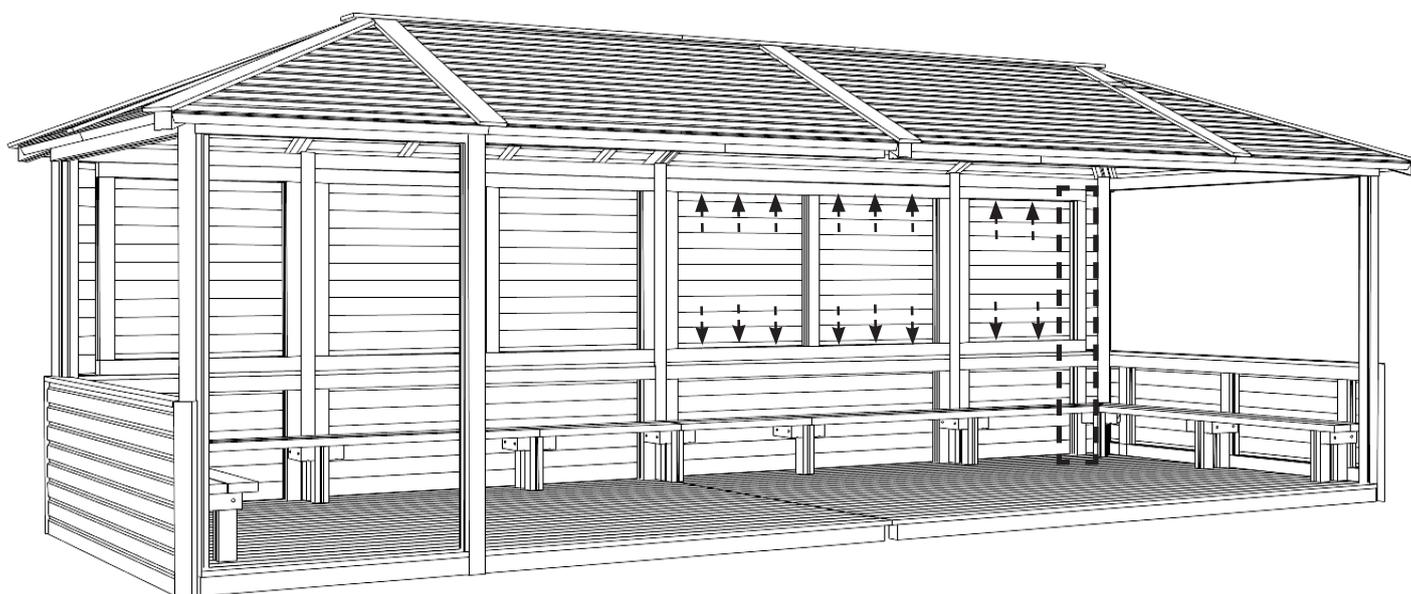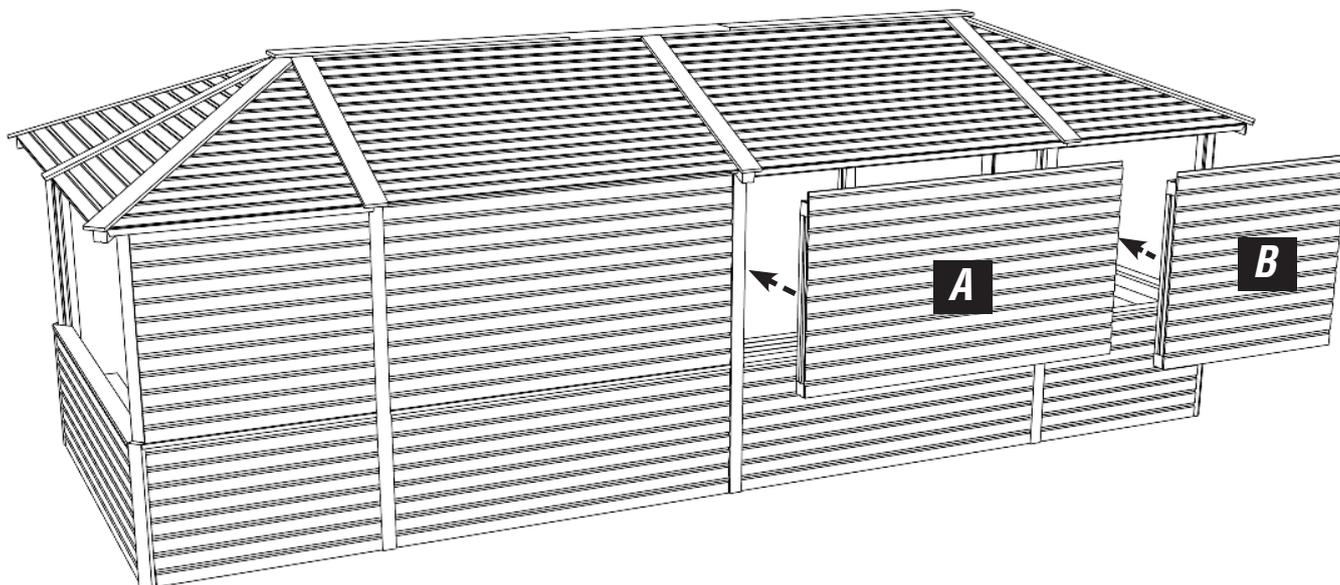

NOTE: ENSURE PANEL TIMBERS ARE ALIGNED WITH LOWER PANEL TIMBERS