



HR120(3) - 3M TRELLIS - HIPPED ROOF

Installation Instructions

**creative
play**

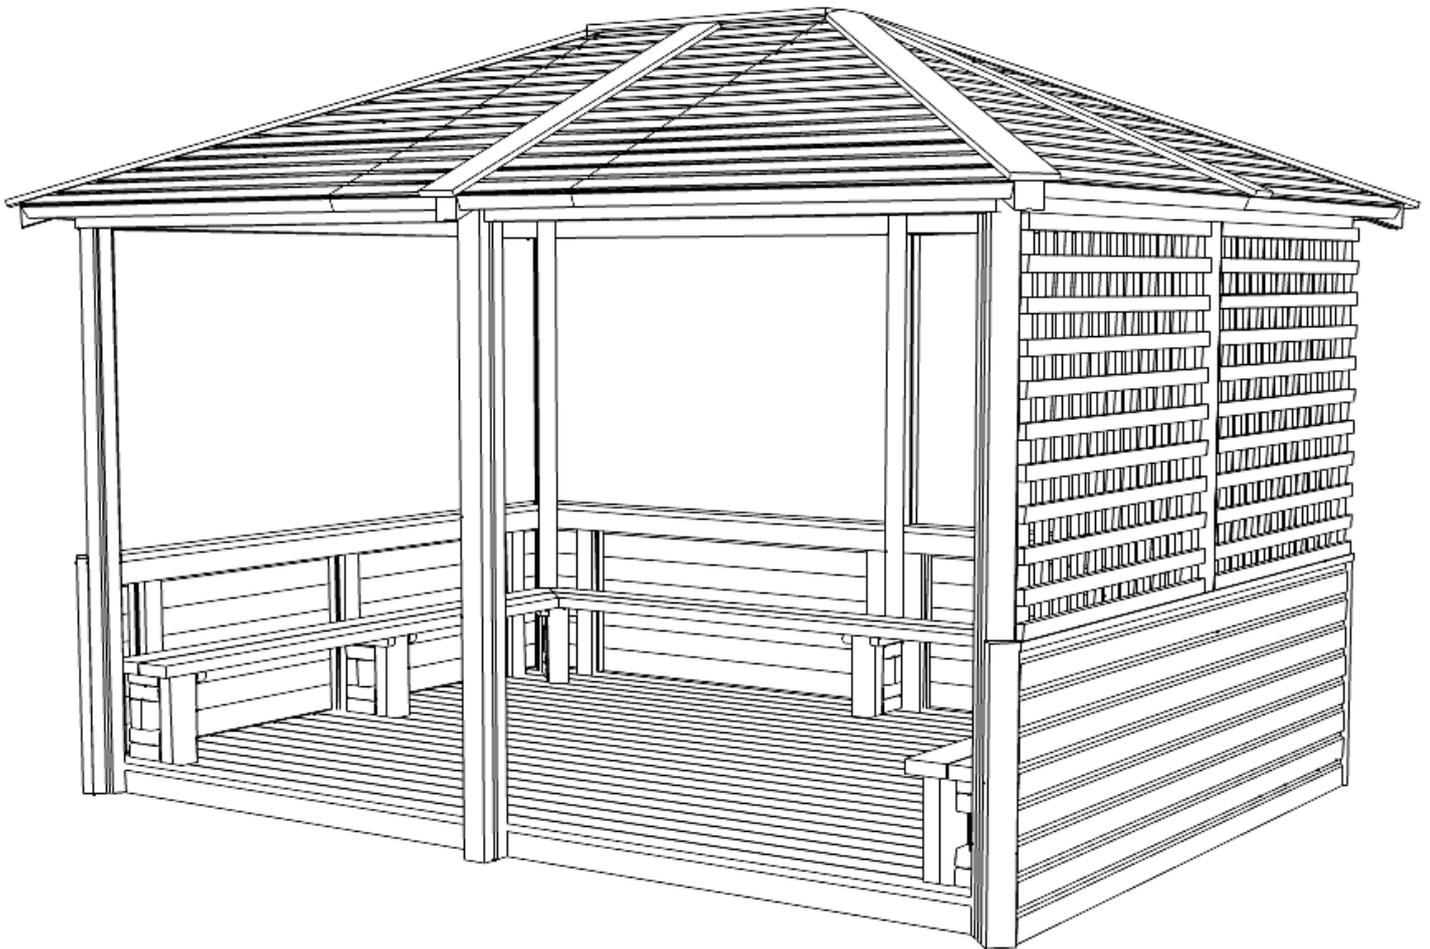

PARTS REQUIRED

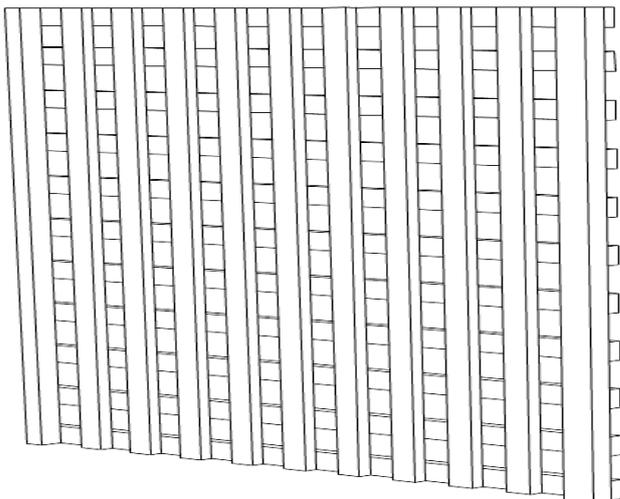


x2

TRELLIS PANEL




x8

M8X120MM



x1

TIMBER F (90X90X1270MM)

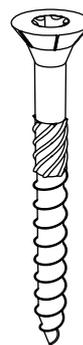


x32



M8X80MM

INSTALLATION INSTRUCTIONS

- 1** ATTACH TIMBER F TO SHELTER AS SHOWN BELOW.
USING M8X120MM WOOD SCREWS X8

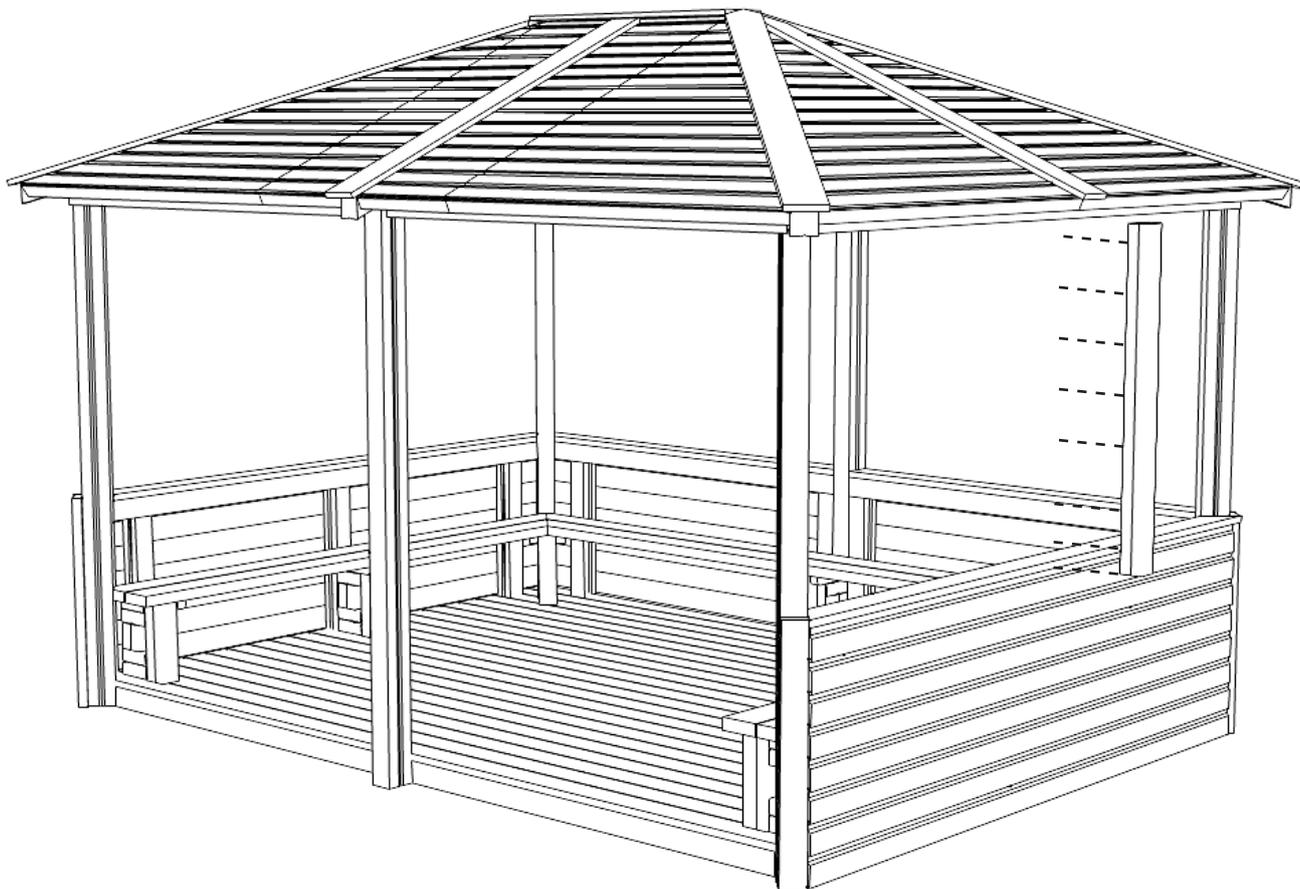

NOTES:
ENSURE TIMBER IS CENTRAL AND SCREW INTO TOP AND BOTTOM AS SHOWN BELOW.

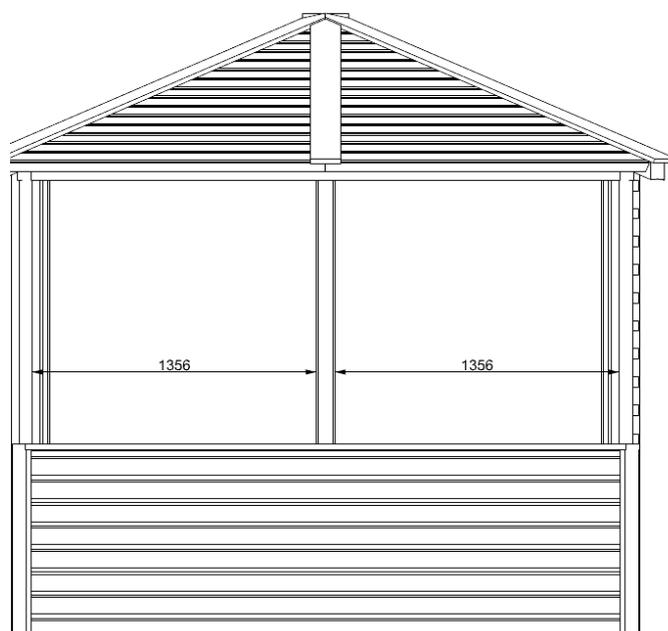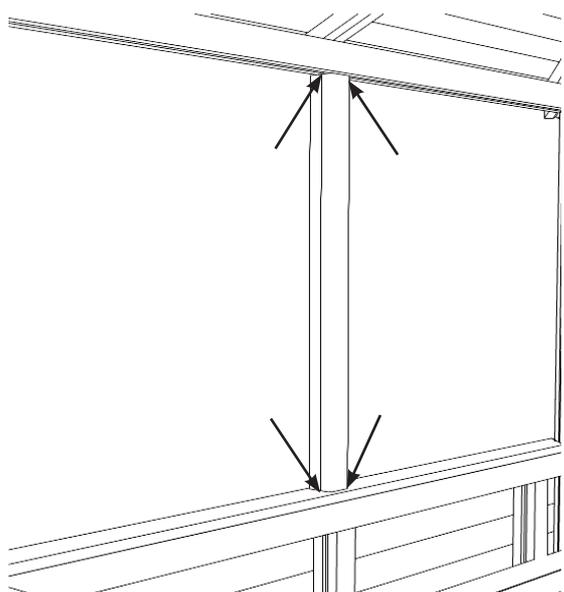


INSTALLATION INSTRUCTIONS

2

ATTACH THE SIDE PANELS TO THE SHELTER.

USING M8X80MM WOOD SCREWS X 32. ENSURE THE PANEL IS POSITIONED CENTRALLY IN THE SPACE.

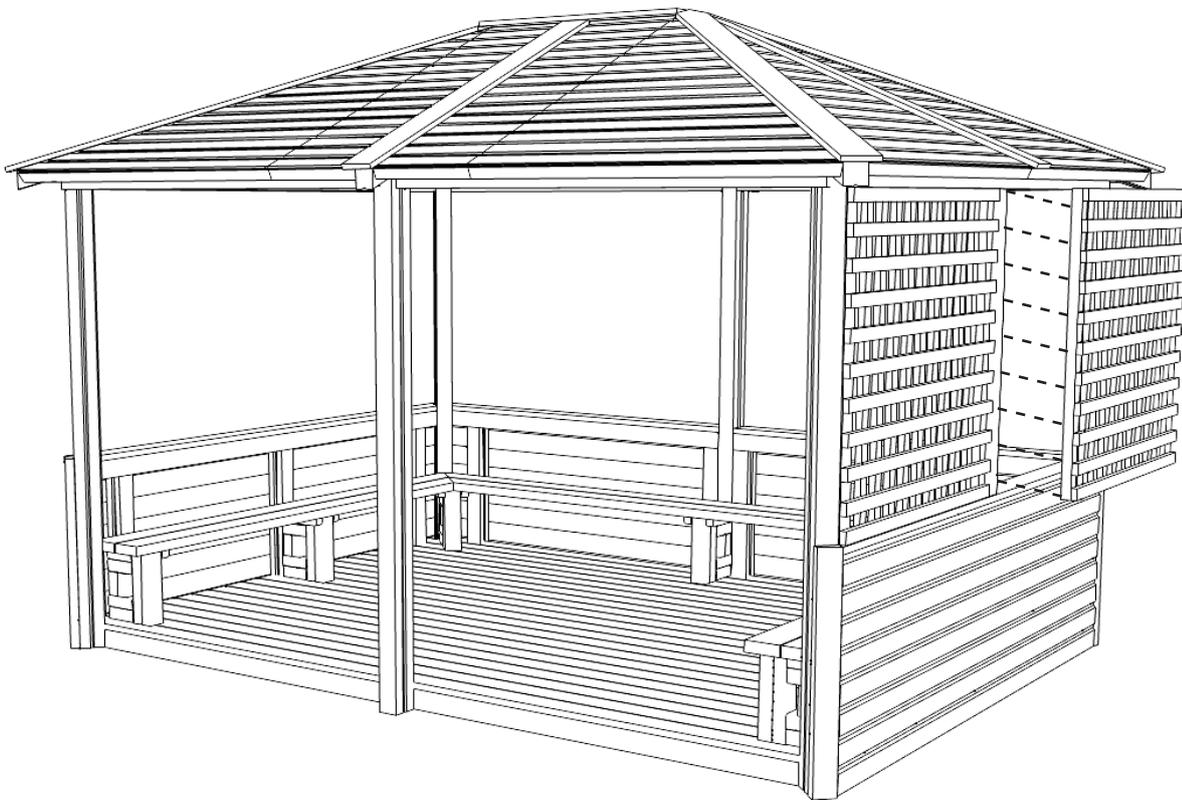

NOTES: SECURE PAENLS BY SCREWING INTO SHELTER UPRIGHTS.

