


# **HR120(4) - 4M TRELLIS - HIPPED ROOF**

## ***Installation Instructions***


---

**creative  
play**

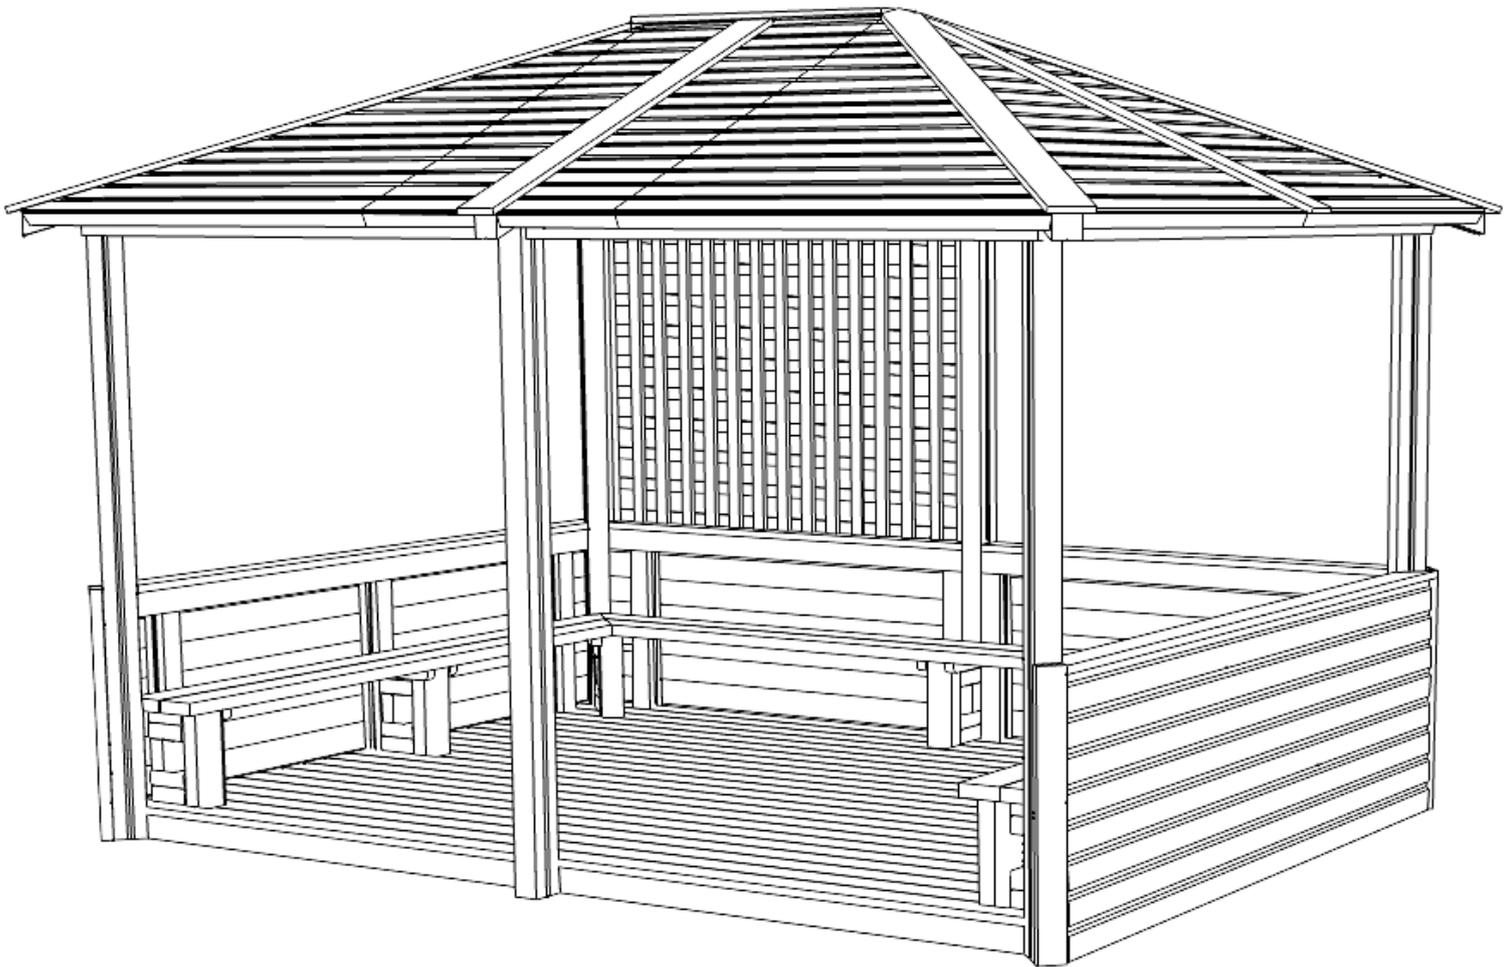

# ***PARTS REQUIRED***

---

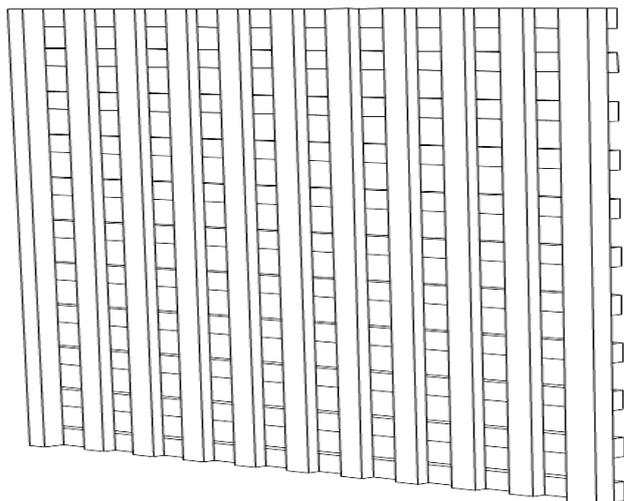

***x1***

***TRELLIS PANEL***



***x16***


***M8X80MM***

# INSTALLATION INSTRUCTIONS

**1**

**ATTACH THE SIDE PANEL TO THE SHELTER.**

USING M8X80MM WOODSCREWS X16. ENSURE IT IS POSITIONED CENTRALLY IN THE SPACE.

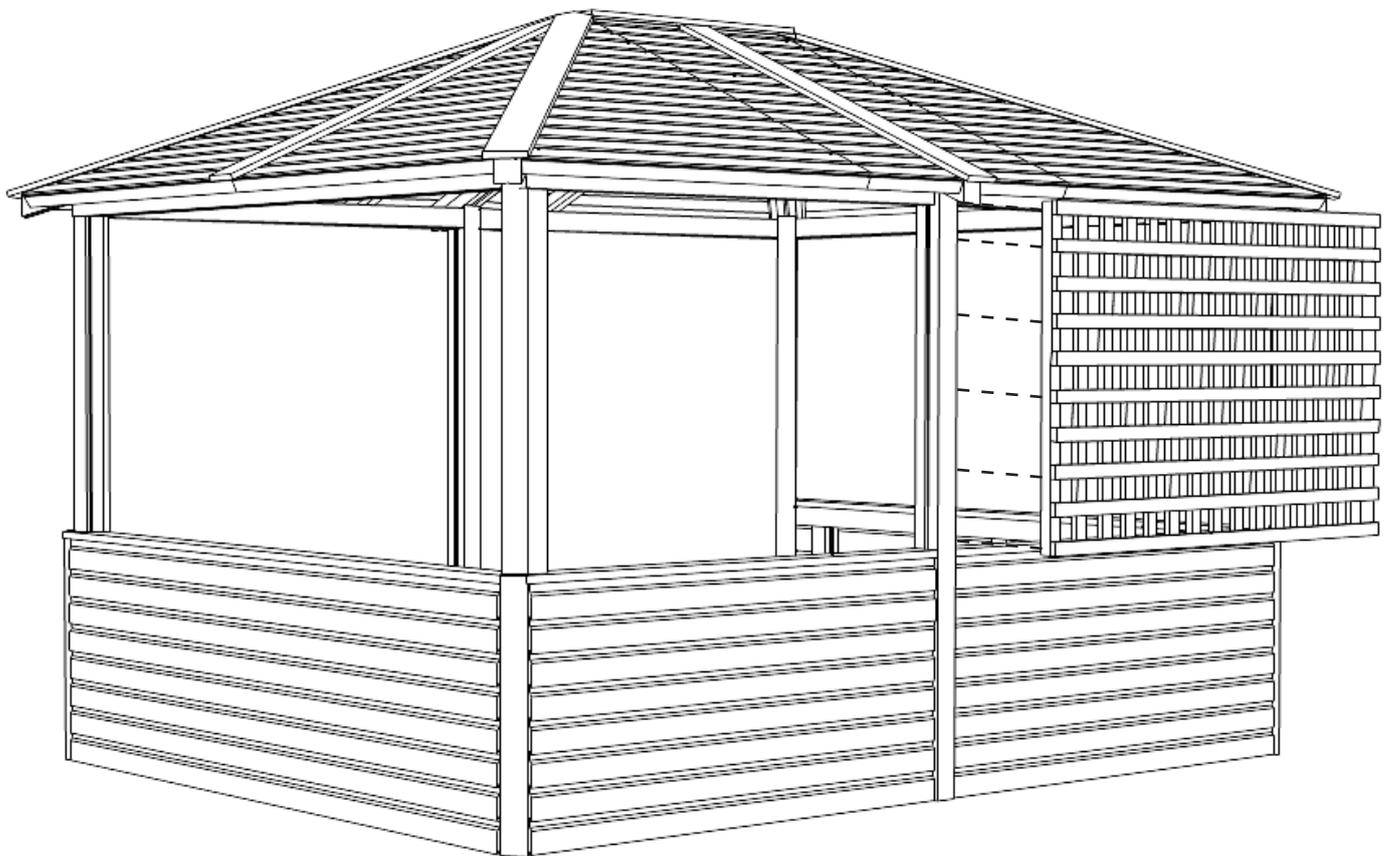

**NOTES: SECURE PANELS BY SCREWING INTO SHELTER UPRIGHTS.**

