



HR120(8) - 8M TRELLIS - HIPPED ROOF

Installation Instructions

**creative
play**

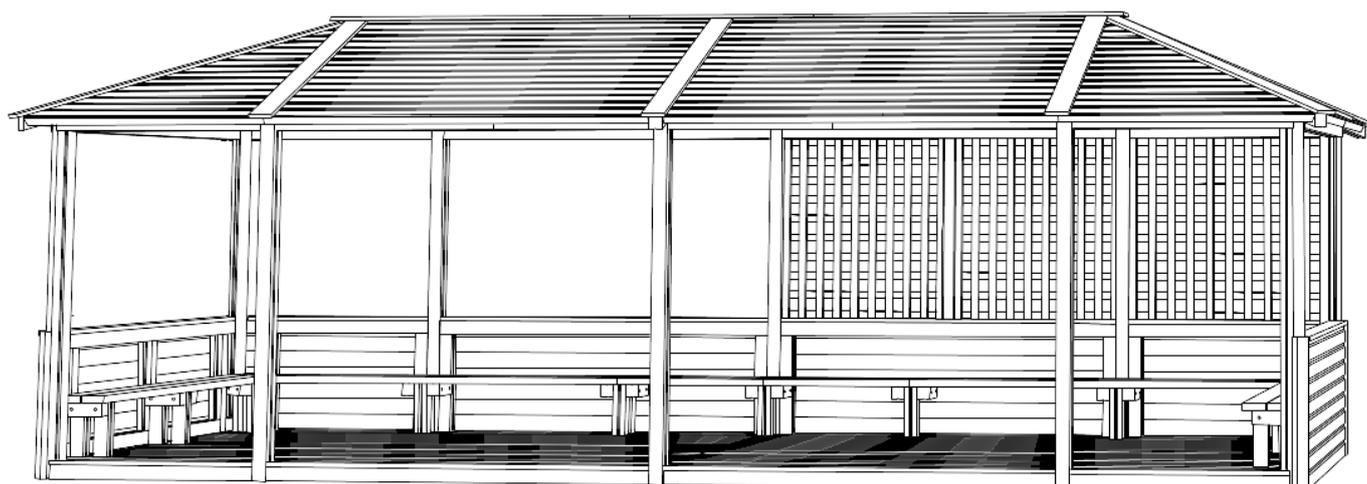

PARTS REQUIRED

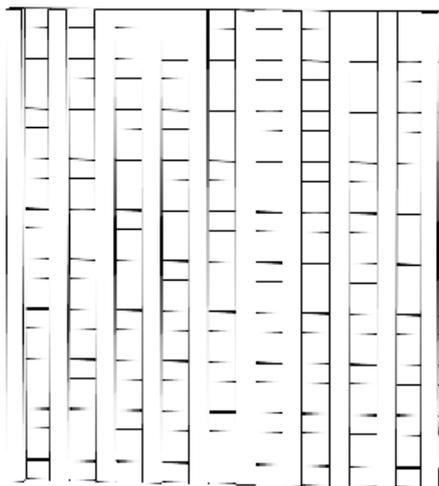


x1

PANEL A (ONE ANGLED EDGE)



x8

M8X120MM

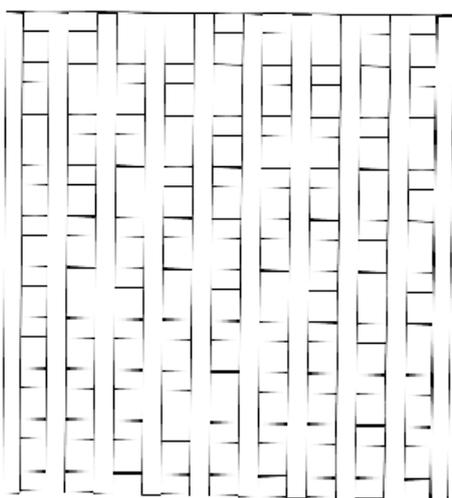


x2

PANEL B (TWO STRAIGHT EDGES)



x30

M8X80MM


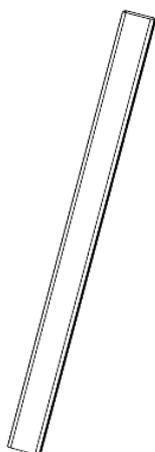


x1

TIMBER F (90X90X1270MM)

INSTALLATION INSTRUCTIONS



- 1** ATTACH PANEL B TO SHELTER AS SHOWN BELOW. SCREW INTO UPRIGHT POST. USING M8X80MM WOOD SCREWS X5

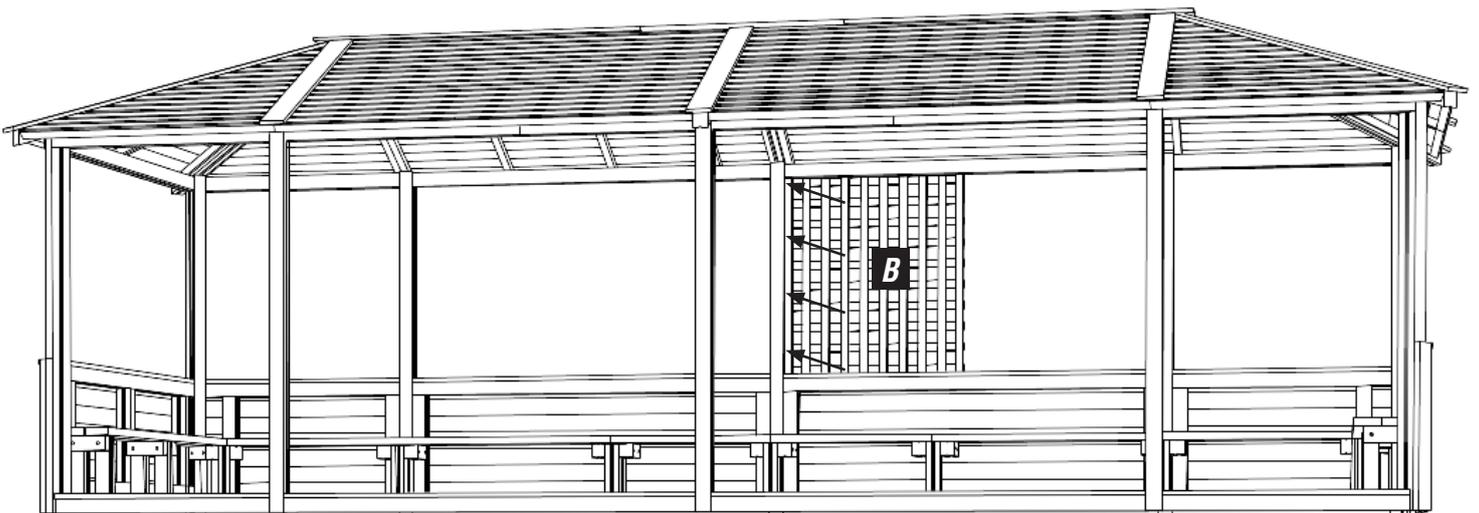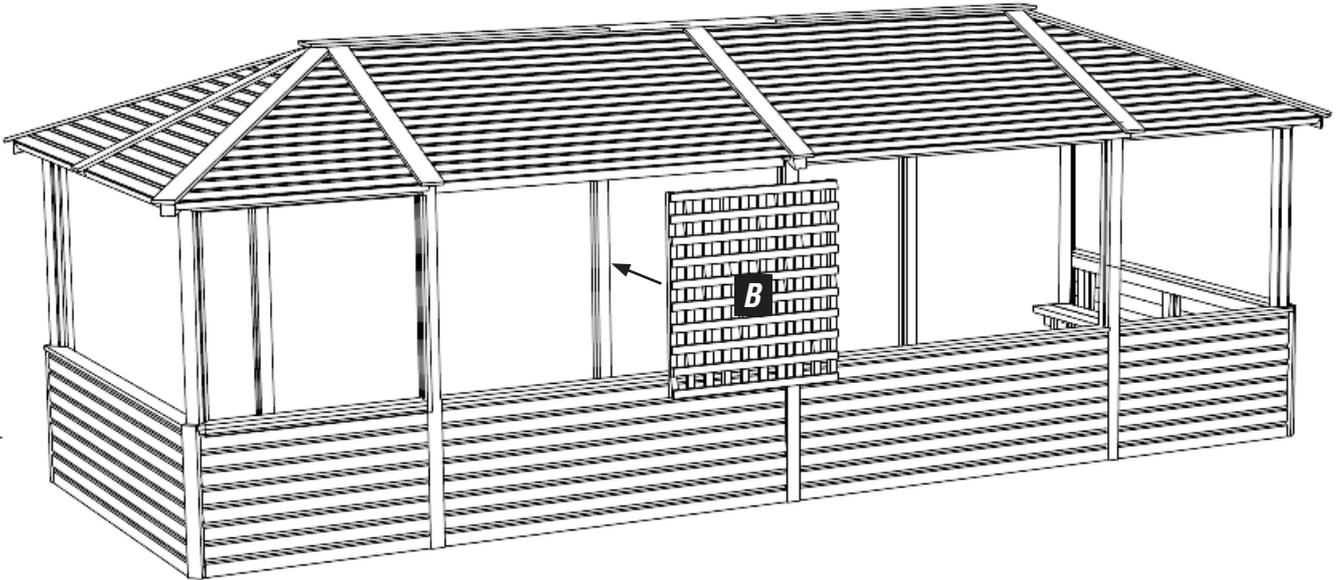

INSTALLATION INSTRUCTIONS



2

ATTACH TIMBER F TO SHELTER AS BELOW. SCREW INTO ROOF AND BOTTOM PANEL.
USING M8X120MM WOOD SCREWS X 8.

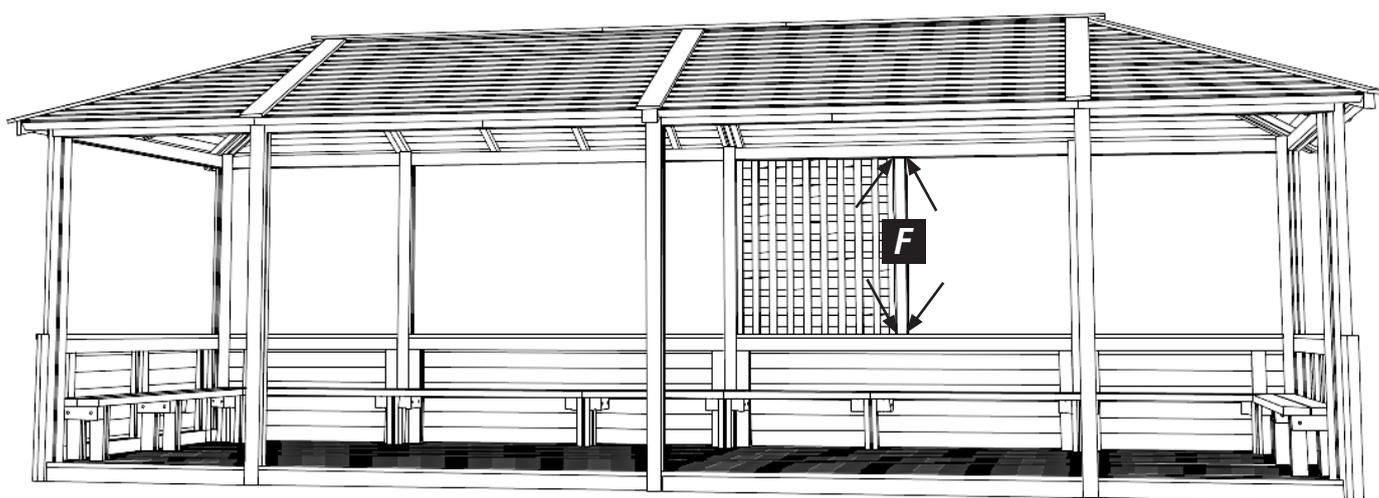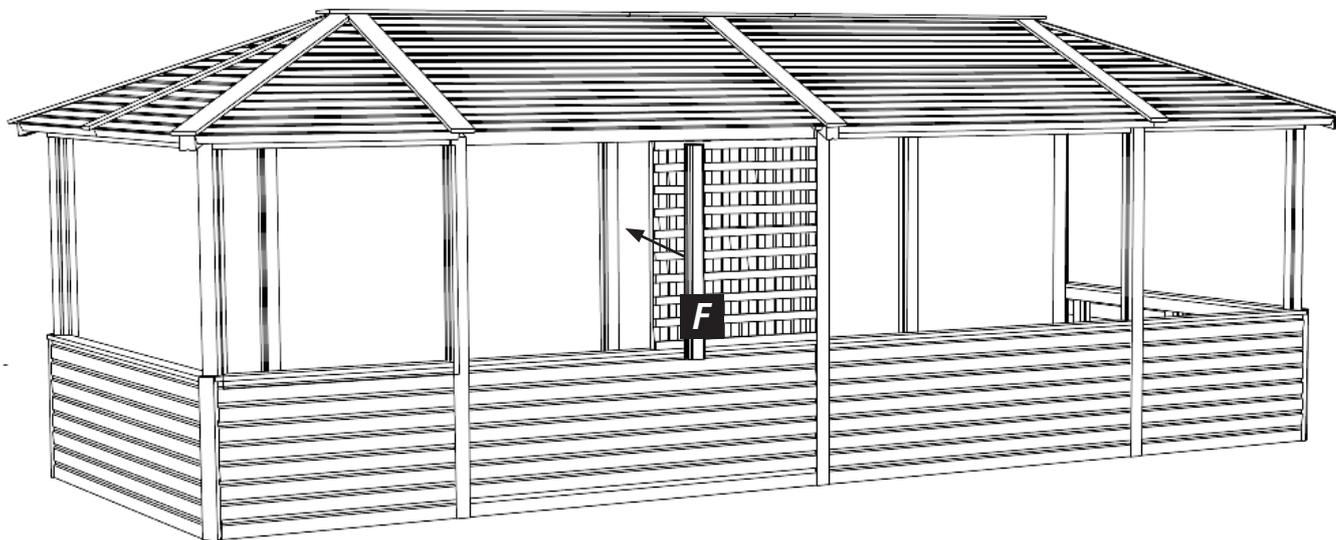

INSTALLATION INSTRUCTIONS

- 3** ATTACH THE SECOND B PANEL TO SHELTER AS SHOWN BELOW. SECURE BOTH PANELS BY SCREWING INTO UPRIGHT POST AND TIMBER F. USING M8X80MM WOOD SCREWS X 15.

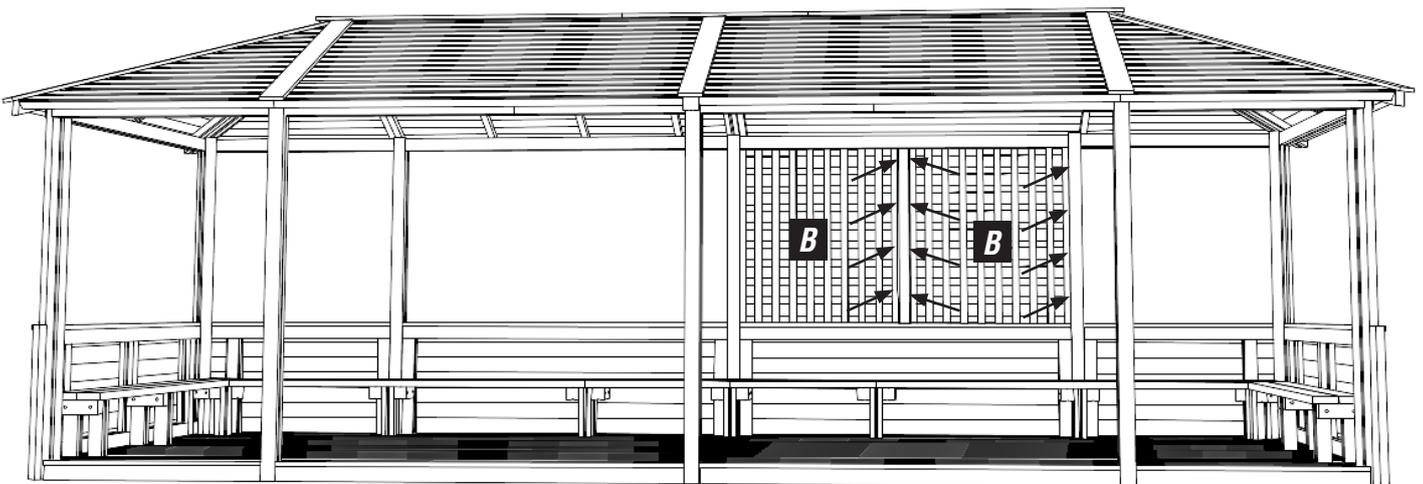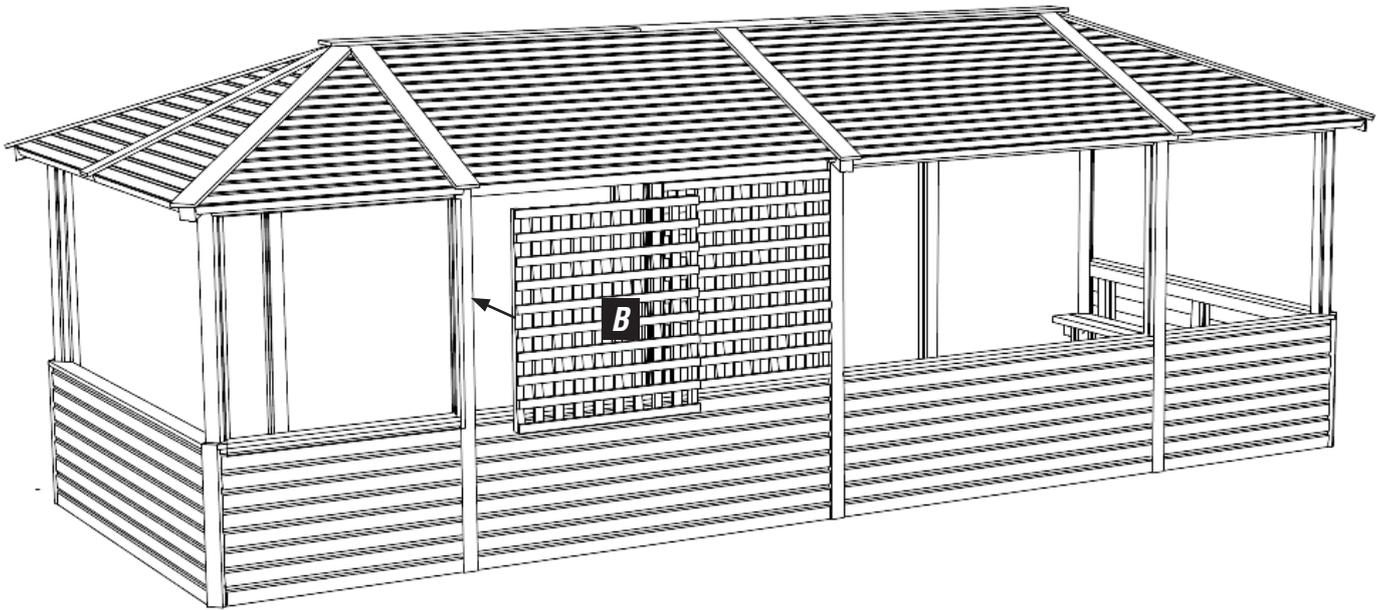

INSTALLATION INSTRUCTIONS

- 4** ATTACH PANEL A TO SHELTER AS SHOWN BELOW. SECURE BOTH PANELS BY SCREWING INTO UPRIGHT POSTS. USING M8X80MM WOOD SCREWS X 10.

