
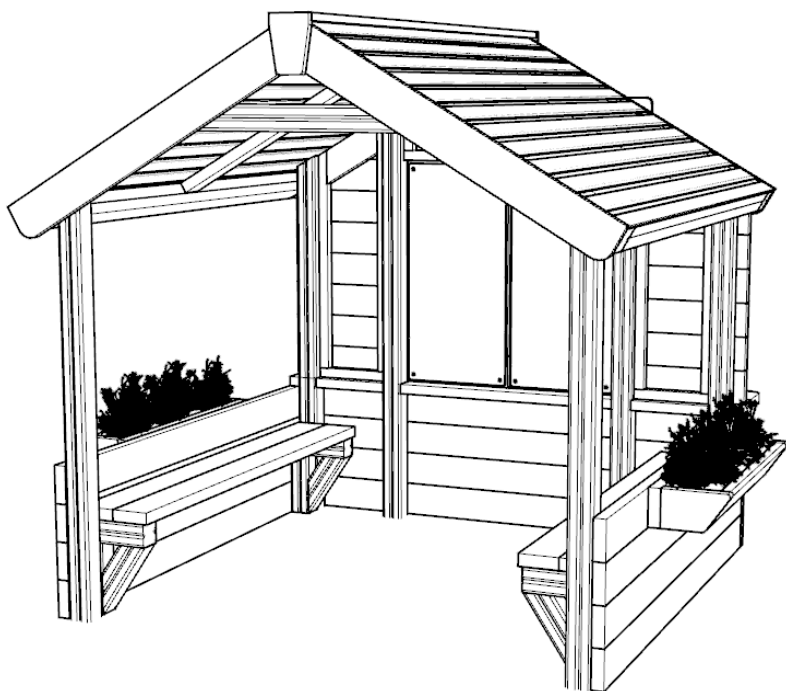



TPH113 - INCLUSIVE PLAYHOUSE ONE

Installation Instructions

**creative
play**

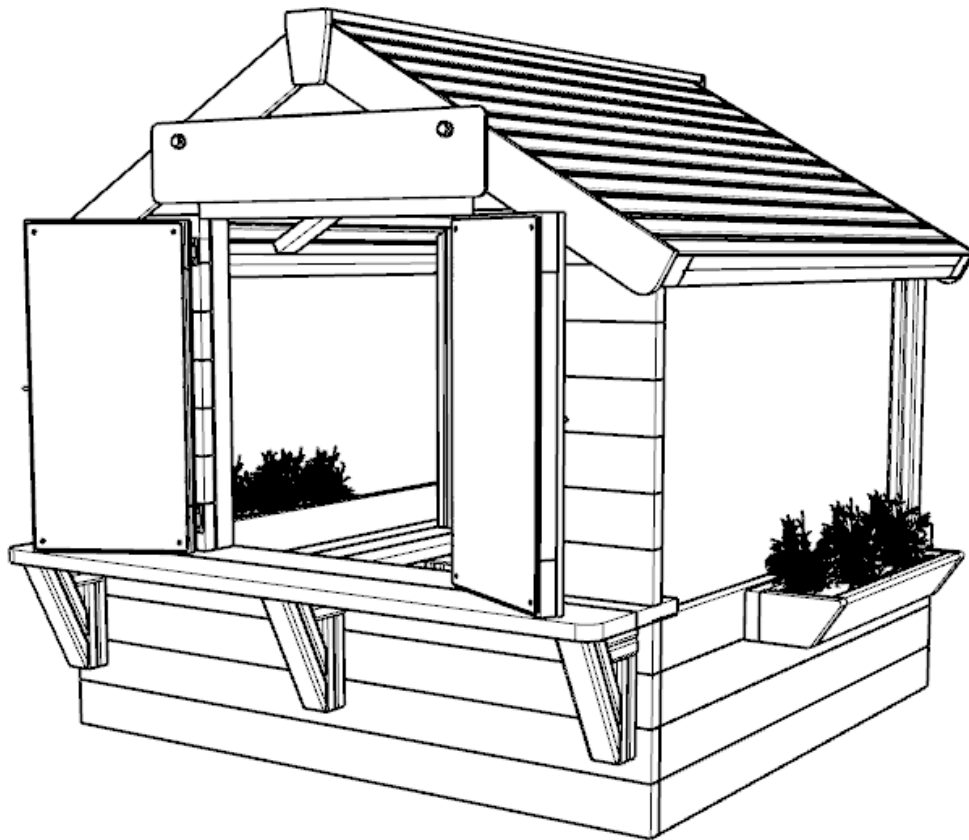


PARTS REQUIRED

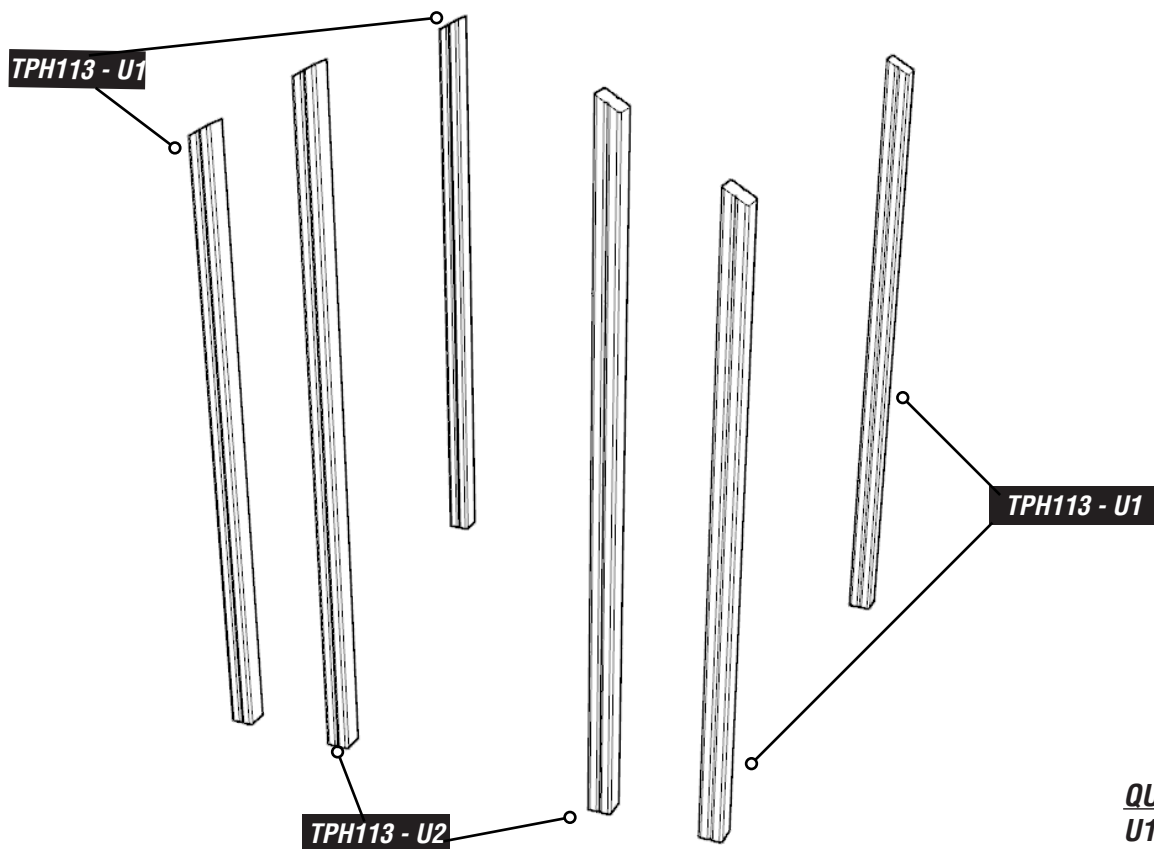

QUANTITIES:
U1 X 4
U2 X 2

UPRIGHT TIMBERS

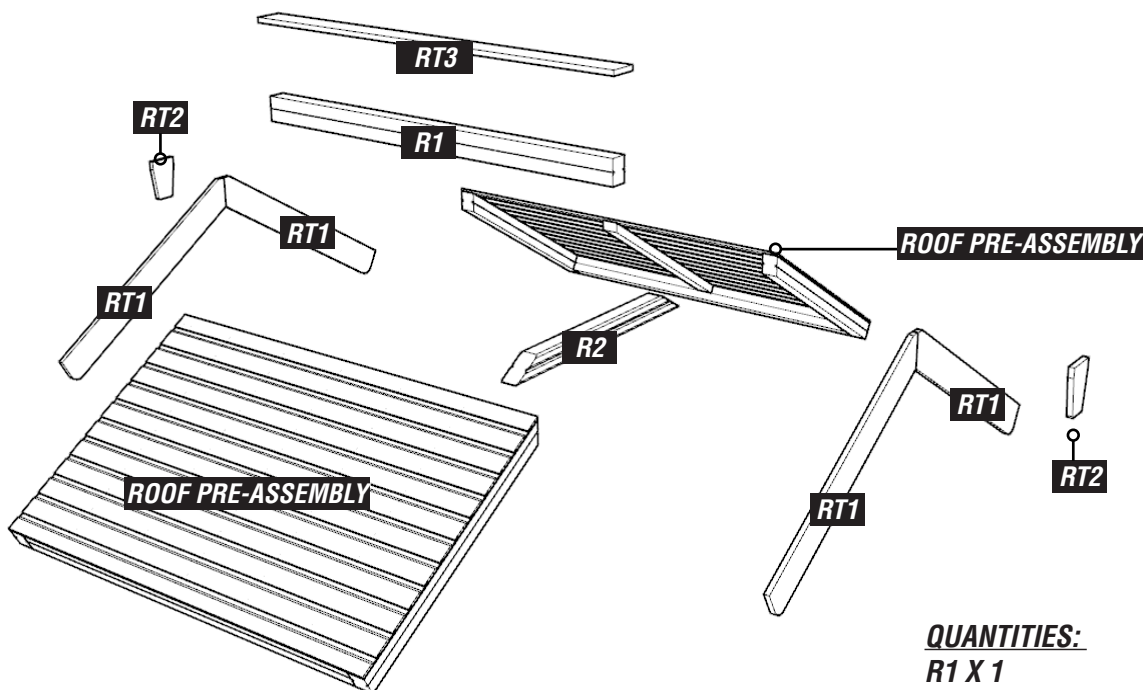


QUANTITIES:
R1 X 1
R2 X 1
ROOF PRE-ASSEMBLY X 2
RT1 X 4
RT2 X 2
RT3 X 1

R = ROOF TIMBERS

RT = ROOF TRIM


ROOF TIMBERS & TRIM

PARTS REQUIRED - LOOSE TIMBERS

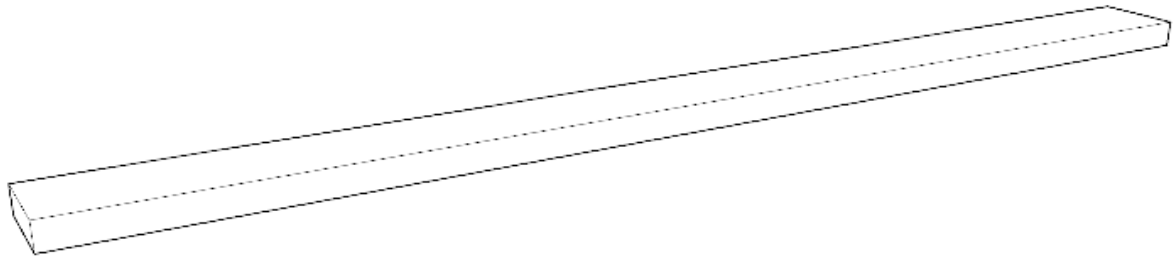


x8

TPH113 - S1 - CLADDING TIMBER (SIDES)

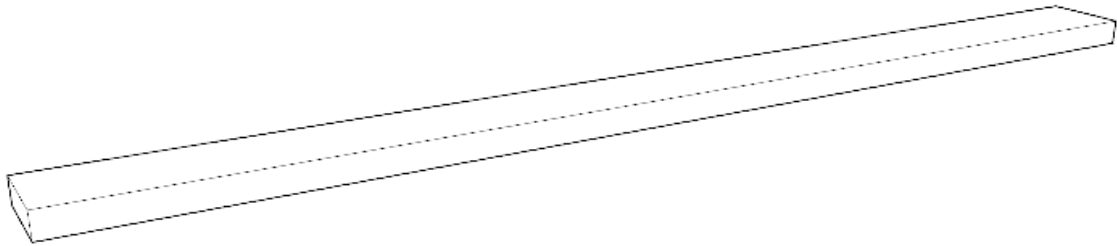


x4

TPH113 - S2 - CLADDING TIMBER (FRONT)

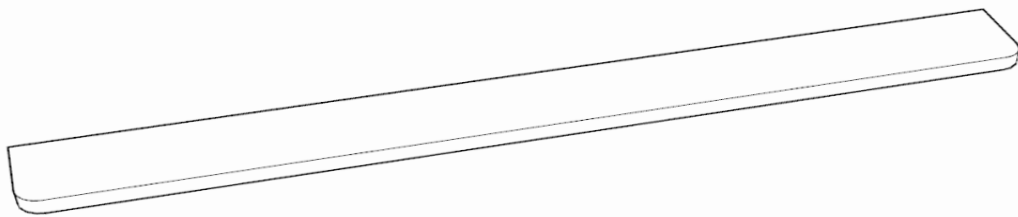


x1

TPH113 - S3 - SHELF TIMBER

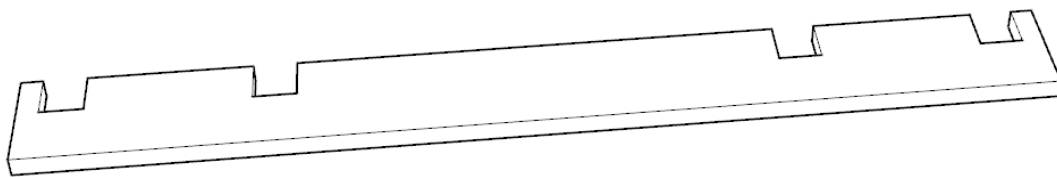

x1


TPH113 - S4 - SHELF TIMBER

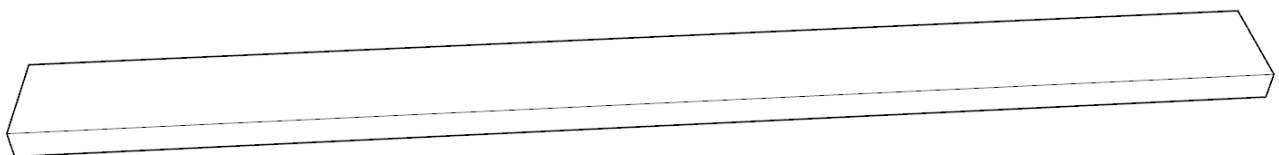

x4


TPH113 - S5 - SEAT TIMBERS

PARTS REQUIRED

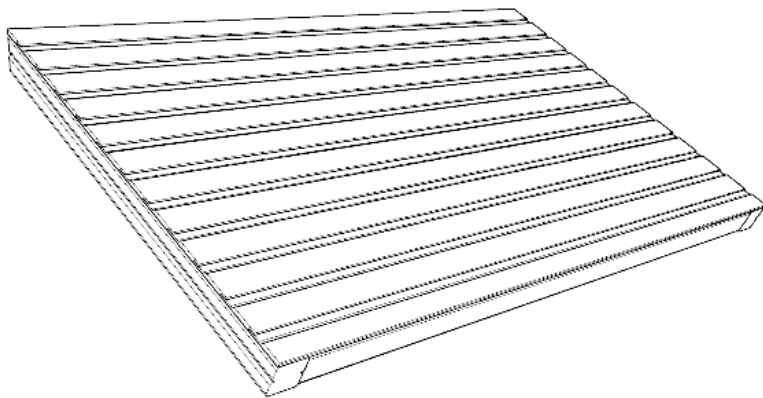


x2

ROOF PRE-ASSEMBLED PANELS

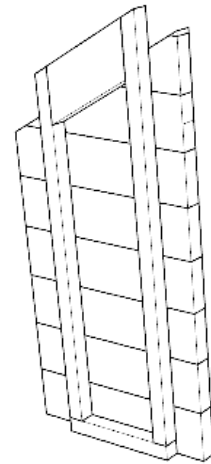


x1

PANEL ASSEMBLY - RIGHT

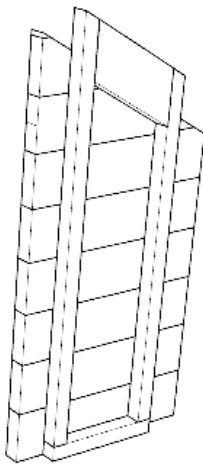


x1

PANEL ASSEMBLY - LEFT

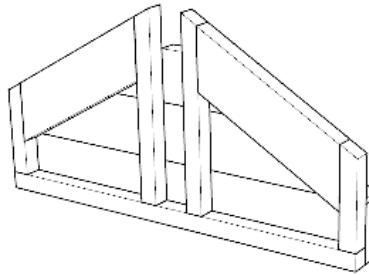


x1

PANEL ASSEMBLY - MIDDLE

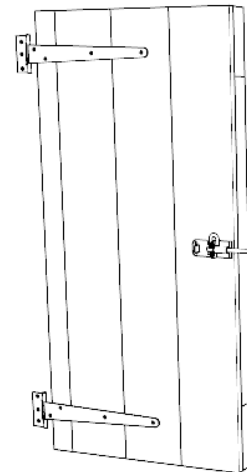


x1

DOOR ASSEMBLY - LEFT

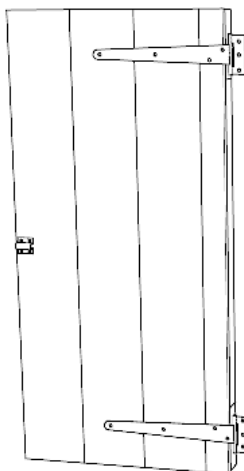


x1

DOOR ASSEMBLY - RIGHT

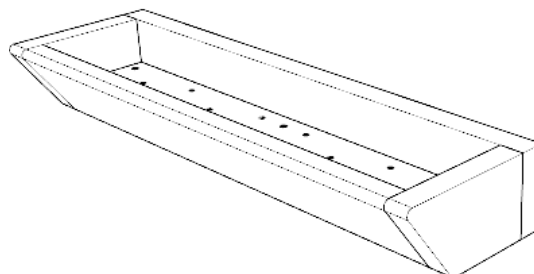

x2


PLANTER ASSEMBLY

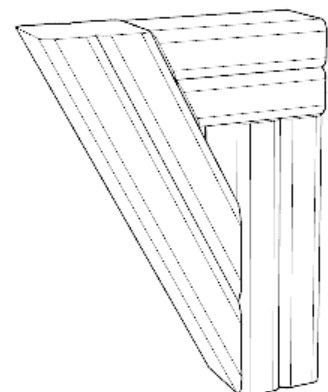

x3


SHELF SUPPORT

PARTS REQUIRED

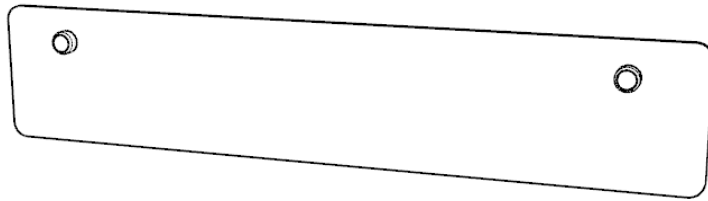

x1

BLACK PLAYTEC CHALKBOARD SIGN

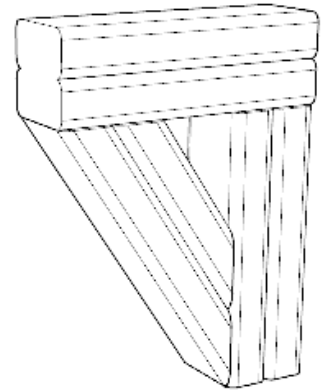


x6

SEAT SUPPORT




x30

97.M8X180CSK




x19

97.M8X120CSK




x130

97.M8X80CSK

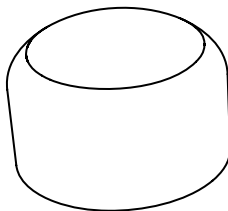

x2



102003-01 - M12




approx. x16

HINGE SCREWS

FOUNDATION DETAILS

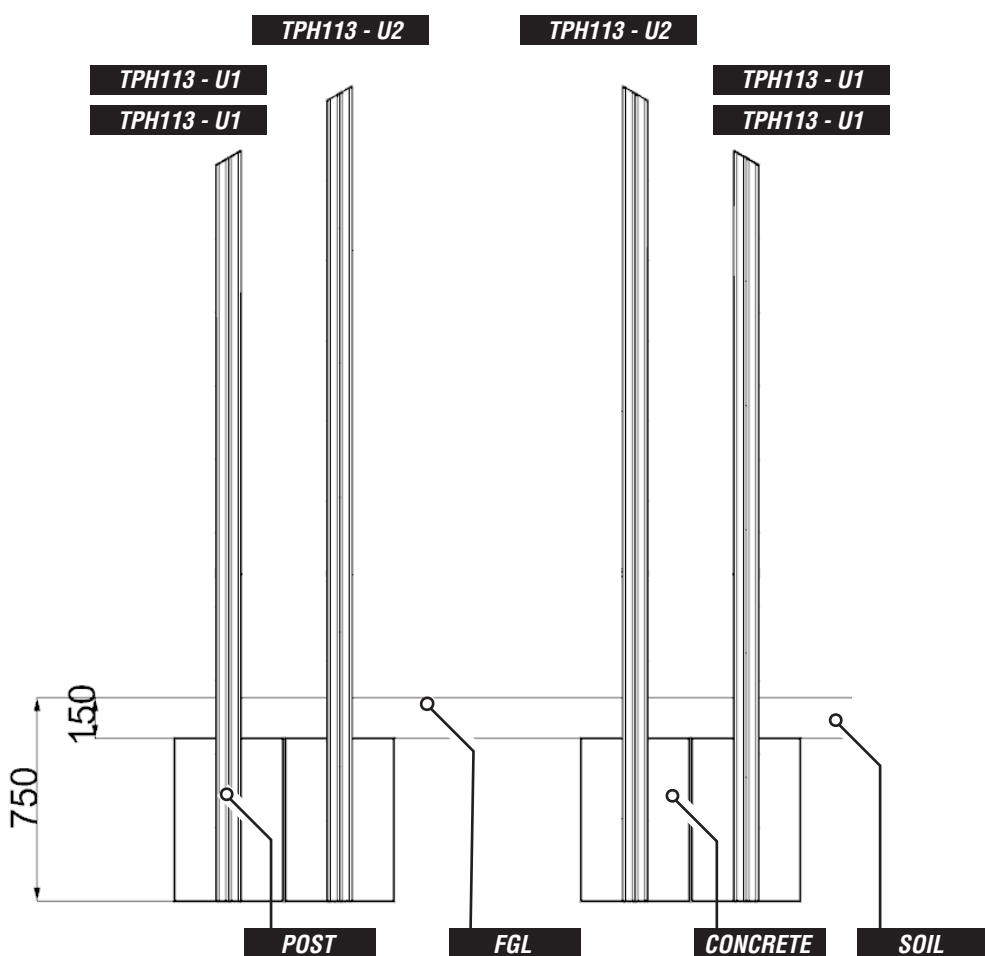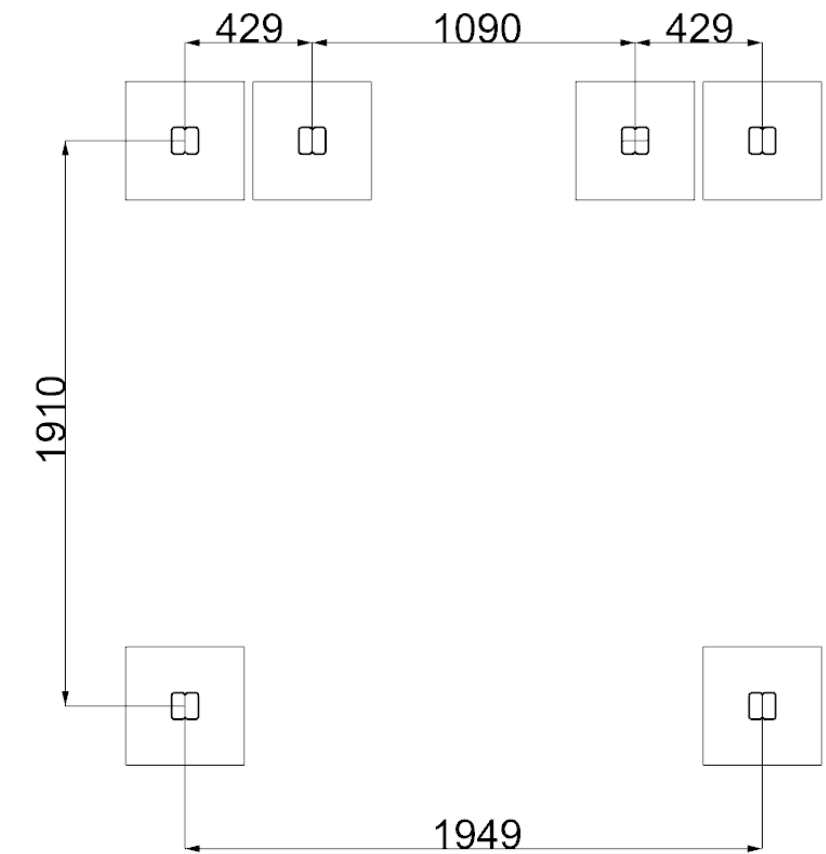


SURFACING DETAILS


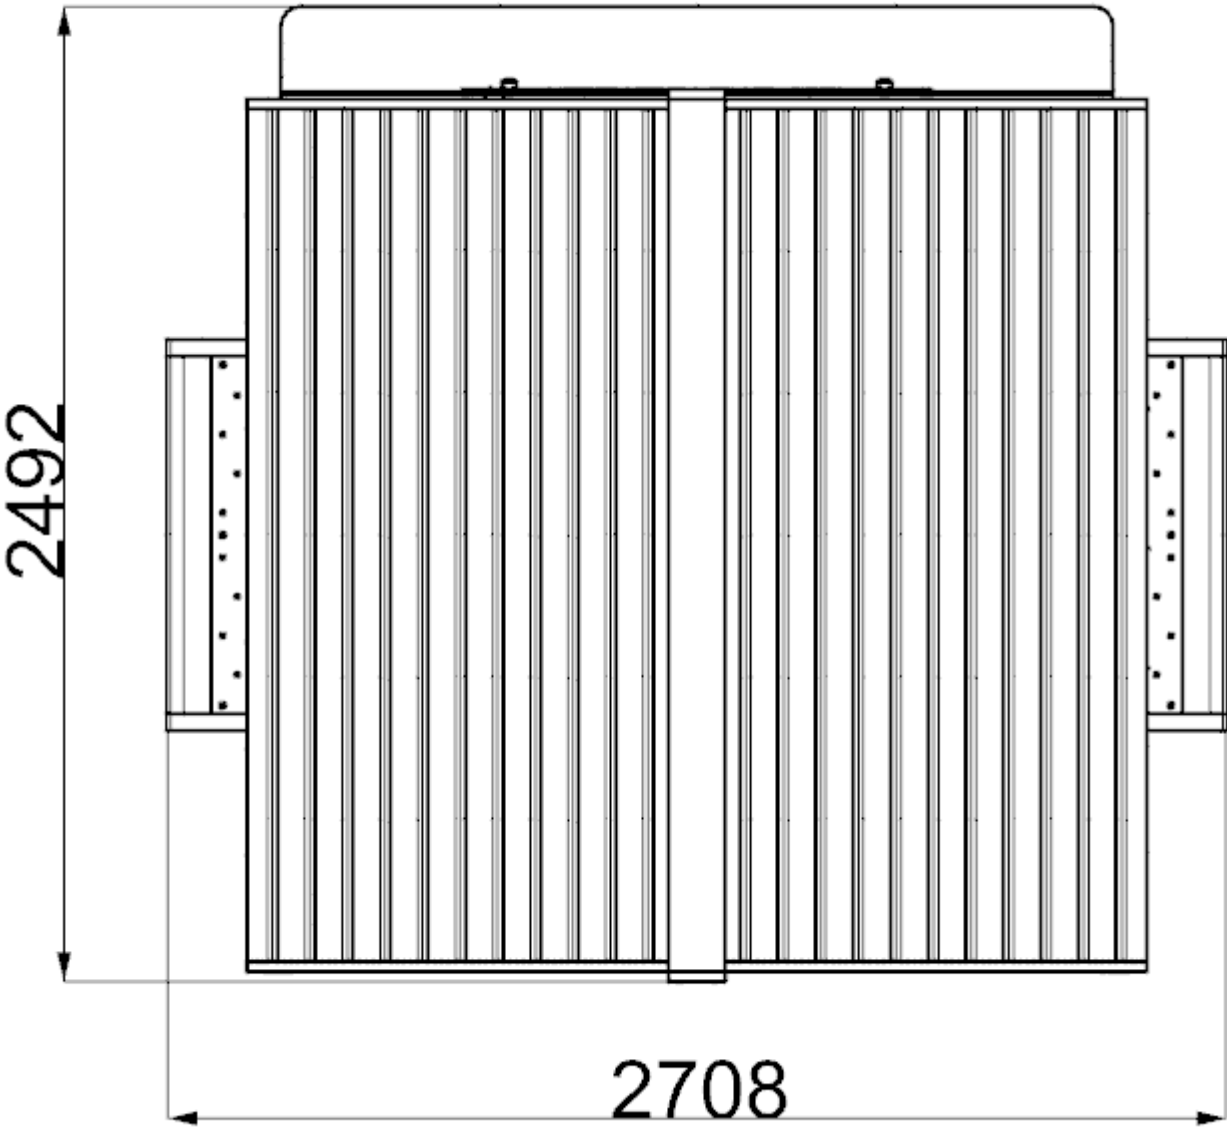


INSTALLATION INSTRUCTIONS

1 POSITION UPRIGHT TIMBERS ACCORDING TO GROUNDPLAN ENSURING TIMBERS ARE POSITIONED OUTWARDS AS SHOWN

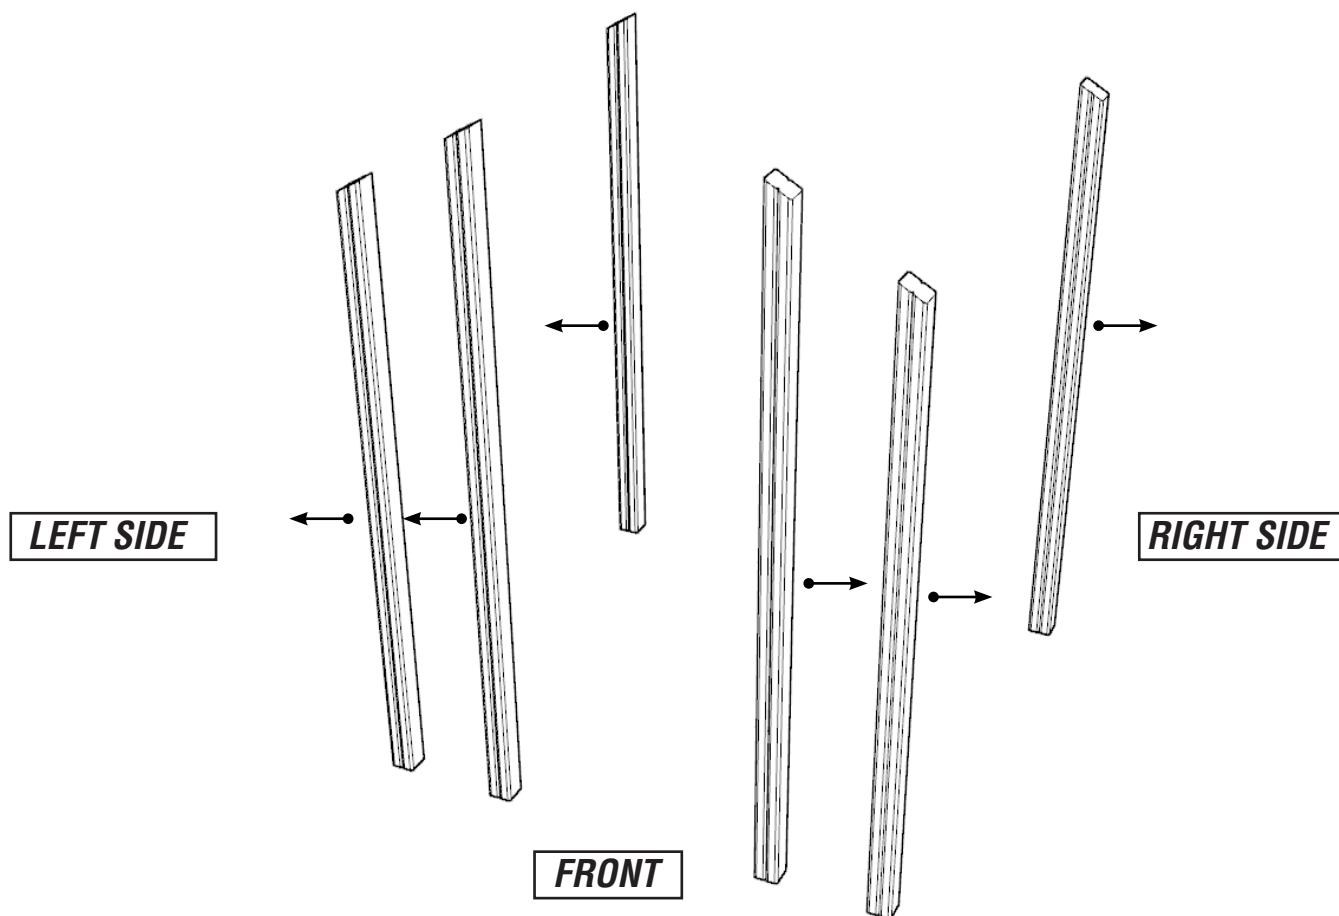

2 ATTACH TPH113 - S1 TIMBERS TO OUTER UPRIGHTS (4 PER SIDE) USING M8X80M WOOD SCREWS (2 SCREWS PER SIDE OF SLAT)

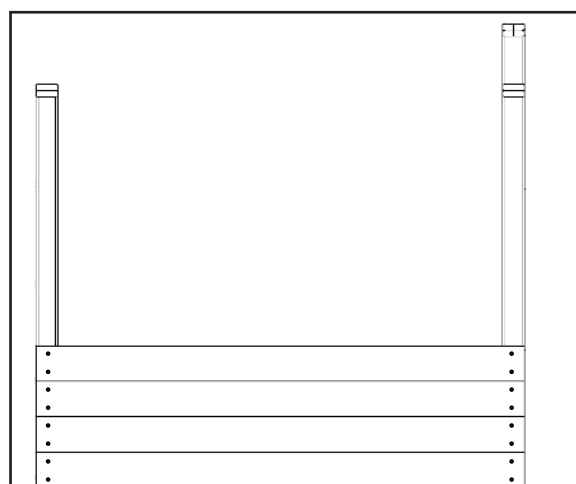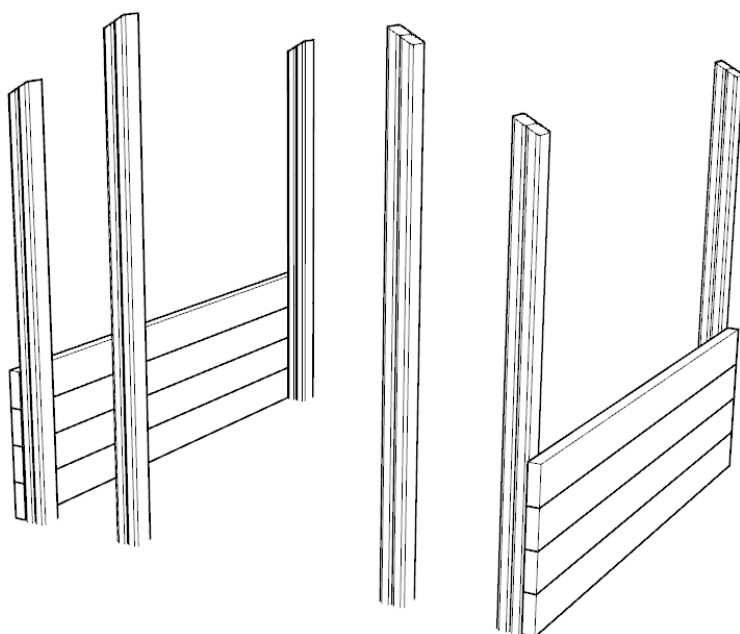



NOTES:
ENSURE TIMBER SLATS ARE FLUSH WITH THE
EDGE OF THE TIMBERS AS SHOWN ABOVE

INSTALLATION INSTRUCTIONS

3

ATTACH TPH113 - S2 TIMBERS TO OUTER UPRIGHTS (4 PER SIDE)

USING M8X80M WOOD SCREWS (2 SCREWS PER SIDE OF SLAT)

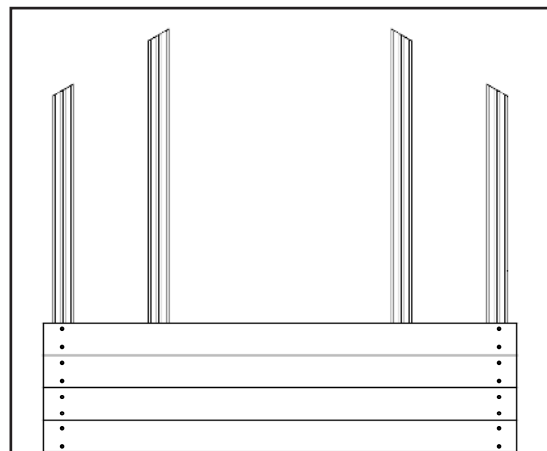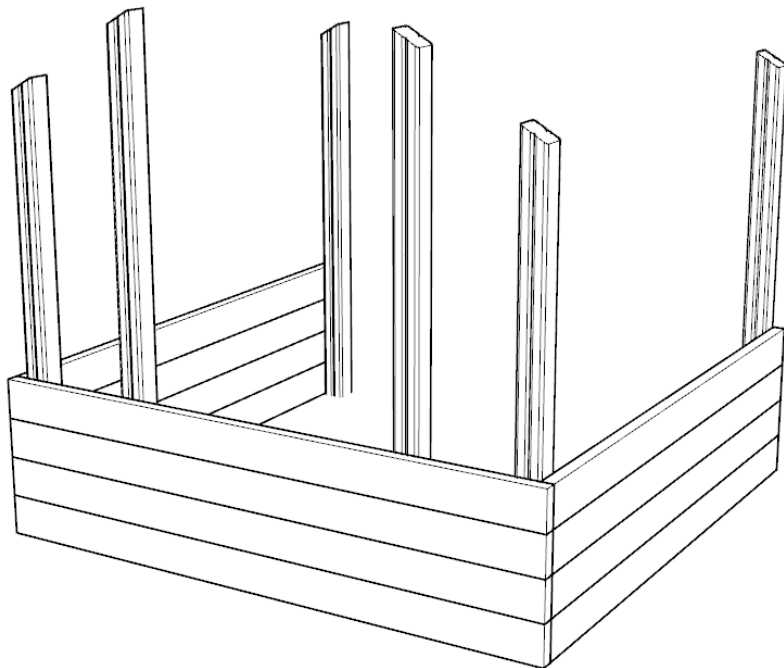


NOTES:

ENSURE TIMBER SLATS ARE FLUSH WITH THE
EDGE OF S1 TIMBERS EITHER SIDE

4


ATTACH TPH113 - SS1 & 2 TIMBERS TO FRONT SLATS (INSIDE PLAYHOUSE)

USING M8X80MM WOOD SCREWS, ENSURE TIMBERS ARE FLUSH WITH TOP OF SLAT AS SHOWN

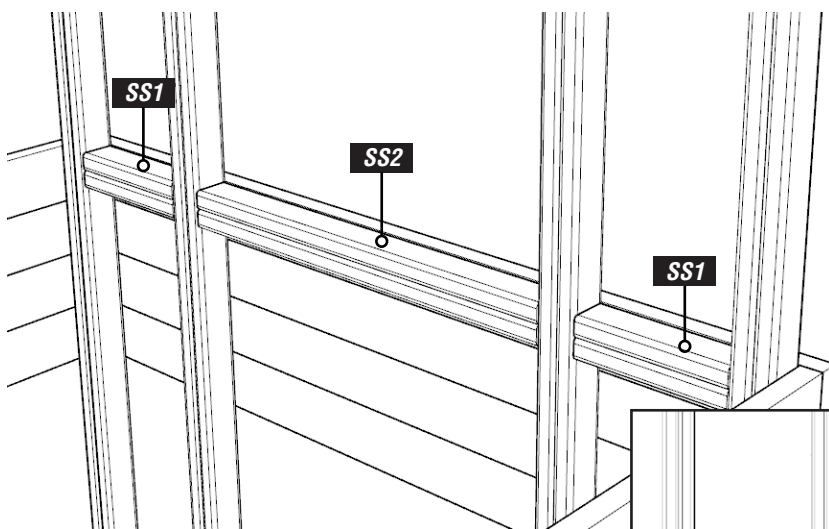

NOTES:

ENSURE SCREWS ARE SCREWED IN FROM OUTSIDE
OF PLAYHOUSE



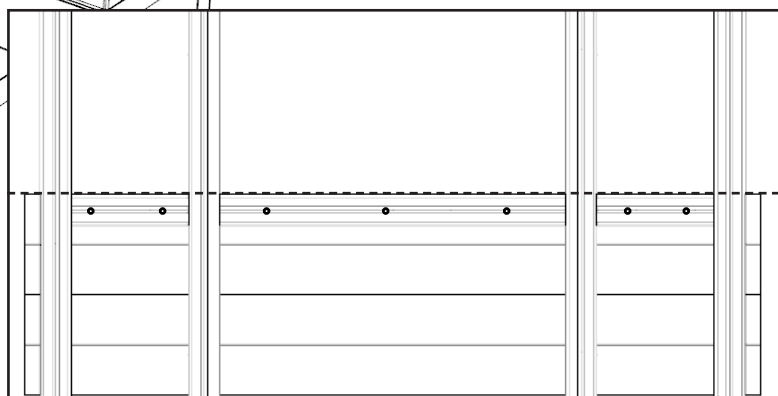


INSTALLATION INSTRUCTIONS

5

ATTACH TPH113 - S4 SHELF TIMBER TO SS1&2 TIMBERS



USING M8X80MM WOOD SCREWS, SCREW IN FROM TOP BETWEEN UPRIGHTS AS SHOWN BELOW

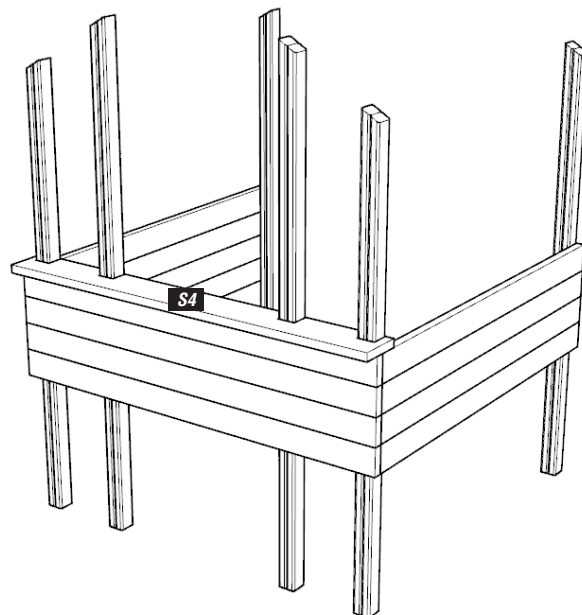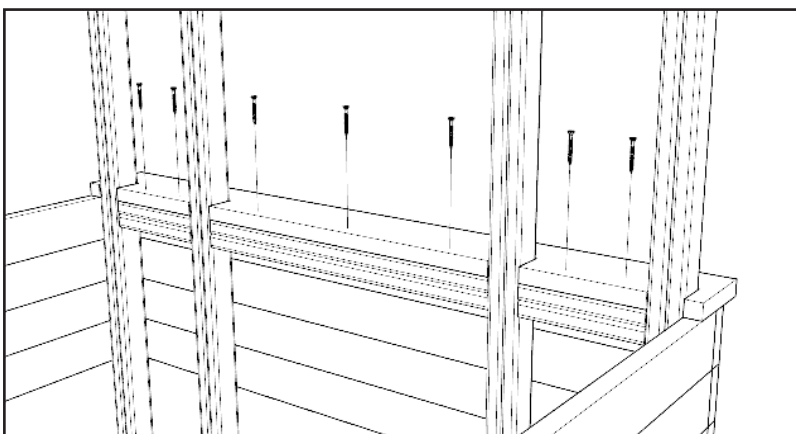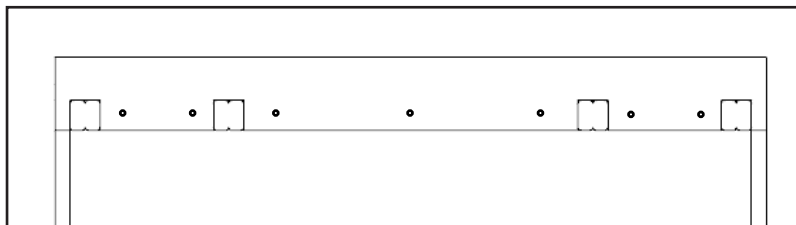


6

ATTACH LEFT & RIGHT PANEL ASSEMBLIES

USING M8X80MM WOOD SCREWS, ENSURE IT IS SCREWED INTO SIDE & BOTTOM

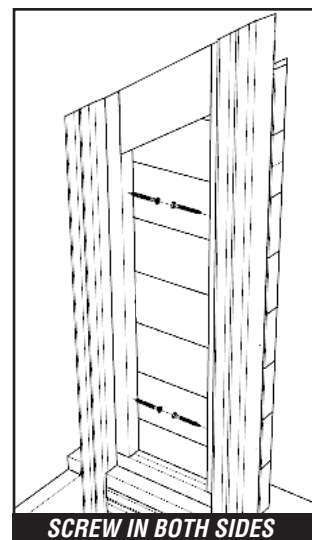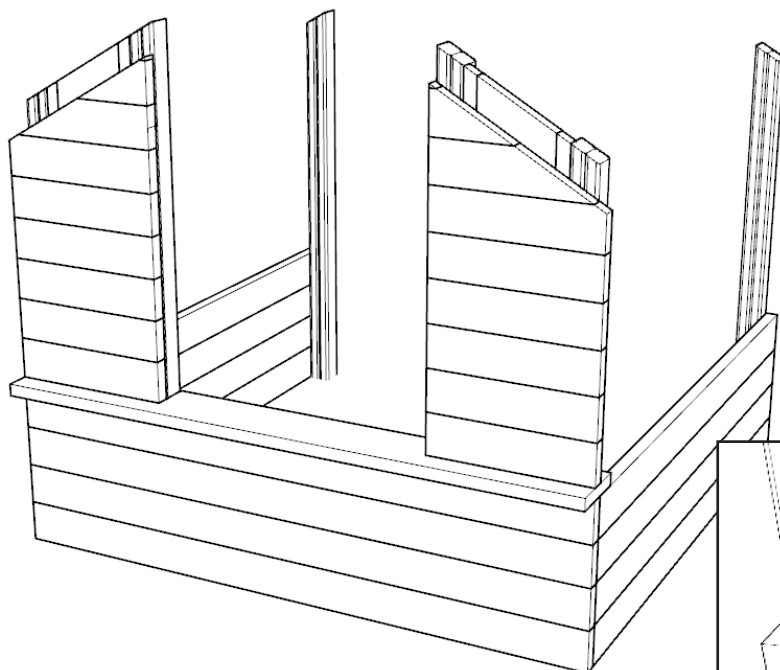

SCREW IN BOTH SIDES

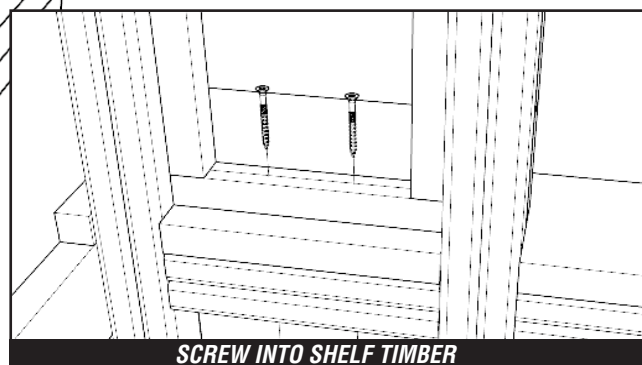


SCREW INTO SHELF TIMBER

INSTALLATION INSTRUCTIONS

7


ATTACH MIDDLE PANEL ASSEMBLY

USING M8X180WOOD SCREWS (2 PER SIDE AS SHOWN)

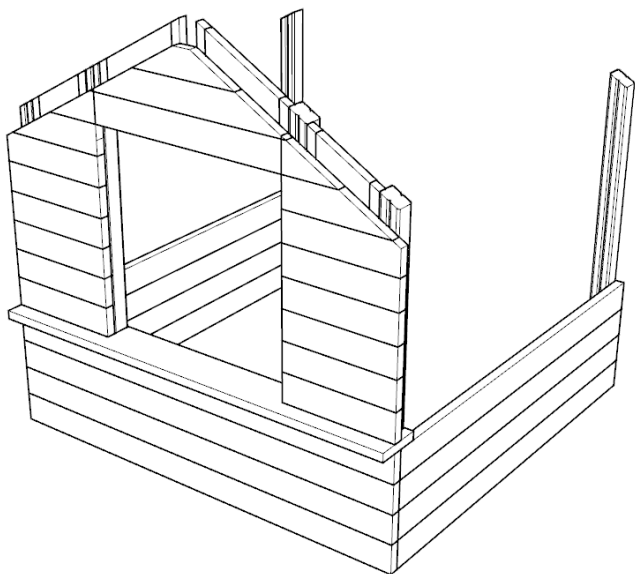

NOTES:




SKEW SCREW THE UPPER FIXING - THROUGH THE 143MM TIMBER INTO THE UPRIGHT

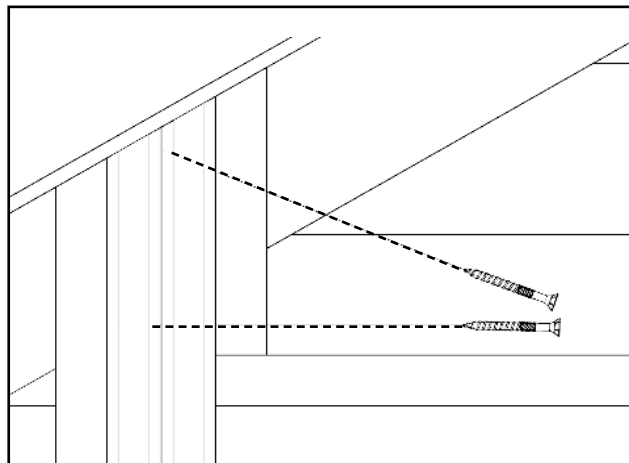

8

POSITION THE PRE-ASSEMBLED ROOF PANELS & R1 RIDGE BEAM TIMBER

USE A PROP TO HOLD THE BACK SECTION IF REQUIRED

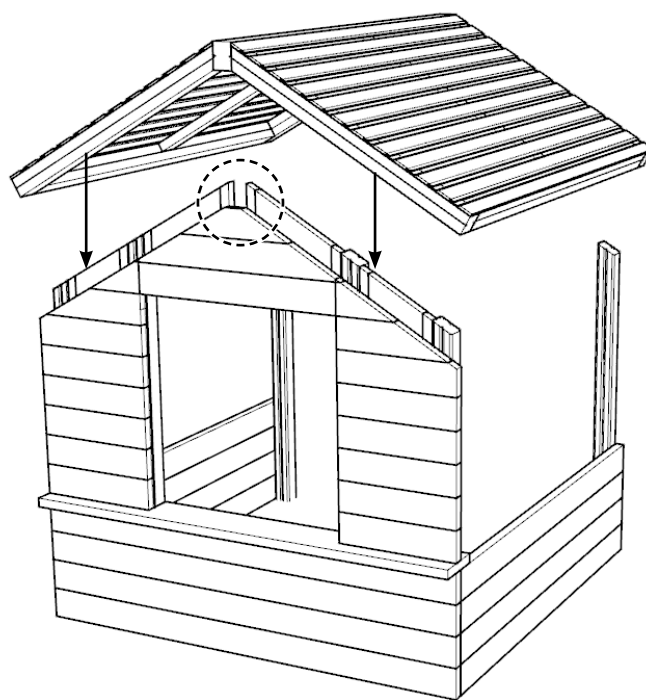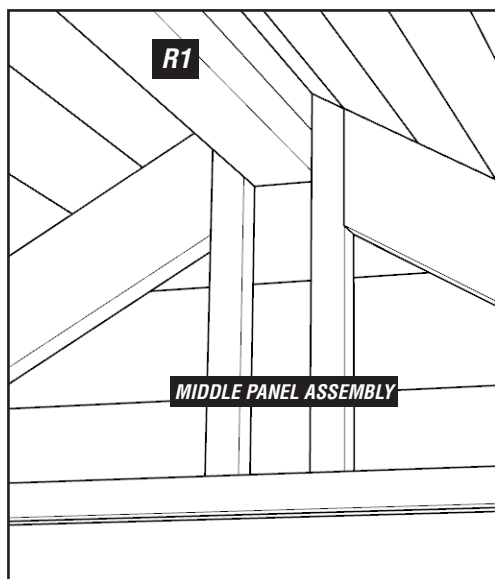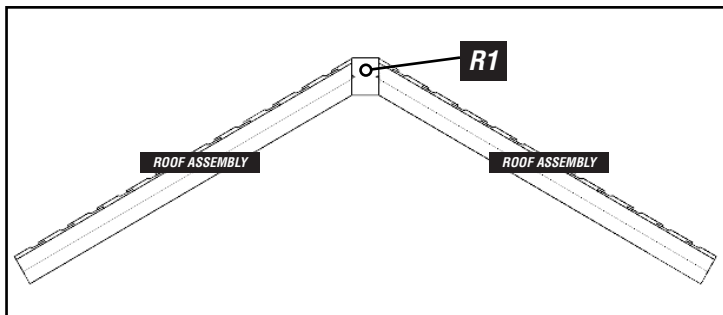

NOTES:

ENSURE RIDGE BEAM IS POSITIONED BETWEEN THE 90MM GAP ON THE MIDDLE PANEL ASSEMBLY

INSTALLATION INSTRUCTIONS

9

ATTACH THE PRE-ASSEMBLED ROOF PANELS & R1 RIDGE BEAM TIMBER



USING M8X120MM & M8X180 WOOD SCREWS , ATTACH TO BOTH SIDES OF PLAYHOUSE

NOTES:

SCREW THROUGH THE ROOF ASSEMBLY INTO RIDGE BEAM (120MM SCREWS)

SCREW THROUGH UPRIGHTS INTO ROOF PANEL ASSEMBLY FROM INSIDE (180MM SCREWS)

ENSURE 180MM SCREWS DO NOT GO ALL THE WAY THROUGH BOTH 90X90 TIMBERS

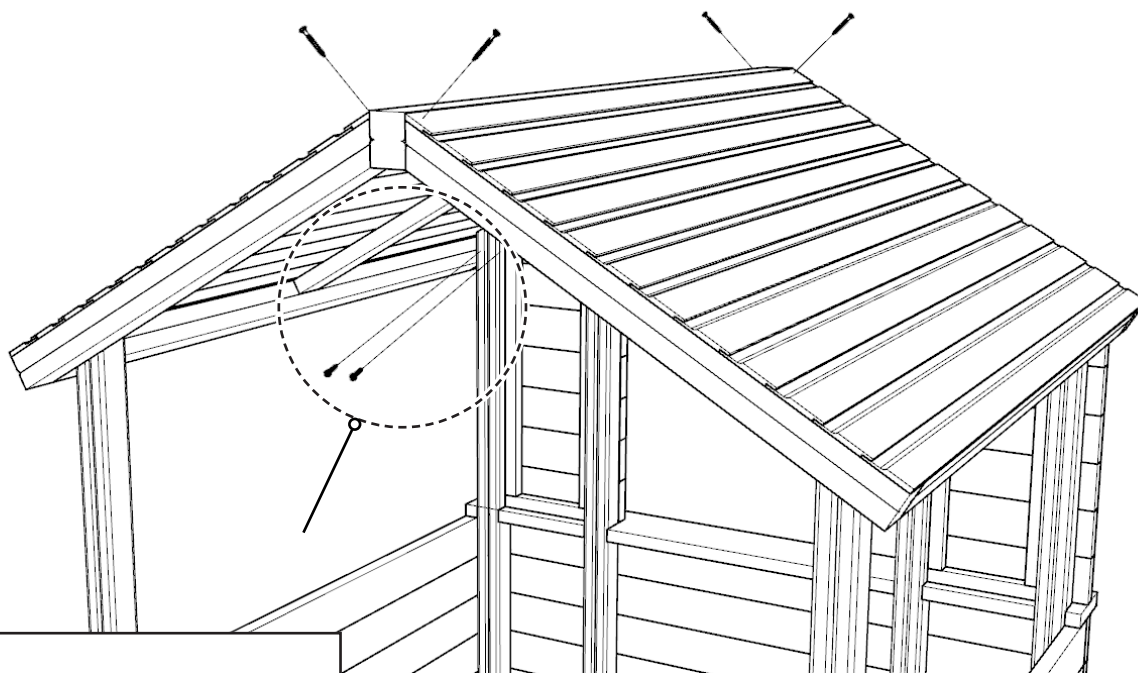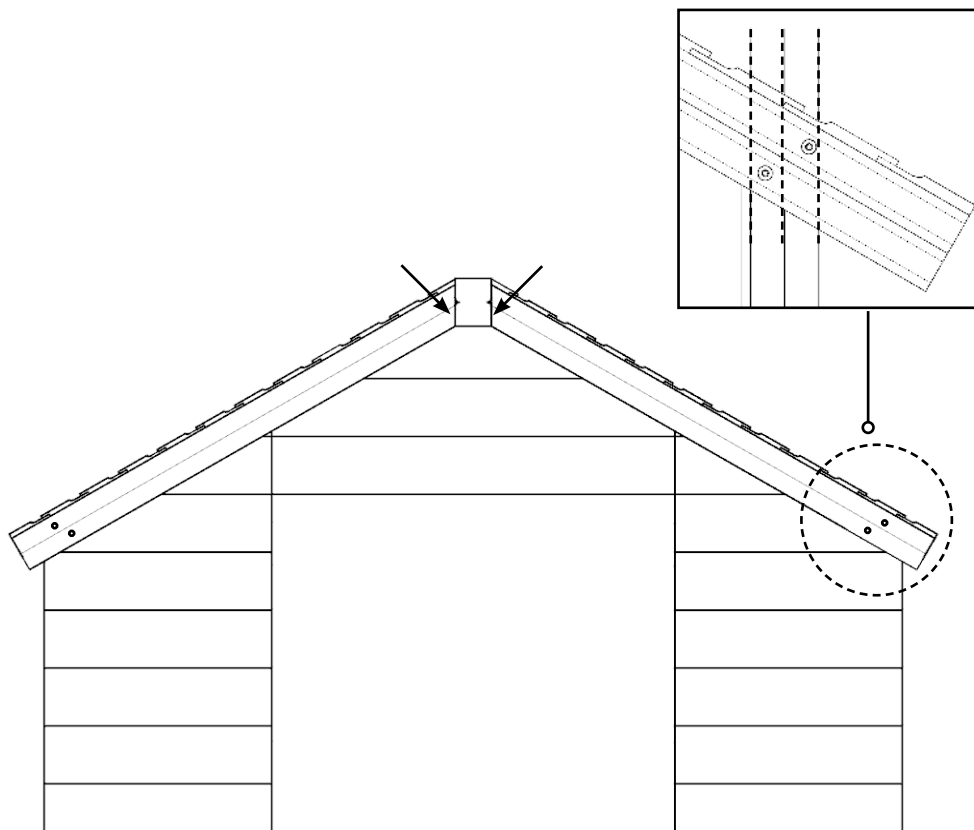

NOTES:


ENSURE UPRIGHT SCREWS ARE SCREWED IN FROM THE INSIDE OF THE PLAYHOUSE AS SHOWN

INSTALLATION INSTRUCTIONS

10

ATTACH R2 TIMBER TO THE BACK SIDE OF PLAYHOUSE


USING M8X180MM WOOD SCREWS IN LOCATIONS SHOWN BELOW

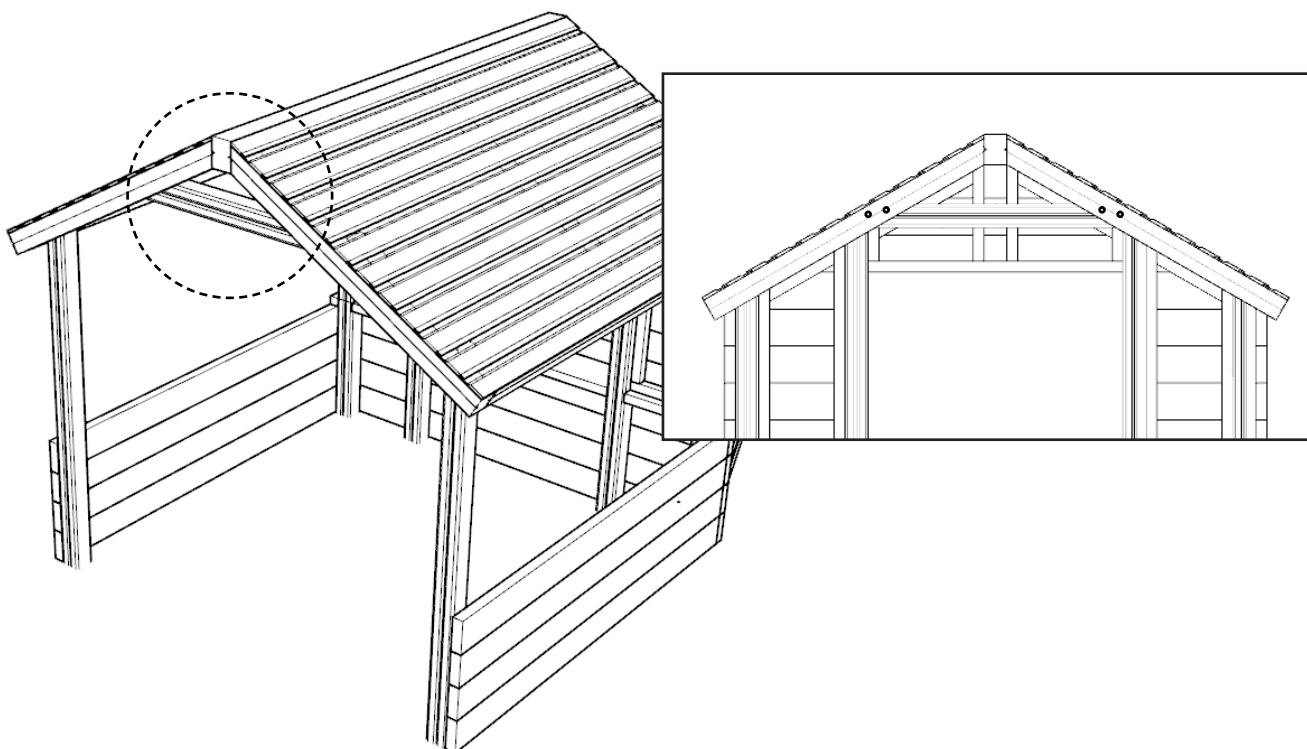

11

ATTACH ROOF TRIM PIECES (RT1, RT2 & RT3) AS SHOWN BELOW

READ NOTES BELOW AND USE M8X80MM WOOD SCREWS TO SECURE

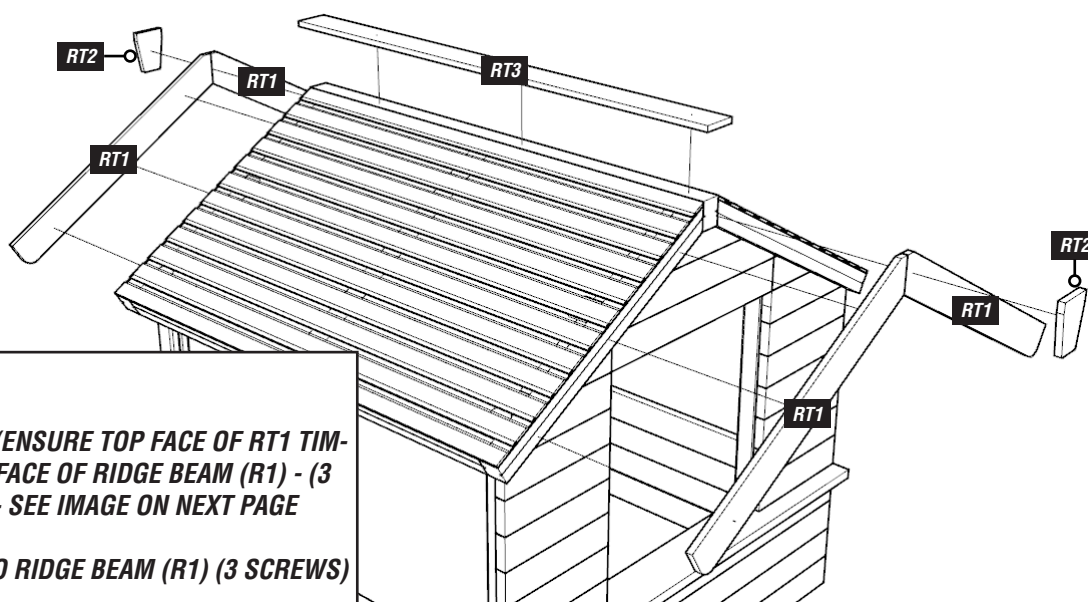

NOTES:


1. ATTACH RT1 TIMBERS (ENSURE TOP FACE OF RT1 TIMBER IS FLUSH WITH TOP FACE OF RIDGE BEAM (R1) - (3 SCREWS PER RT1 TRIM) - SEE IMAGE ON NEXT PAGE

2. ATTACH RT3 TIMBER TO RIDGE BEAM (R1) (3 SCREWS)

3. ATTACH RT2 'COVERS' TO RT1 TRIM & INTO ROOF ASSEMBLY (3 SCREWS)

ENSURE SCREWS ARE UNIFORM/INLINE AS SHOWN BELOW...



INSTALLATION INSTRUCTIONS

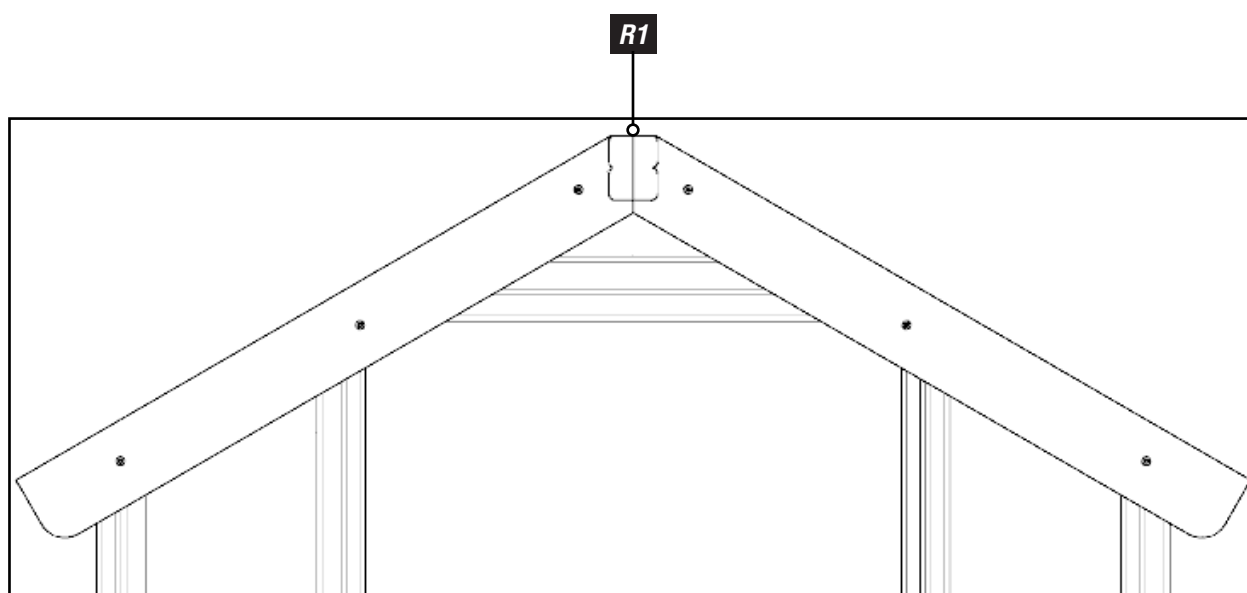

12




ATTACH DOOR ASSEMBLIES TO FRONT OF PLAYHOUSE

USING HINGE SCREWS, ENSURE GAPS (SEE DIMENSIONS) ARE LEFT AROUND DOORS TO ALLOW MOVEMENT

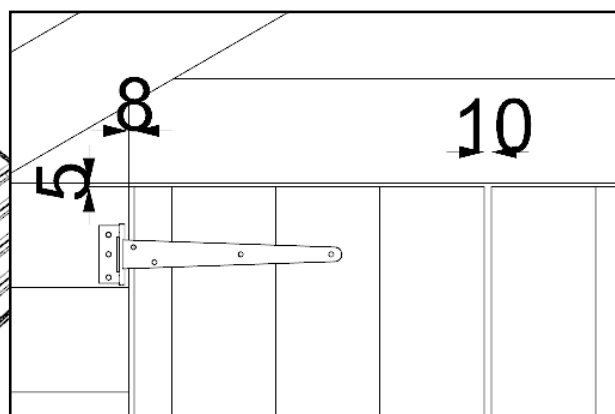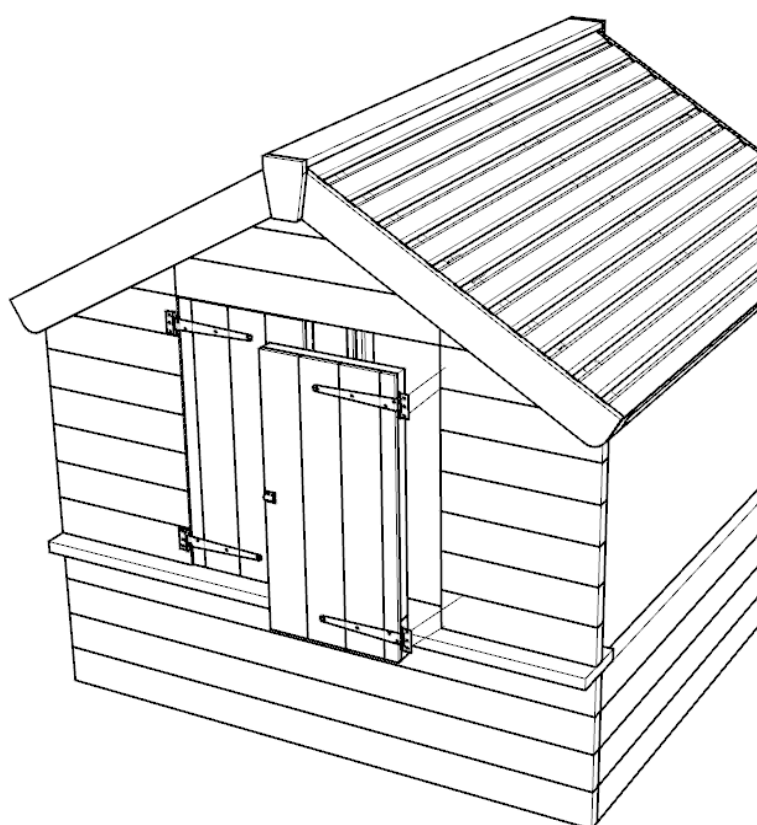


NOTES:

ENSURE A GAP OF AROUND 8MM IS LEFT AT SIDE OF DOORS, 5MM IS LEFT AT TOP & BOTTOM AND 10MM LEFT BETWEEN BOTH DOORS IN MIDDLE

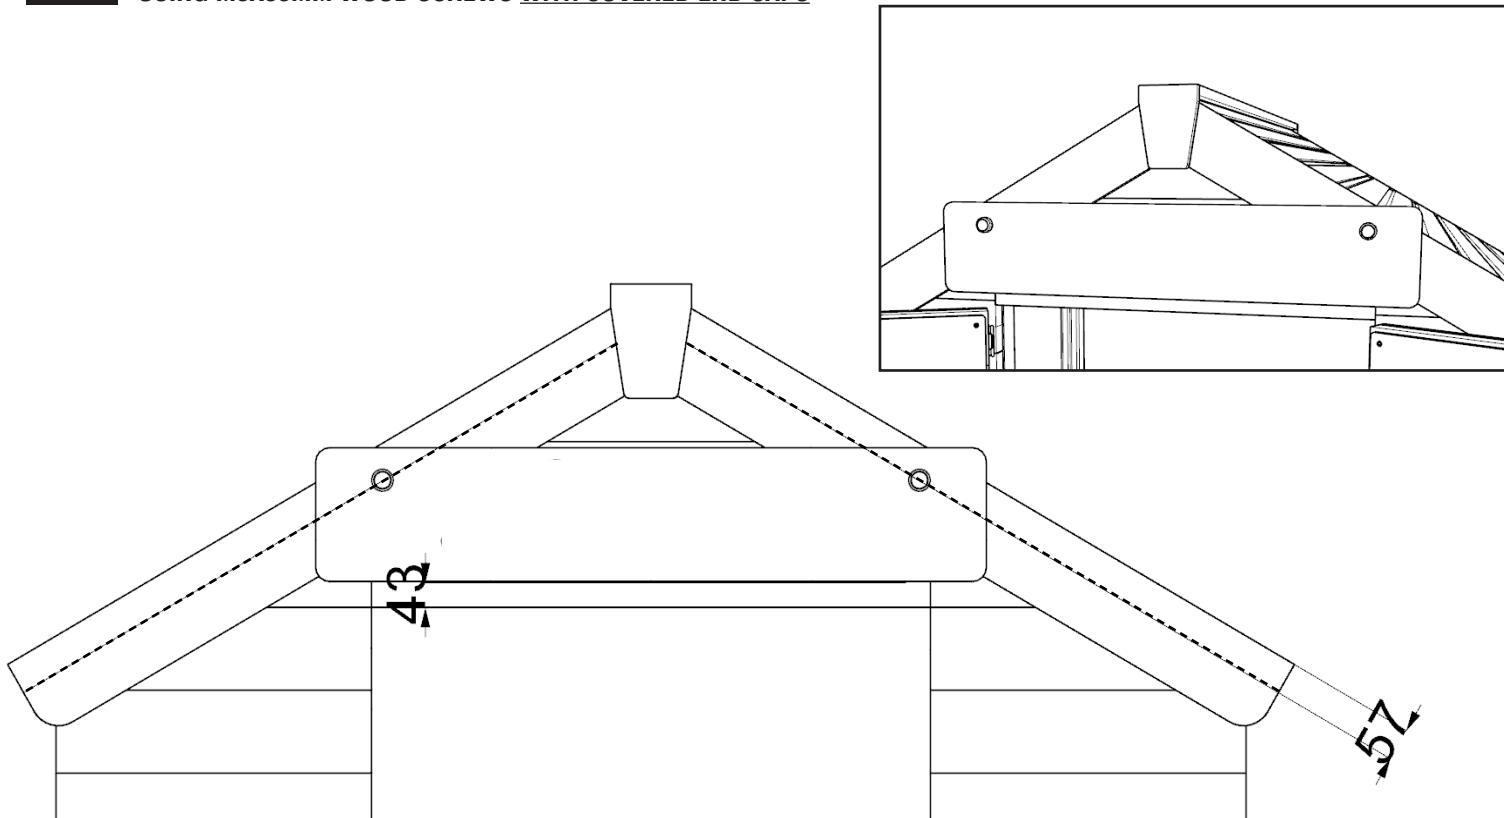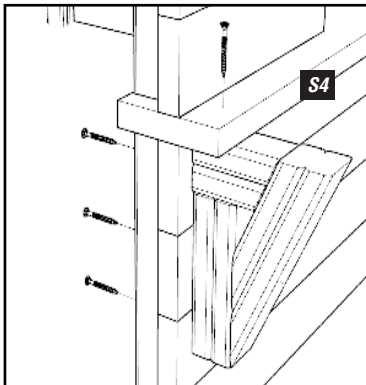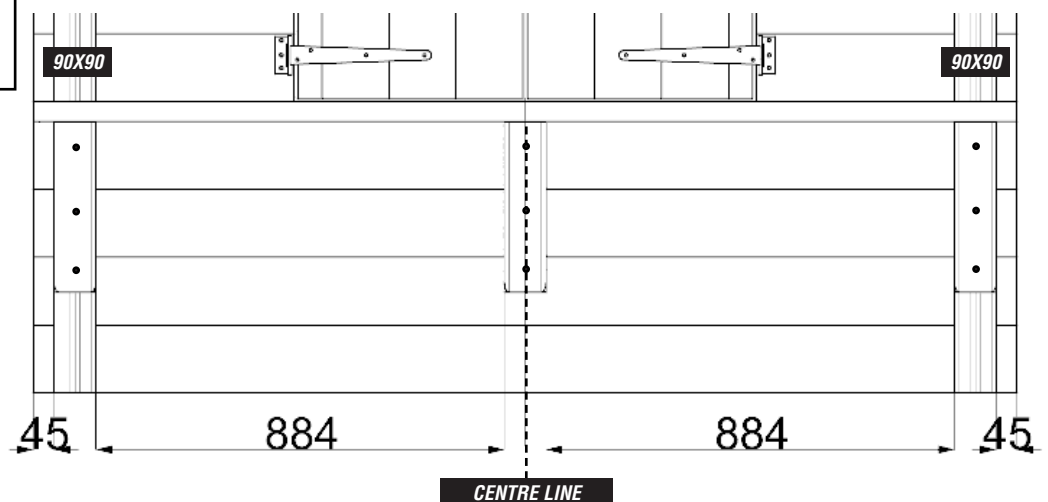
13**ATTACH BLACKBOARD SIGN TO ROOF TRIM TIMBERS IN LOCATION SHOWN***USING M8X80MM WOOD SCREWS WITH COVERED END CAPS***14****ATTACH SHELF SUPPORTS***USING M8X120MM & 180MM WOOD SCREWS, ENSURE THEY BUTT UP TO UNDERSIDE OF TPH113 - S4***NOTES:***OUTER SHELF SUPPORTS SHOULD BE IN LINE WITH 90X90 UPRIGHT TIMBERS**MIDDLE SUPPORT SHOULD BE CENTRED IN MIDDLE OF PLAYHOUSE FRONT**ENSURE AN ADDITIONAL SCREW IS IN FROM TOP SECURING SHELF TO SUPPORTS (SEE LEFT)*

15**ATTACH TPH113 - S3 SHELF TIMBER**

USING M8X80MM WOOD SCREWS, 2 PER SHELF SUPPORT, SCREW IN FROM TOP OF SHELF TIMBER

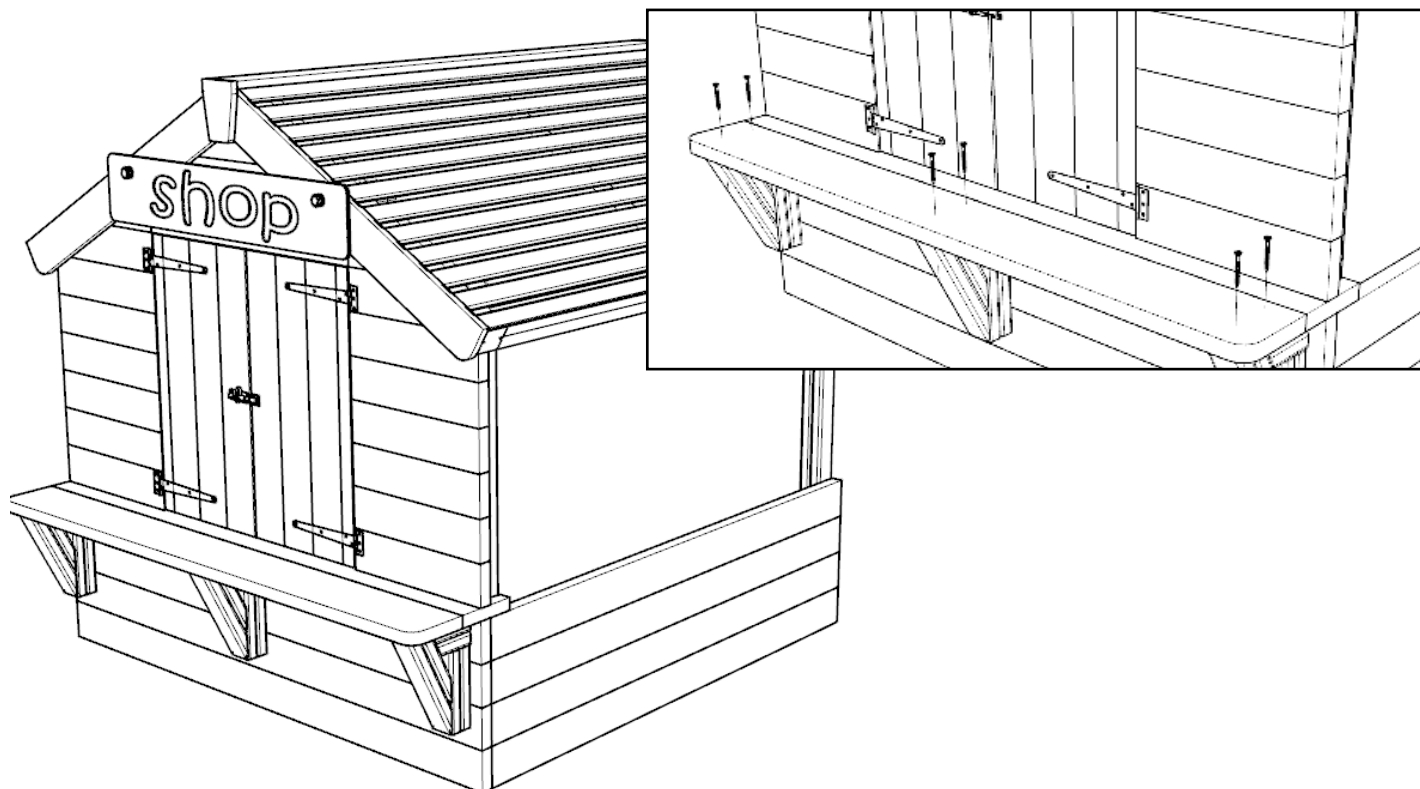**16****ATTACH SEAT SUPPORTS**


USING M8X120MM WOOD SCREWS, ENSURE THEY ARE SCREWED IN FROM OUTSIDE OF PLAYHOUSE


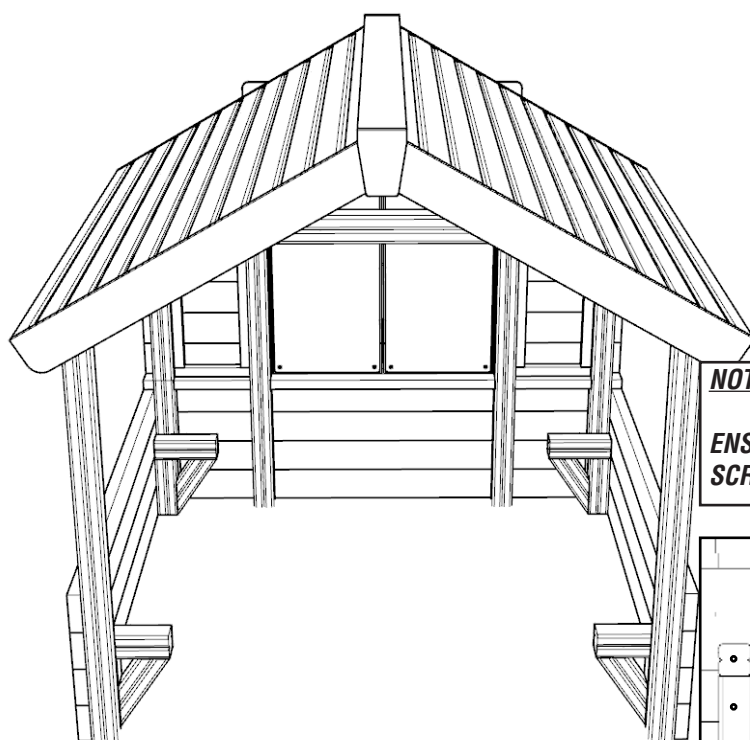
**NOTES:**

ADDITIONAL SUPPORT SEAT
ADDED TO MIDDLE OF SEAT AS
SHOWN

NOTES:

ENSURE SEAT SUPPORTS SIT DIRECTLY ON GROUND, THEN
SCREW IN FROM OUTSIDE OF PLAYHOUSE AS SHOWN BELOW

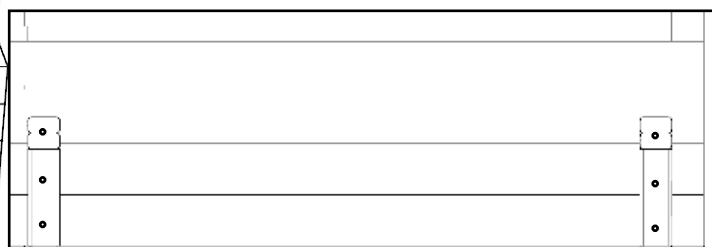

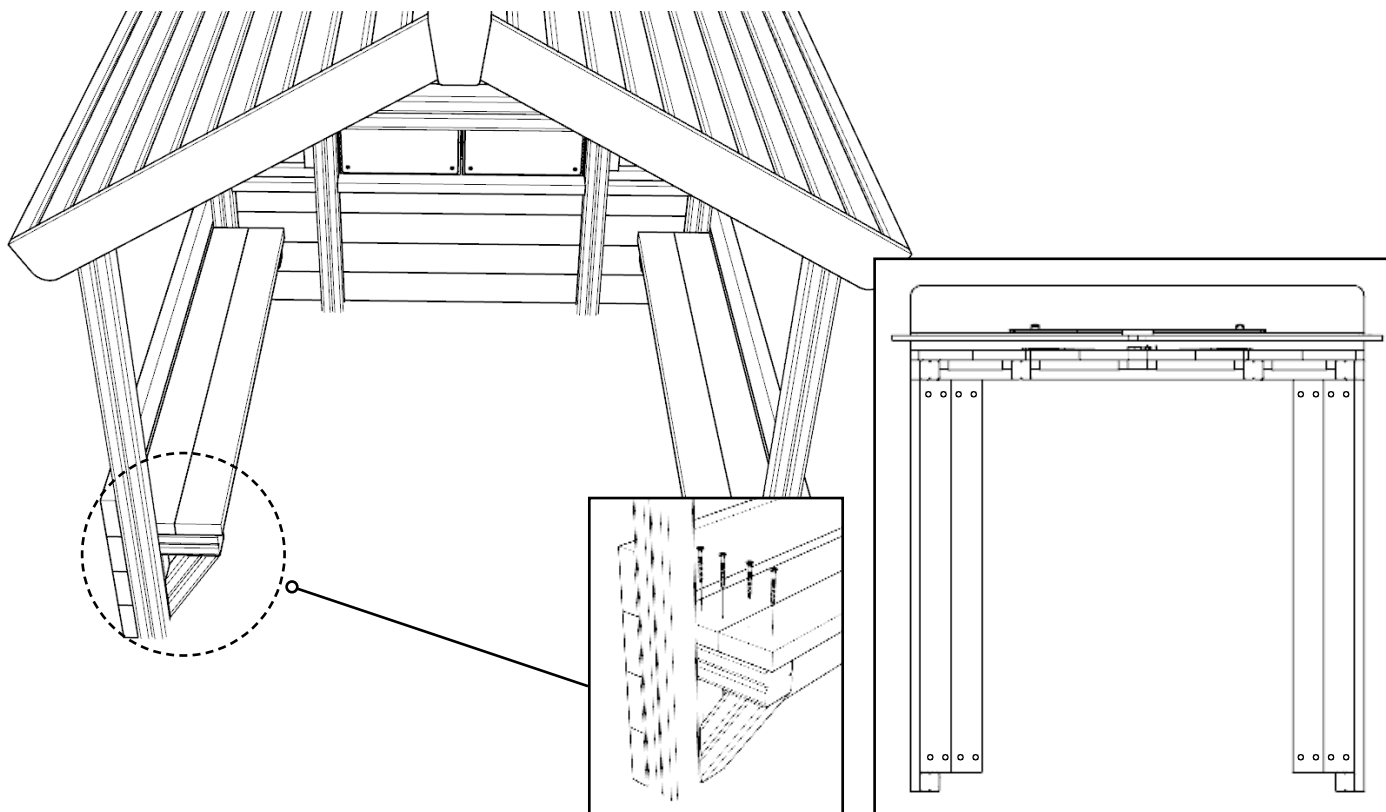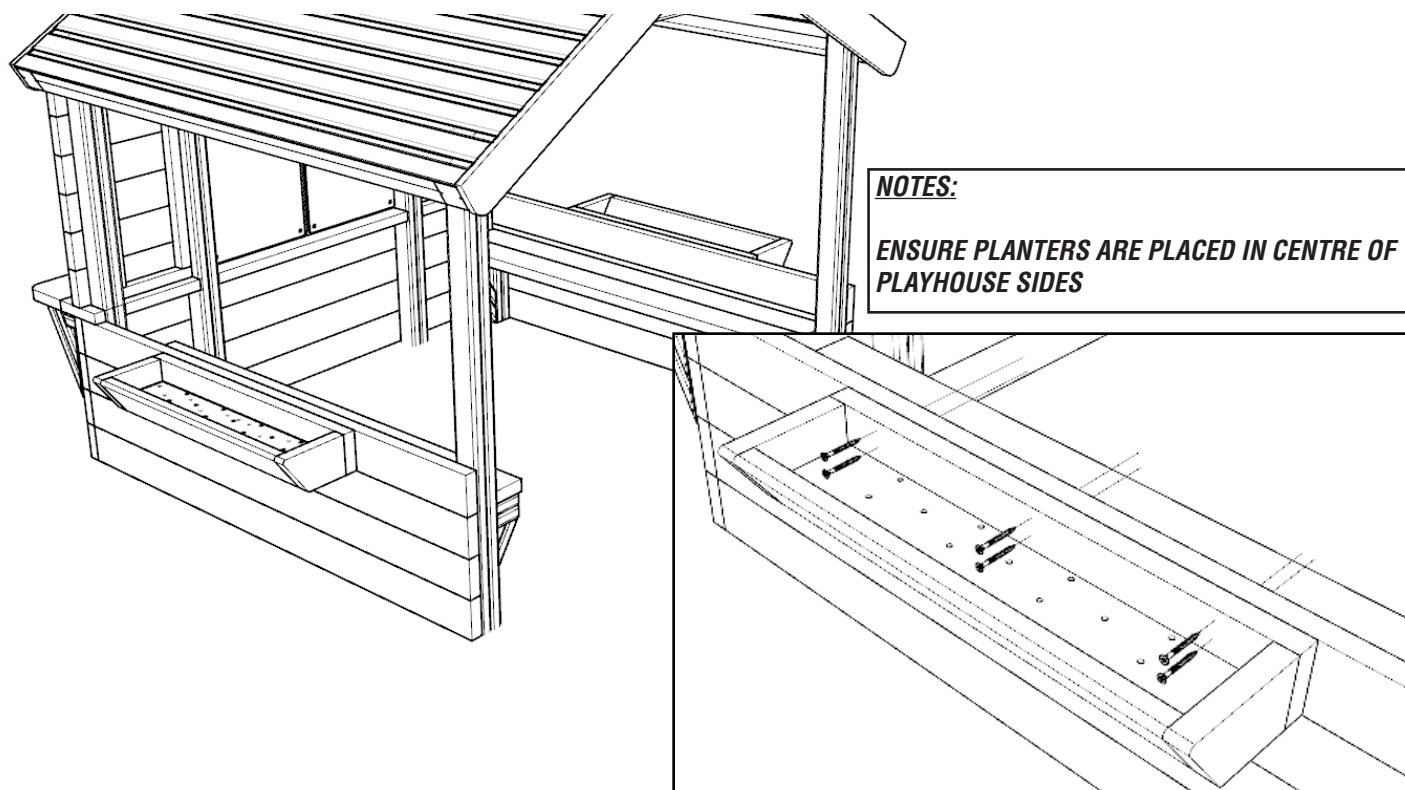17**ATTACH SEAT TIMBERS (S5)****USING M8X80MM WOOD SCREWS, 4 SCREWS PER SIDE, SCREW IN FROM TOP OF SHELF TIMBER****18****ATTACH PLANTER BOXES ON OUTSIDE OF PLAYHOUSE****USING M8X80MM WOOD SCREWS, ENSURE THEY ARE ATTACHED FROM INSIDE AS SHOWN**

ADDITIONAL DIMENSIONS

