
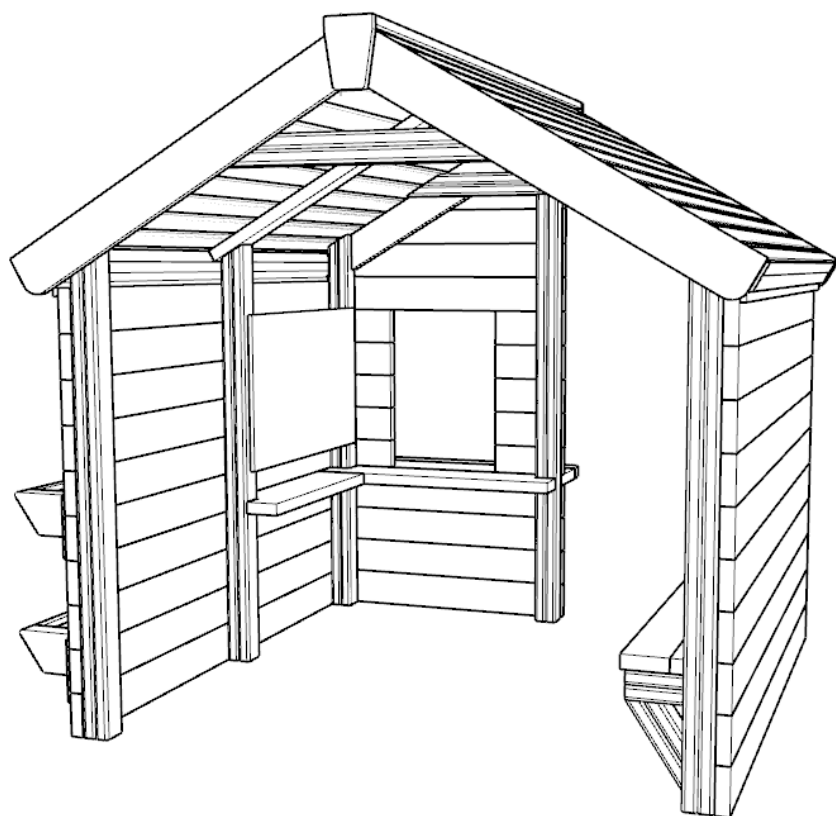



TPH114 - INCLUSIVE PLAYHOUSE TWO

Installation Instructions


**creative
play**

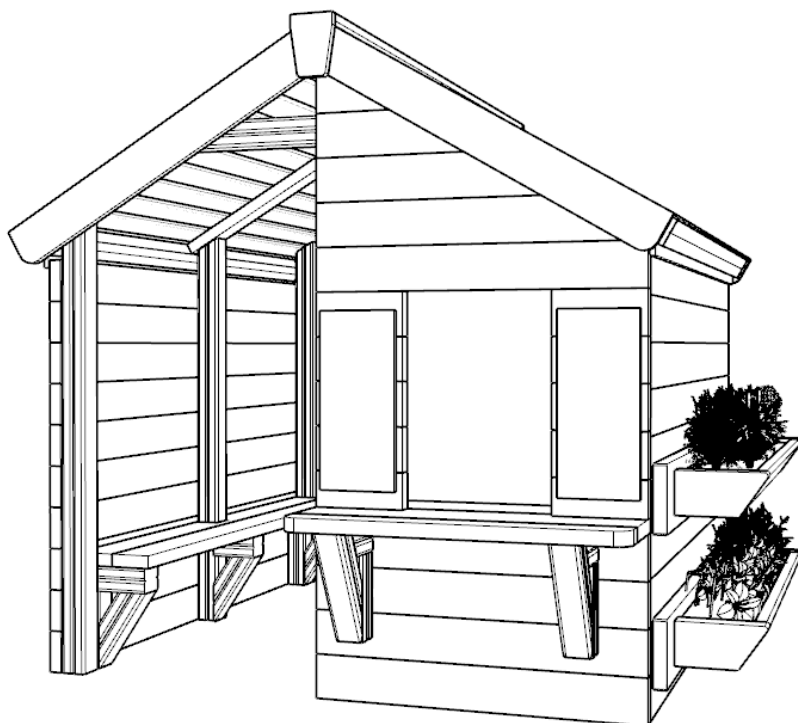

PARTS REQUIRED

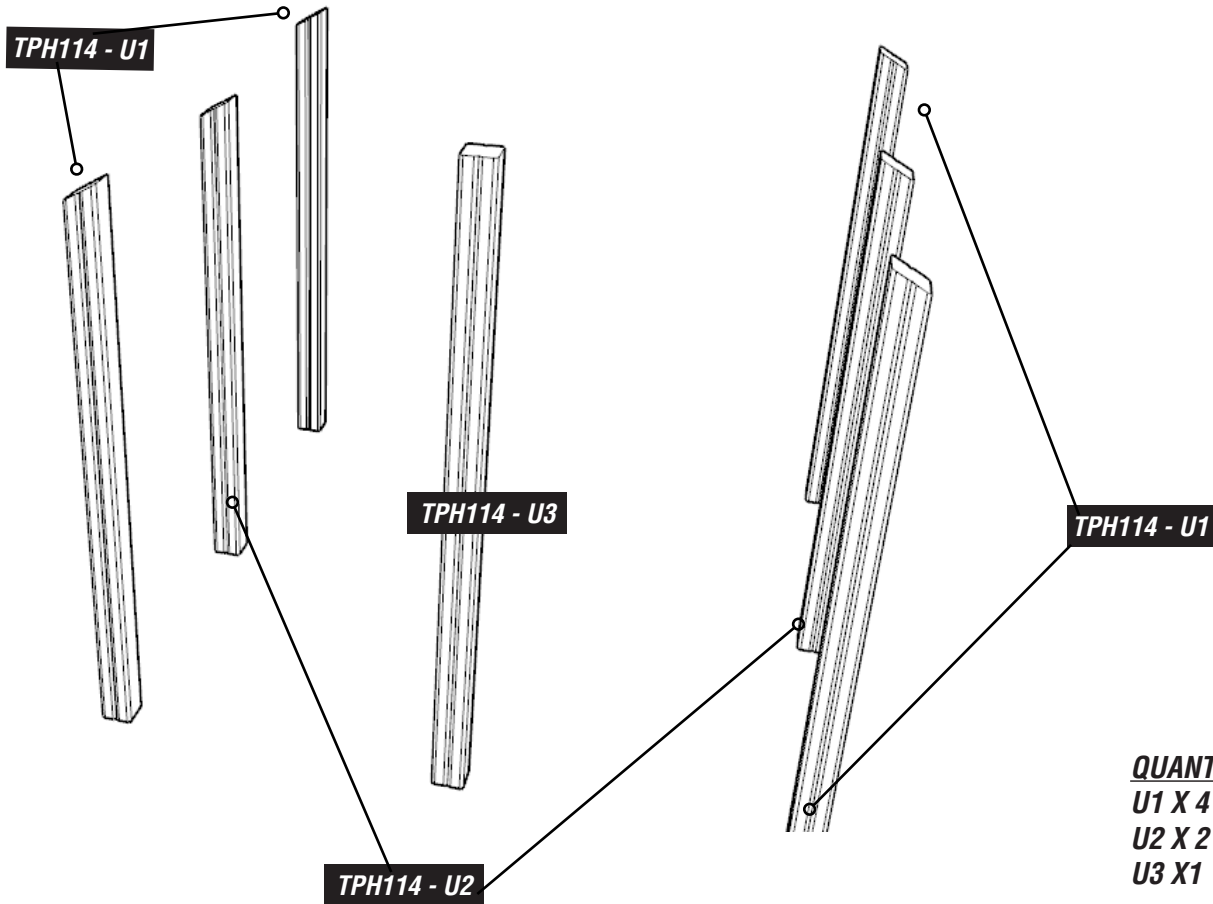

UPRIGHT TIMBERS

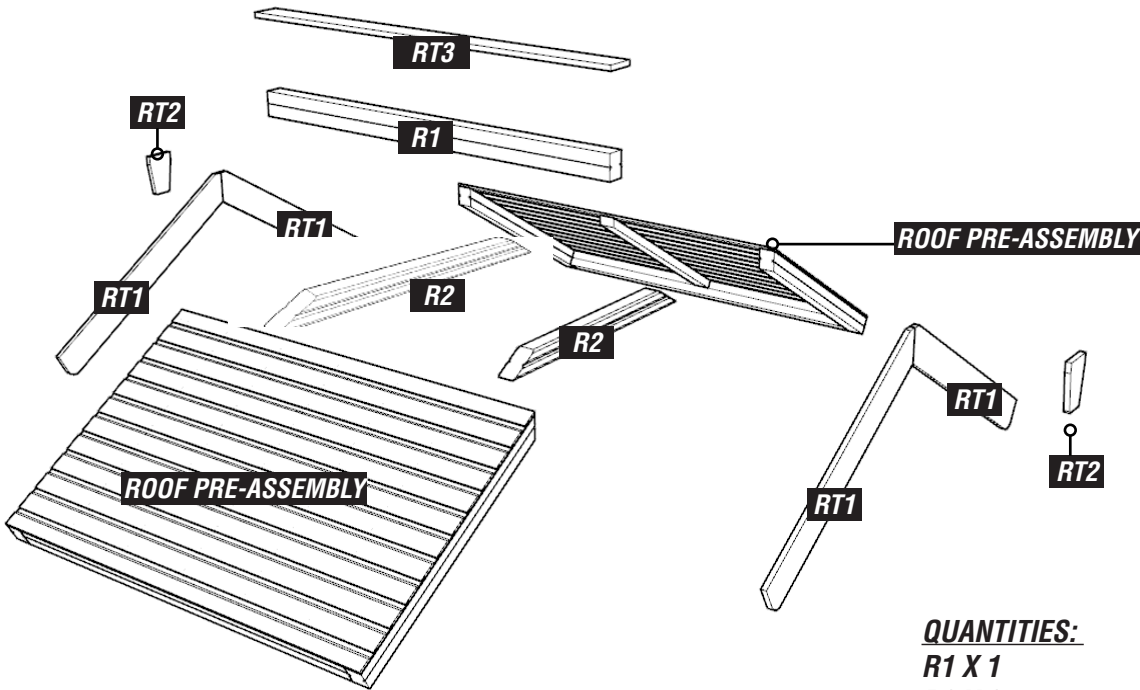


R = ROOF TIMBERS

RT = ROOF TRIM

ROOF TIMBERS & TRIM


PARTS REQUIRED - LOOSE TIMBERS

SLAT TIMBERS

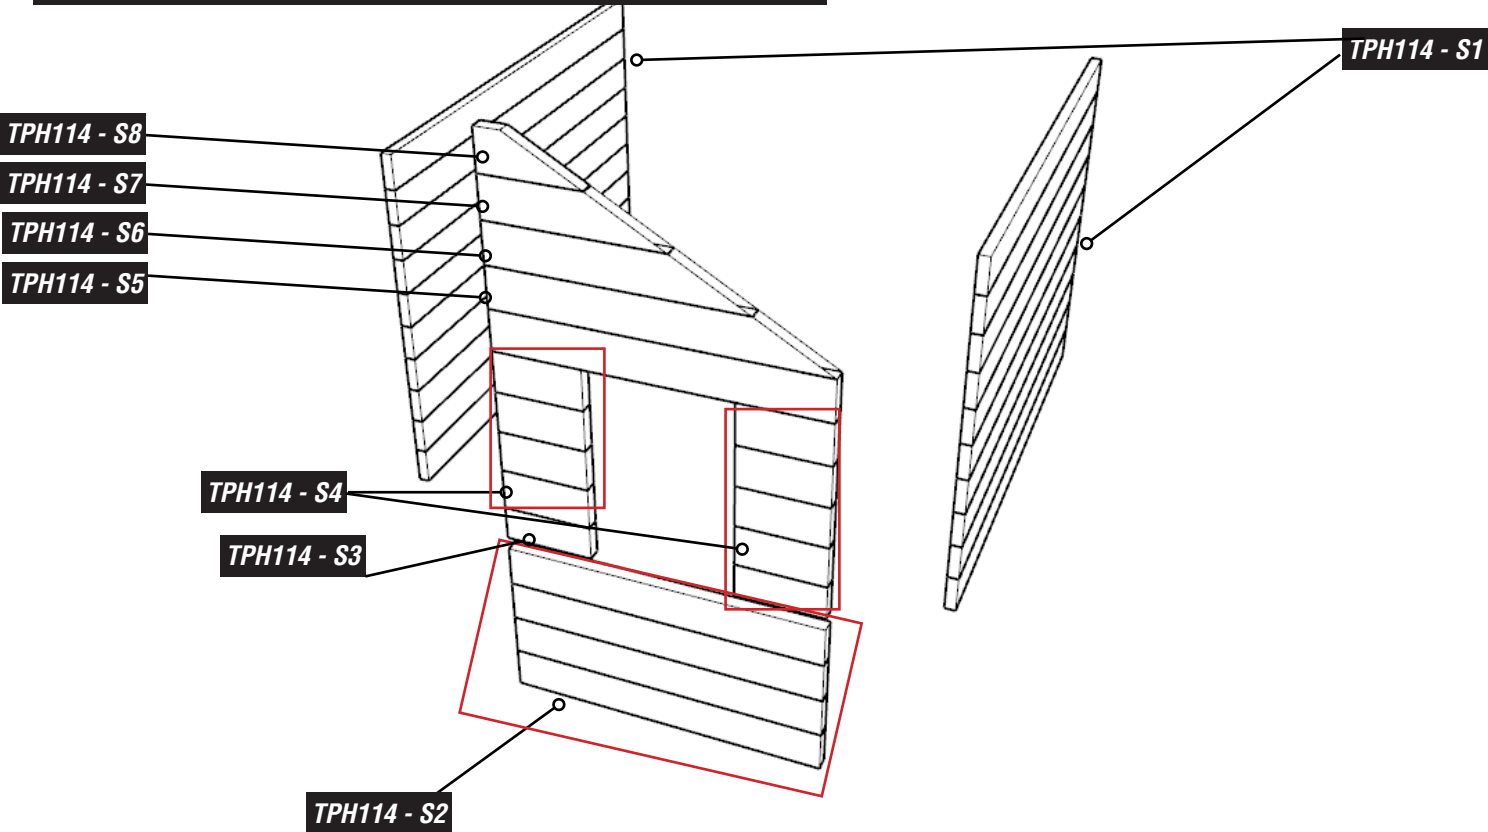


CODE	TYPE	SIZE	QTY	ADDITIONAL INFORMATION
TPH114 - S1	143X43	2000	20	SIDE SLATS
TPH114 - S2	143X43	1089	5	FRONT SLATS
TPH114 - S3	143X43	117	2	
TPH114 - S4	143X43	300	8	
TPH114 - S5	143X43	1088	1	
TPH114 - S6	143X43	837	1	
TPH114 - S7	143X43	586	1	
TPH114 - S8	143X43	335	1	
ADD SUPPORT	133X43			
ADD-1	133X43	626	1	
ADD-2	133X43	529	1	

PARTS REQUIRED - LOOSE TIMBERS

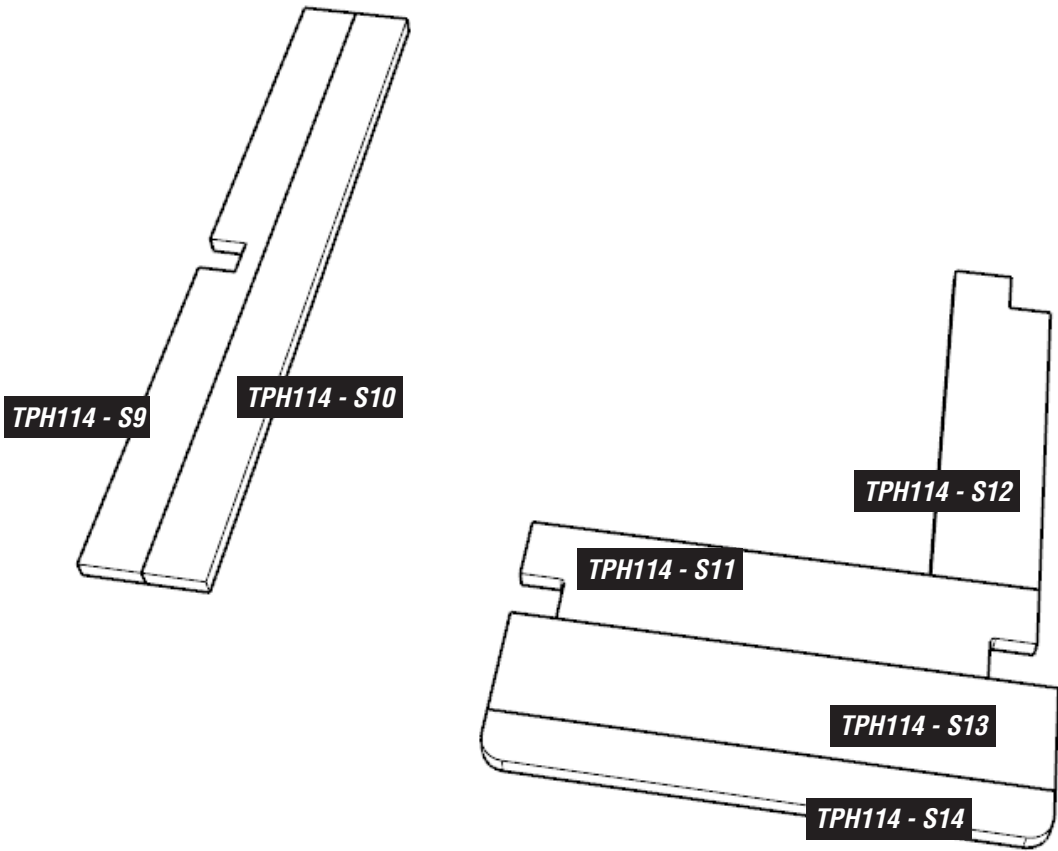


CODE	TYPE	SIZE	QTY	ADDITIONAL INFORMATION
TPH114 - S9	143X43	1820	1	SEAT - SEE DRAWING
TPH114 - S10	143X43	1820	1	SEAT
TPH114 - S11	143X43	1044	1	SHELF - SEE DRAWING
TPH114 - S12	143X43	826	1	SHELF - SEE DRAWING
TPH114 - S13	143X43	1089	1	SHELF
TPH114 - S14	143X43	1089	1	SHELF - SEE DRAWING

PARTS REQUIRED

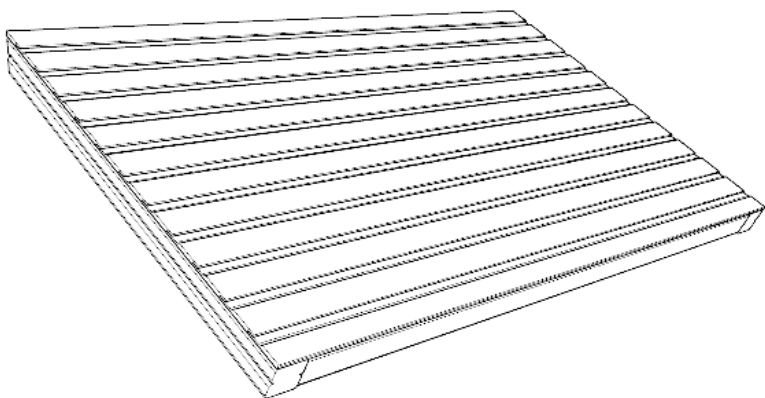


x2

ROOF PRE-ASSEMBLED PANELS

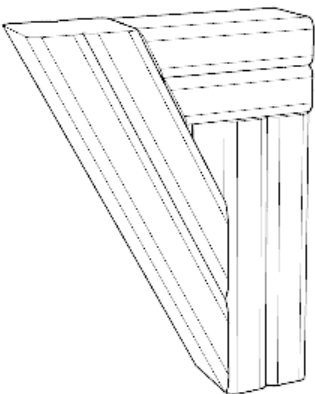


x2

SHELF SUPPORT

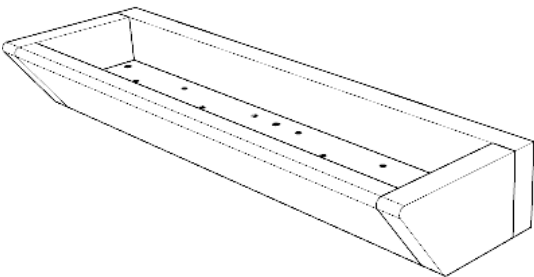


x2

PLANTER ASSEMBLY

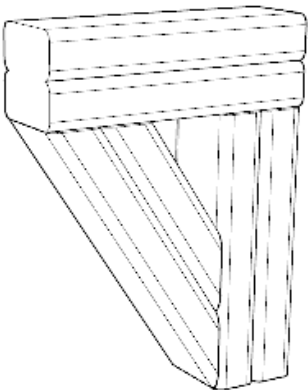


x2

SEAT SUPPORT SIDE

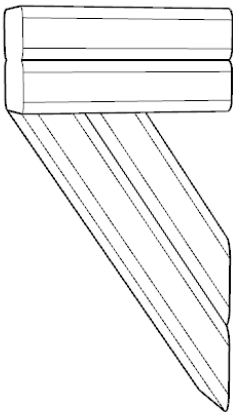


x1

SEAT SUPPORT MIDDLE

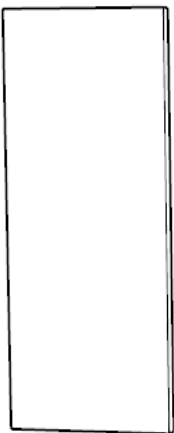


x2

SMALL BLACKBOARD

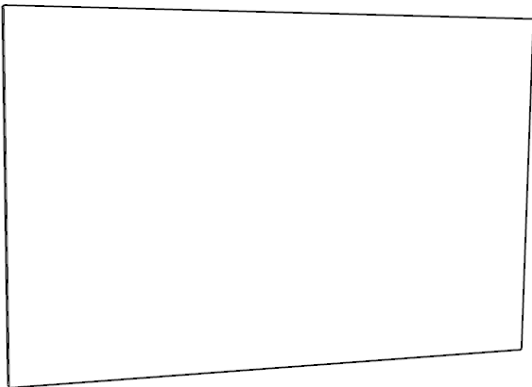

x2

LARGE BLACKBOARD

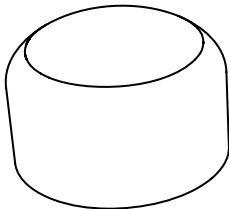

x4


END CAP

PARTS REQUIRED




x30

97.M8X180CSK



x19



97.M8X120CSK




x250

97.M8X80CSK

FOUNDATION DETAILS

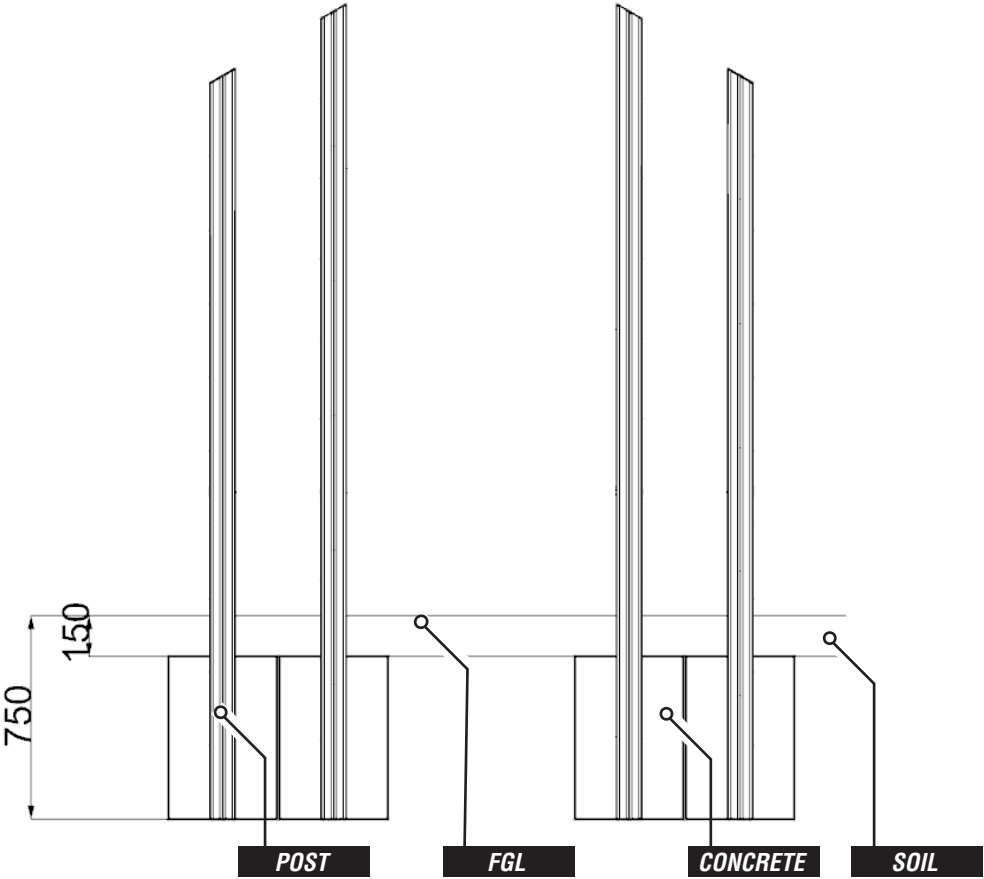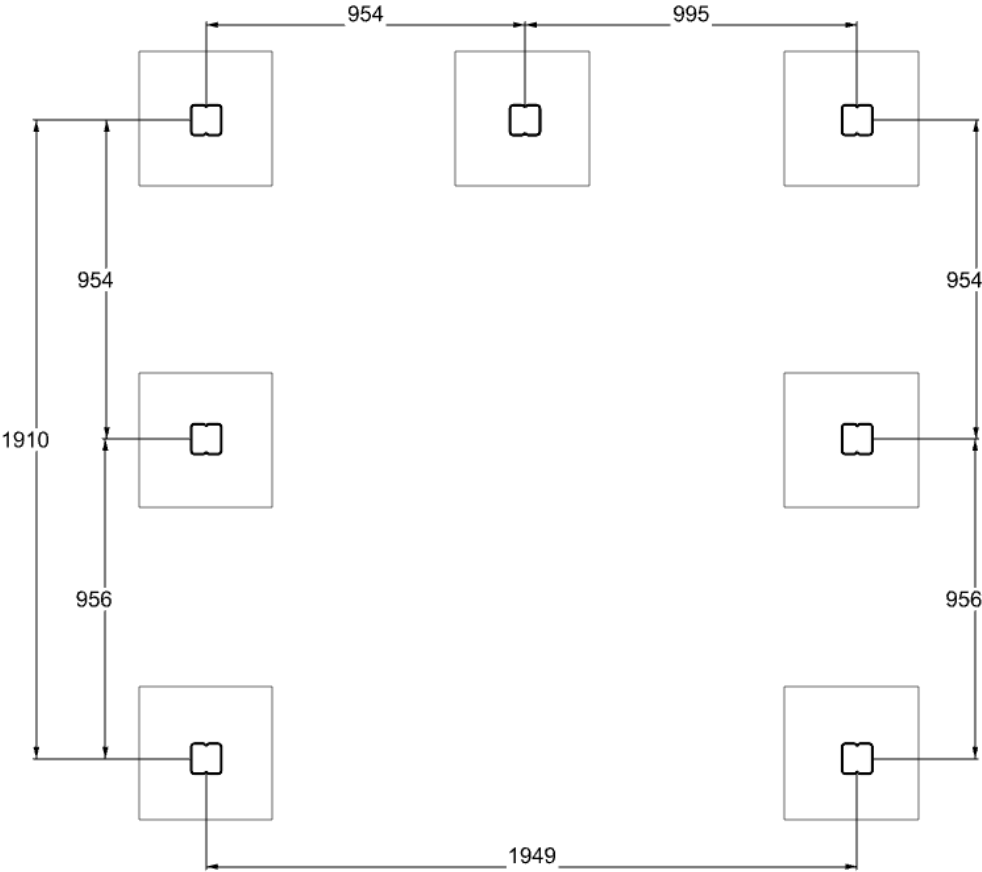

SURFACING DETAILS

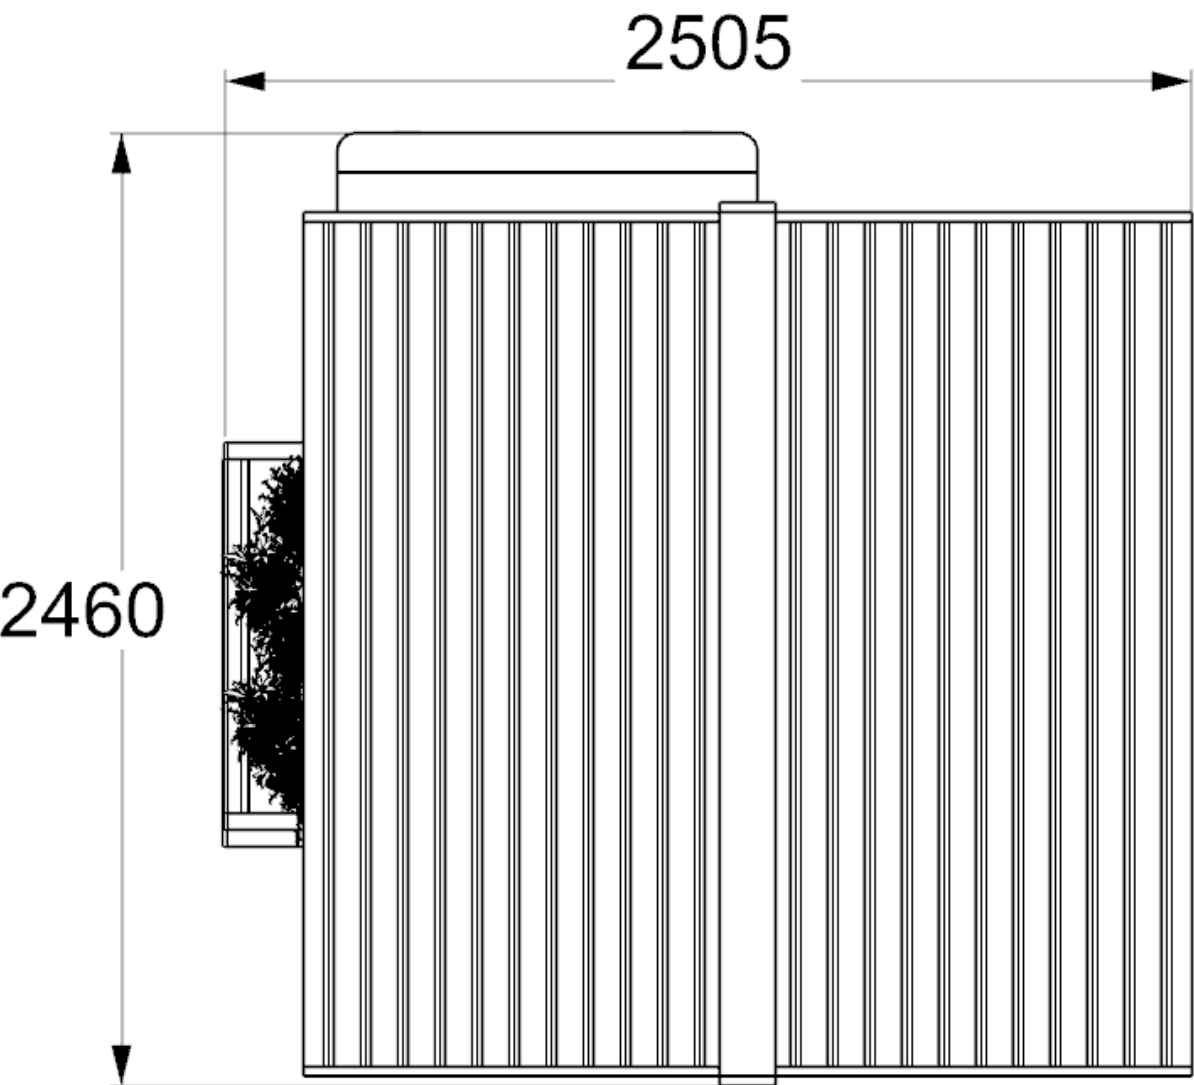


INSTALLATION INSTRUCTIONS

1

POSITION UPRIGHT TIMBERS ACCORDING TO GROUNDPLAN



ENSURING TIMBERS ARE POSITIONED OUTWARDS AS SHOWN

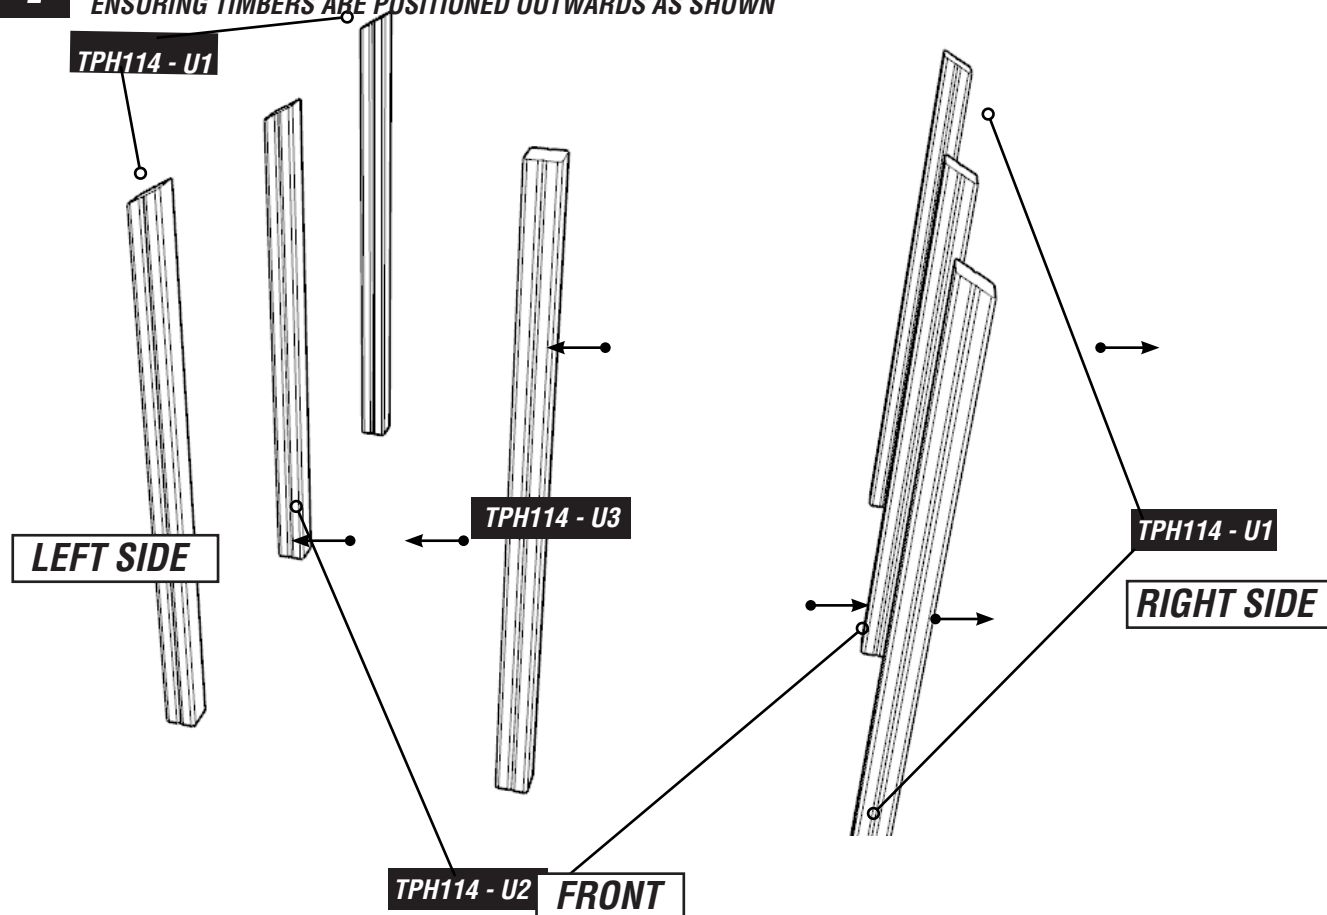

2

ATTACH TPH113 - S1 TIMBERS TO OUTER UPRIGHTS (6 PER SIDE)

USING M8X80M WOOD SCREWS X120

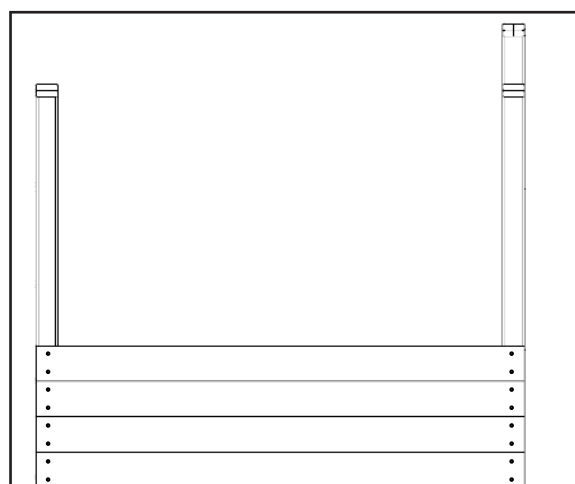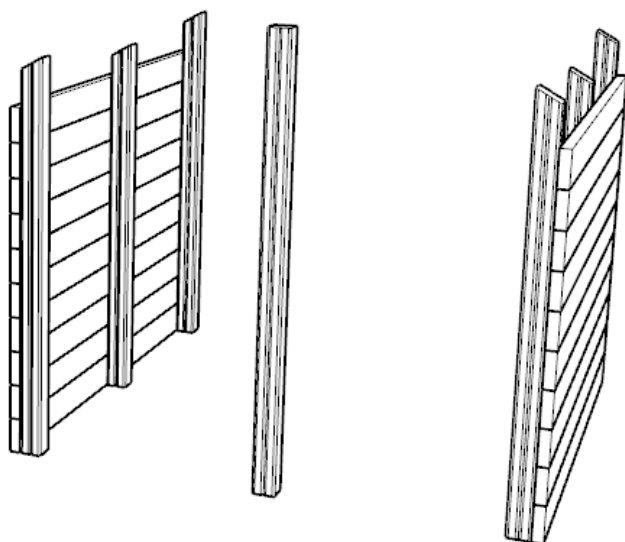

NOTES:


ENSURE TIMBER SLATS ARE FLUSH WITH THE
EDGE OF THE TIMBERS AS SHOWN ABOVE

INSTALLATION INSTRUCTIONS

3

ATTACH TPH114 - S2 TIMBERS TO FRONT SLATS



USING M8X80MM X16 WOOD SCREWS, ENSURE TIMBERS ARE FLUSH AS SHOWN

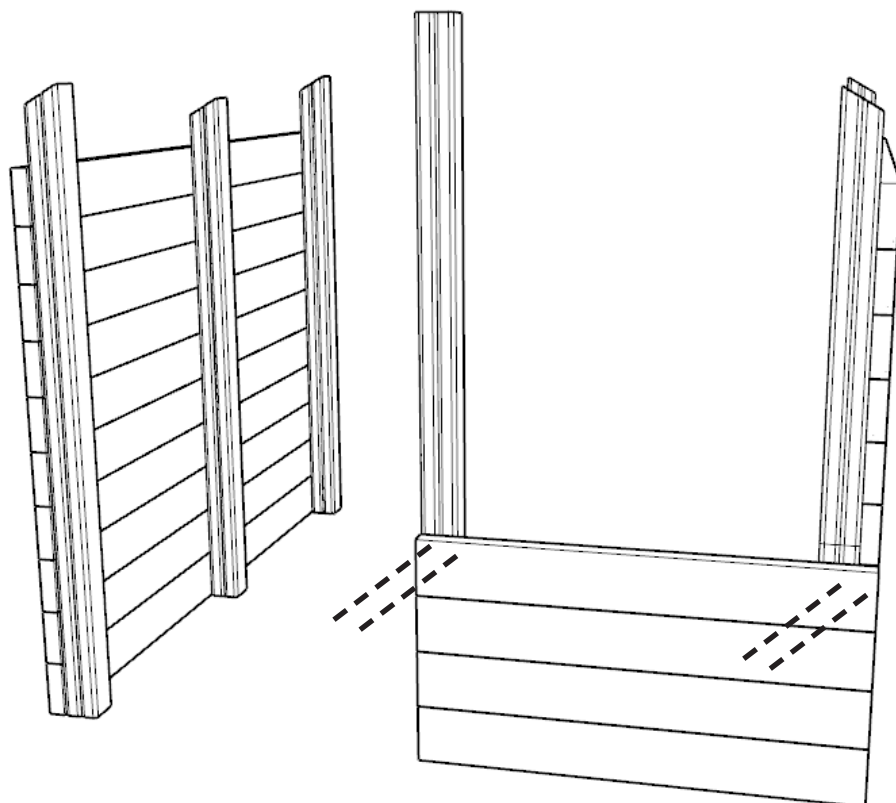

4

ATTACH TPH114 - S11 & S13 SHELF TIMBERS TO UPRIGHT TIMBERS




USING M8X80MM WOOD SCREWS, SCREW IN FROM TOP BETWEEN UPRIGHTS AS SHOWN BELOW

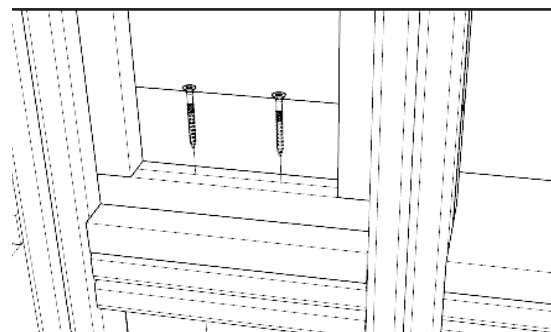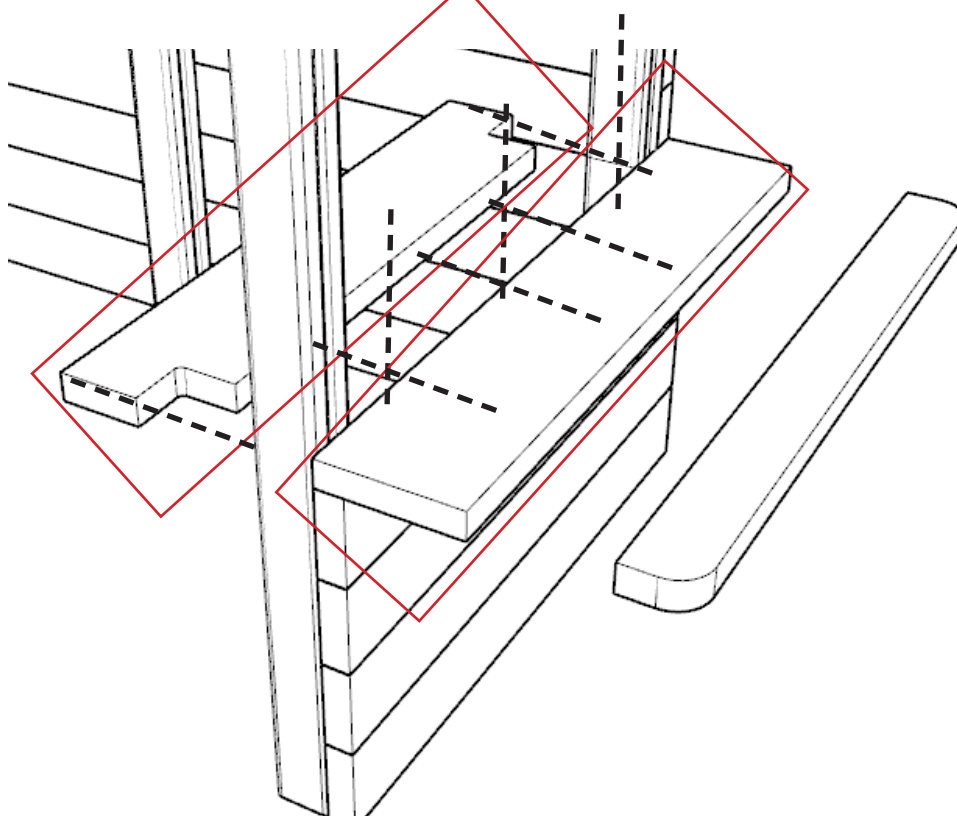


SCREW INTO SHELF TIMBER

INSTALLATION INSTRUCTIONS


5 ATTACH SHELF SUPPORTS TO HOLD EVERYTHING IN PLACE USING M8X80MM WOOD SCREWS, ENSURE IT IS SCREWED INTO SIDE & BOTTOM

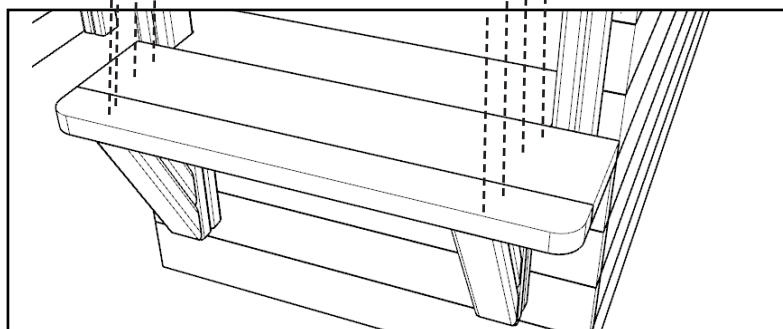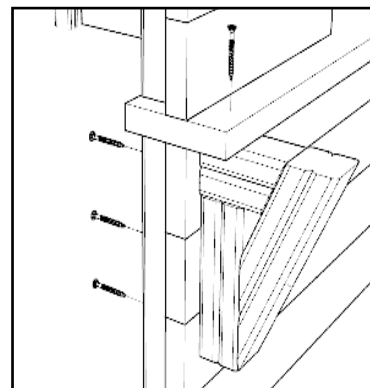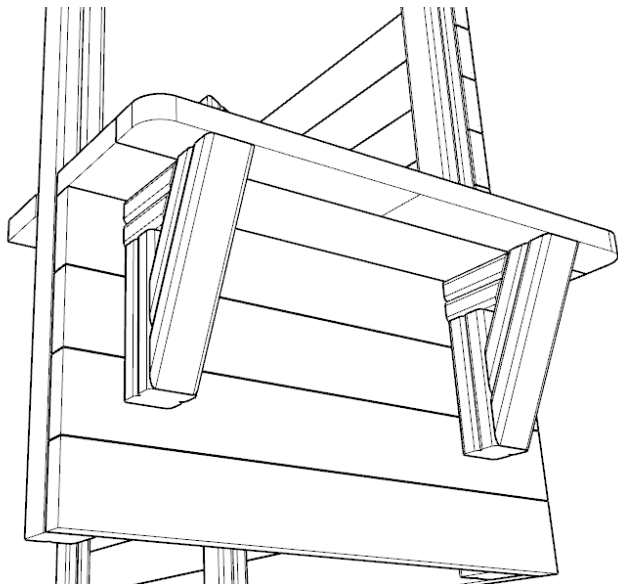

6 ATTACH REMAINING TIMBER CLADDING USING M8X180WOOD SCREWS (2 PER SIDE AS SHOWN)

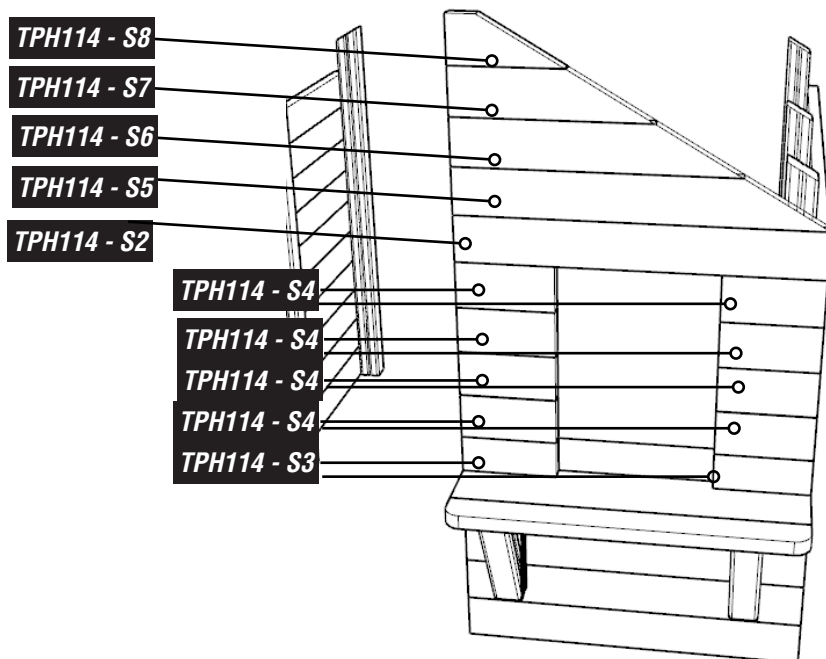

NOTE: SAVE S8 FOR LATER, CANT BE SCREWED ON YET. ONLY 1 SIDE CAN BE SCREWED HERE



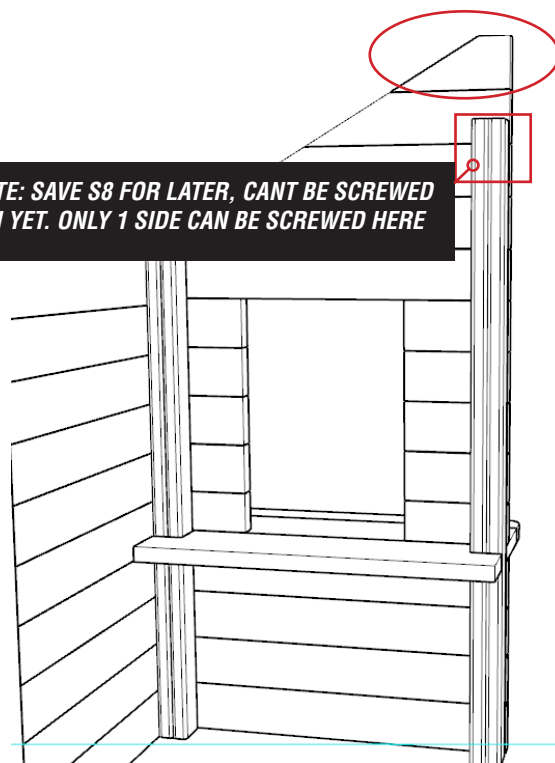


INSTALLATION INSTRUCTIONS

7

POSITION THE PRE-ASSEMBLED ROOF PANELS & R1 RIDGE BEAM TIMBER

USE A PROP TO HOLD THE BACK SECTION IF REQUIRED

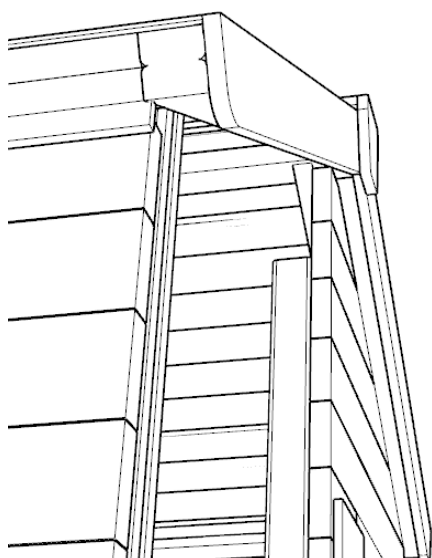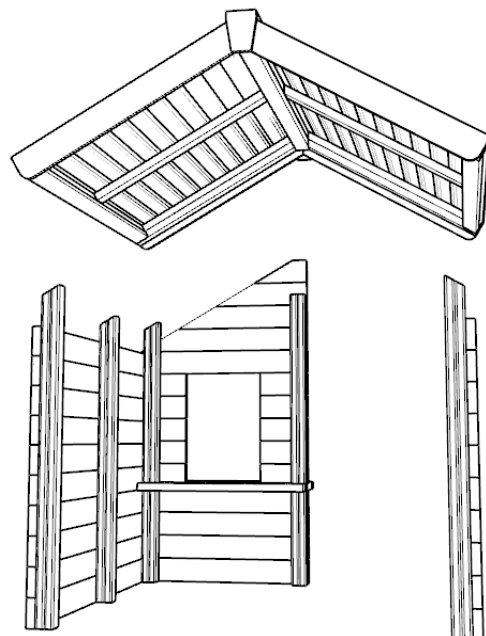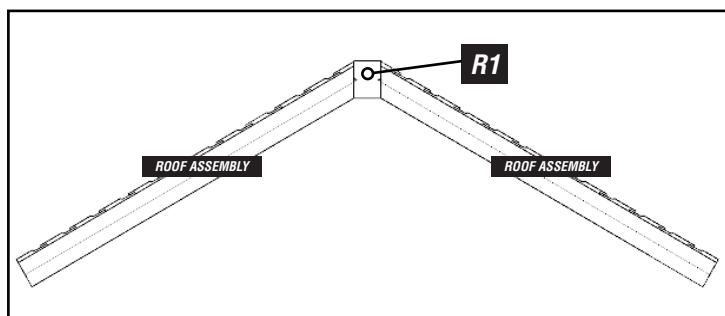

8

ATTACH THE PRE-ASSEMBLED ROOF PANELS & R1 RIDGE BEAM TIMBER


USING M8X120MM & M8X180 WOOD SCREWS , ATTACH TO BOTH SIDES OF PLAYHOUSE

NOTES:


SCREW THROUGH THE ROOF ASSEMBLY INTO RIDGE BEAM (120MM SCREWS)

SCREW THROUGH UPRIGHTS INTO ROOF PANEL ASSEMBLY FROM INSIDE (180MM SCREWS)

ENSURE 180MM SCREWS DO NOT GO ALL THE WAY THROUGH BOTH 90X90 TIMBERS

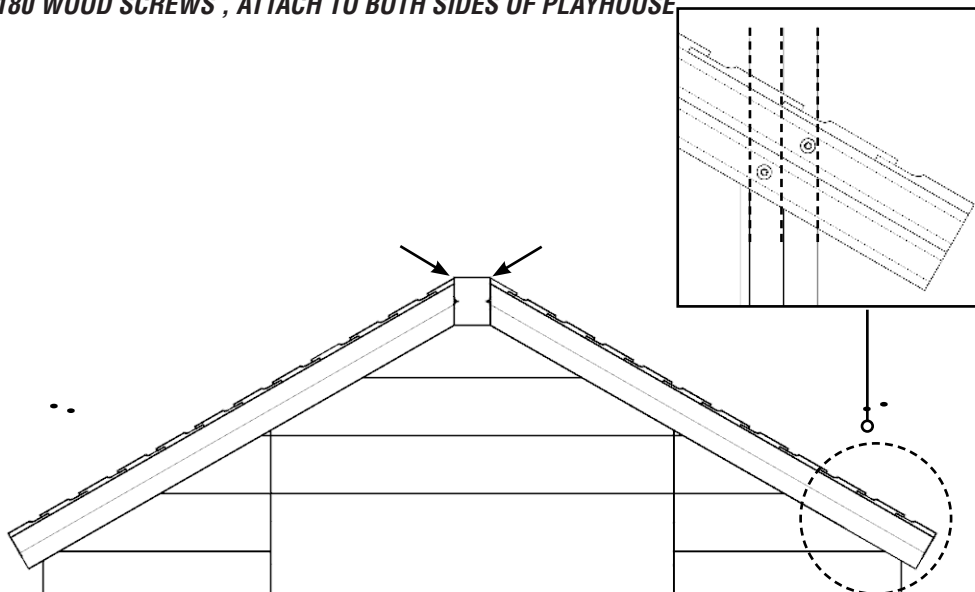

INSTALLATION INSTRUCTIONS

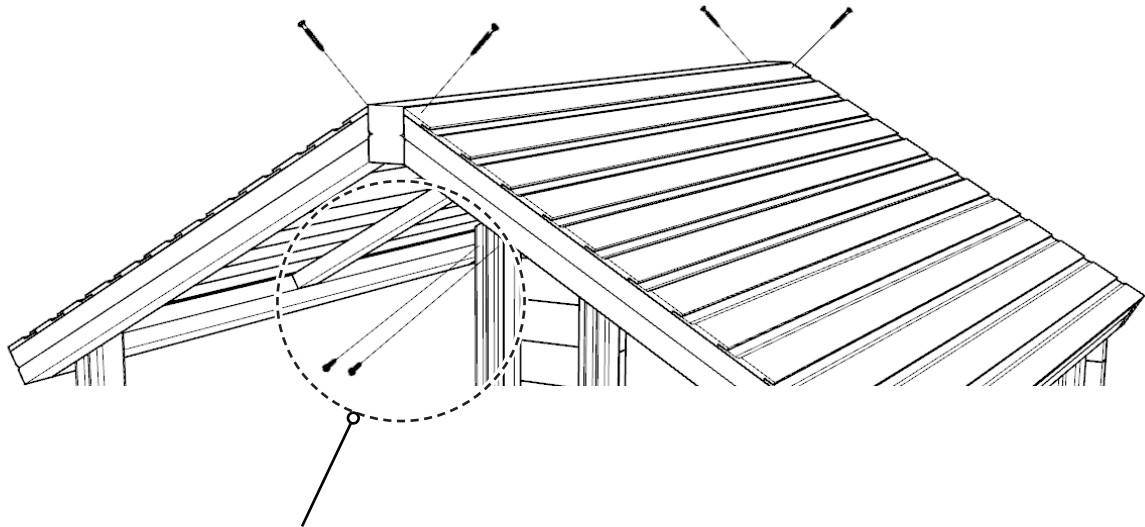


NOTES:

ENSURE UPRIGHT SCREWS ARE SCREWED
IN FROM THE INSIDE OF THE PLAYHOUSE AS
SHOWN

9

ATTACH R2 TIMBERS TO THE PLAYHOUSE

USING M8X180MM WOOD SCREWS IN LOCATIONS SHOWN BELOW

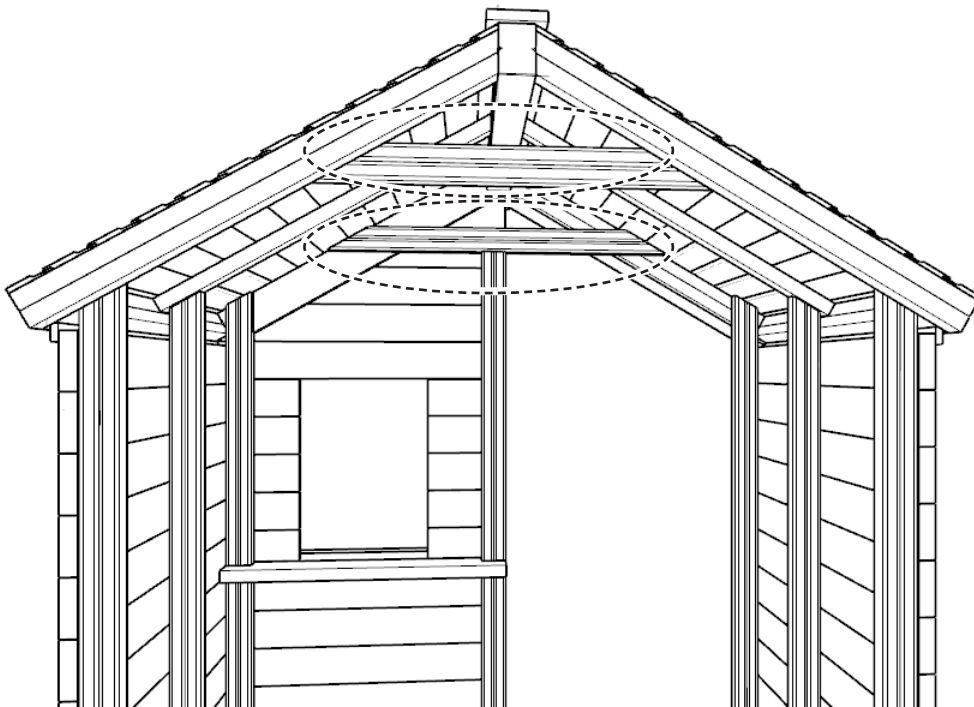


INSTALLATION INSTRUCTIONS

10

ATTACH ROOF TRIM PIECES (RT1, RT2 & RT3) AS SHOWN BELOW

READ NOTES BELOW AND USE M8X80MM WOOD SCREWS TO SECURE

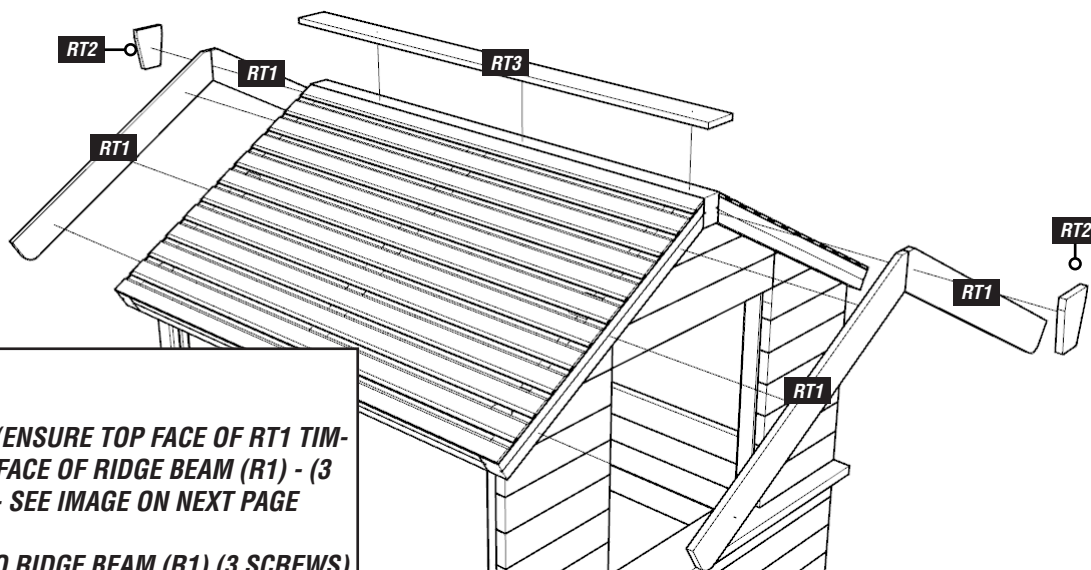

NOTES:

1. ATTACH RT1 TIMBERS (ENSURE TOP FACE OF RT1 TIMBER IS FLUSH WITH TOP FACE OF RIDGE BEAM (R1)) - (3 SCREWS PER RT1 TRIM) - SEE IMAGE ON NEXT PAGE

2. ATTACH RT3 TIMBER TO RIDGE BEAM (R1) (3 SCREWS)

3. ATTACH RT2 'COVERS' TO RT1 TRIM & INTO ROOF ASSEMBLY (3 SCREWS)


ENSURE SCREWS ARE UNIFORM/INLINE AS SHOWN BELOW...

11

ATTACH ROOF TRIM PIECES (RT1, RT2 & RT3) AS SHOWN BELOW

READ NOTES BELOW AND USE M8X80MM WOOD SCREWS TO SECURE

NOTE: YOU SHOULD BE ABLE TO SCREW ON THESE PIECES NOW TO THE ADDITIONAL ROOF TRIM PIECES

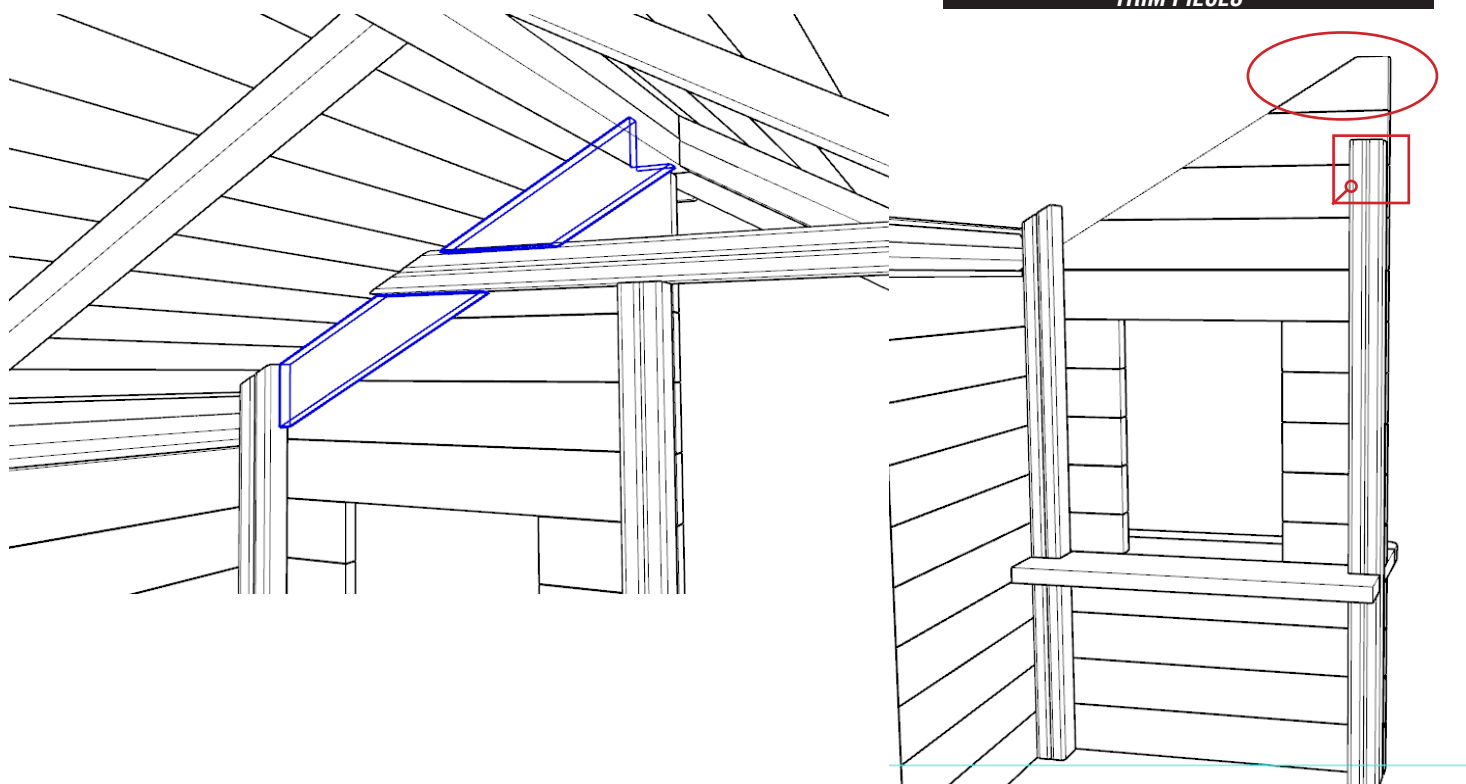


INSTALLATION INSTRUCTIONS

12

ATTACH ROOF TRIM PIECES AS SHOWN BELOW


USE M8X80MM WOOD SCREWS TO SECURE

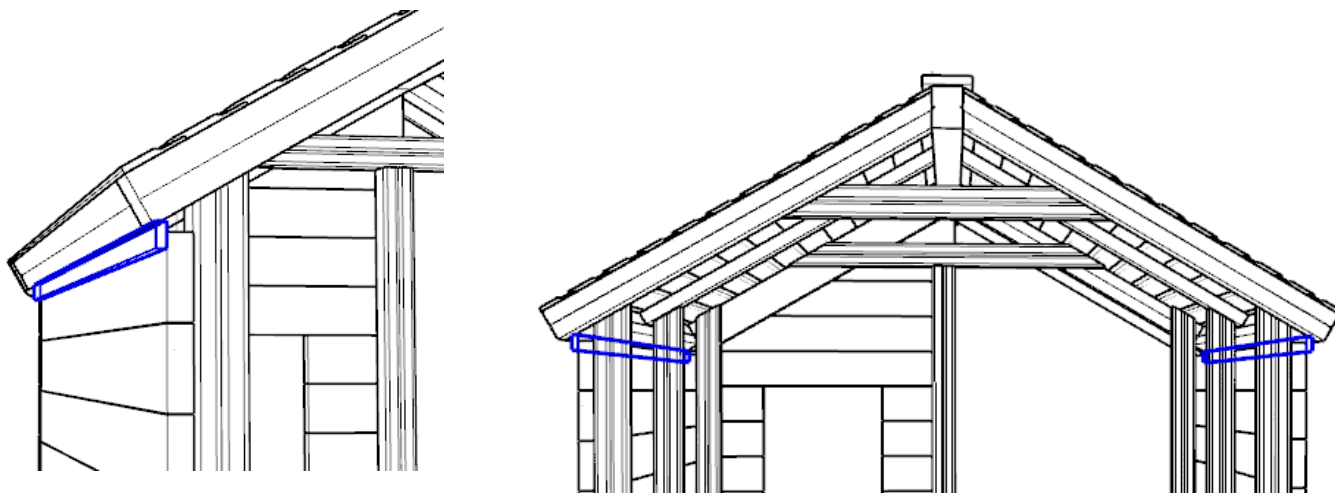

13

ATTACH TPH114 - S12 SHELF TIMBER

USING M8X80MM WOOD SCREWS, 2 PER SHELF SUPPORT, SCREW IN FROM SIDES AND BACK


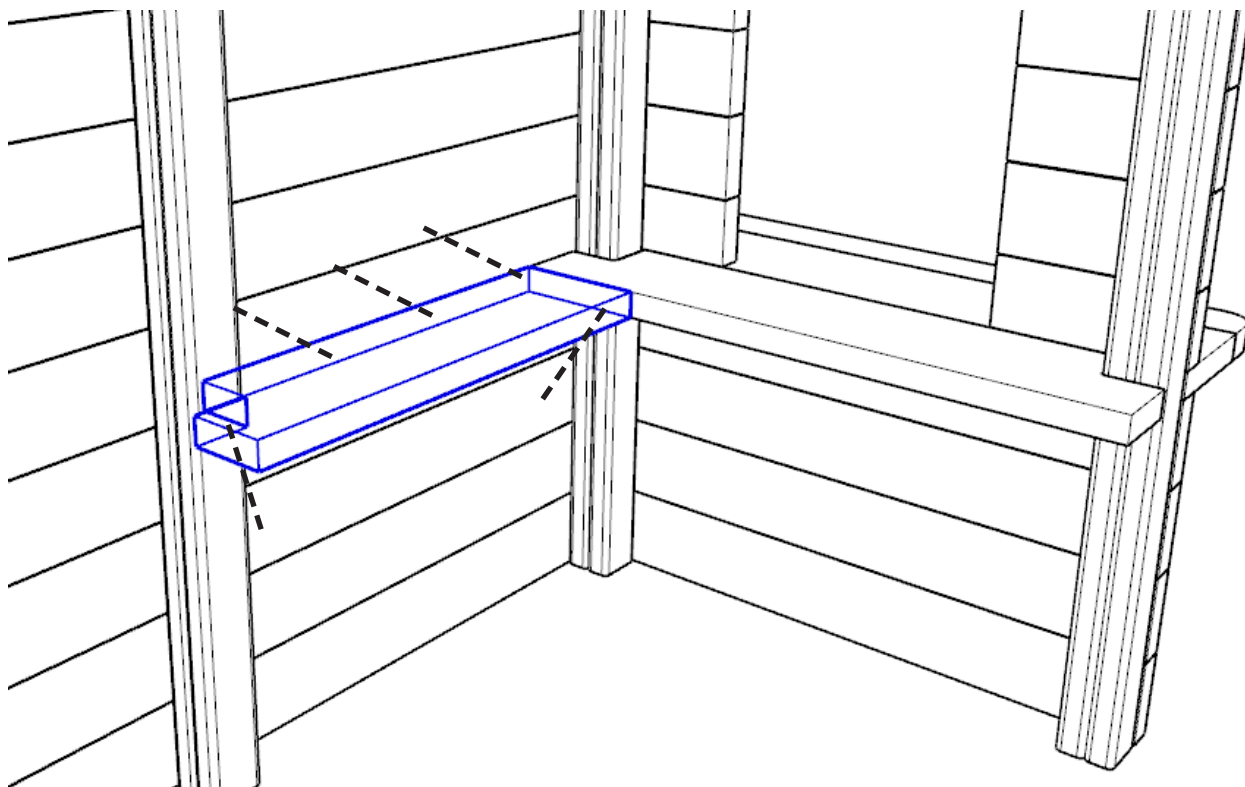


INSTALLATION INSTRUCTIONS

14

ATTACH LARGE BLACKBOARD



USING M8X80MM WOOD SCREWS

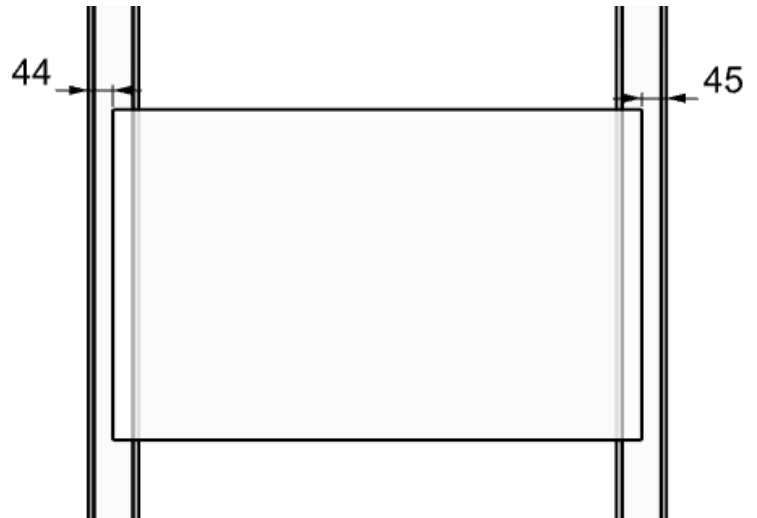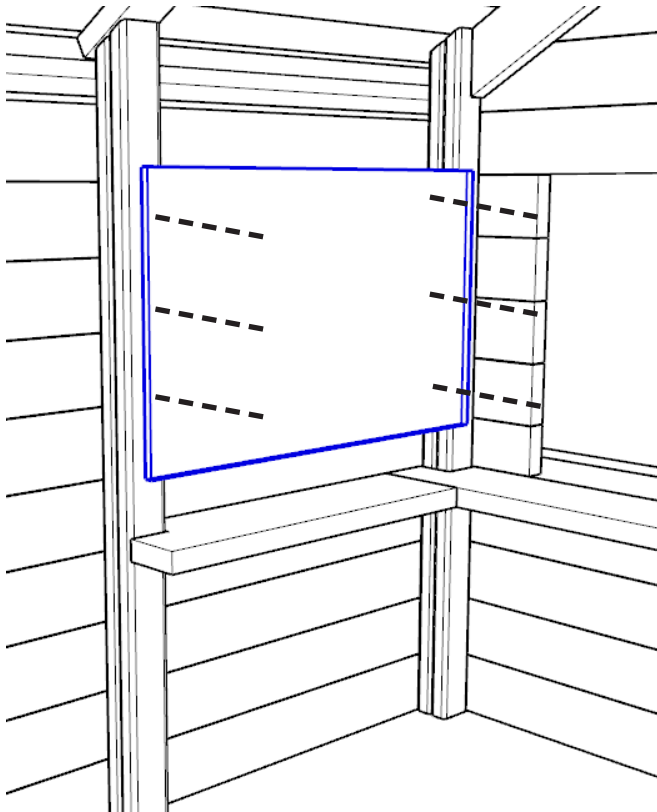

15

ATTACH SEAT SUPPORTS

USING M8X120MM WOOD SCREWS, ENSURE THEY ARE SCREWED IN FROM OUTSIDE OF PLAYHOUSE

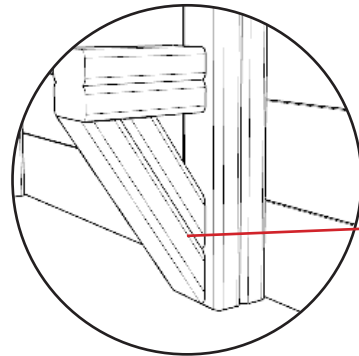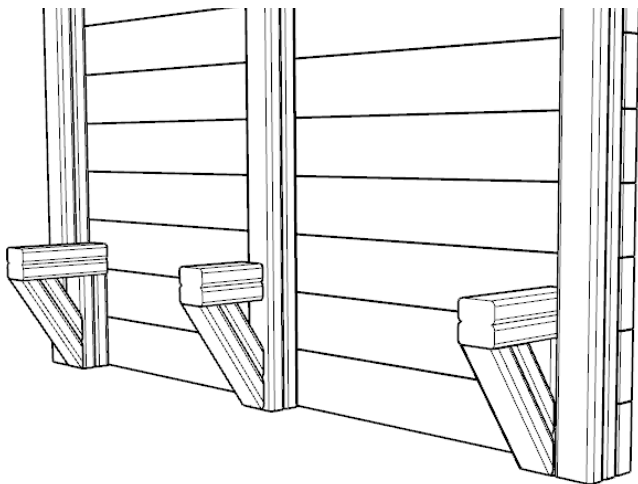


NOTES:

MIDDLE SUPPORT SEAT HAS ONE LESS TIMBER AT BACK AS SHOWN

NOTES:


ENSURE SEAT SUPPORTS SIT DIRECTLY ON GROUND, THEN SCREW IN FROM OUTSIDE OF PLAYHOUSE AS SHOWN BELOW

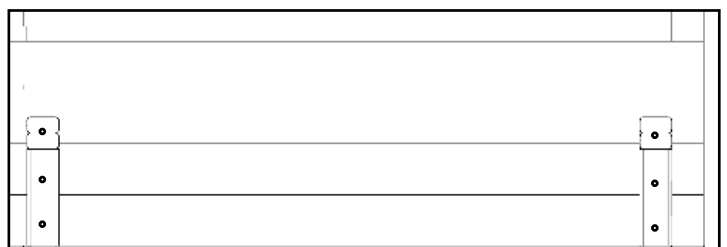

INSTALLATION INSTRUCTIONS

16 ATTACH SEAT TIMBERS (S9/10)

USING M8X80MM WOOD SCREWS, 4 SCREWS PER SIDE, SCREW IN FROM TOP OF SHELF TIMBER



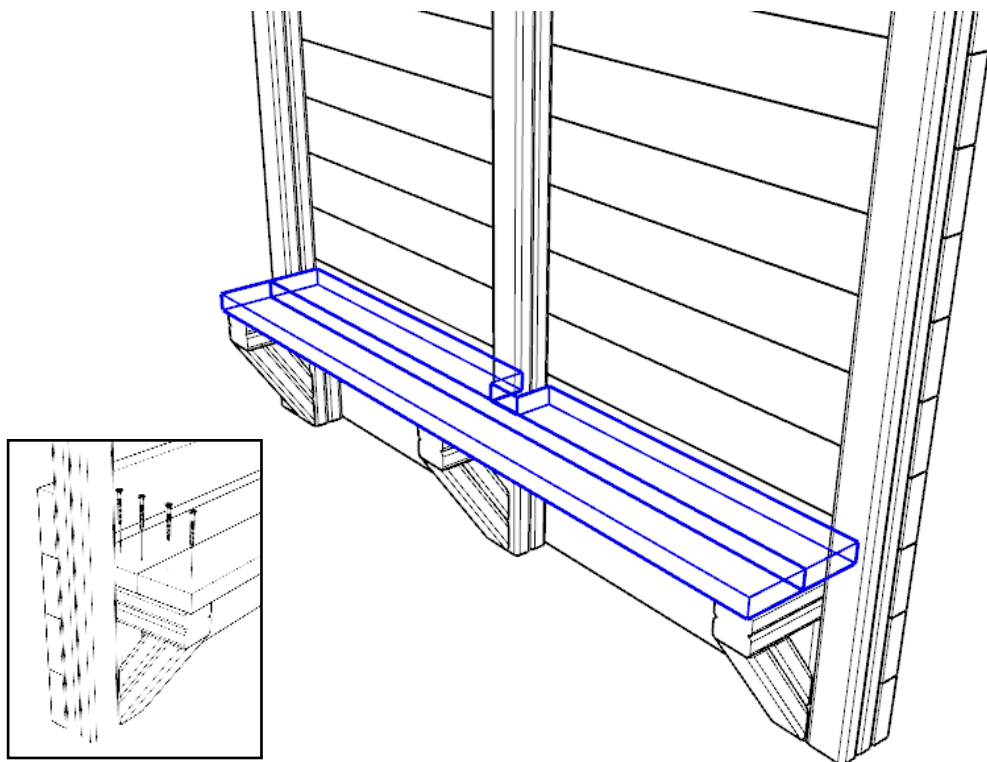


17 ATTACH PLANTER BOXES ON OUTSIDE OF PLAYHOUSE

USING M8X80MM WOOD SCREWS, ENSURE THEY ARE ATTACHED FROM INSIDE AS SHOWN

NOTES:

ENSURE PLANTERS ARE PLACED IN CENTRE OF PLAYHOUSE SIDES

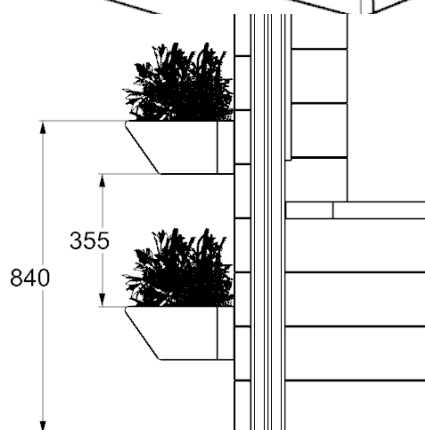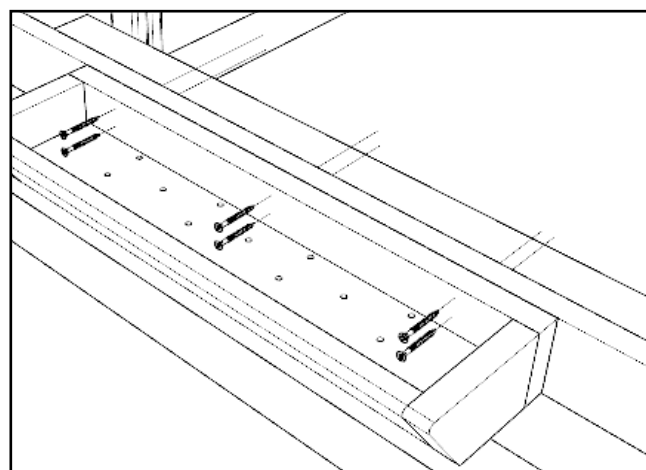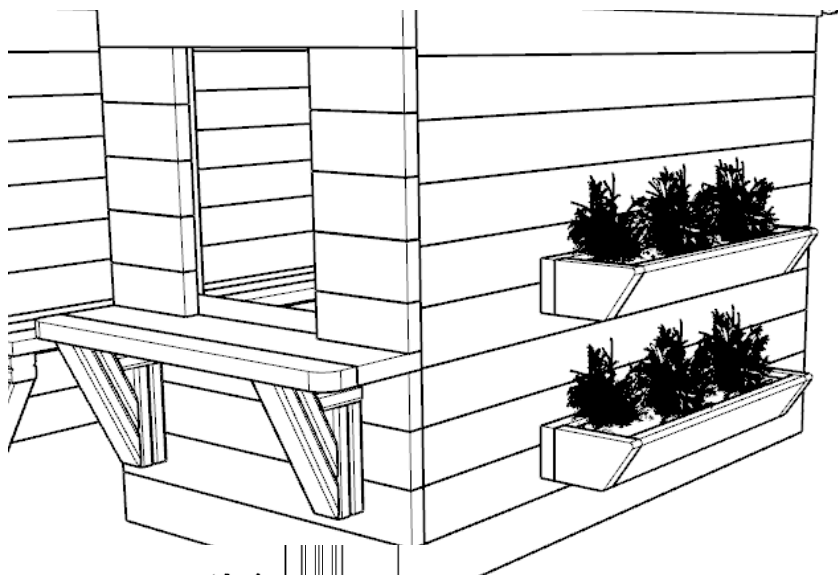


REF: TPH114

INSTALLATION INSTRUCTIONS

18

ATTACH X2 SMALL BLACKBOARDS TO FRONT OF PLAYHOUSE

USING M8X80MM WOOD SCREWS, ENSURE THEY ARE ATTACHED AS SHOWN

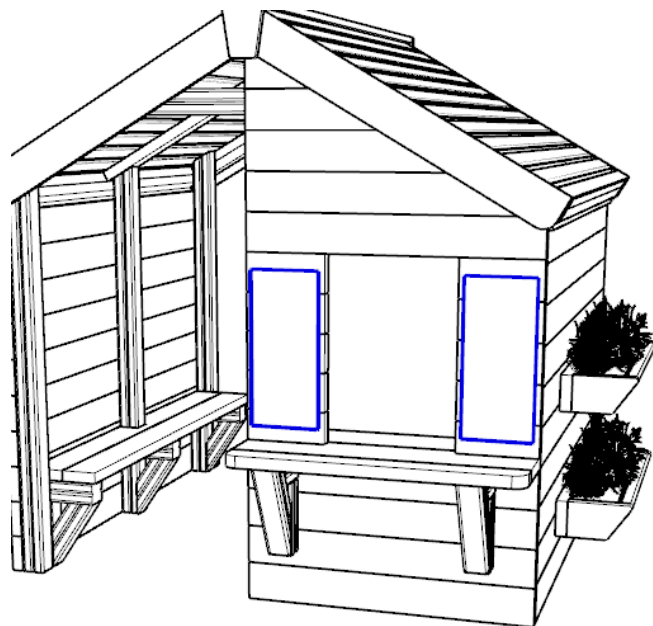

ADDITIONAL DIMENSIONS

