



GYM105L - SIT UPS - JUNIOR

Installation Instructions


**creative
play**

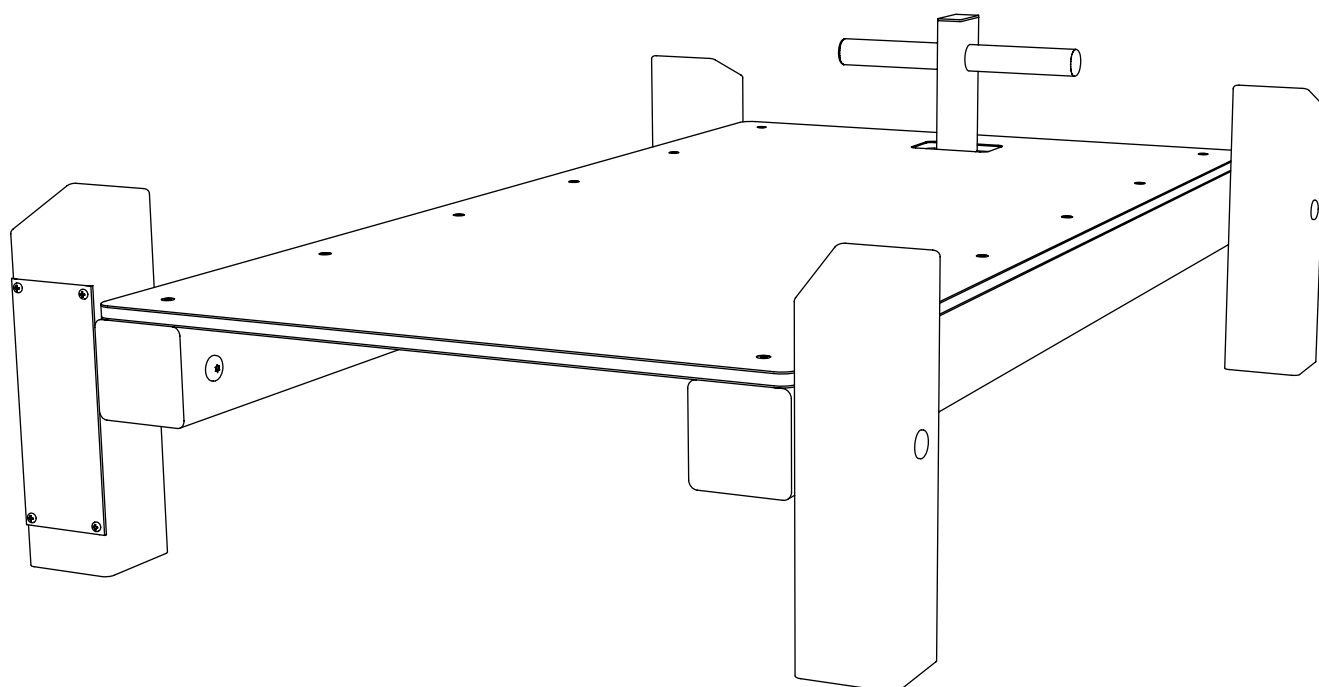


PARTS REQUIRED

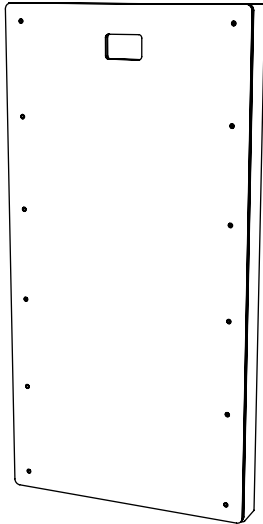


PRE-ASSEMBLED PANEL

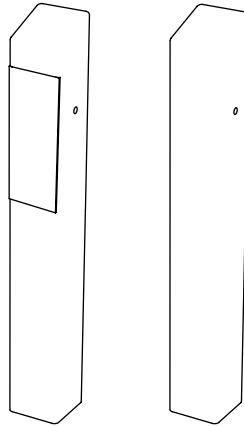

GYM105L-A & GYM105L-B

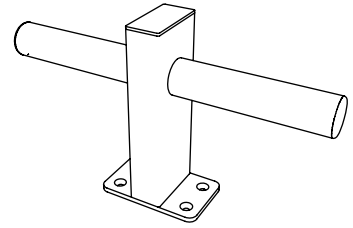


SIT UP BAR [X1]



M8 X 80 SCREWS [X4]





M12X240 BOLTS [X4]

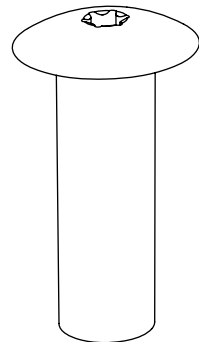


SOCKET NUTS [X4]

TOOLS REQUIRED

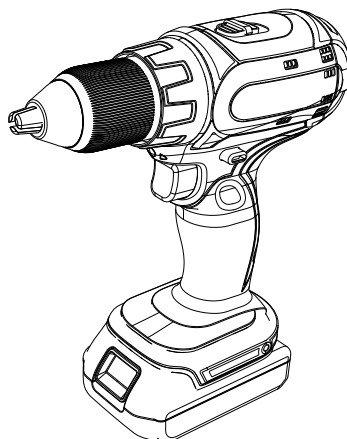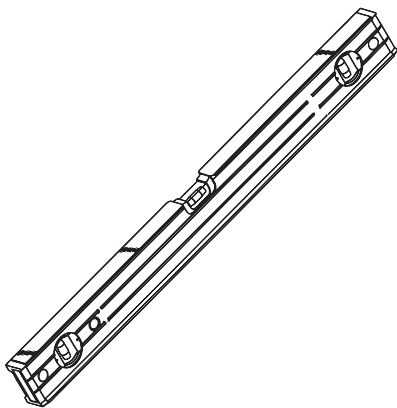


FOUNDATION DETAIL

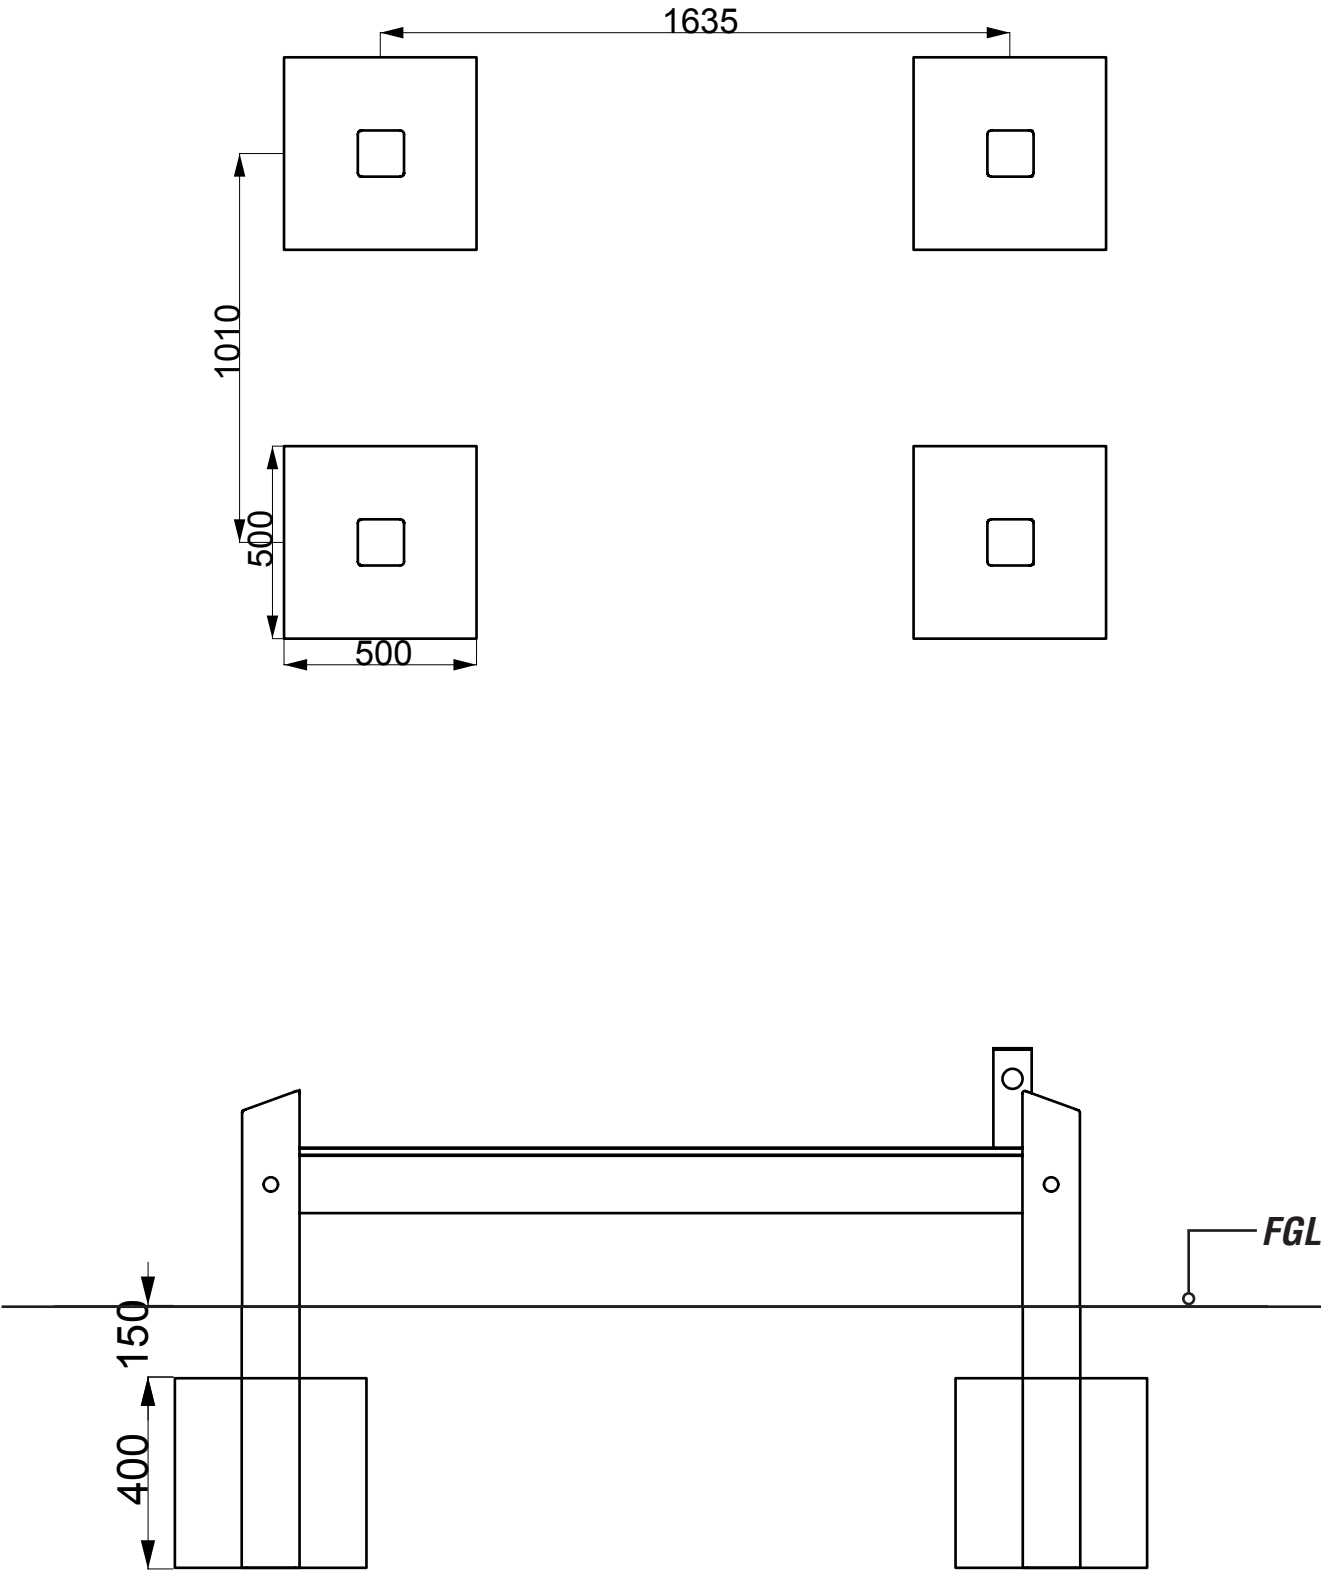

SURFACING - OVERALL AREA

— = EN16630 STANDARD


— = EN11-76/77 STANDARD

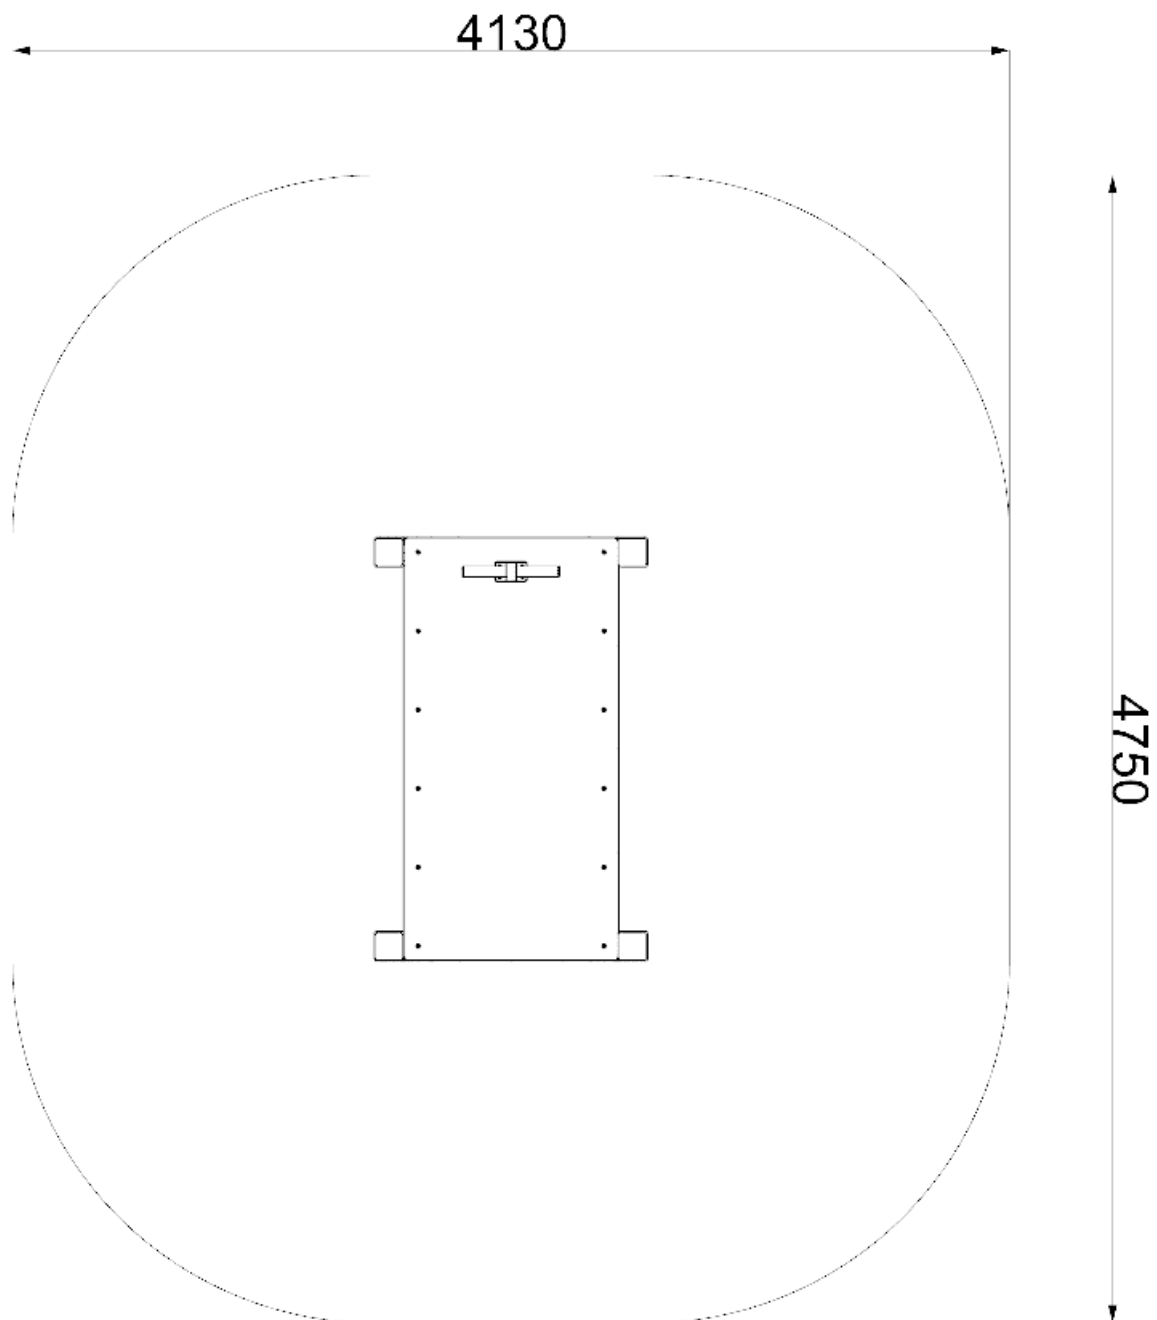

INSTALLATION INSTRUCTIONS


1

ATTACH SIT UP BAR TO PRE-ASSEMBLED PANEL
USING M8X80 SCREWS

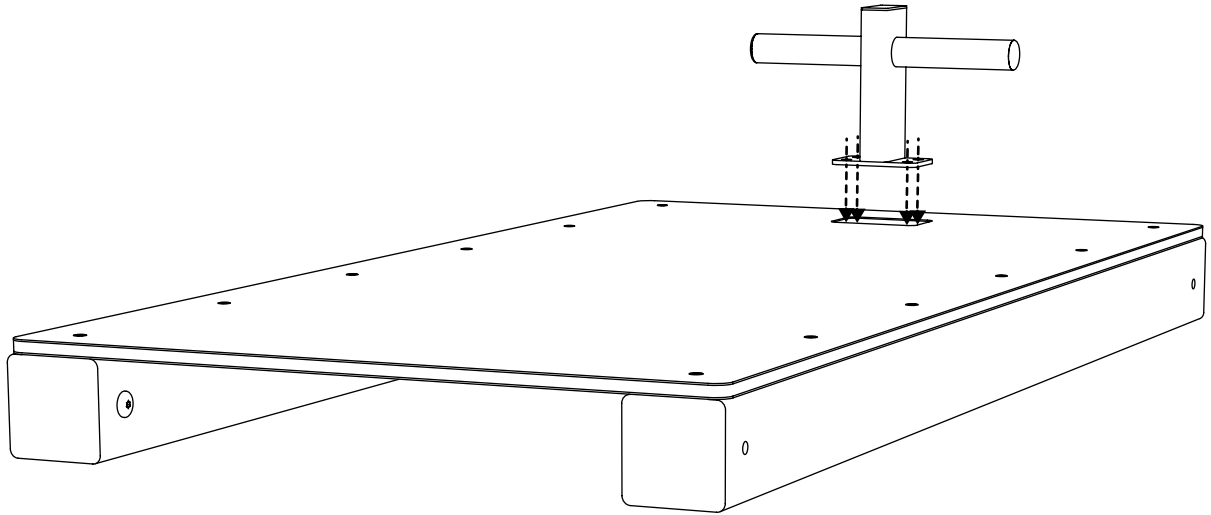

2


ATTACH PRE-ASSEMBLED PANEL TO GM105H-A AND GM105H-B
USING M12X240 BOLTS AND SOCKET NUTS

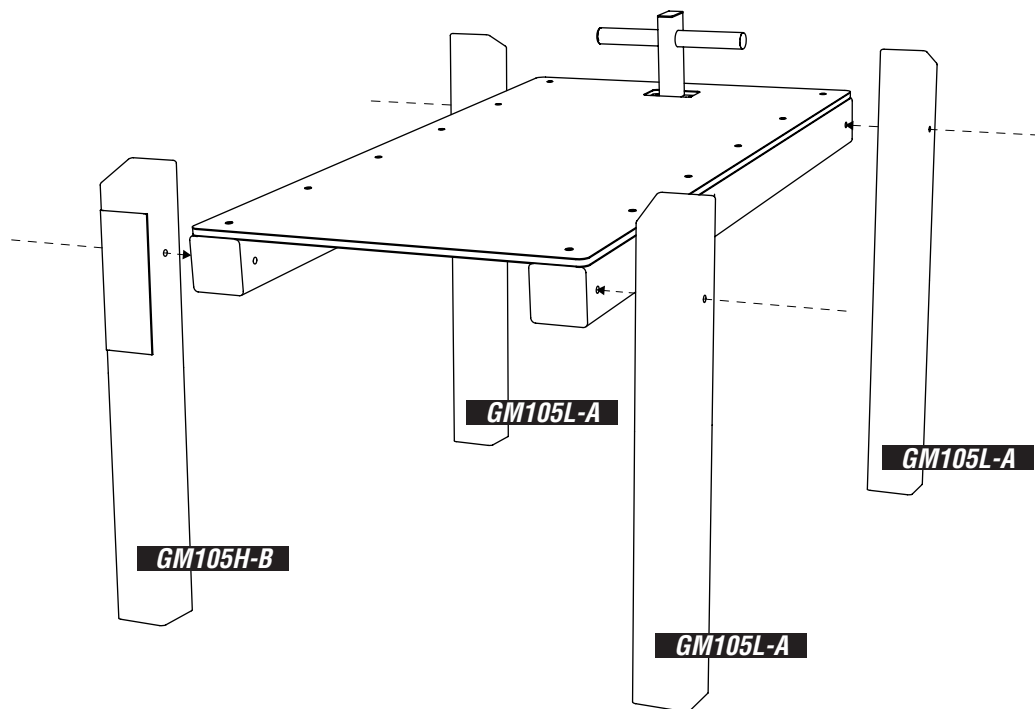

INSTALLATION INSTRUCTIONS

3

INSTALL GM105L INTO THE GROUND

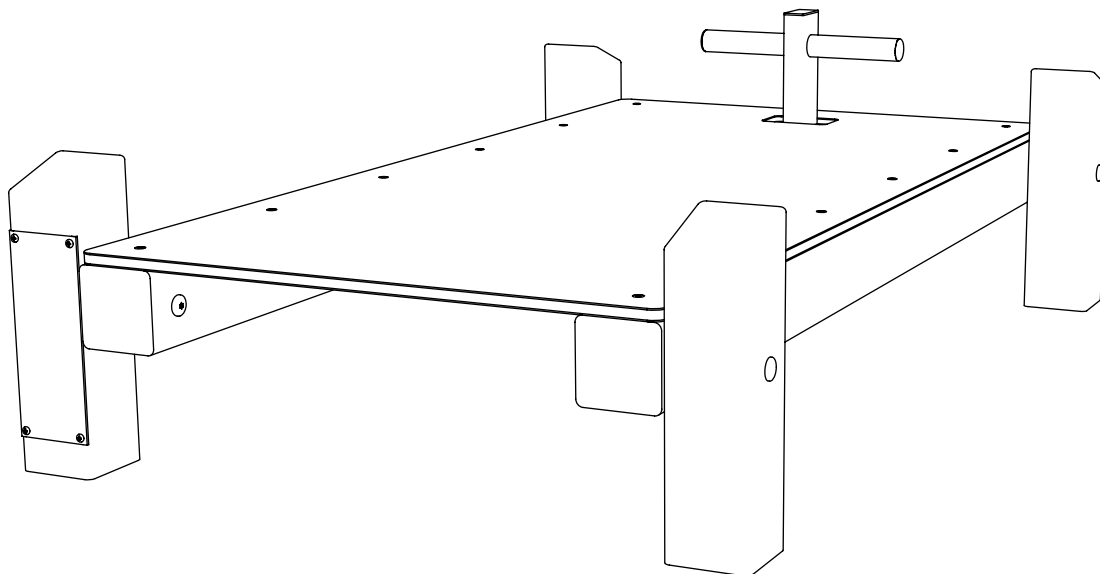

ADDITIONAL MEASUREMENTS

