



HR119(3) - 3M FILLED SIDES - HIPPED ROOF Installation Instructions

creative
play

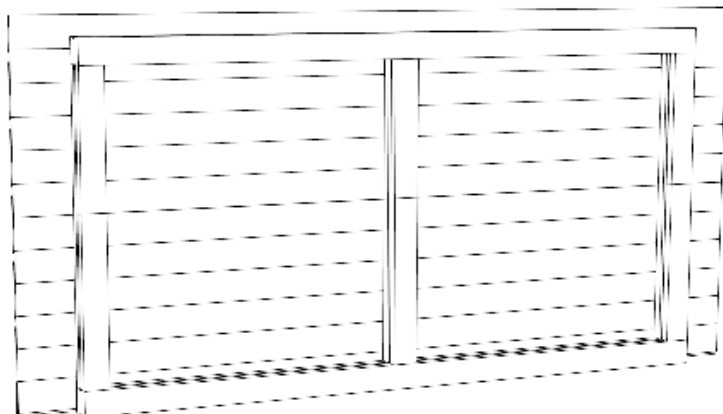

x1

3M SIDE PANEL ASSEMBLY

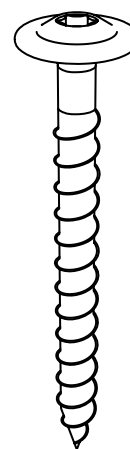

x16

97.M8X180FH

INSTALLATION INSTRUCTIONS

1

FIX PANEL ON TO SHELTER. SCREW INTO ROOF TIMBER AND LOWER SIDE PANEL.
USING M8X180 WOODSCREWS X 16

