


JC106 - JUNGLE CLIMBER COMBI (WITHOUT SLIDE)

Installation Instructions


**creative
play**

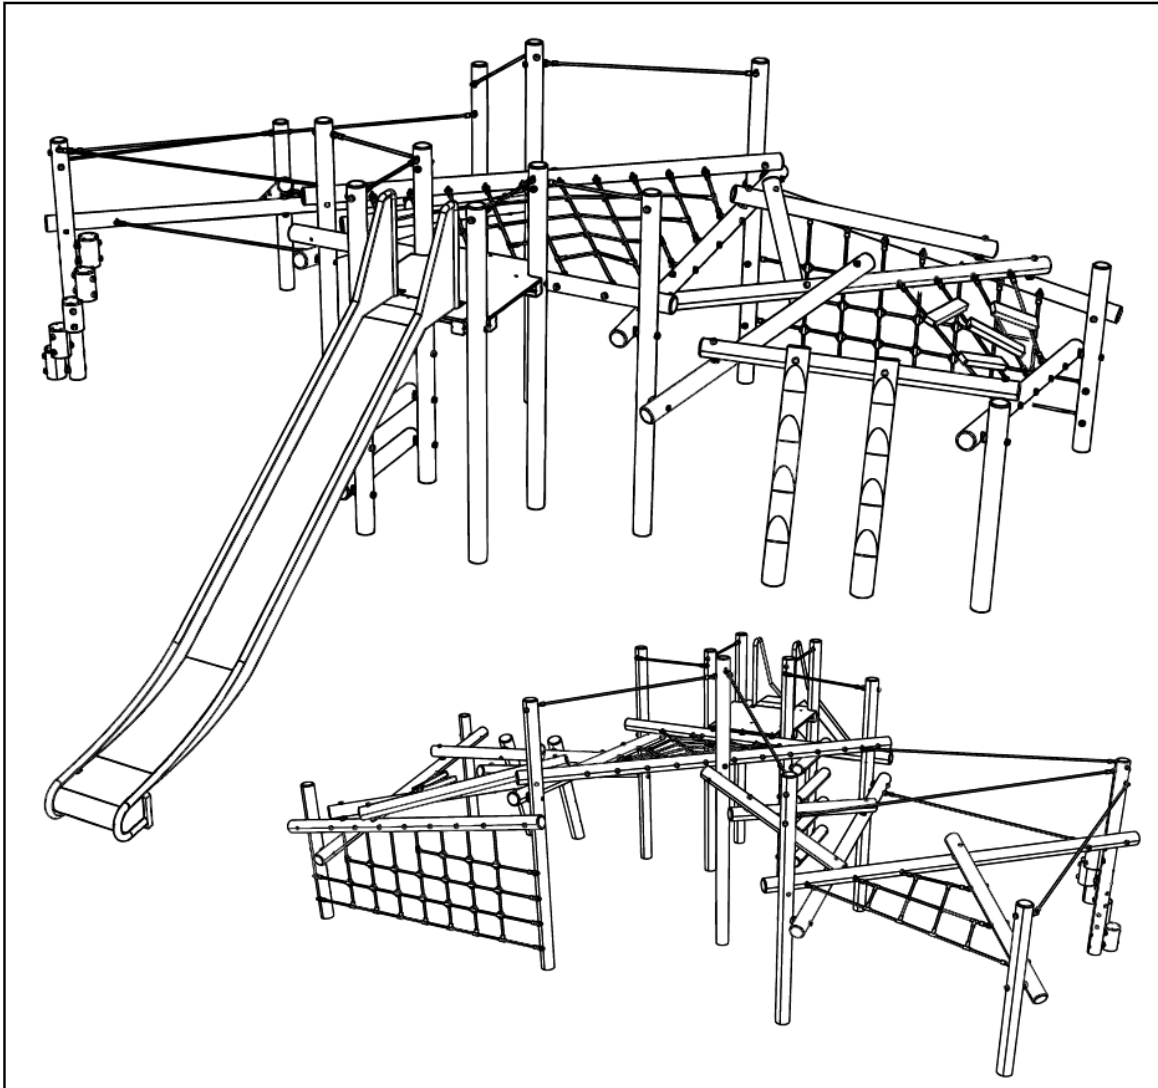

CONTENTS

Vertical timbers	(pg. 2)
Additional timbers	(pg. 3-4)
Ropes + Nets	(pg. 4-6)
Parts required	(pg. 7)
Tools required	(pg. 8)
Foundation Details	(pg.9-11)
Surfacing Details	(pg.12)
Installation instructions	(pg.13-48)
Additional drawings	(pg.49-50)


VERTICAL TIMBERS

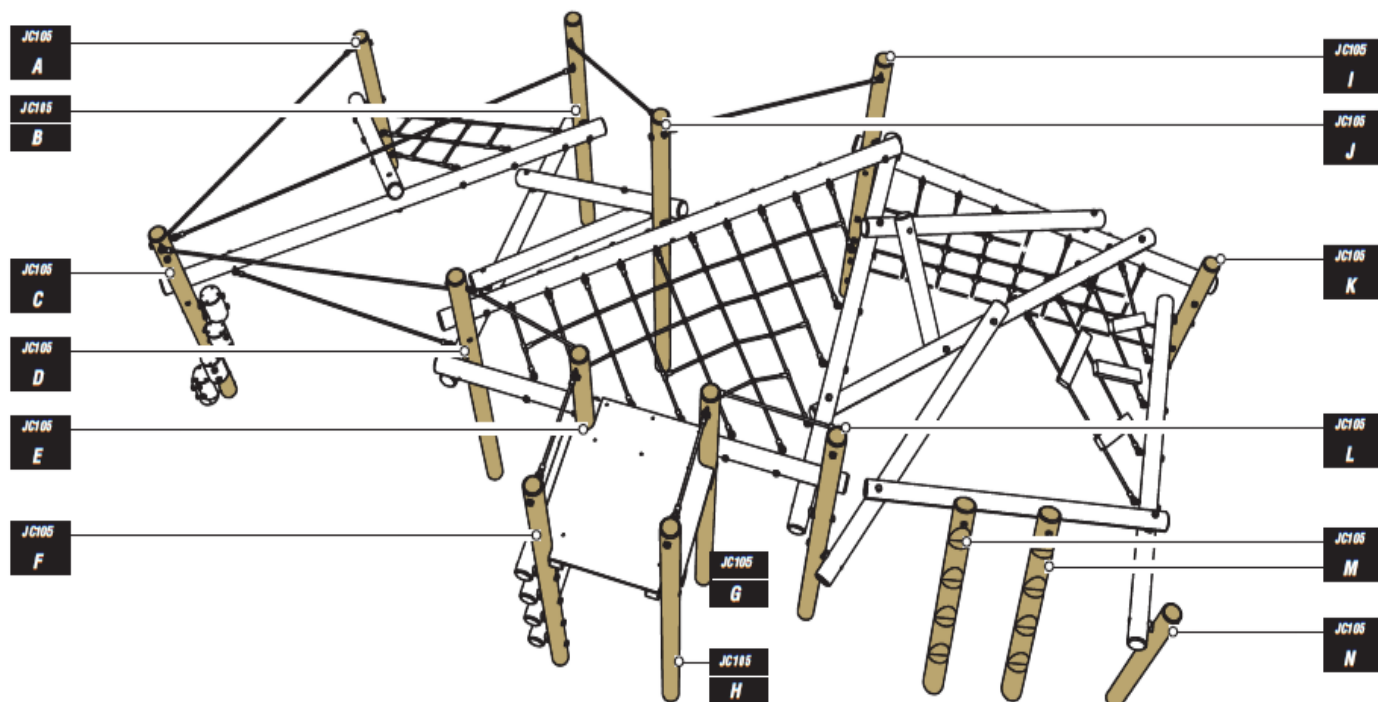



CODE	TYPE	SIZE (mm)	QTY
JC105A	Ø 125mm	2275	1
JC105B	Ø 125mm	3040	1
JC105C	Ø 125mm	2740	1
JC105D	Ø 125mm	3250	1
JC105E	Ø 125mm	3300	1
JC105F	Ø 125mm	3300	1
JC105G	Ø 125mm	3300	1

CODE	TYPE	SIZE (mm)	QTY
JC105H	Ø 125mm	3300	1
JC105I	Ø 125mm	3300	1
JC105J	Ø 125mm	3640	1
JC105K	Ø 125mm	2225	1
JC105L	Ø 125mm	3250	1
JC105M	Ø 150mm	2331.5	2
JC105N	Ø 125mm	2225	1

Floor Supports / Slide barriers

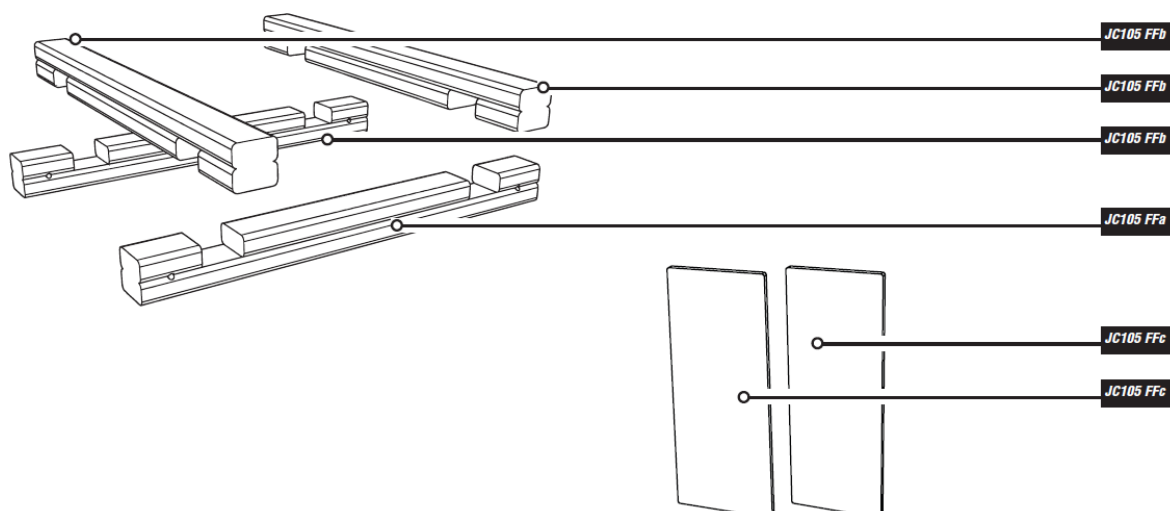

ADDITIONAL TIMBERS

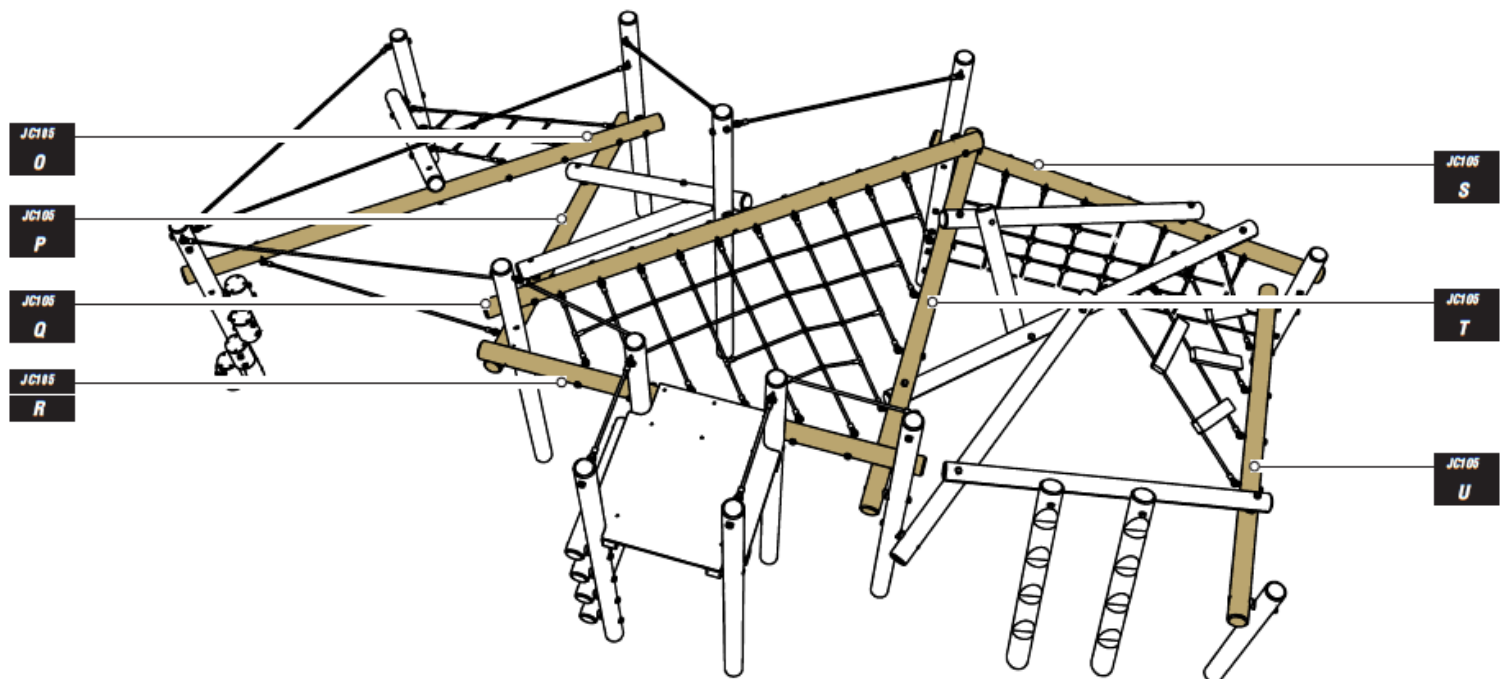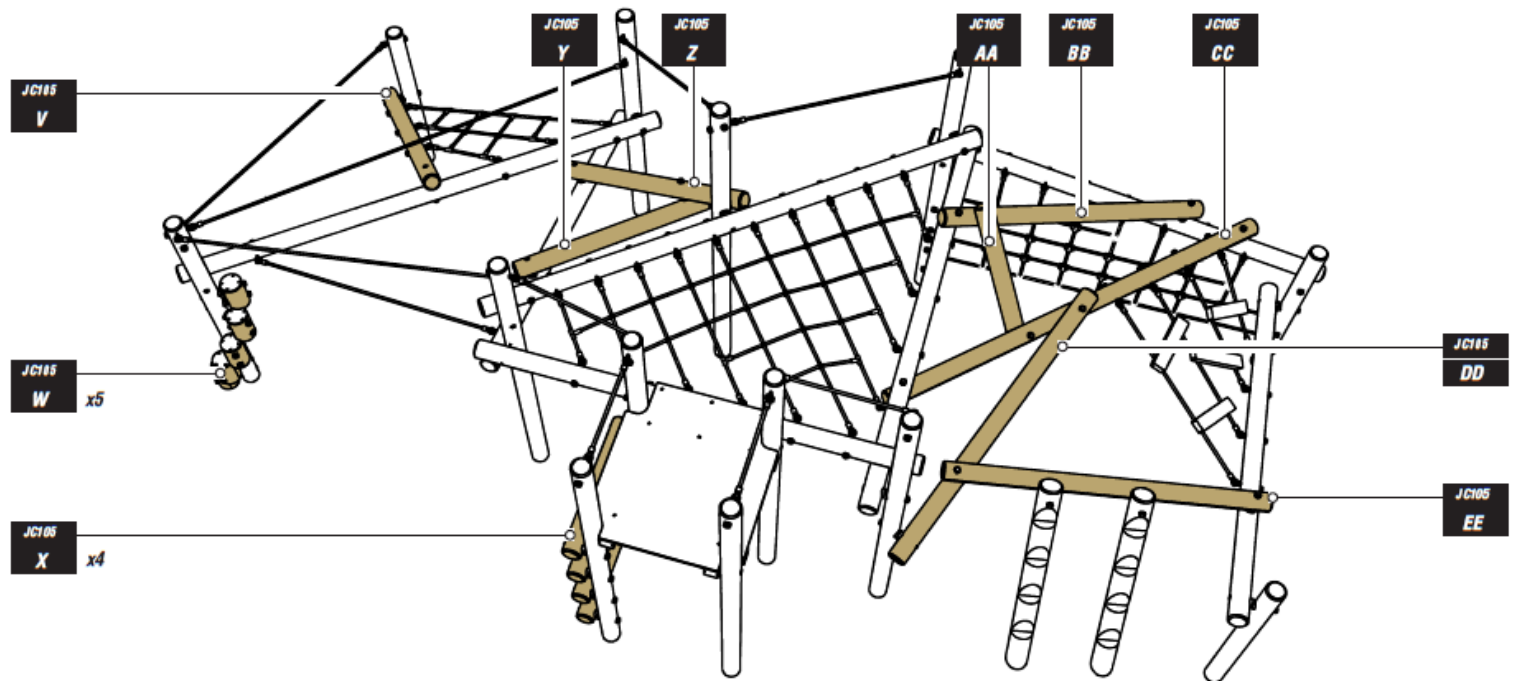


ADDITIONAL TIMBERS

CODE	TYPE	SIZE mm	QTY	CODE	TYPE	SIZE mm	QTY
JC105O	Ø 125mm	3650	1	JC105X	Ø 125mm	1005	4
JC105P	Ø 125mm	2711.5	1	JC105Y	Ø 125mm	1450	1
JC105Q	Ø 125mm	3650	1	JC105Z	Ø 125mm	1625	1
JC105R	Ø 125mm	3000	1	JC105AA	Ø 125mm	1013.5	1
JC105S	Ø 125mm	3000	1	JC105BB	Ø 125mm	1477	1
JC105T	Ø 125mm	3000	1	JC105CC	Ø 125mm	3100	1
JC105U	Ø 125mm	3000	1	JC105DD	Ø 125mm	2271	1
JC105V	Ø 125mm	1742	1	JC105EE	Ø 125mm	2129	1
JC105W	Ø 150mm	230	5				

ROPES + NETS REQUIRED


CARGO NET

QTY - 1 ASSEMBLY

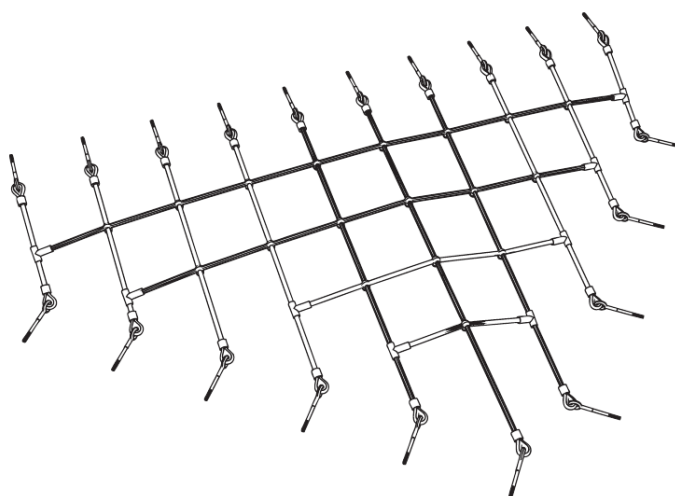

NET CLIMBER

QTY - 1 ASSEMBLY

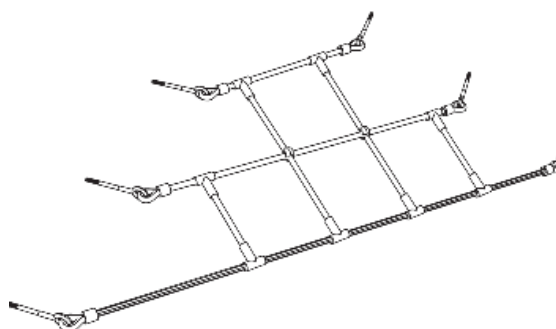

ROPES + NETS REQUIRED



NET + BLOCKS

QTY - 1 ASSEMBLY

SUPPLIED LOOSE


CONSISTS OF:

- T1/T2/T3/T4 TIMBERS
- R1/R2/R3/R4 ROPES

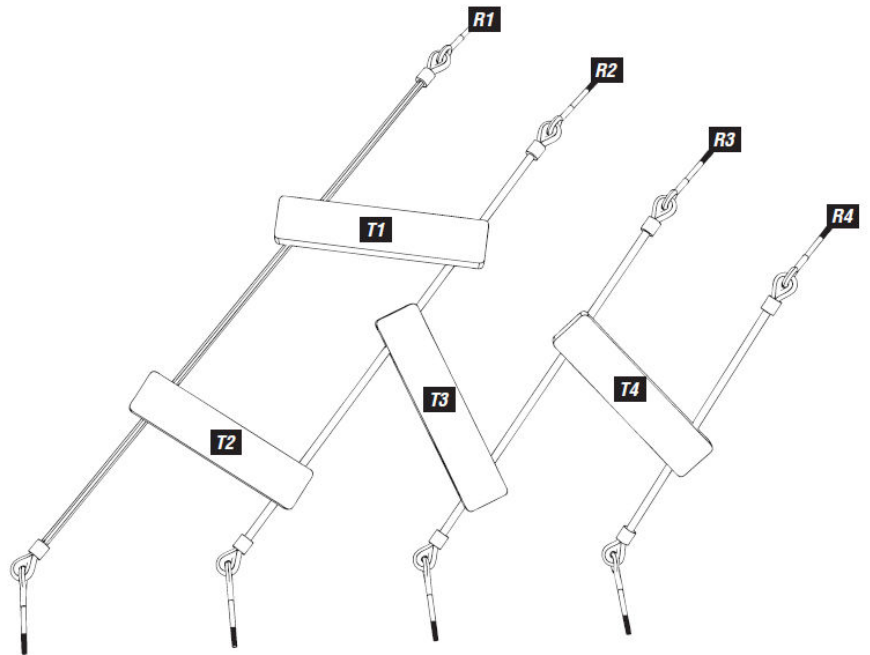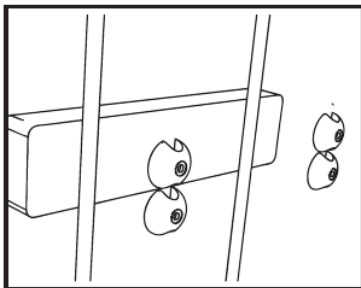


NET WALL

QTY - 1 ASSEMBLY

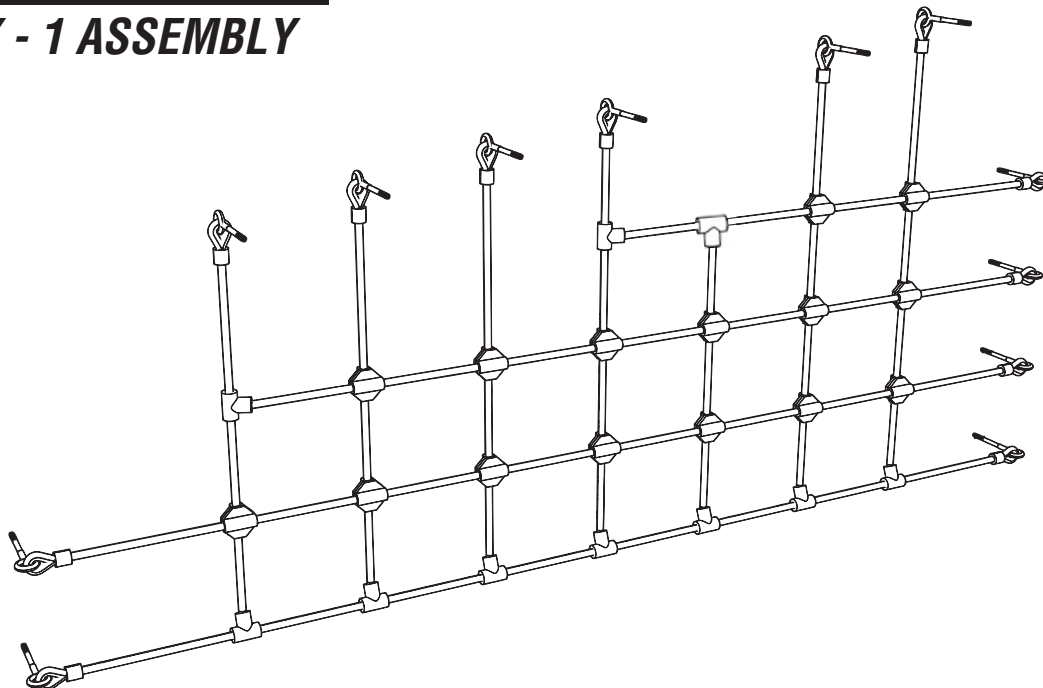

ROPES + NETS REQUIRED

INDIVIDUAL ROPES:

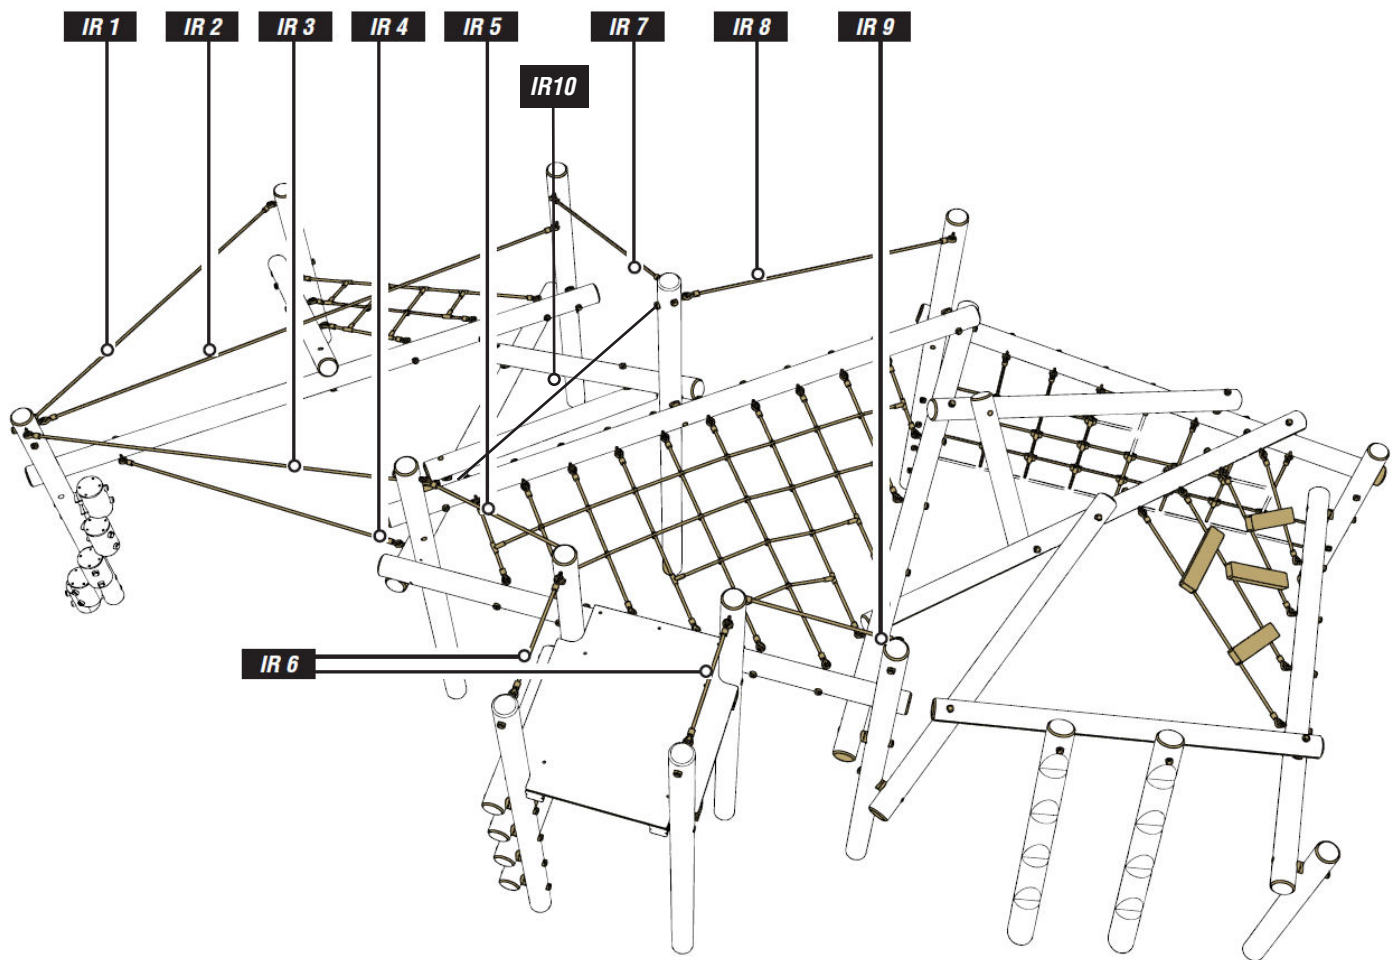

IR 1

1 x rope @ 2562mm
(OST / 2172mm ROPE / OST)

IR 2

1 x rope @ 3446mm
(OST / 3056mm ROPE / OST)

IR 3

1 x rope @ 2576mm
(OST / 2186mm ROPE / OST)

IR 4

1 x rope @ 2119mm
(OST / 1729mm ROPE / OST)

IR 5

1 x rope @ 1151mm
(OST / 761mm ROPE / OST)

IR 6

2 x rope @ 931.5mm
(OST / 541.5mm ROPE / OST)

IR 7

1 x rope @ 1752mm
(OST / 1362mm ROPE / OST)

IR 8

1 x rope @ 1839mm
(OST / 1449mm ROPE / OST)


IR 9

1 x rope @ 1085mm
(OST / 695mm ROPE / OST)

IR 10


1 x rope @ 2302mm
(OST / 1912mm ROPE / OST)

PARTS REQUIRED

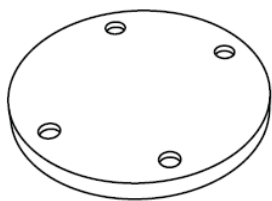

x1

EKON "STEP"

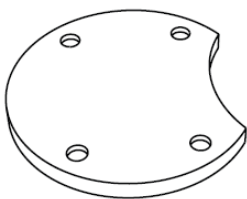


x4

EKON "STEP" WITH CUT OUT



(To be used for NET+BLOCKS) **x16**

POLYFIX HALVES

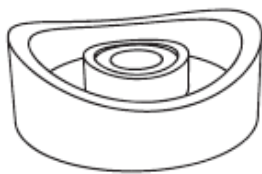

(120 Label shown on inside) **x105**

120 DISTANCE PIECE


(140 Label shown on inside) **x15**

140 DISTANCE PIECE



x16

M6X60 SCREWS

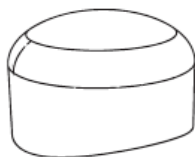

(End caps with radius) **x127**

R60 COVERED END CAP




7.5X60 SCREWS **x5**

M8X80 SCREWS **x40**



x45

M12X300 CUP SQUARE BOLTS



(M10 Used on eyebolts on nets/ropes)

M10 NYLOCS **x70**

M12 NYLOCS **x60**



x2

Handles



(or closest size available - not smaller)* **x15**


M12X320* CUP SQUARE BOLTS



x15

M12X230 CUP SQUARE BOLTS

PARTS REQUIRED

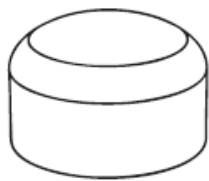


x4

END CAP




x2

N3 TORKTAINER

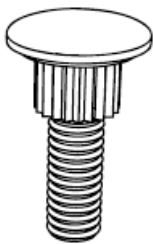


x2

4B TORKTAINER

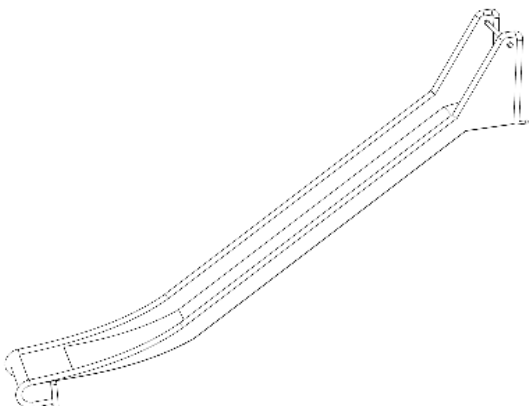

x1


STAINLESS STEEL SLIDE (1750-2000MM)

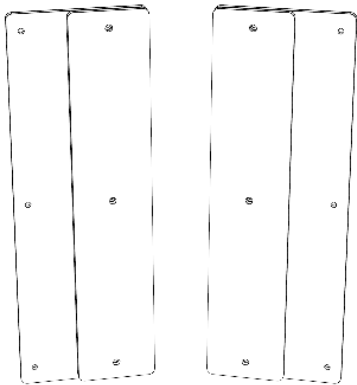

x1 OF EACH


SLIDE BARRIERS (LEFT AND RIGHT)

TOOLS REQUIRED


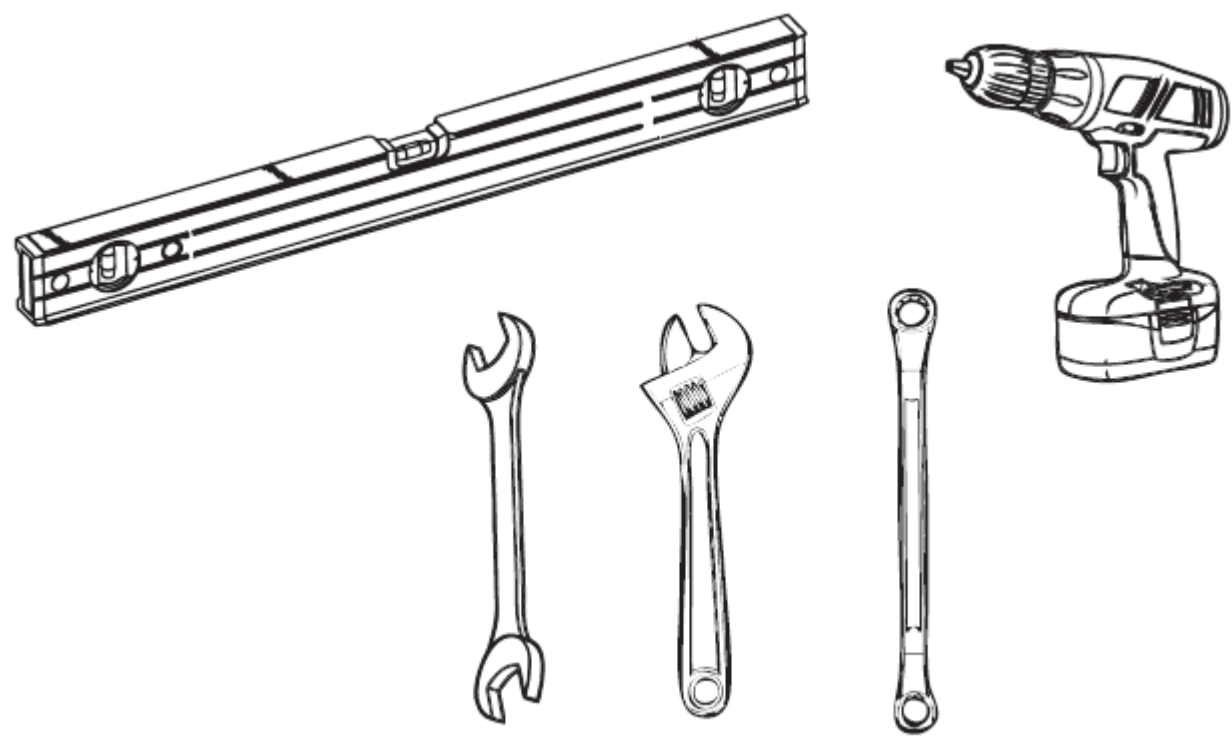


SPECIFIC JUNGLE CLIMBER TOOLS

X1 (14mm - Long combination auger bit - 400mm)
To be used for DRILLING THROUGH 2 x 125mm dia timbers

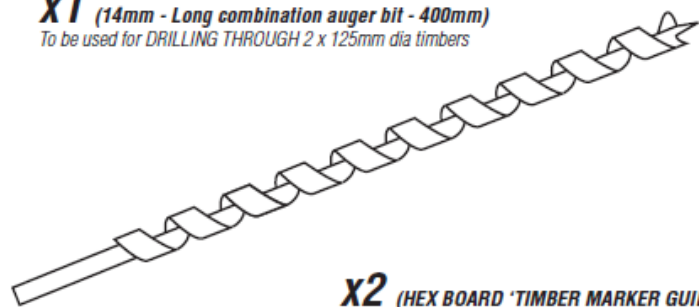


X2 (HEX BOARD 'TIMBER MARKER GUIDE')
To be used for MARKING the 125mm dia timbers

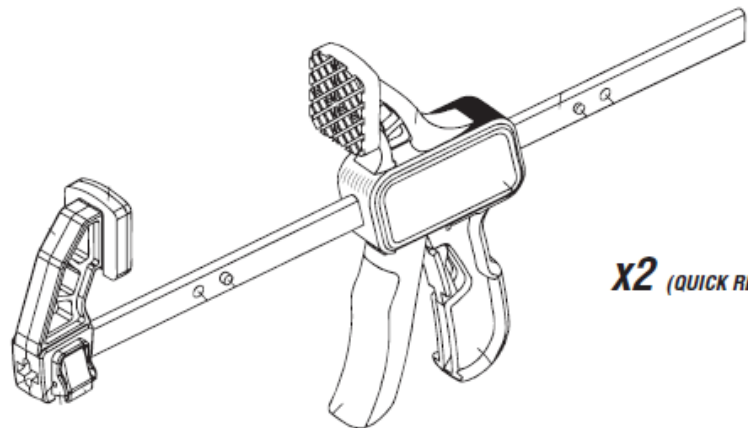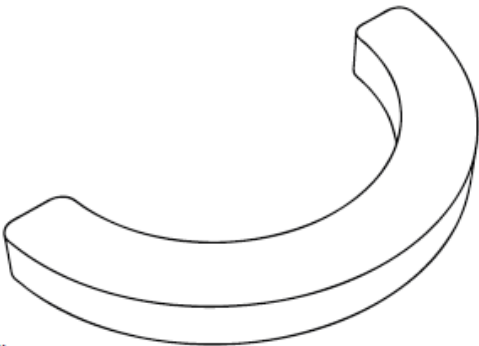

X2 (QUICK RELEASE CLAMPS)

FOUNDATION DETAILS

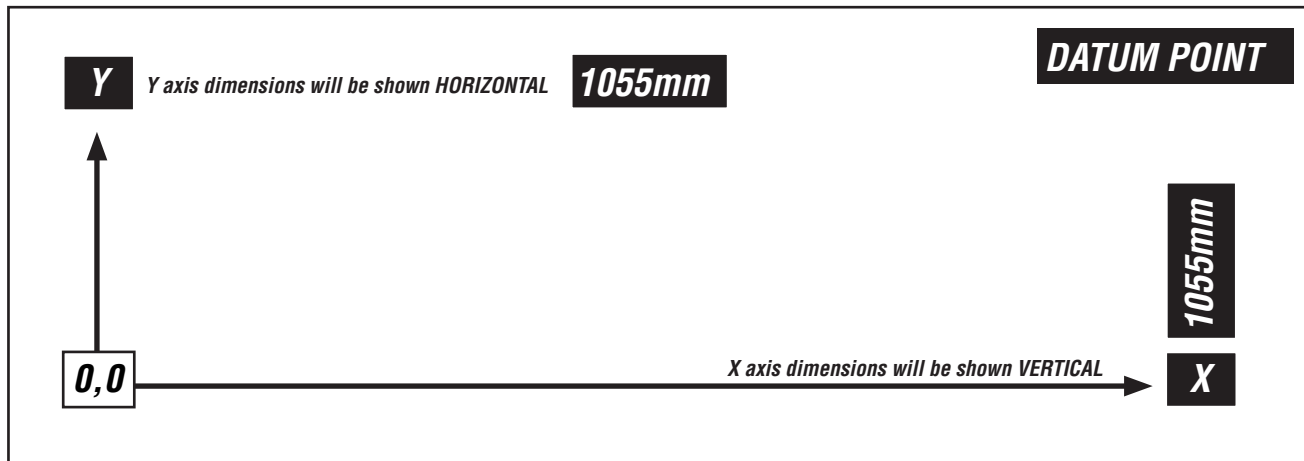

Notes:

1) DATUM POINT

Foundation measurements will be taken from the DATUM POINT - this is CIRCLED IN RED

2) GROUND LEVEL

All measurements for DEPTHS and HEIGHTS are taken from FINISHED GROUND LEVEL - this is labeled as FGL

4) DIRECTION OF HOLES

Ensure any PRE DRILLED HOLES are positioned as shown - Dashed lines show holes going in the opposite direction

5) FOUNDATION HOLES

Foundation holes should measure 400mm X 400mm X 750mm. (750mm below FINISHED GROUND LEVEL - IF WET POUR / MULCH / PLAYSAFE is to be laid, amend as required.

6) FOUNDATION HOLES HIGHLIGHTED IN A BOX


Boxed Foundation holes should measure 400mm X 600mm X 750mm. (750mm below FINISHED GROUND LEVEL - IF WET POUR / MULCH / PLAYSAFE is to be laid, amend as required.

FOUNDATION DETAILS


FOUNDATIONS 400mm x 400mm x 750

RED FOUNDATIONS 400mm x 600mm x 750 (SLIDE - JIG105 ONLY)

**REMEMBER - 750mm below FINISHED GROUND LEVEL - if WETPOUR / MULCH / PLAYSAFE is to be laid amend as required*

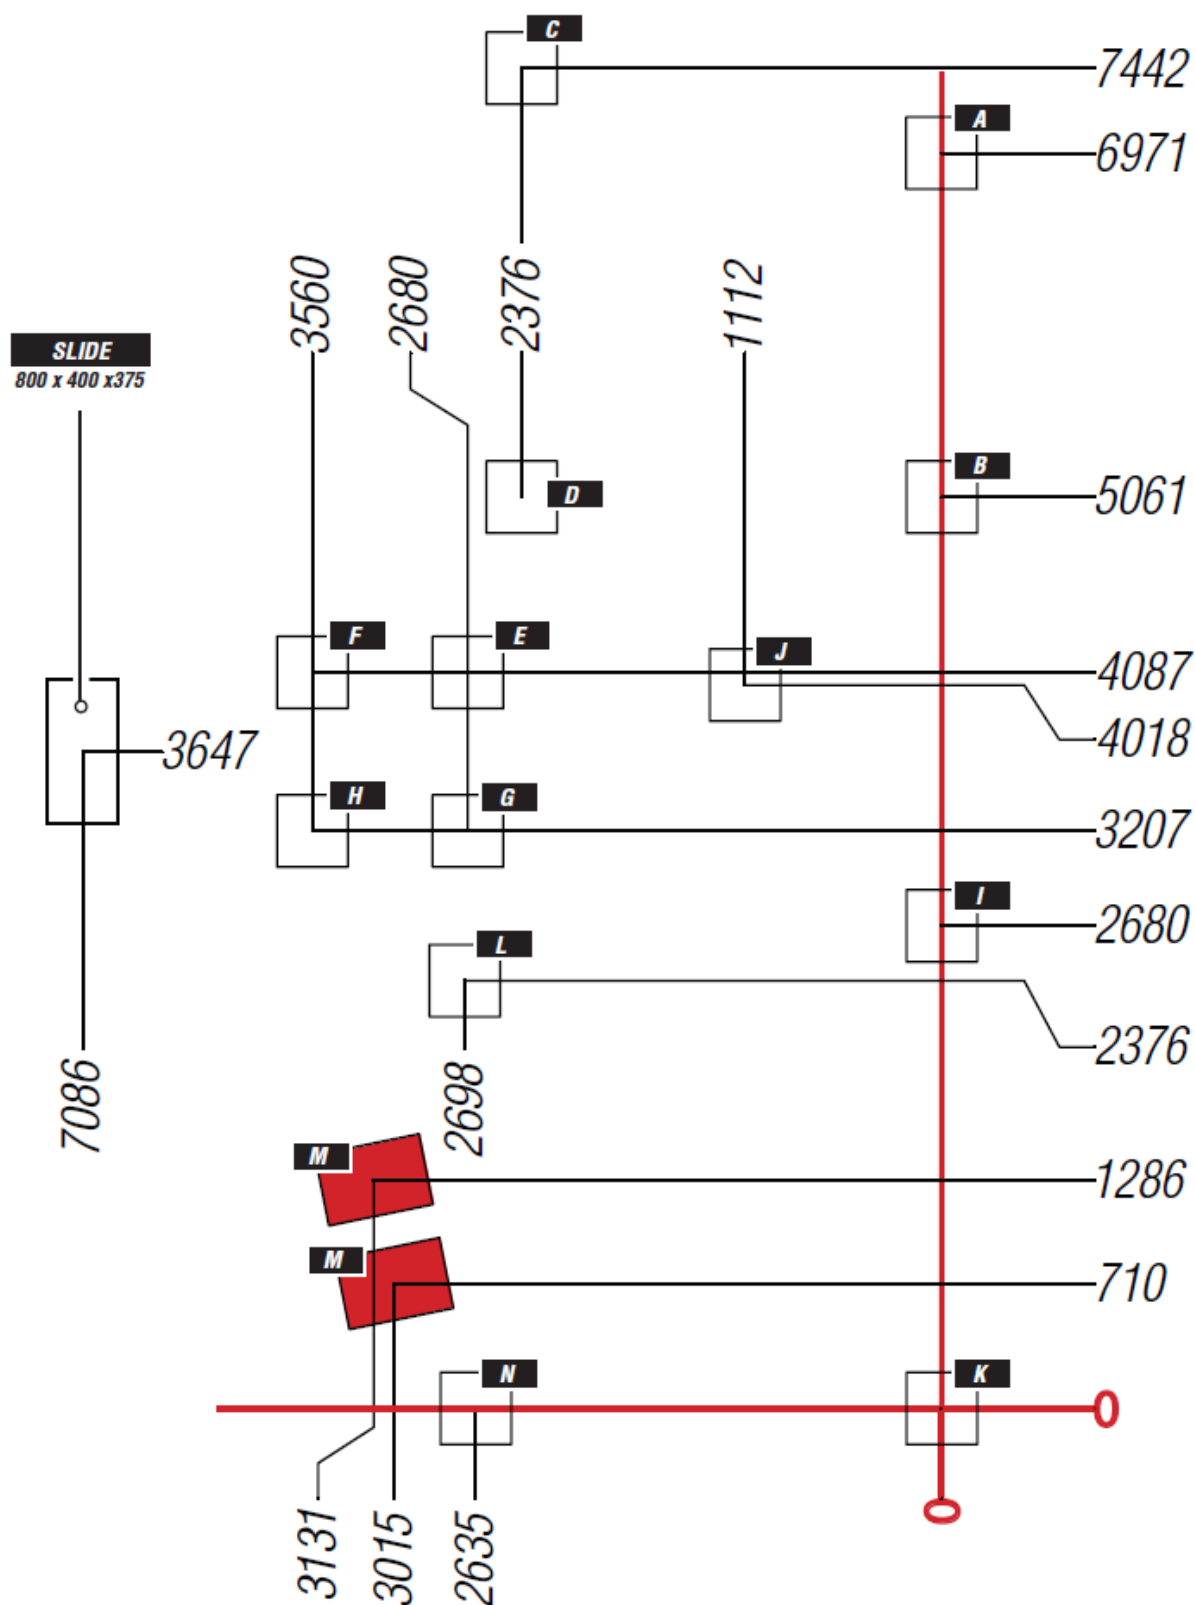

FOUNDATION DETAILS

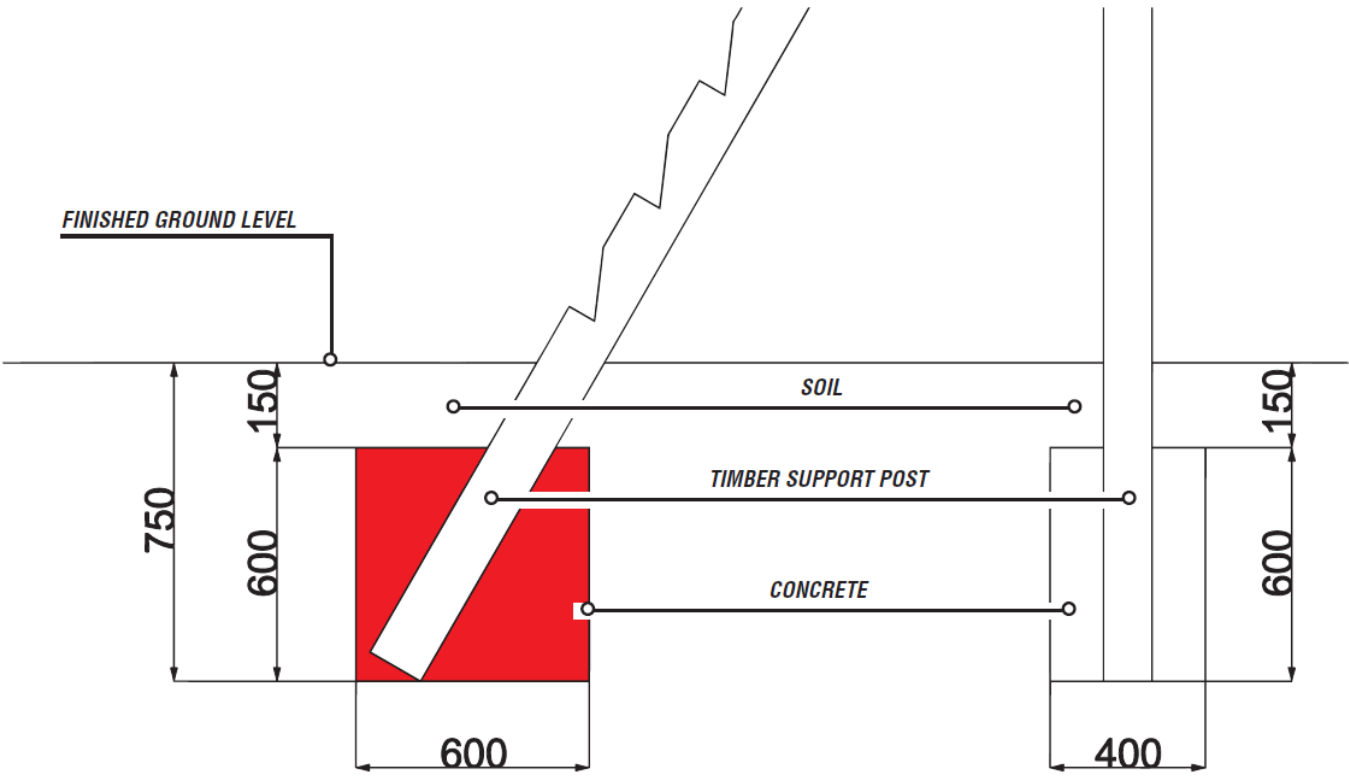


M

ARE SET AT A 45 degree ANGLE - the 'edge' of the 600mm measurement is where the post meets the ground level
ALL OTHER VERTICAL TIMBERS ARE POSITIONED UPRIGHT

SURFACING DETAILS


----- = MINIMUM SPACE
———— = SURFACE AREA

RED DIMENSIONS CENTRE OF
VERTICAL TIMBERS

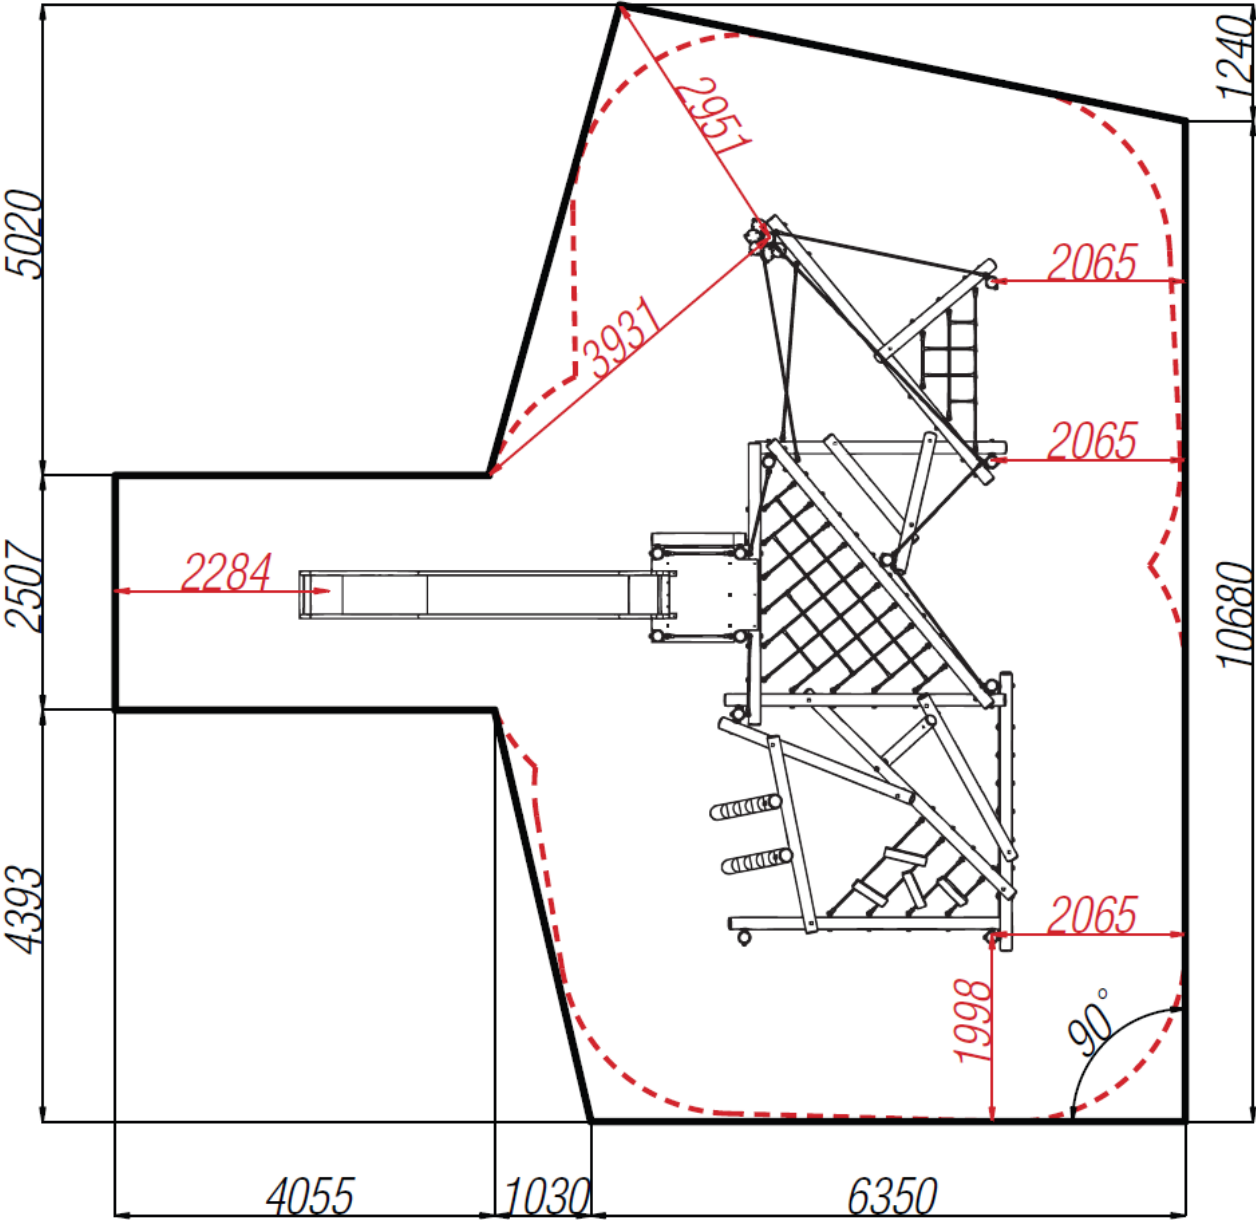

1


Construct the main assembly BEFORE laying concrete foundations STEPS 1 to 19

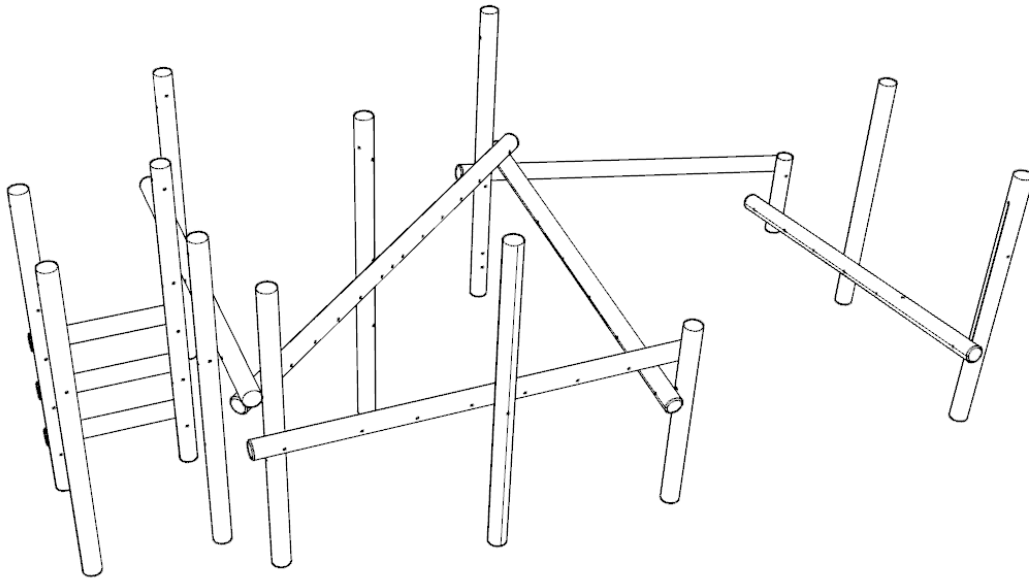

NOTES:

- All timbers bolted together *MUST* include 2 x DISTANCE PIECES

TIMBERS DO NOT BOLT DIRECTLY TO EACH OTHER



- Install STEP by STEP



TO ENSURE THE CORRECT HOLES ARE USED AT EACH STAGE

- TAKE EXTRA CARE WHEN DRILLING

TAKE EXTRA PRECAUTION WHEN DRILLING THE TIMBERS - ONCE POSITIONED REMEMBER TO ALLOW FOR THE DISTANCE PIECES AND MARK ACCORDINGLY (distance between timbers 27mm)

- DRILLING THROUGH THE CENTRE

ALTHOUGH SOME HOLES ARE DRILLED AT AN ANGLE - THE HOLE IS DRILLED THROUGH THE CENTRE OF THE TIMBER (LEAVING 62.5mm either side)

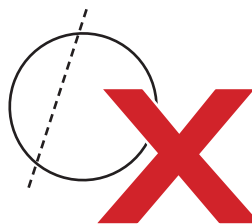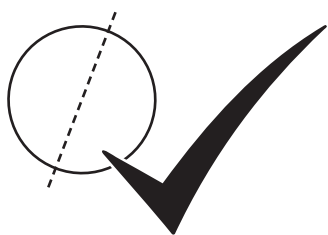


INSTALLATION INSTRUCTIONS

2

Position the N / L / K / I - timbers


VERTICAL TIMBERS (VT) are CHAMFERED at one end only - ENSURE THIS END IS NOT IN THE GROUND

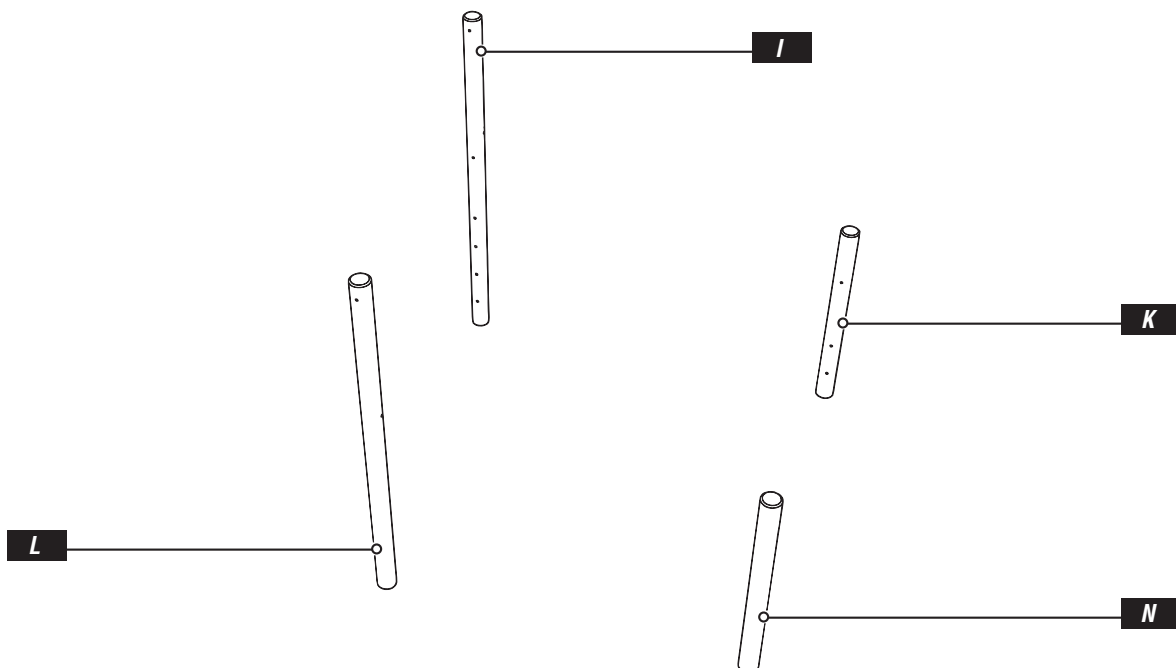

3

Attach U to N / K - timbers

Using 2 x M12 x 290* CUP SQUARE BOLTS / 2 x 'NYLOCS' M12 / 2 x Covered end cap R60 / 4 x 120 Distance pieces

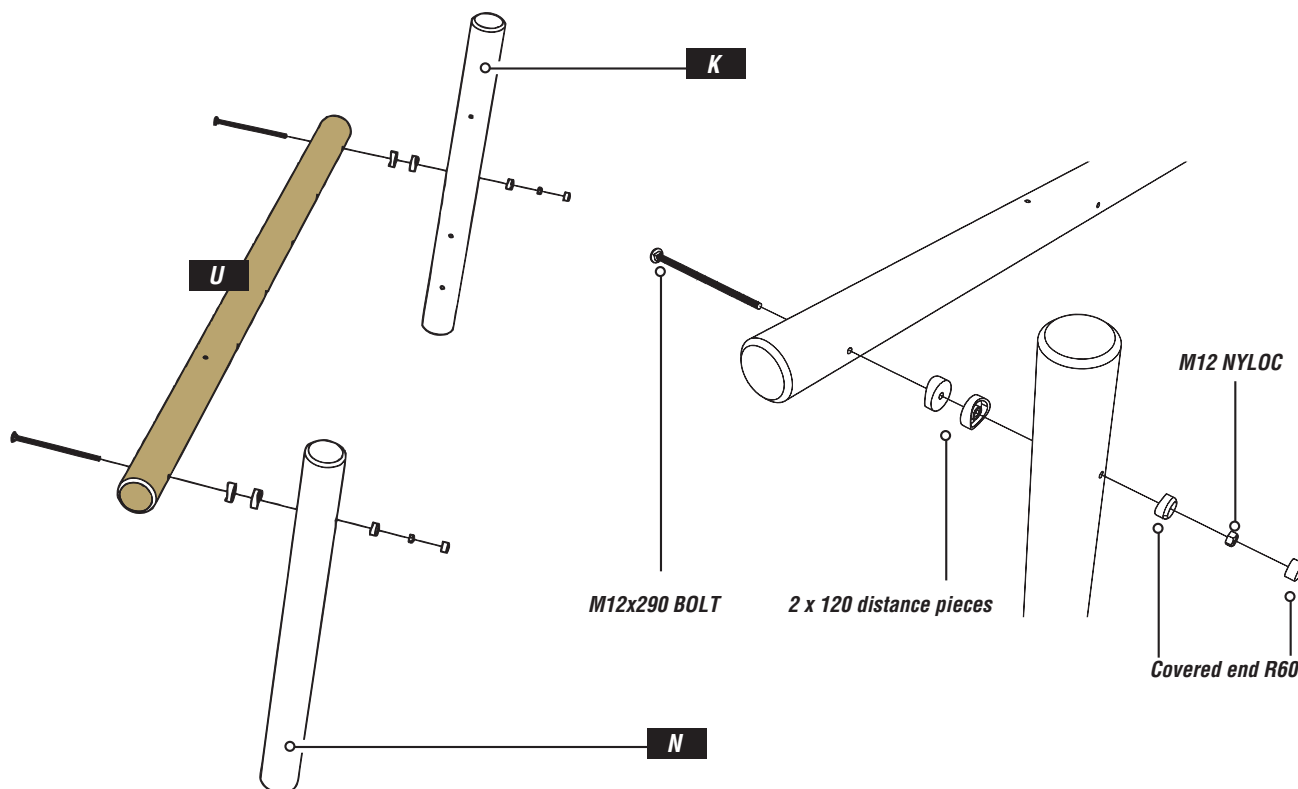


INSTALLATION INSTRUCTIONS

4

ENSURE the positioning of U is correct


The 4 remaining holes in U are positioned closer to the K - timber

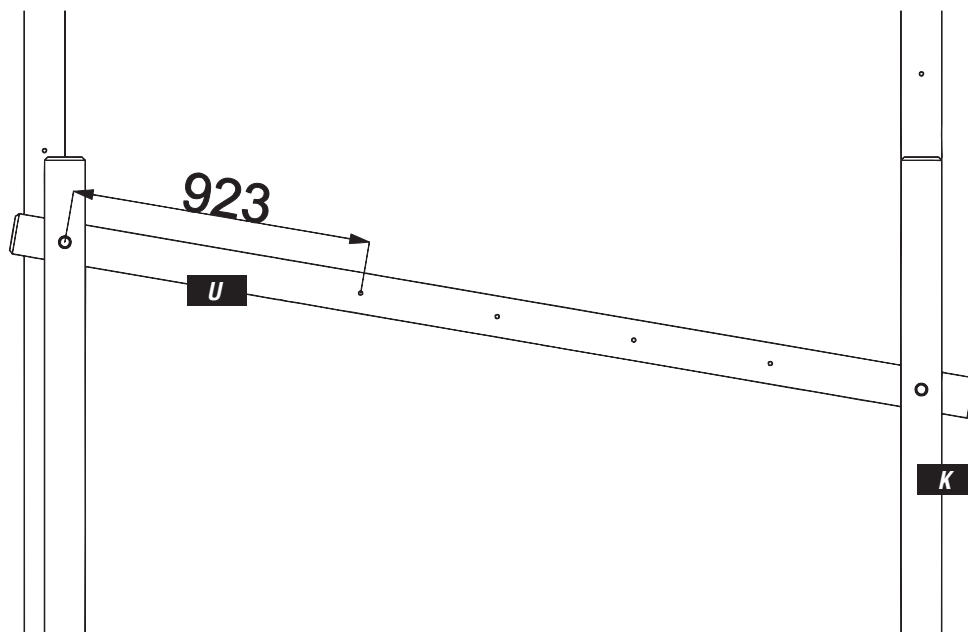

5

Attach S to K / I - timbers

Using 2 x M12 x 290 CUP SQUARE BOLTS / 2 x 'NYLOCS' M12 / 2 x Covered end cap R60 / 4 x 120 Distance pieces*

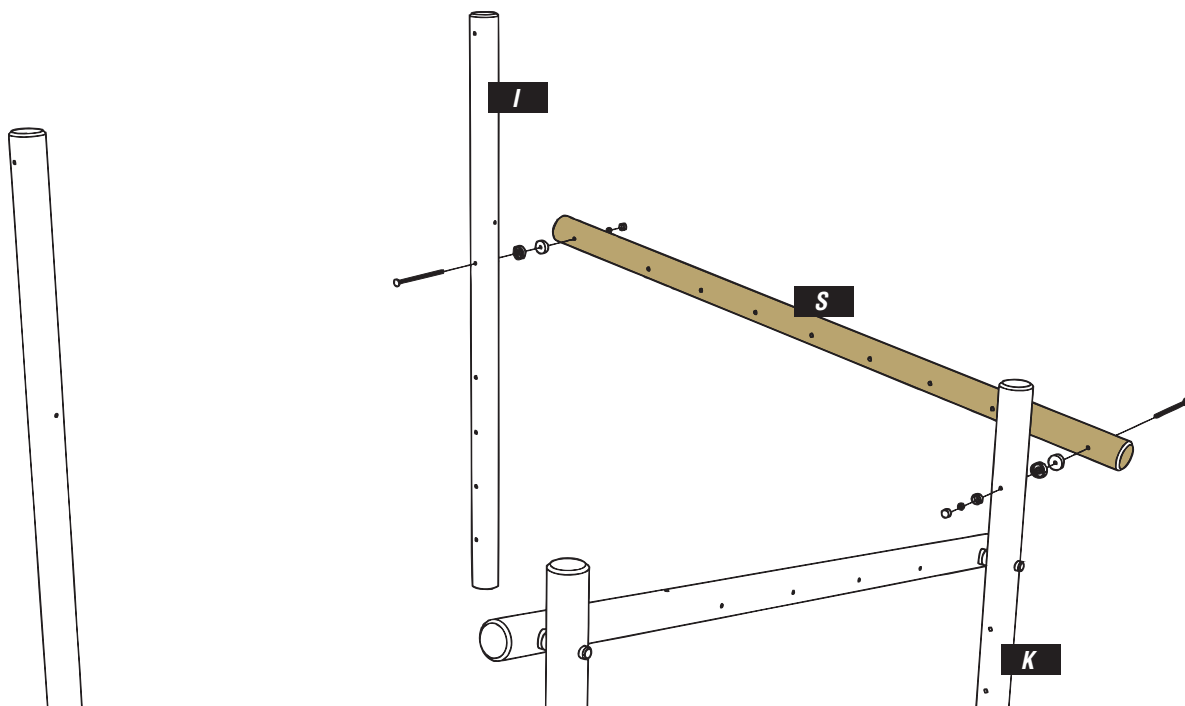


INSTALLATION INSTRUCTIONS

6

ENSURE the positioning of S is correct


There is a remaining HIGHER hole in I - timber (in the opposite direction) - CIRCLED RED BELOW

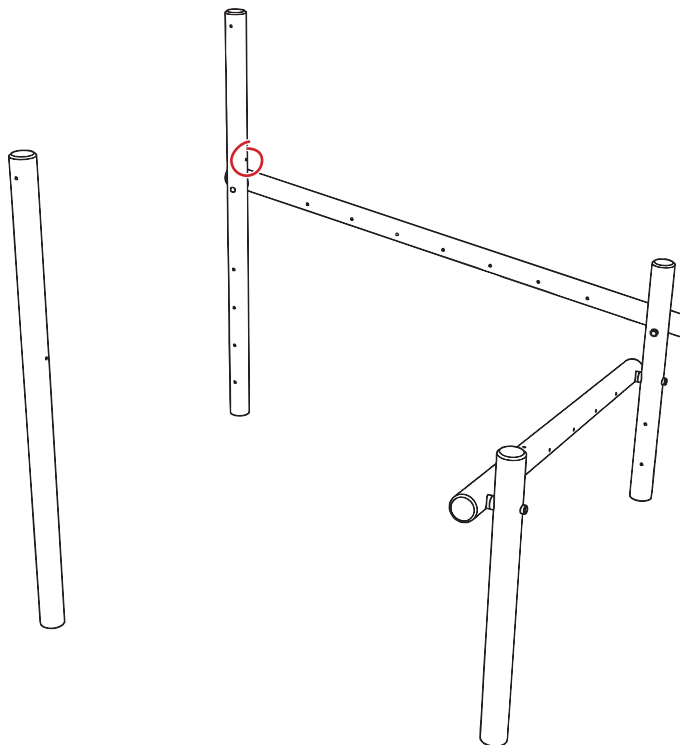

7

Attach T to I / L - timbers

Using 2 x M12 x 290 CUP SQUARE BOLTS / 2 x 'NYLOCS' M12 / 2 x Covered end cap R60 / 4 x 120 Distance pieces*

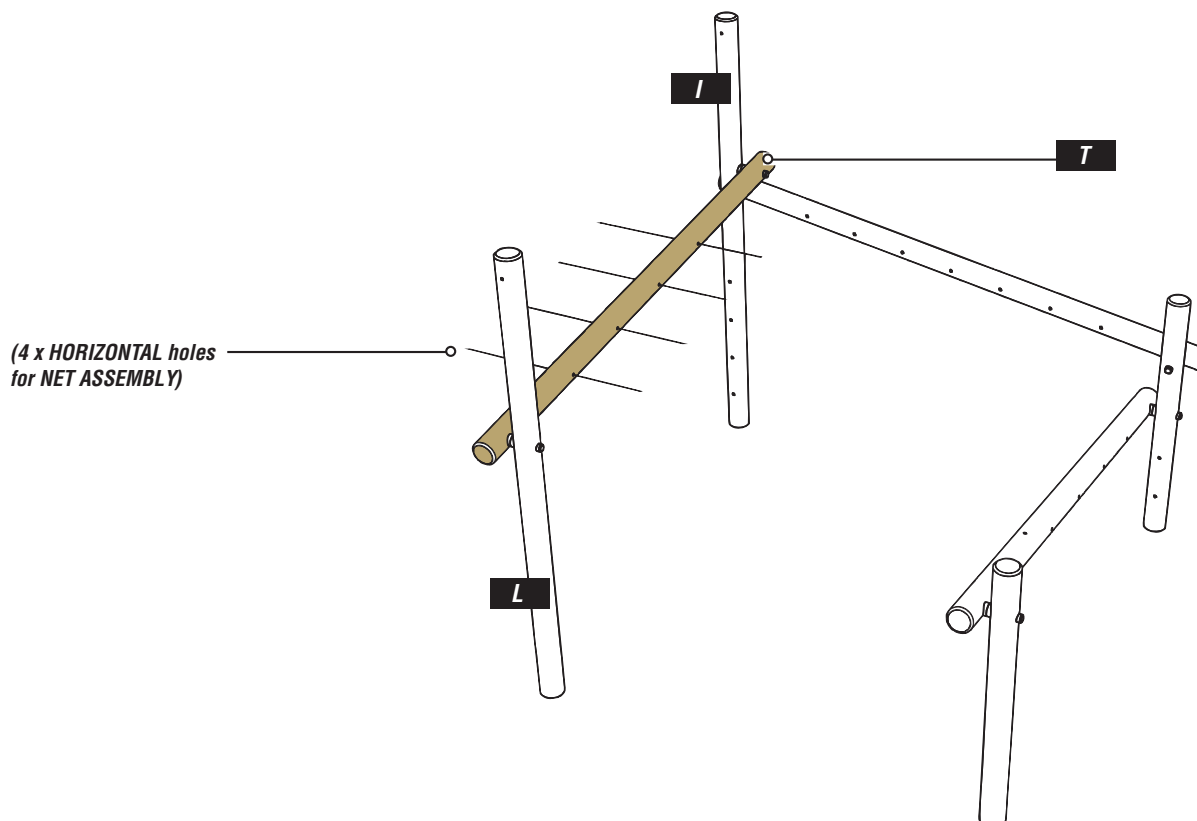


INSTALLATION INSTRUCTIONS

8

Position the B / J / D - timbers


VERTICAL TIMBERS (VT) are CHAMFERED at one end only - ENSURE THIS END IS NOT IN THE GROUND

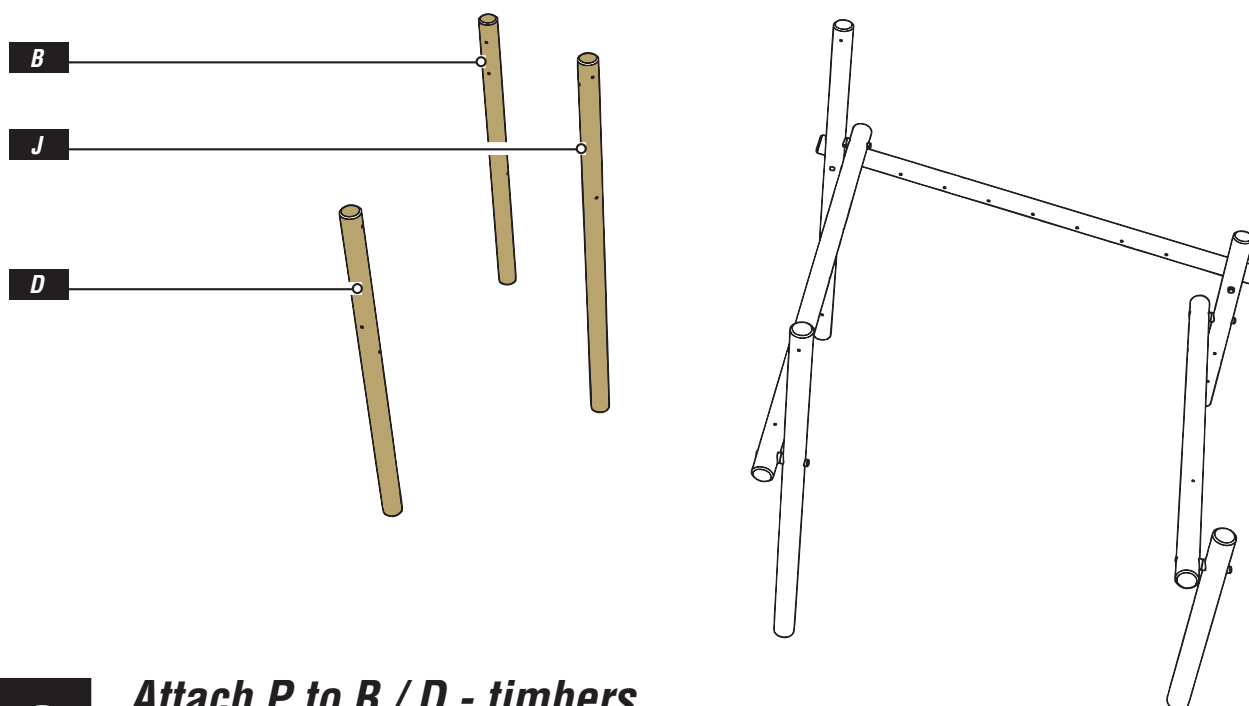

9

Attach P to B / D - timbers

Using 2 x M12 x 290* CUP SQUARE BOLTS / 2 x 'NYLOCS' M12 / 2 x Covered end cap R60 / 4 x 120 Distance pieces

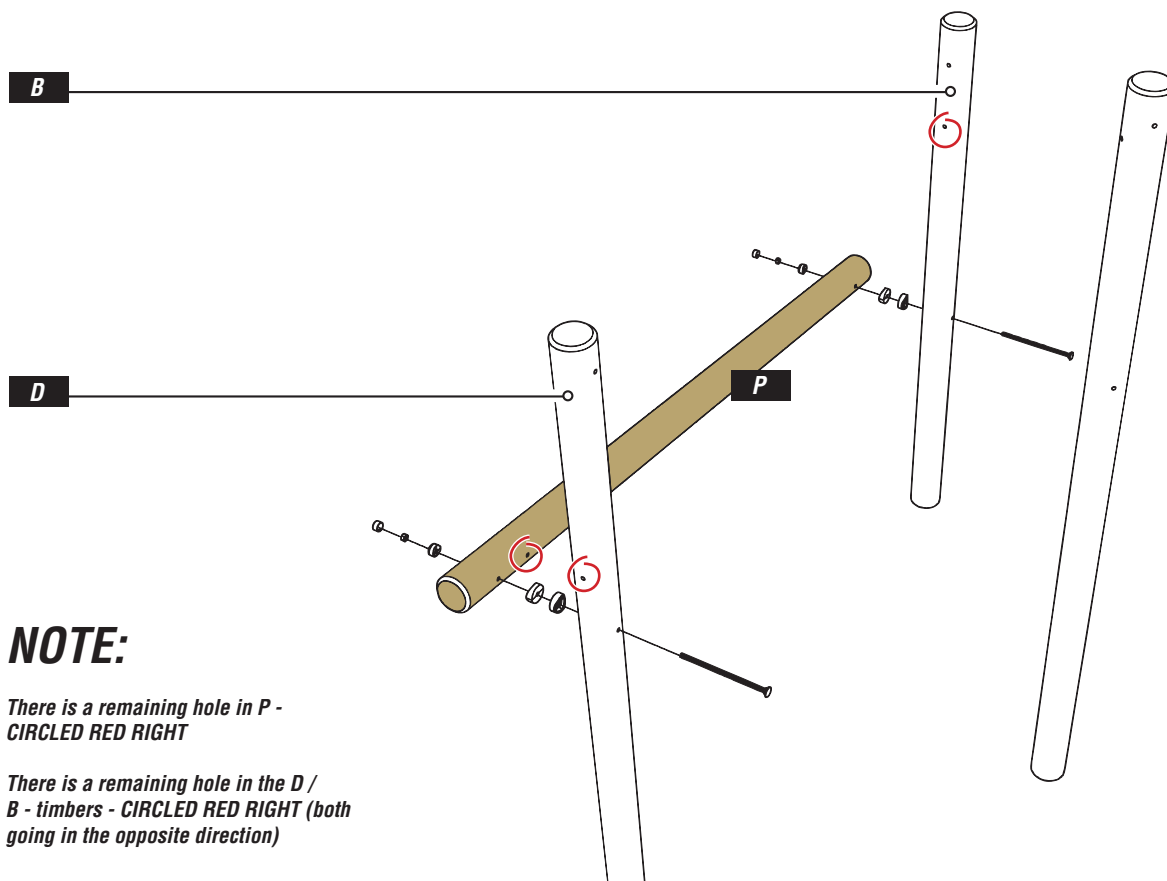

NOTE:

There is a remaining hole in P -
CIRCLED RED RIGHT


There is a remaining hole in the D /
B - timbers - CIRCLED RED RIGHT (both
going in the opposite direction)

INSTALLATION INSTRUCTIONS

10

Attach Q to D / J / I - timbers


Using 3x M12 x 290* CUP SQUARE BOLTS / 3 x 'NYLOCS' M12 / 3 x Covered end cap R60 / 6 x 120 Distance pieces

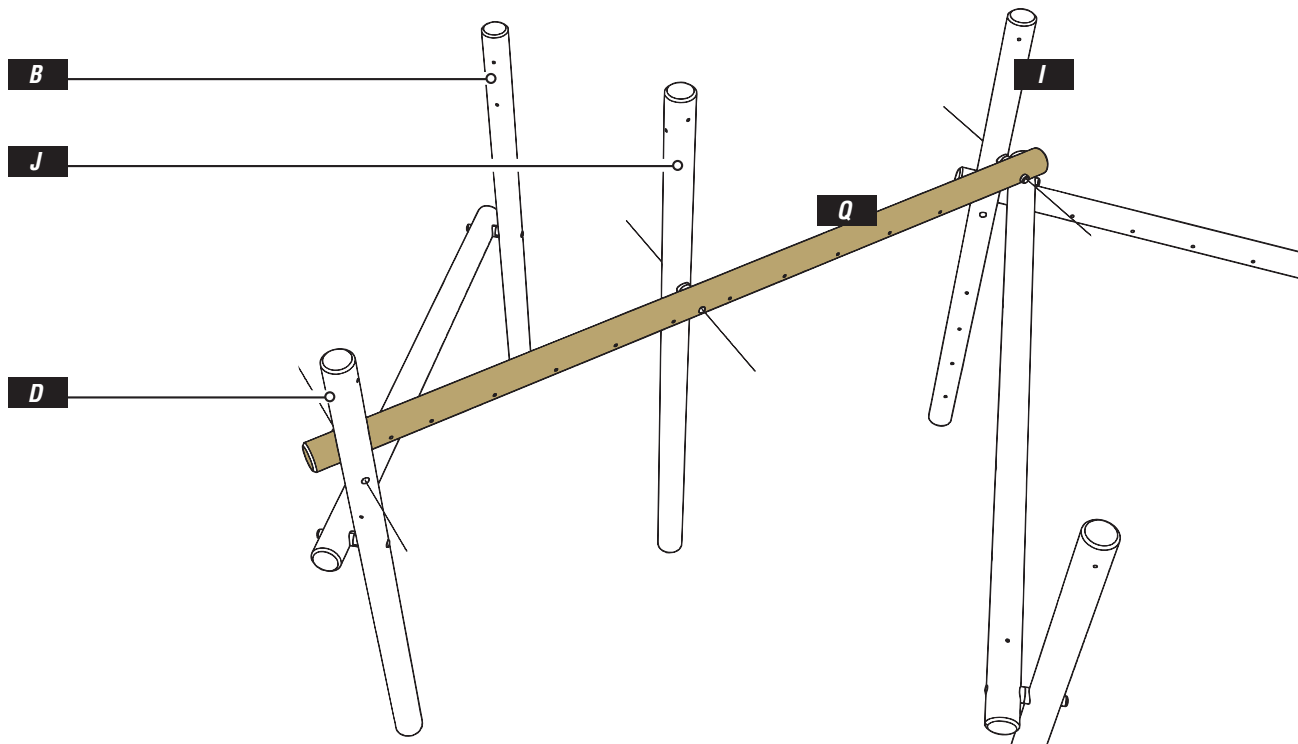

11

ENSURE the positioning of the Q is correct


Q - timber is bolted through 8th hole onto the J - timber CIRCLED RED BELOW (8th from the LEFT)

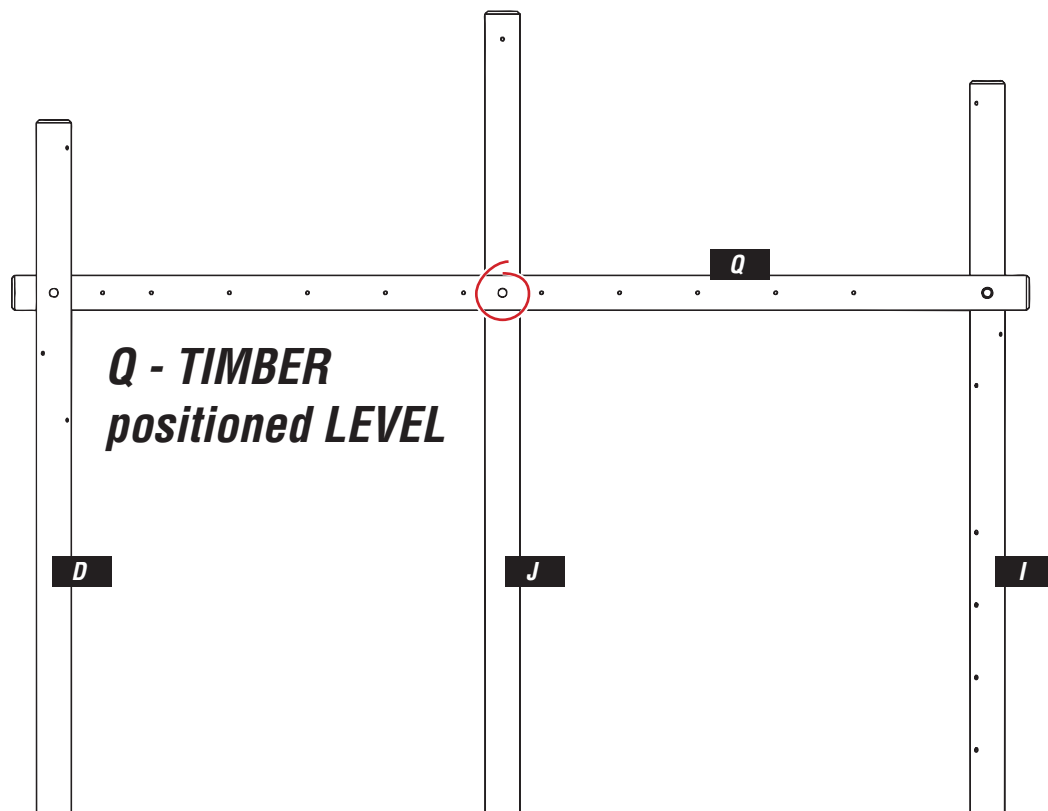

INSTALLATION INSTRUCTIONS


12

DRILL D / I - timbers, using the PRE-DRILLED HOLE in the Q - timber as a guide

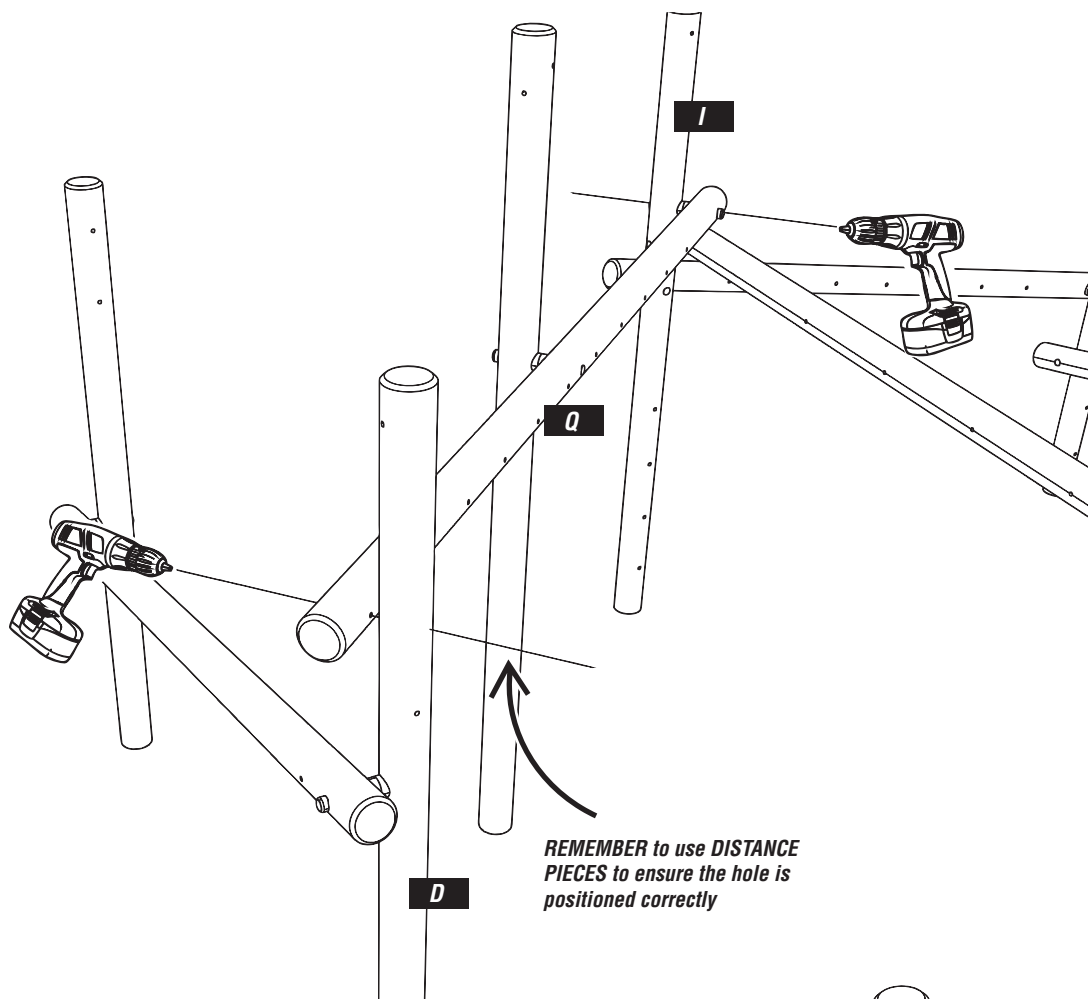

13

Attach Q to the D / I timbers

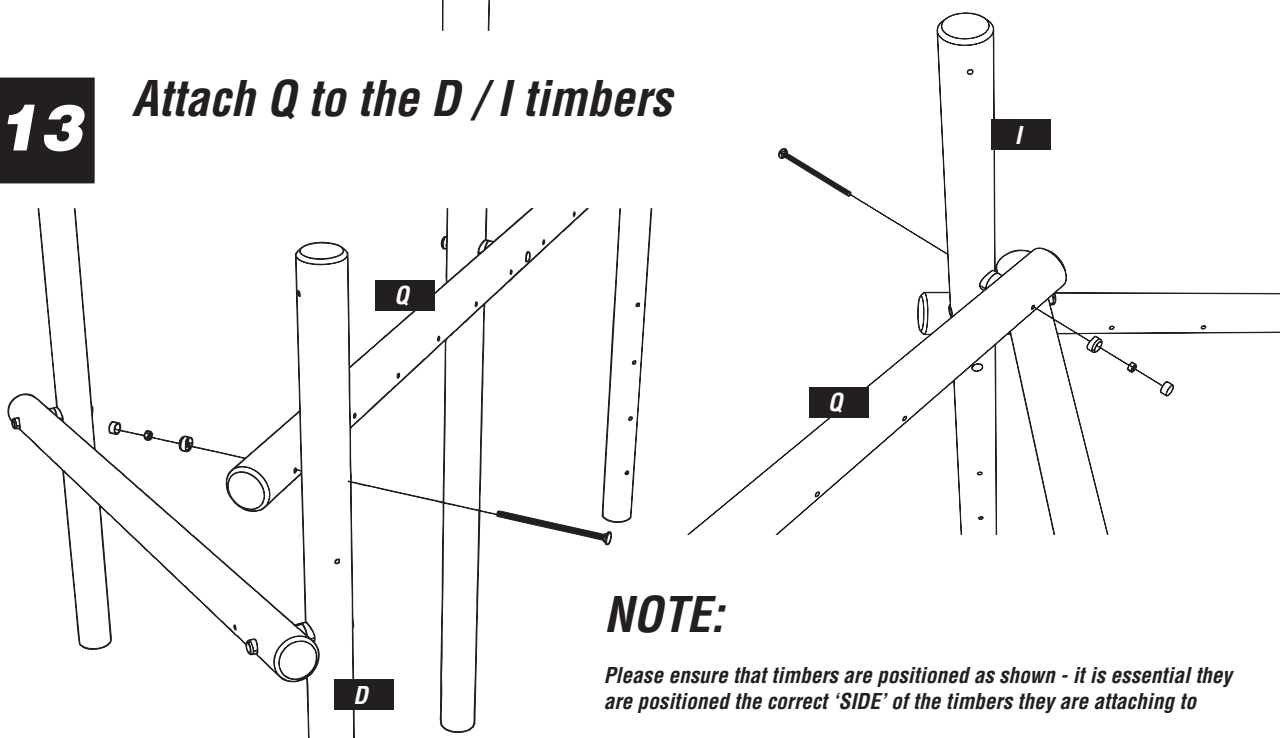


INSTALLATION INSTRUCTIONS

14

Position the A / C - timbers


VERTICAL TIMBERS (VT) are CHAMFERED at one end only - ENSURE THIS END IS NOT IN THE GROUND

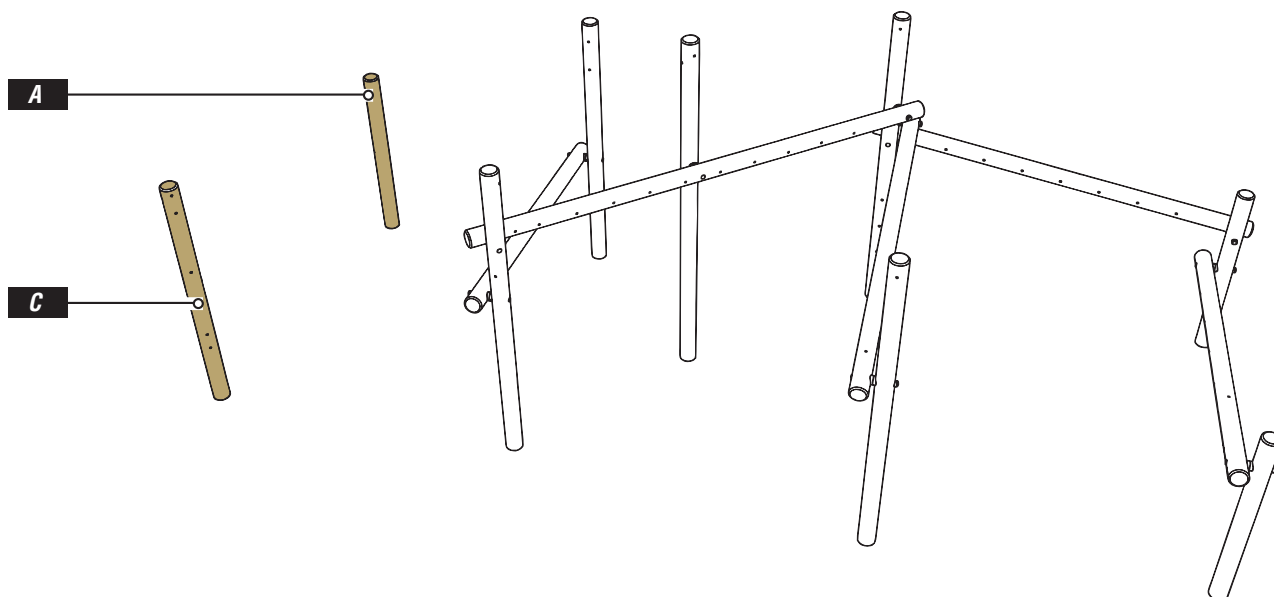

15

Attach O to VT1 timber

Using 1 x M12 x 290* CUP SQUARE BOLTS / 1 x 'NYLOCS' M12 / 1 x Covered end cap R60 / 2 x 120 Distance pieces
7th HOLE UP circled red below

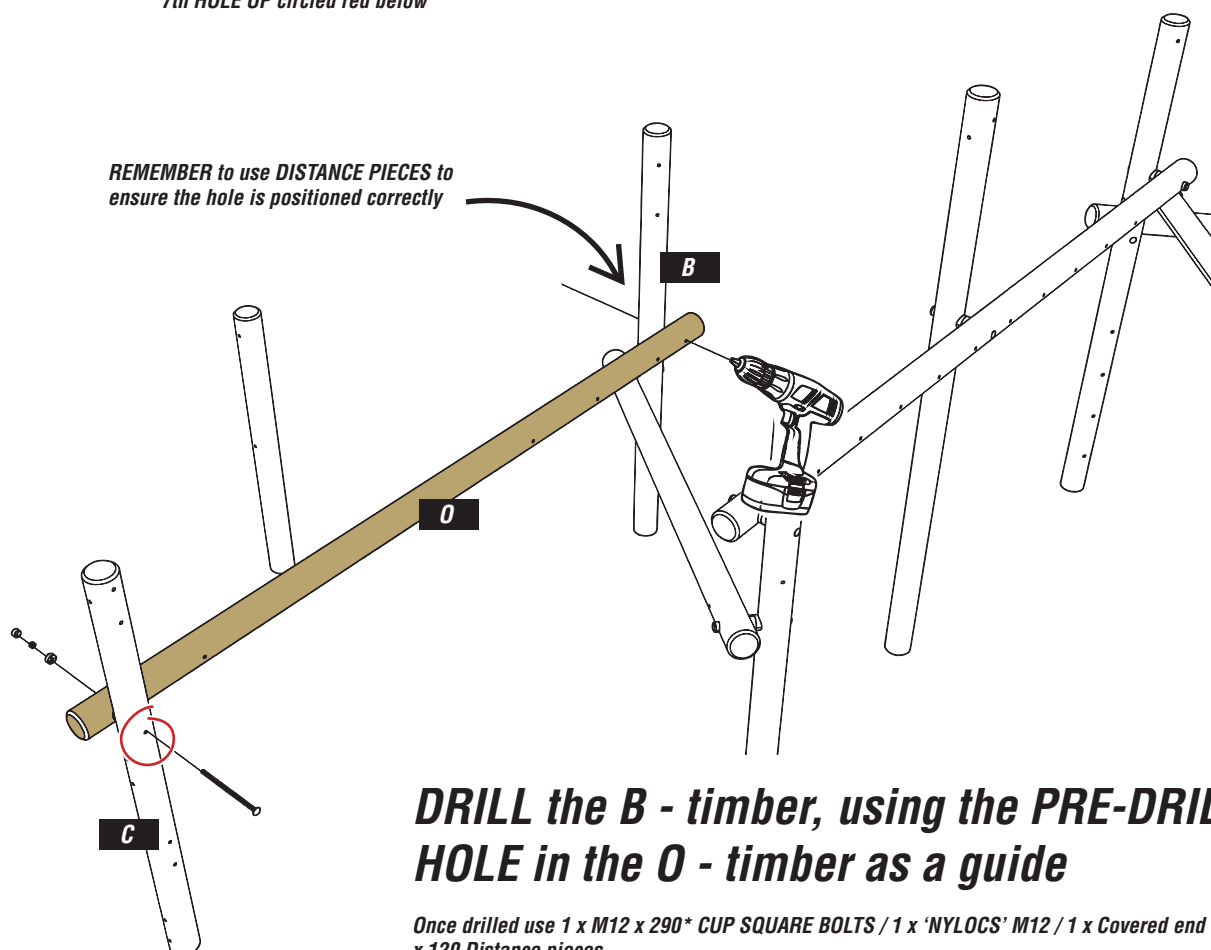

DRILL the B - timber, using the PRE-DRILLED HOLE in the O - timber as a guide


Once drilled use 1 x M12 x 290* CUP SQUARE BOLTS / 1 x 'NYLOCS' M12 / 1 x Covered end cap R60 / 2 x 120 Distance pieces

INSTALLATION INSTRUCTIONS

16

ENSURE the positioning of the O-timber is correct


The O - timber is bolted through 1st HOLE (either end) onto the C / B timbers **CIRCLED RED BELOW**

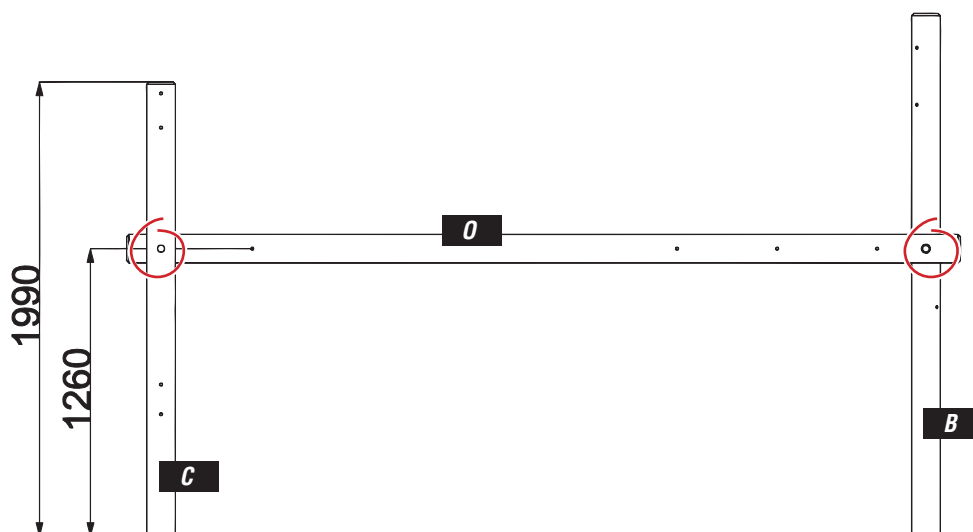

17

Use the 'TIMBER MARKER GUIDE' to mark the O - Timber

Mark a line around the O - timber - 1878mm from the end as shown below

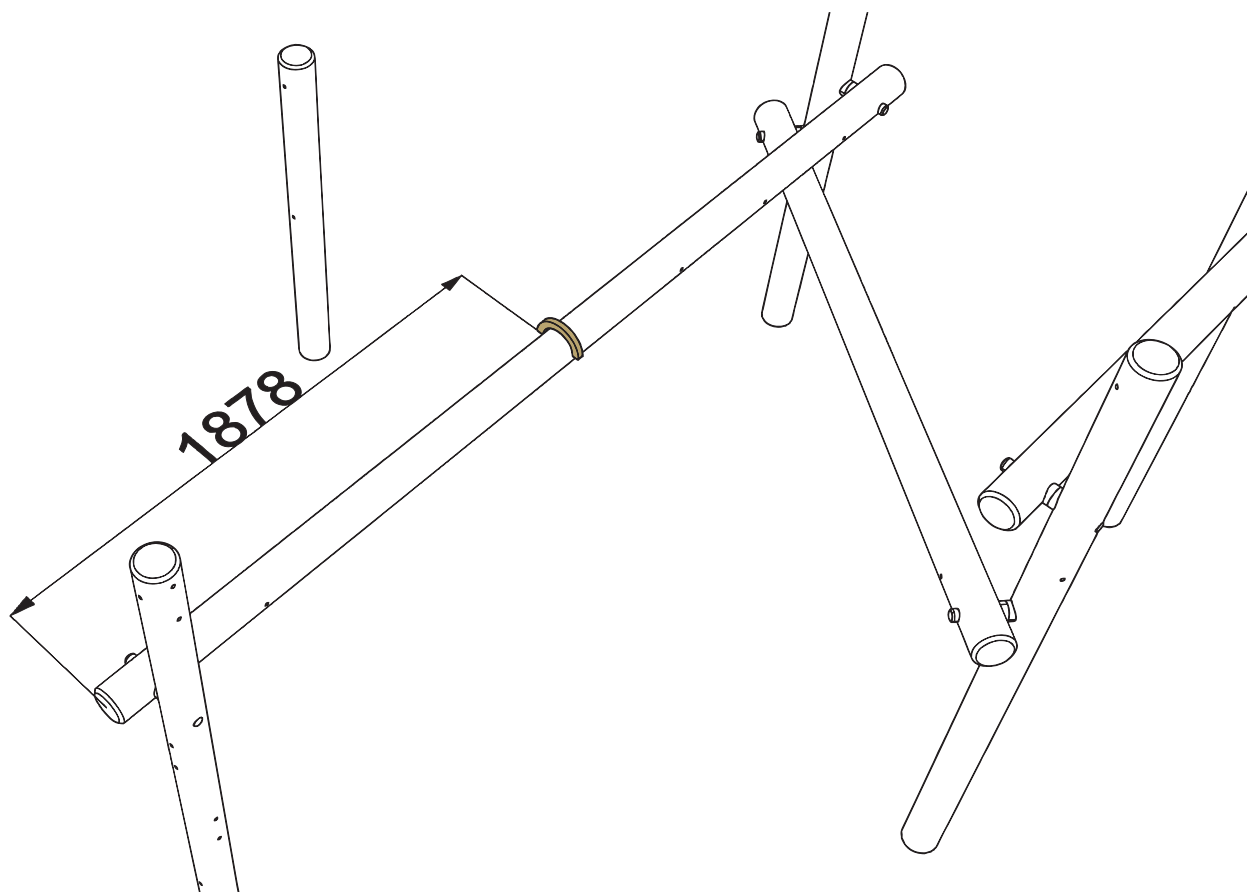


INSTALLATION INSTRUCTIONS

18

Attach V - timber to A - timber

Using 1 x M12 x 290* CUP SQUARE BOLTS / 1 x 'NYLOCS' M12 / 1 x Covered end cap R60 / 2 x 120 Distance pieces

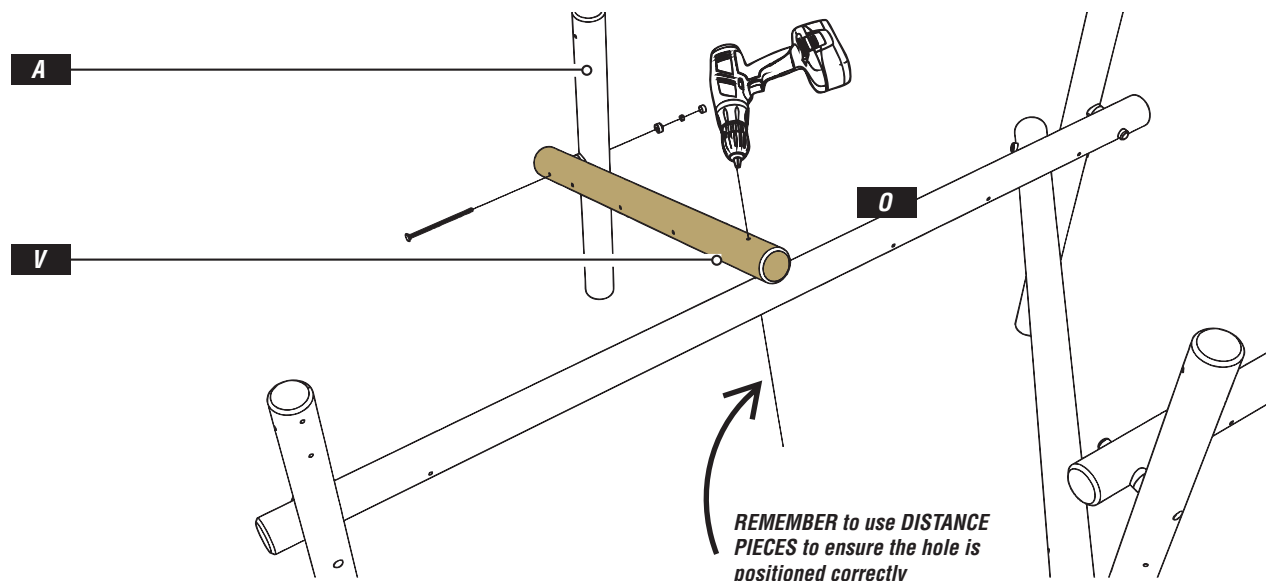


DRILL O timber, using the PRE-DRILLED HOLE in the V - timber as a guide - line the hole up with the LINE marked in step 17

Once drilled use 1 x M12 x 290* CUP SQUARE BOLTS / 1 x 'NYLOCS' M12 / 1 x Covered end cap R60 / 2 x 120 Distance pieces

19

The main assembly is now complete

Concrete foundations can now be laid - the main assembly means that ALL holes are 'LOCKED' in the correct position

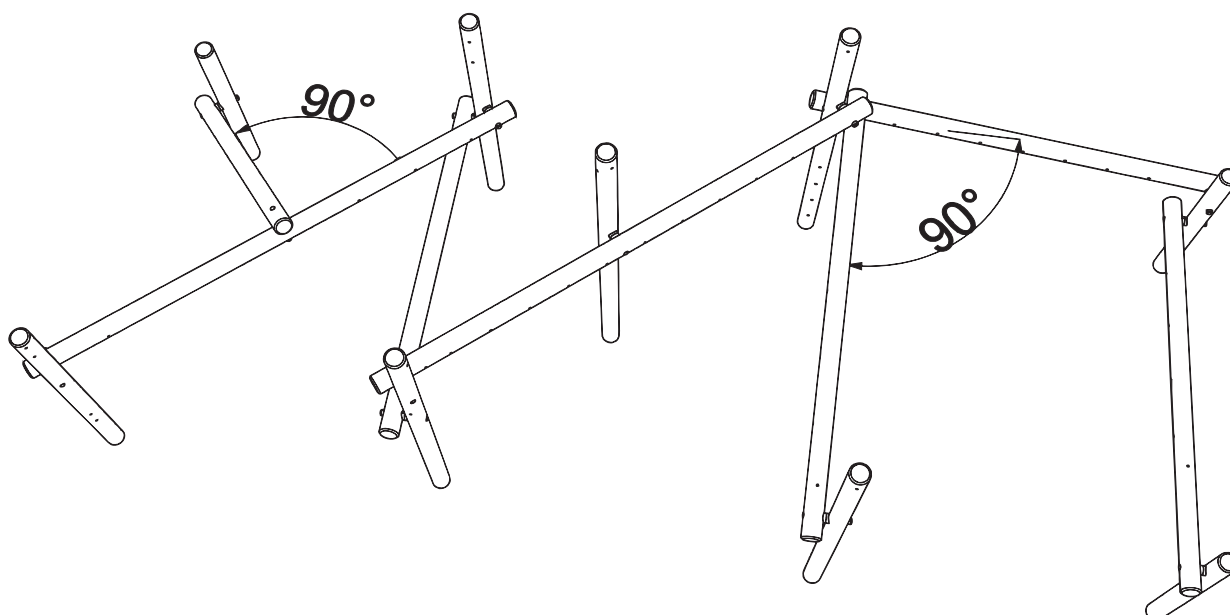


INSTALLATION INSTRUCTIONS

20

Attach R - timber to D - timber


Using 1 x M12 x 290* CUP SQUARE BOLTS / 1 x 'NYLOCS' M12 / 1 x Covered end cap R60 / 2 x 120 Distance pieces

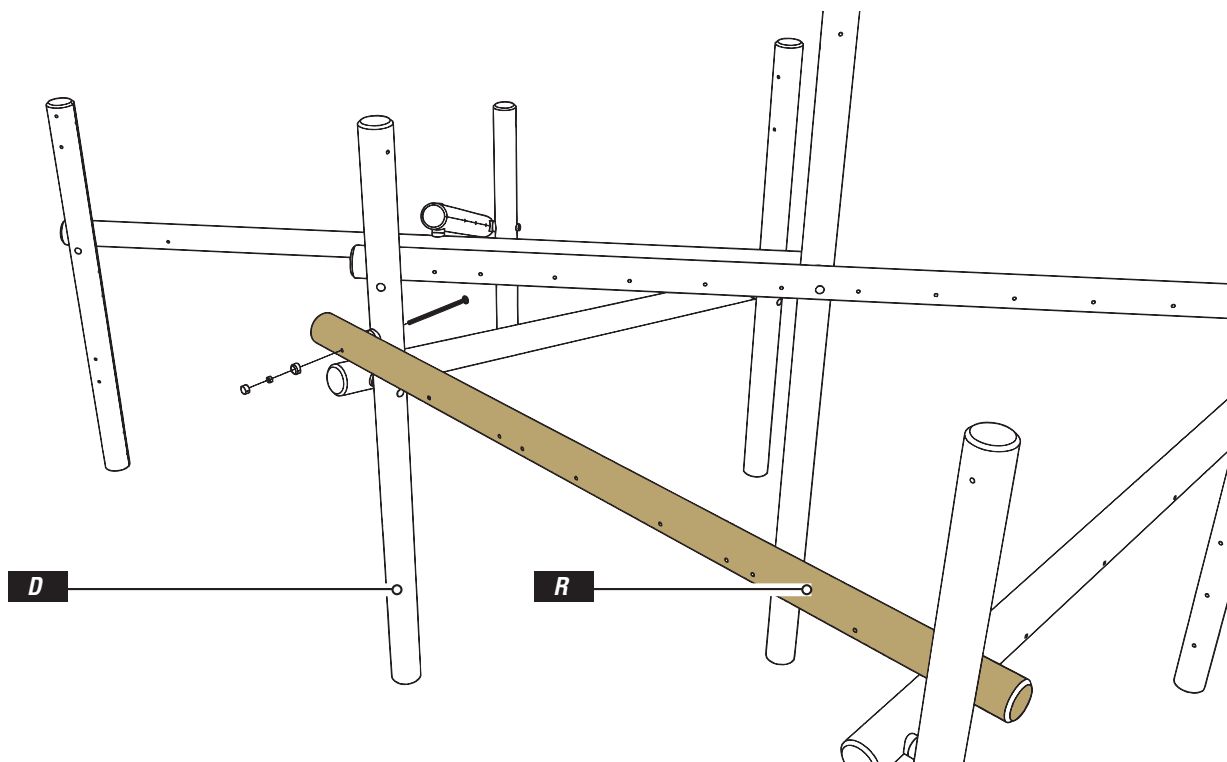

21

ENSURE the positioning of the R is correct

The R - timber is bolted through 1st HOLE - 200mm FROM THE END into the D - timber CIRCLED RED BELOW


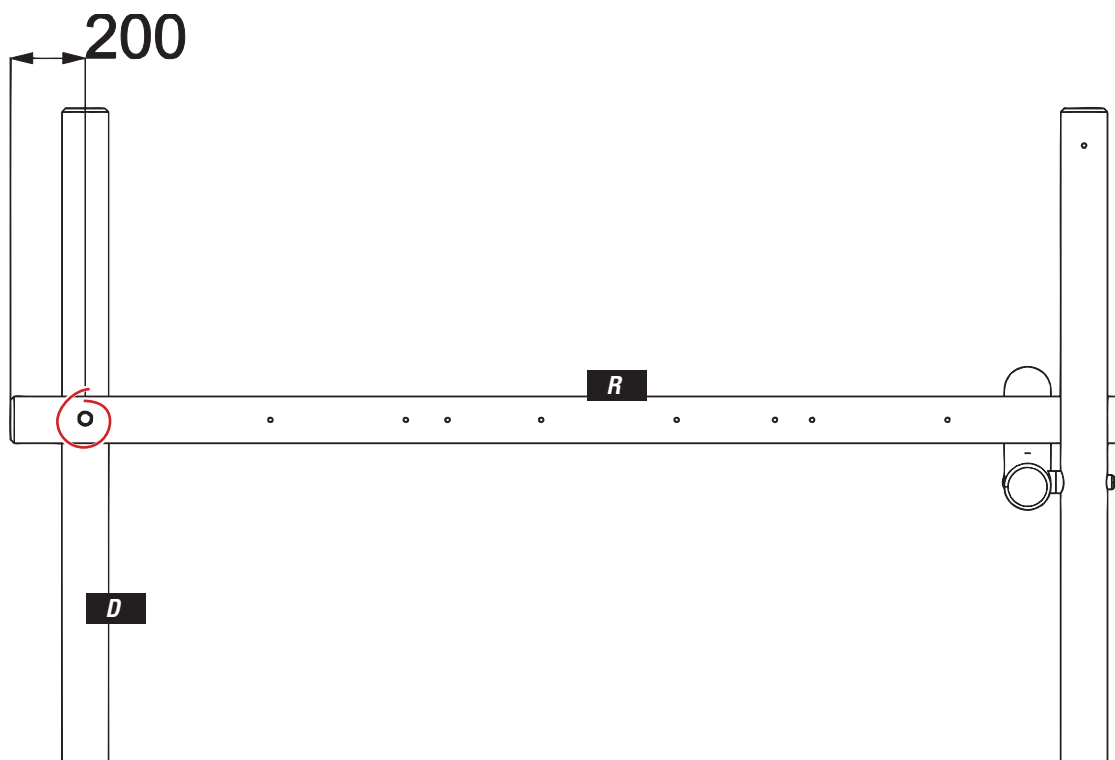


INSTALLATION INSTRUCTIONS

22

DRILL the R - timber, using the PRE-DRILLED HOLE in the T - timber as a guide

Once drilled attach using 1 x M12 x 290* CUP SQUARE BOLTS / 1 x 'NYLOCS' M12 / 1 x Covered end cap R60 / 2 x 120 Distance pieces

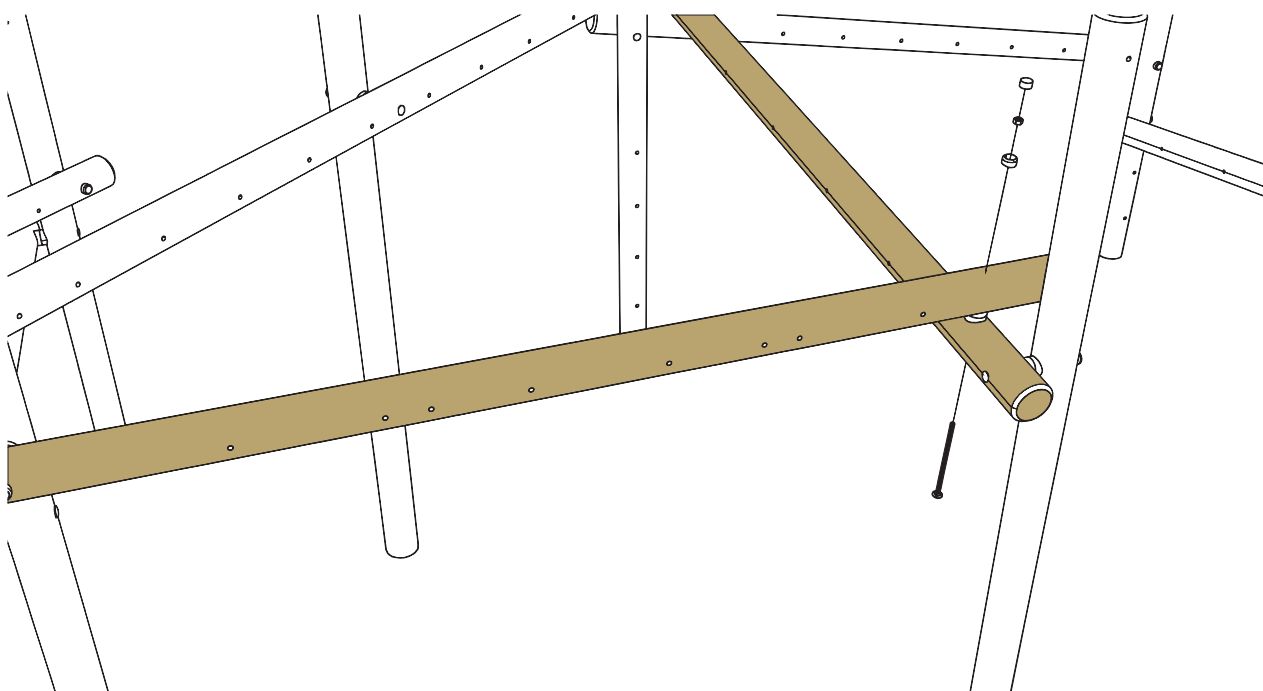
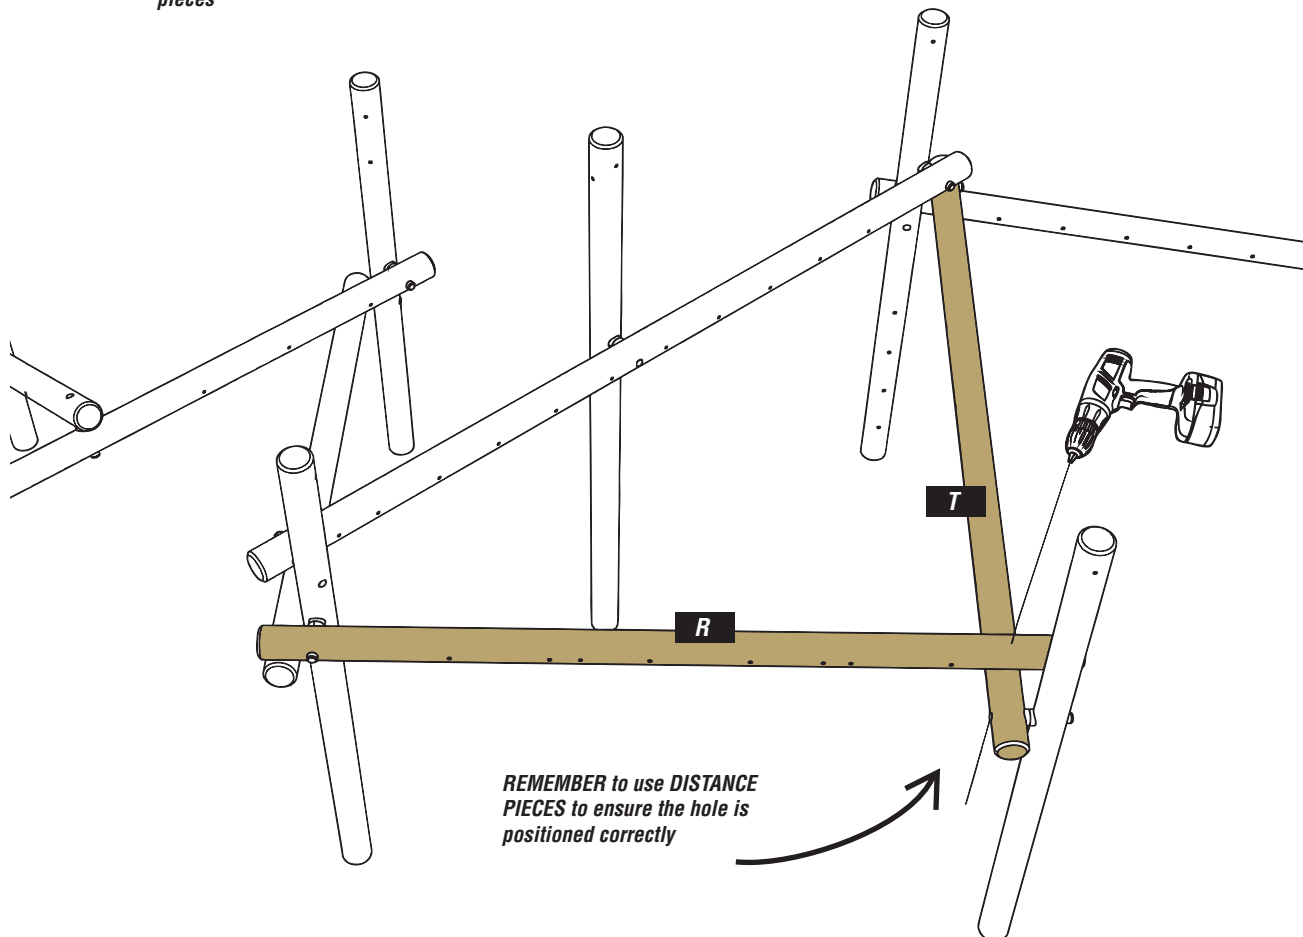


INSTALLATION INSTRUCTIONS


23

Assemble the SPIRAL STEP CLIMBER to the C - timber

Step climber consists of ... 5 x W - timbers, 1 x HEX board step, 4 x HEX board step with cut outs pieces

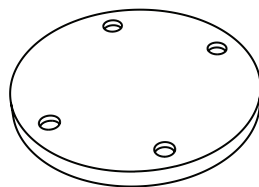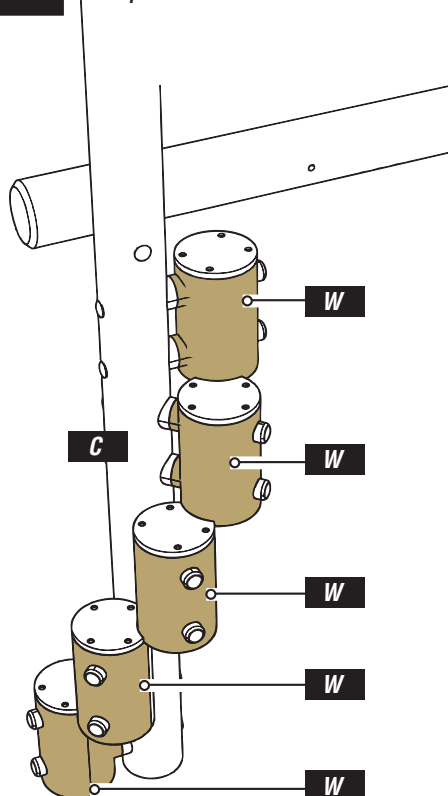

x1 (HEX BOARD 'STEP')

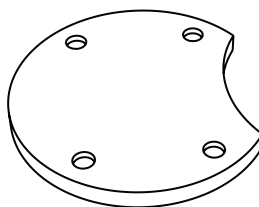

x4 (HEX BOARD 'STEP' with cut out)


24

Attach the BOTTOM W - timber to the C - timber

Using 2 x M12 x 320* CUP SQUARE BOLTS / 2 x 'NYLOCS' M12 / 2 x Covered end cap R60 / 2 x 120 Distance piece
2 x 140 Distance piece

NOTE:

The 140mm DISTANCE PIECE SITS AGAINST THE
W - timber MARKED BELOW (120mm distance piece
against the C timber)

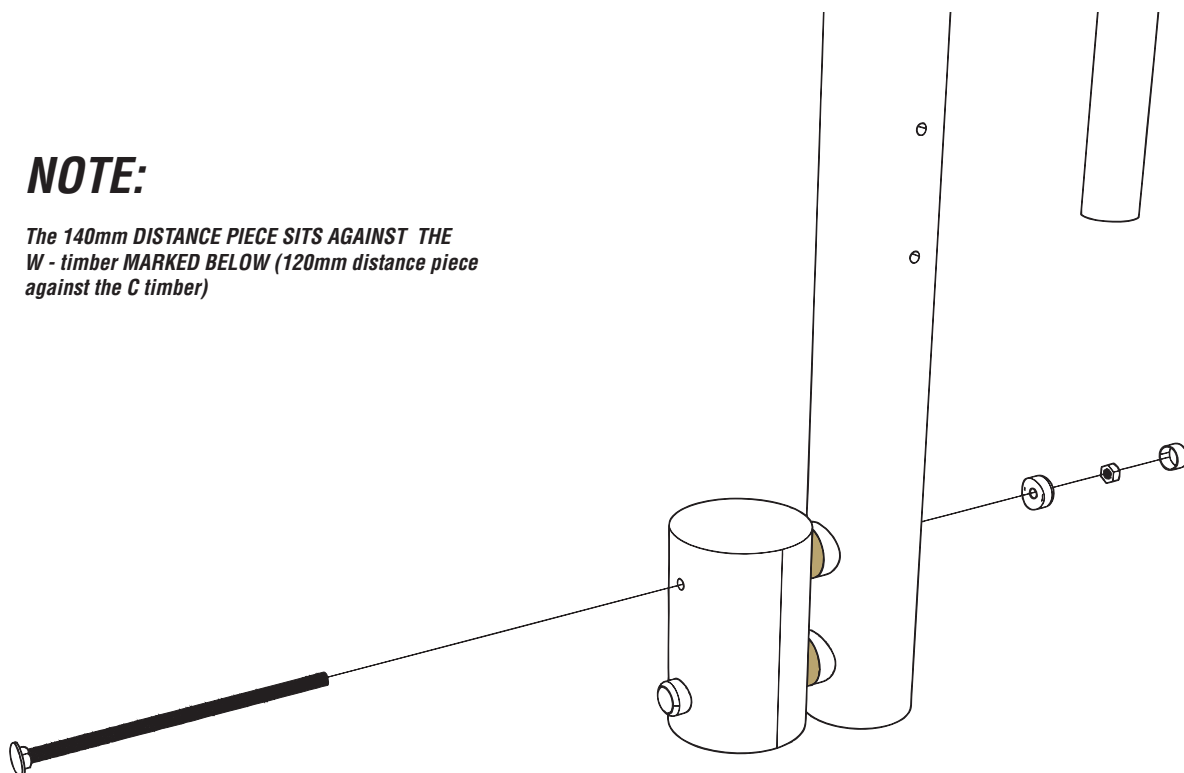


INSTALLATION INSTRUCTIONS

25

Attach the 3rd / 5th W - timbers to the C - timber

Using 4 x M12 x 320* CUP SQUARE BOLTS / 4 x 'NYLOCS' M12 / 4 x Covered end cap R60 / 4 x 120 Distance piece
4 x 140 Distance piece

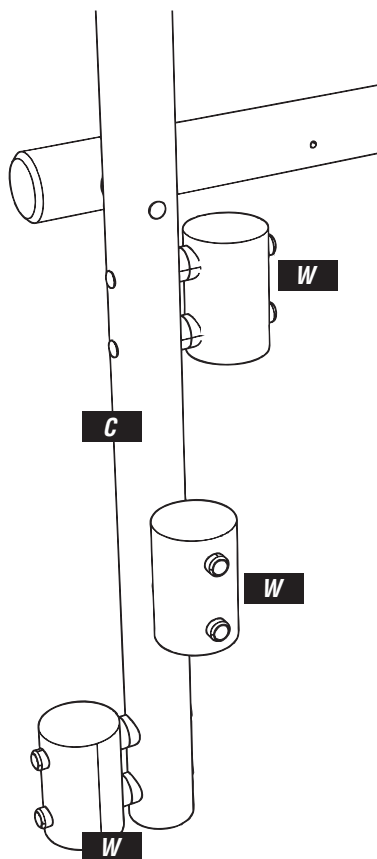


NOTE:

- The W - timbers sit 'ontop' of each other
- Using the HEX BOARD STEP with cut outs and the distance pieces will ensure the W timbers are positioned correctly
- USE THE CLAMP to hold it in place

26

DRILL C using the PRE-DRILLED HOLES in the W - timbers as a guide

Once drilled attach using 4 x M12 x 320* CUP SQUARE BOLTS / 4 x 'NYLOCS' M12 / 4 x Covered end cap R60 / 4 x 120 Distance piece / 4 x 140 Distance piece

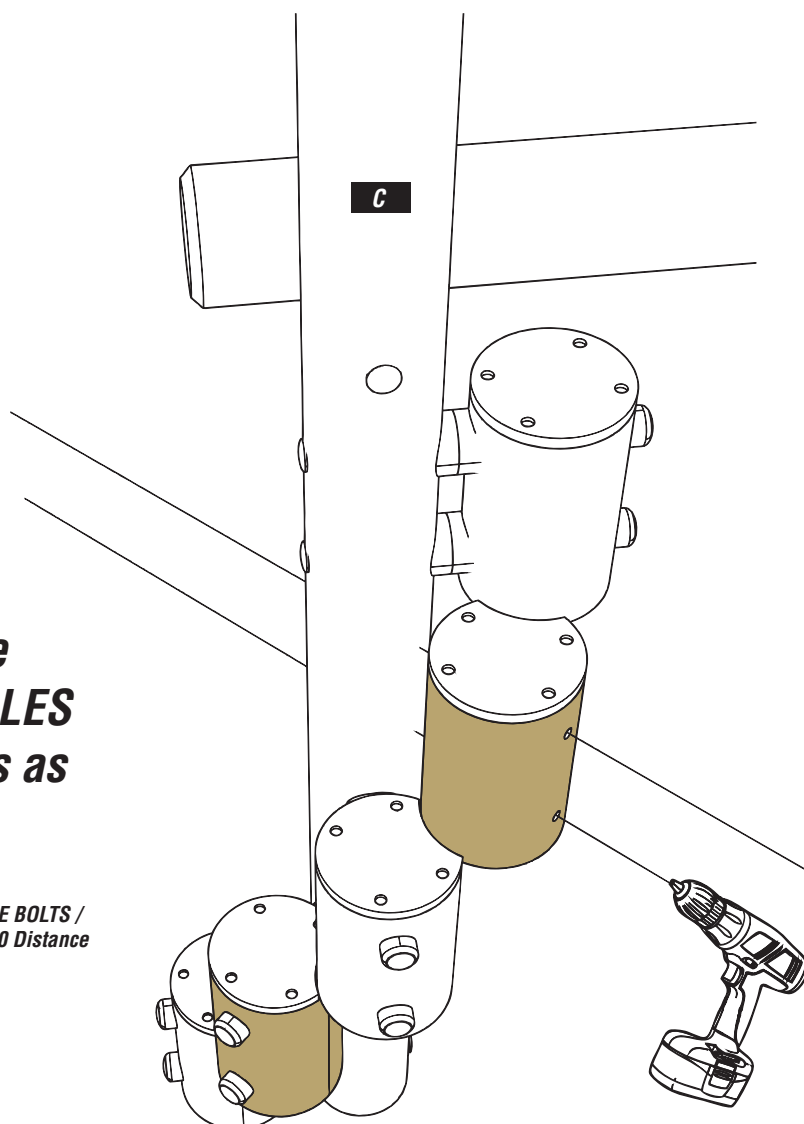


INSTALLATION INSTRUCTIONS

27

Attach the HEX BOARD STEPS


Once all the W - timbers are positioned / attached use 20 x FM80 WOOD SCREWS to secure the HEX STEPS

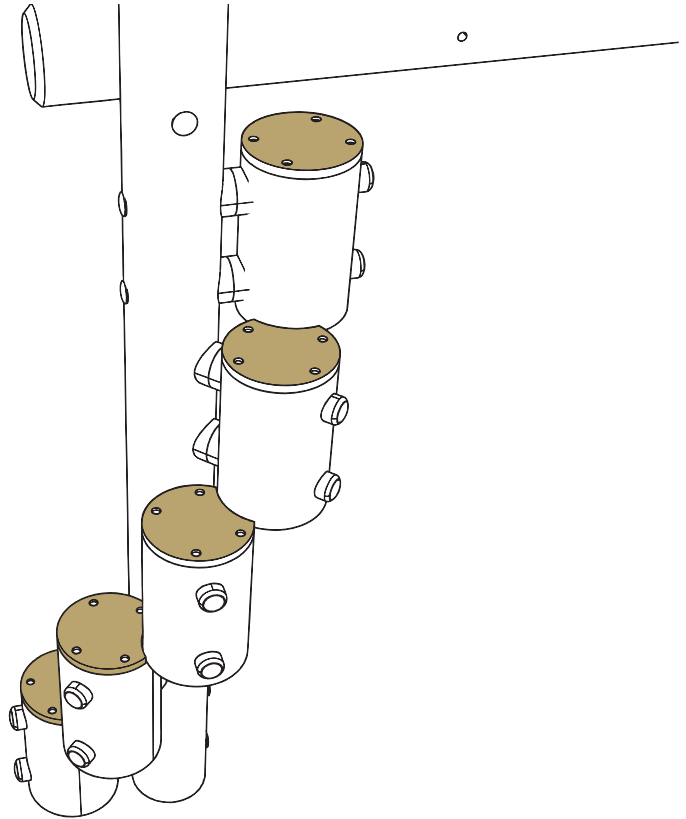

28

Position Z against the P / J timbers

The Z - timber is pre-drilled ONE END ONLY - this end sits against the P timber (circled RED below)

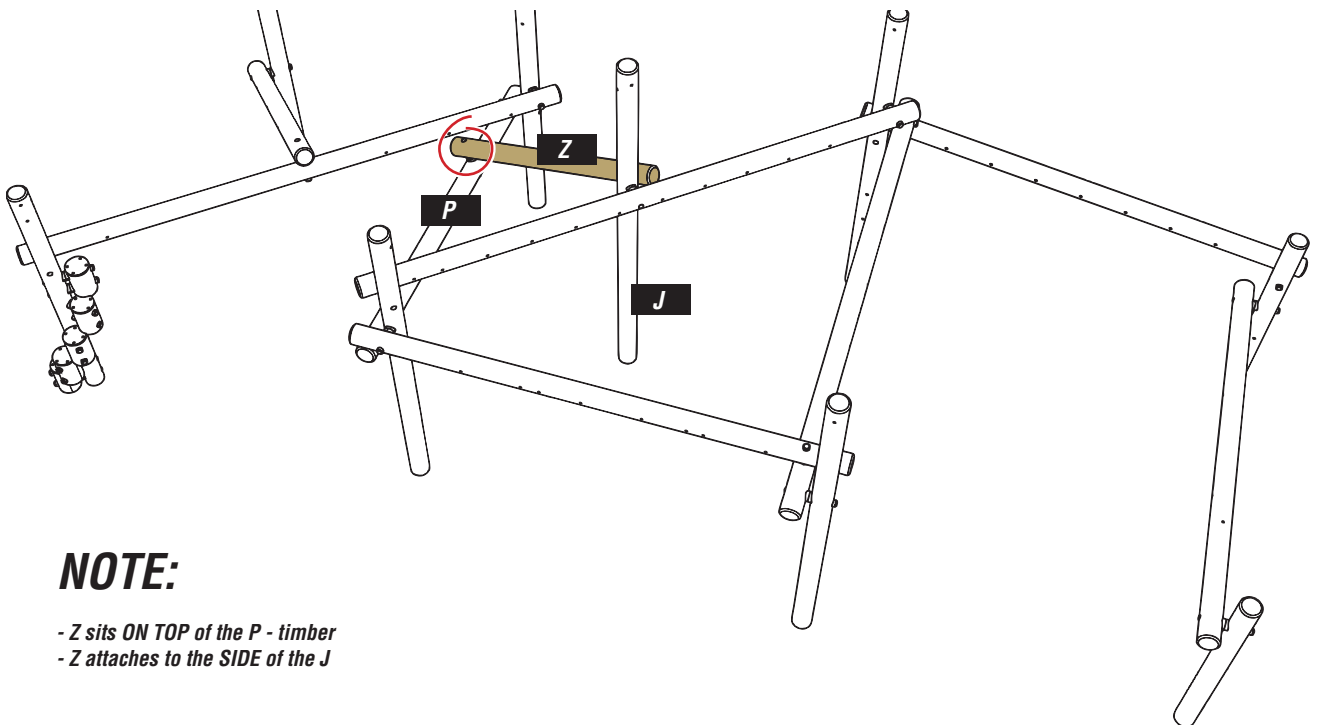

NOTE:


- Z sits ON TOP of the P - timber
- Z attaches to the SIDE of the J

INSTALLATION INSTRUCTIONS

29

MARK / CLAMP / DRILL / ATTACH

Follow the STEPS A / B / C / D below

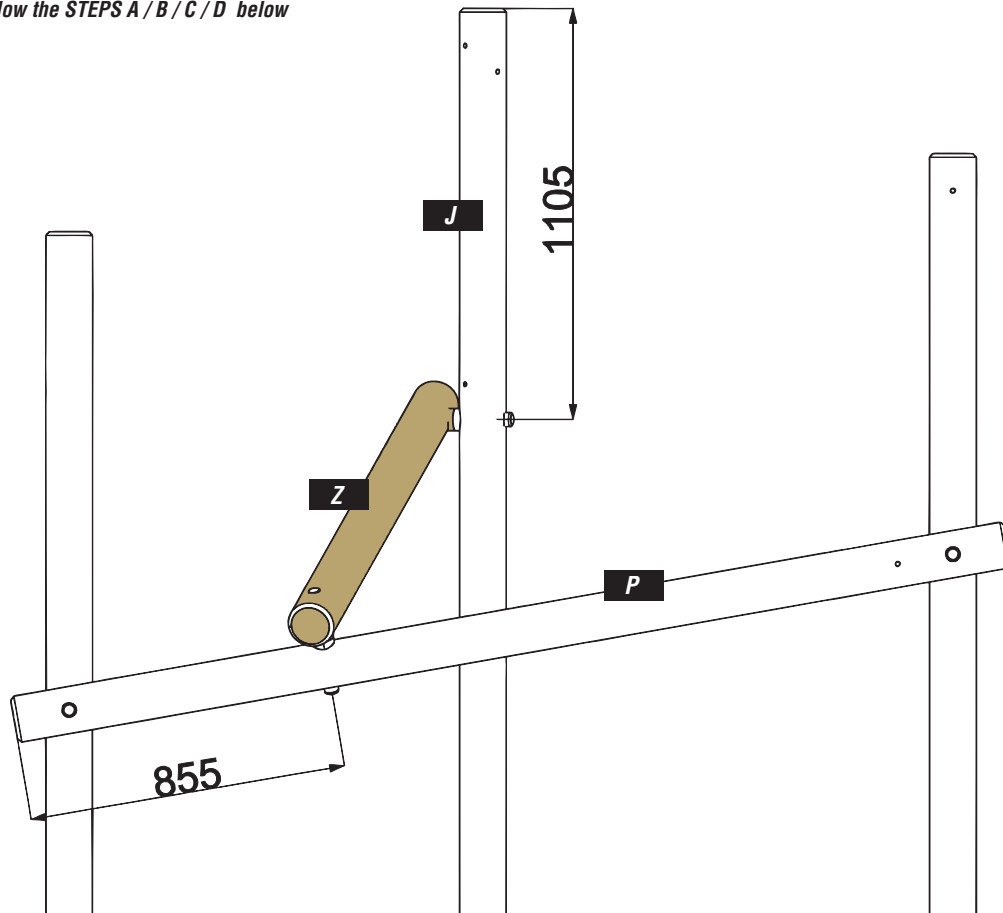

MARK / CLAMP / DRILL / ATTACH

A - Use the 'TIMBER MARKER GUIDE' to mark P and J Timbers

Mark a line around the P - timber - 855mm from the end as shown above / Mark a line around the J - timber - 1105mm from the TOP OF THE TIMBER

B - CLAMP the top of the Z - timber to the J - Timber

REMEMBER to use DISTANCE PIECES to ensure the hole is positioned correctly

C - DRILL the P - timber using the hole in Z as a guide

REMEMBER to use DISTANCE PIECES to ensure the hole is positioned correctly


D - ATTACH using 2 x M12 x 290* CUP SQUARE BOLTS / 2 x 'NYLOGS' M12 / 2 x Covered end cap R60 / 2 x 120 Distance pieces

INSTALLATION INSTRUCTIONS

30


DRILL through Z & J timbers

The J timber hole position is MARKED - 1105mm from the TOP

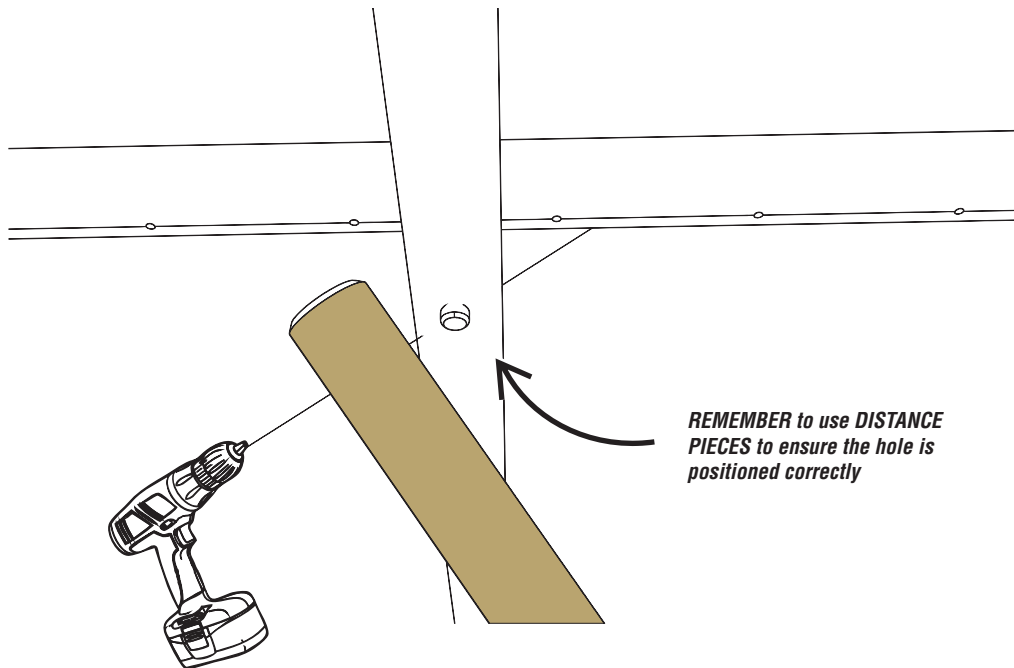

31

ATTACH Z to the J timber

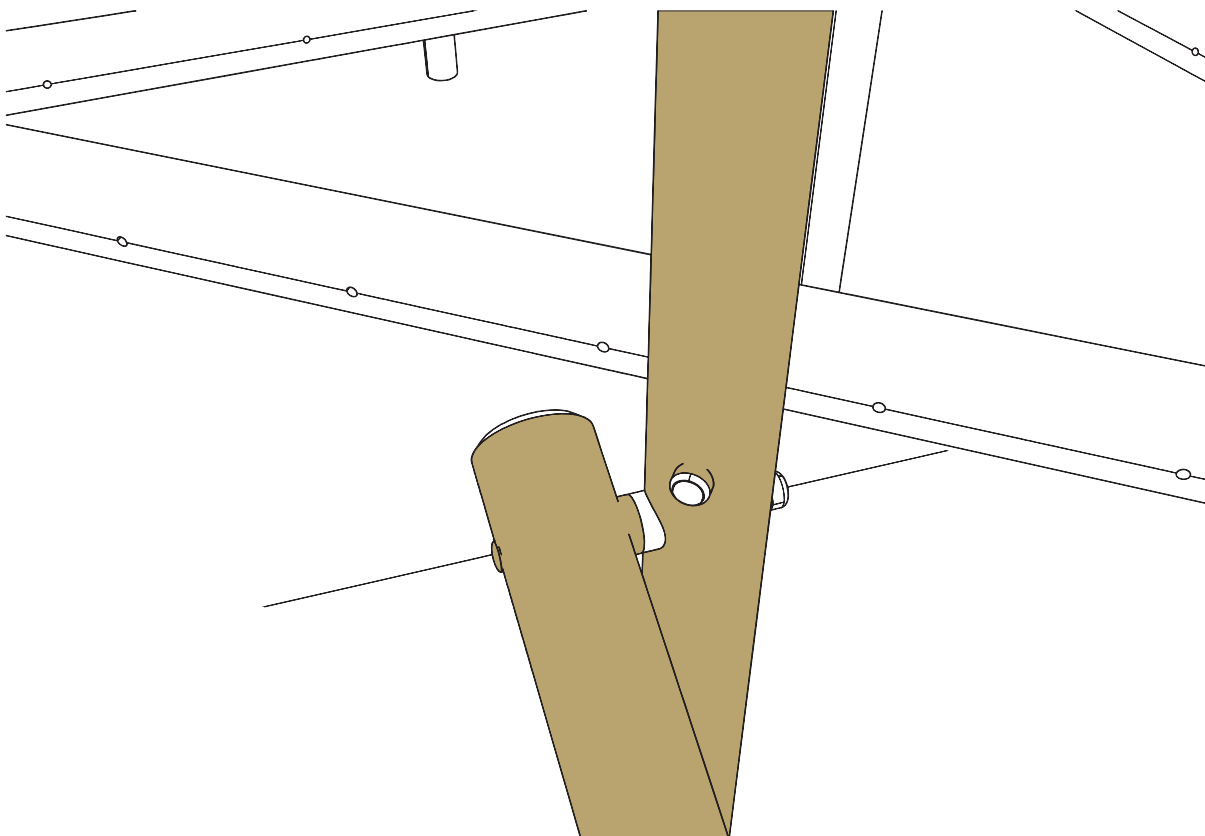


INSTALLATION INSTRUCTIONS

32

Position the Y timber against the P and Z timbers

Y is pre-drilled ONE END ONLY - this end sits against the P timber (circled RED below)

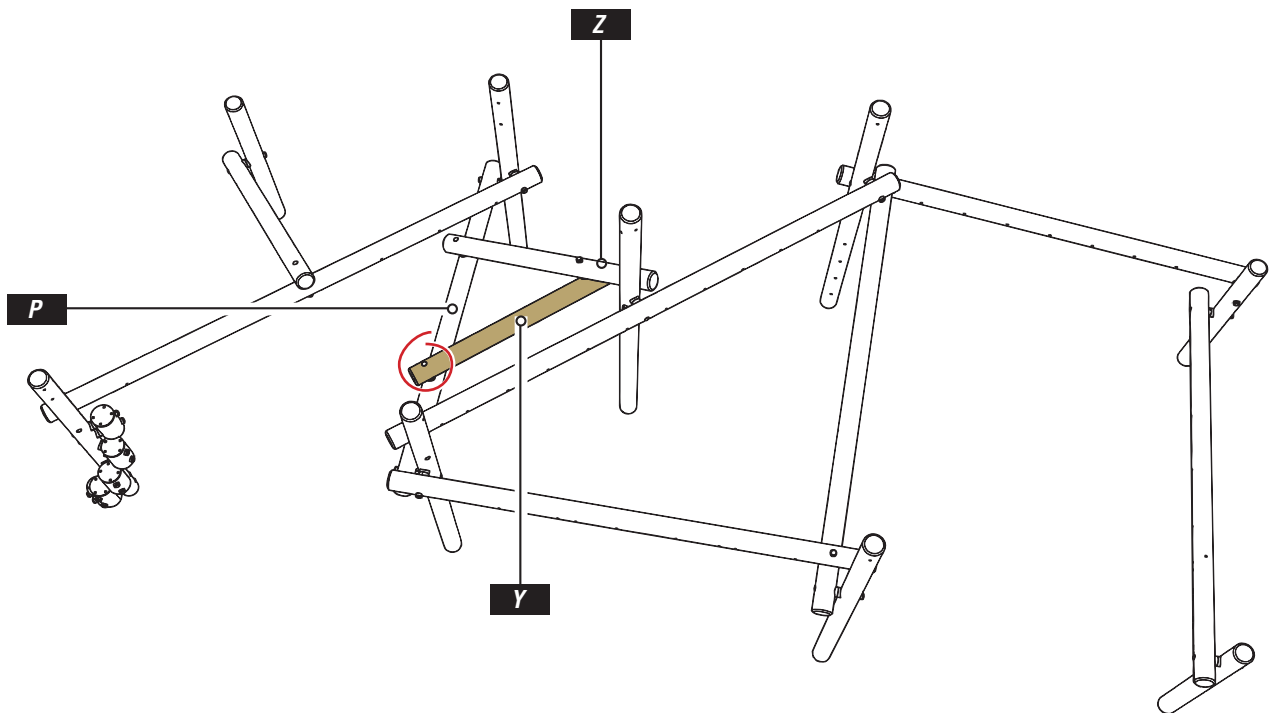

MARK / CLAMP / DRILL / ATTACH

A - Use the 'TIMBER MARKER GUIDE' to mark the Z and P Timbers

Mark a line around the P timber - 1882mm from the end as shown next page / Mark a line around the Z timber - 536mm from the TOP OF THE TIMBER

B - CLAMP the top of the Y timber to the Z timber

REMEMBER to use DISTANCE PIECES to ensure the hole is positioned correctly

C - DRILL the P timber using the hole in Y as a guide

REMEMBER to use DISTANCE PIECES to ensure the hole is positioned correctly

D - ATTACH using 2 x M12 x 290* CUP SQUARE BOLTS / 2 x 'NYLOCS' M12 / 2 x Covered end cap R60 / 4 x 120 Distance pieces


(ATTACH CIRCLED RED END FIRST)

INSTALLATION INSTRUCTIONS

33

MARK / CLAMP / DRILL / ATTACH


Follow the STEPS A / B / C / D previous page

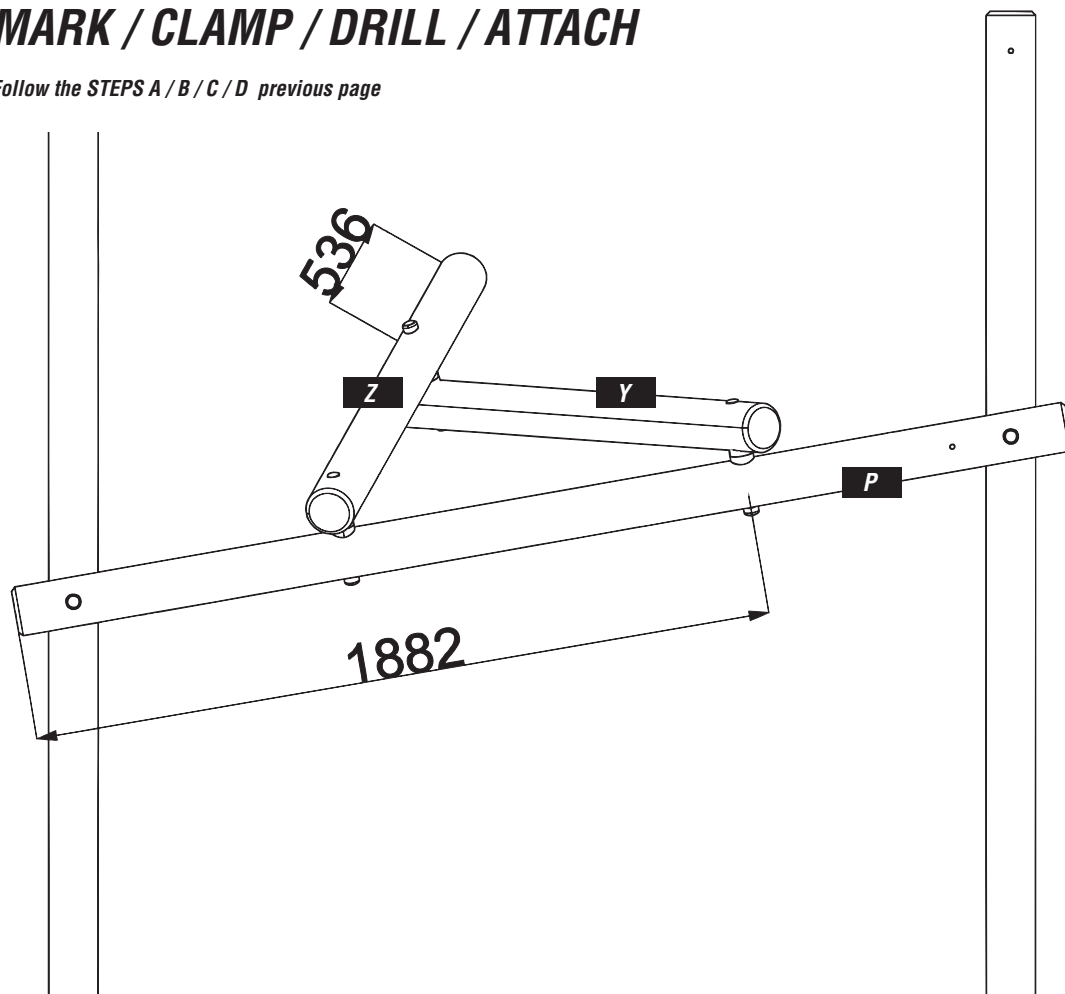

34

DRILL through the Z & Y timbers

Once drilled attach

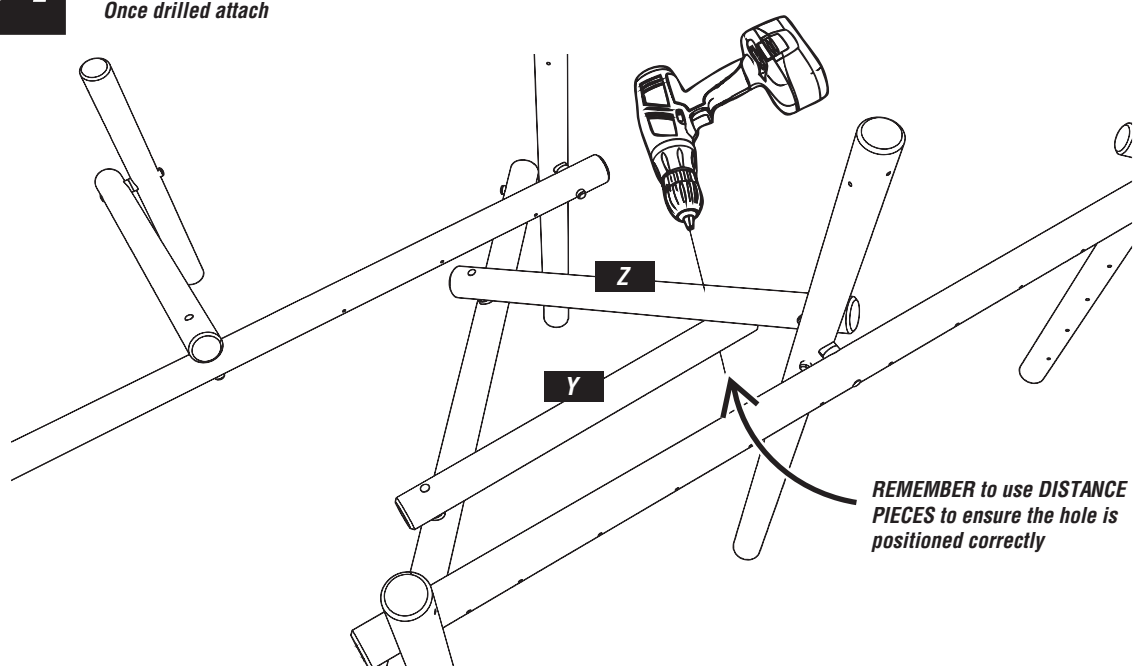


INSTALLATION INSTRUCTIONS

35


MARK / CLAMP / DRILL / ATTACH **BB**

BB is pre-drilled ONE END ONLY - this end sits against the S - timber (circled RED below)

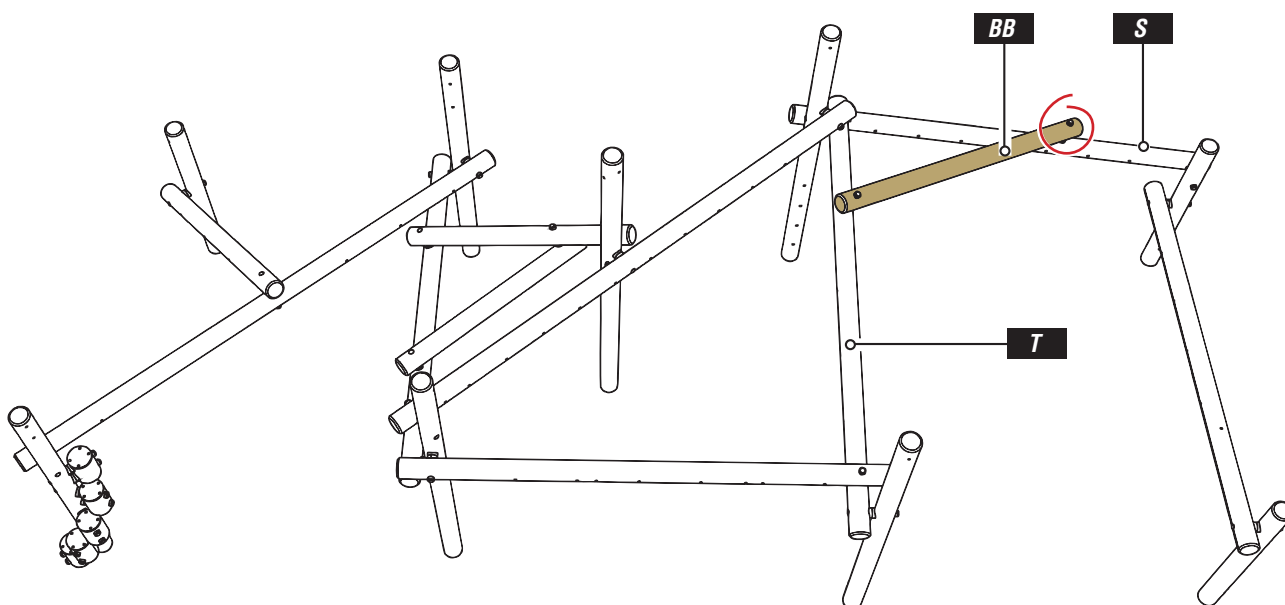

NOTE:

- BB is positioned ON TOP of the T and S
- Once drilled use 2 x M12 x 290* CUP SQUARE BOLTS / 2 x 'NYLOCS' M12 / 2 x Covered end cap R60 / 4 x 120 Distance pieces
- BB is drilled @ 100mm from the end (non drilled) see detail below


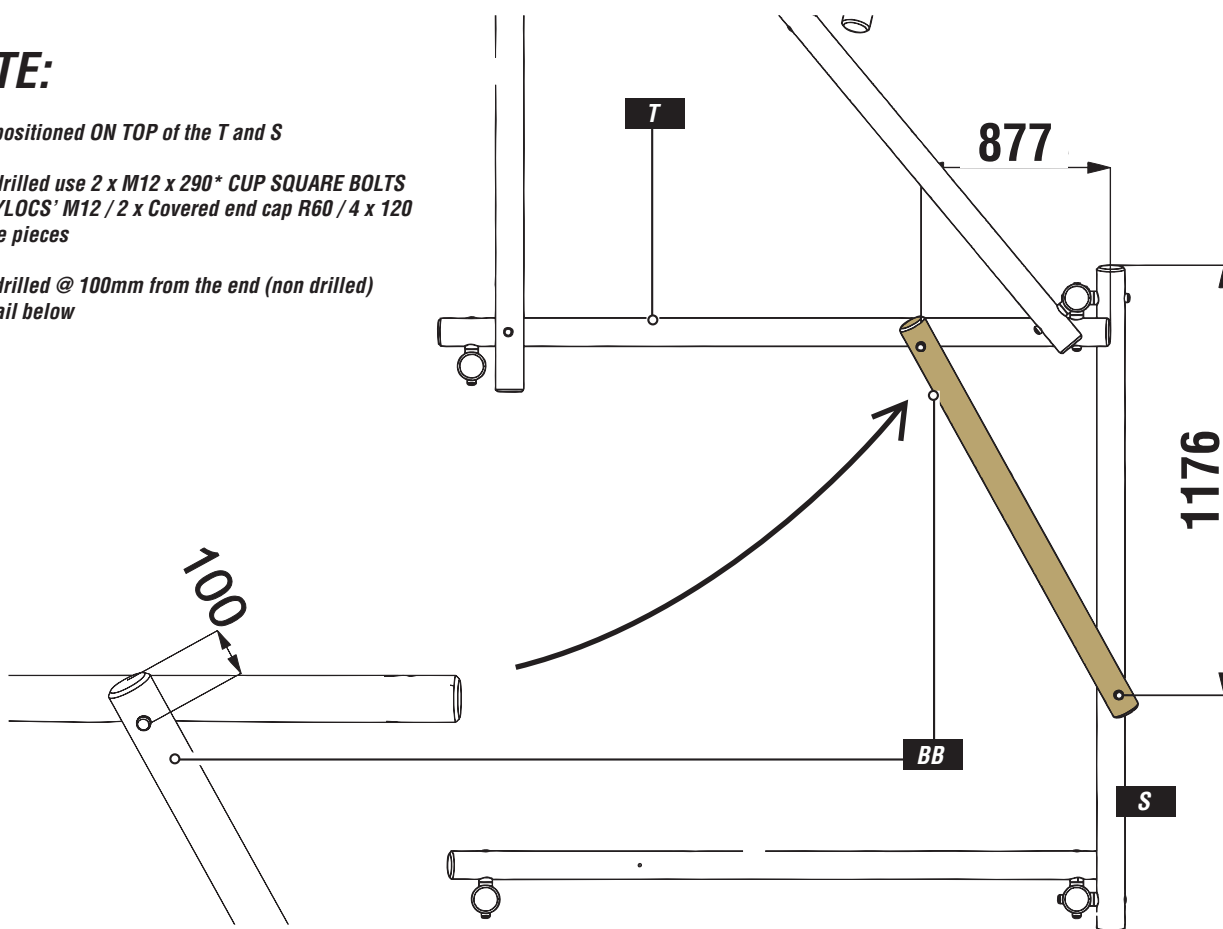


INSTALLATION INSTRUCTIONS

36

MARK / CLAMP / DRILL / ATTACH **CC**

The CC is pre-drilled FOR THE NET + BLOCKS - These must be positioned 'LEVEL / HORIZONTAL'

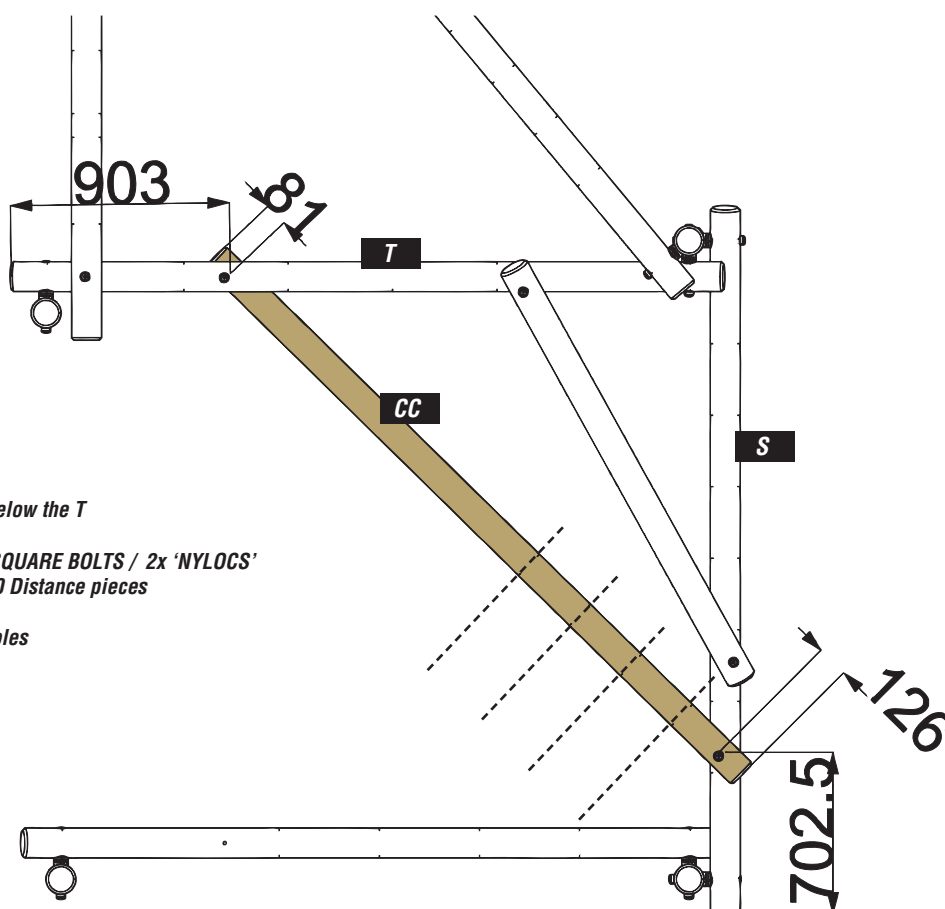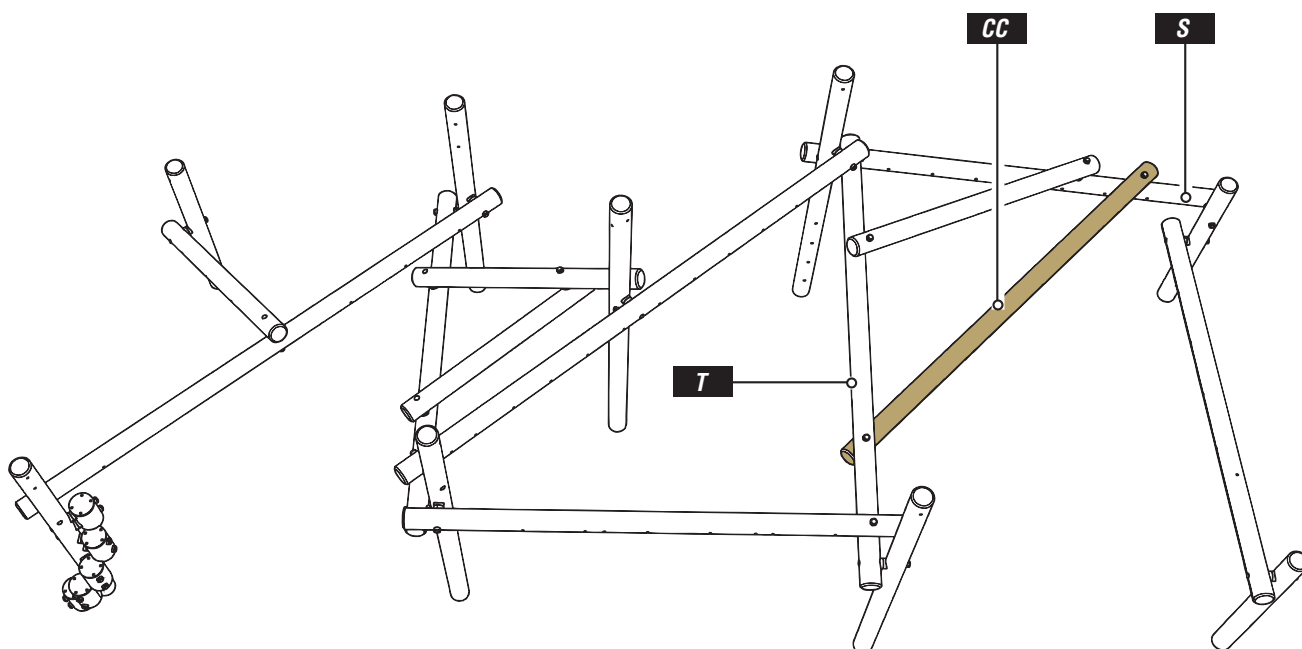

NOTE:


- CCs positioned ON TOP of the S and below the T
- Once drilled use 2 x M12 x 290* CUP SQUARE BOLTS / 2x 'NYLOCS'
M12 / 2 x Covered end cap R60 / 4 x 120 Distance pieces
- DOTTED LINE shows direction of the holes

INSTALLATION INSTRUCTIONS

37

ENSURE the positioning of the CC is correct

The DOTTED LINES / HOLES MUST BE HORIZONTAL

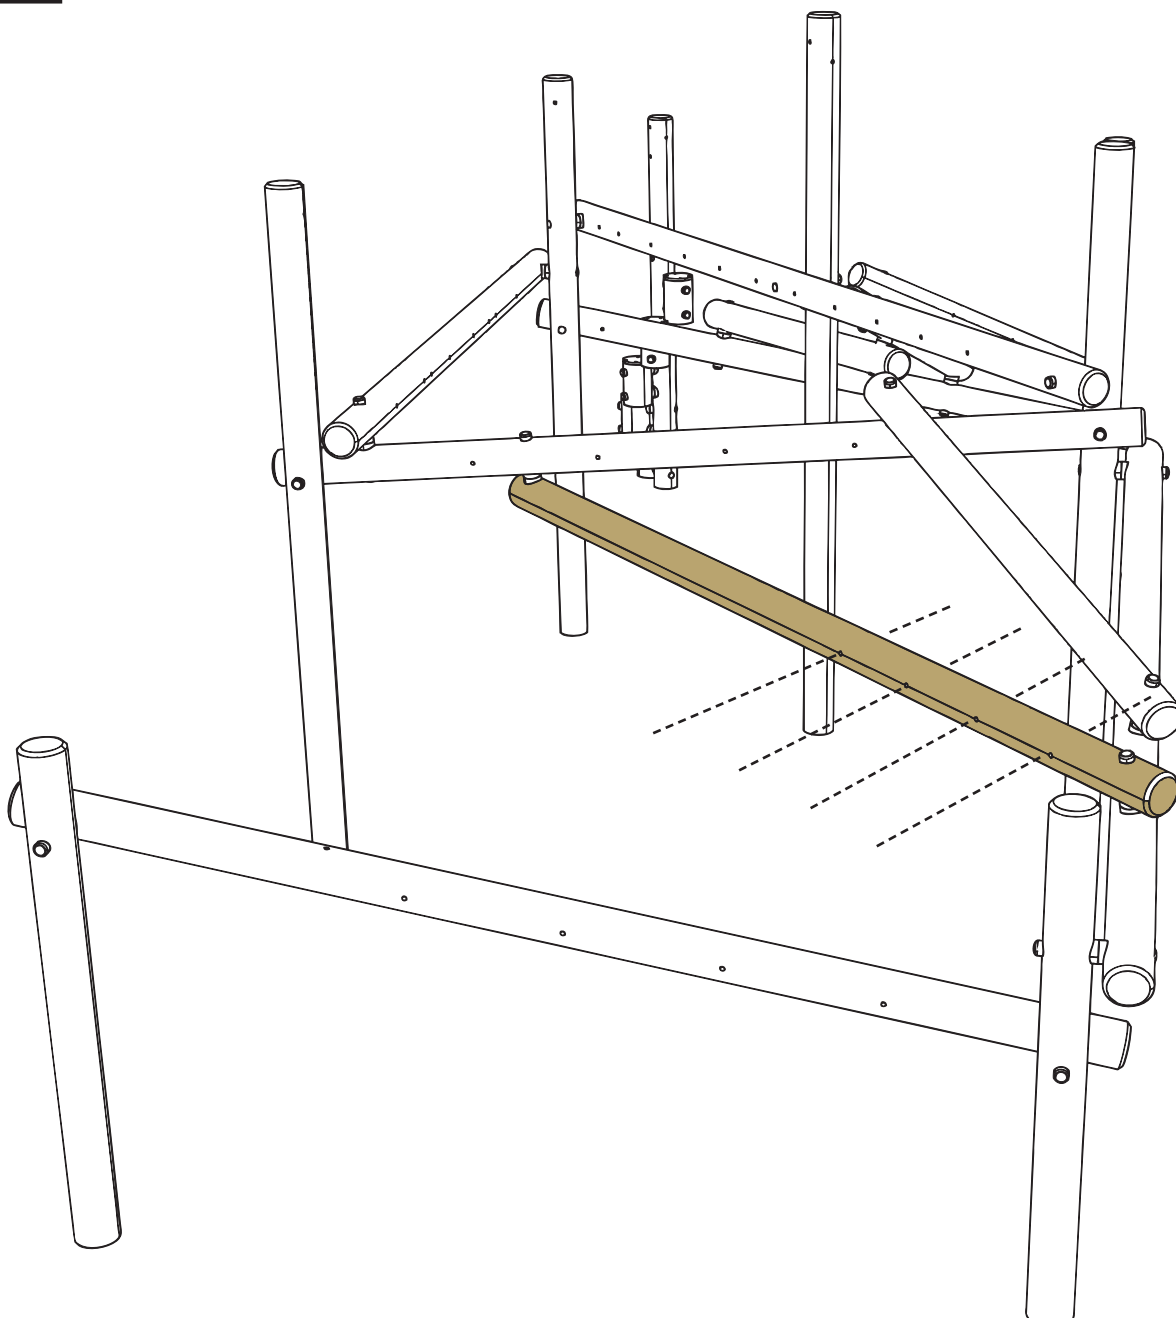


INSTALLATION INSTRUCTIONS

38


MARK / CLAMP / DRILL / ATTACH **DD**

The DD is pre-drilled ONE END ONLY - this end sits against the L timber (circled RED below)

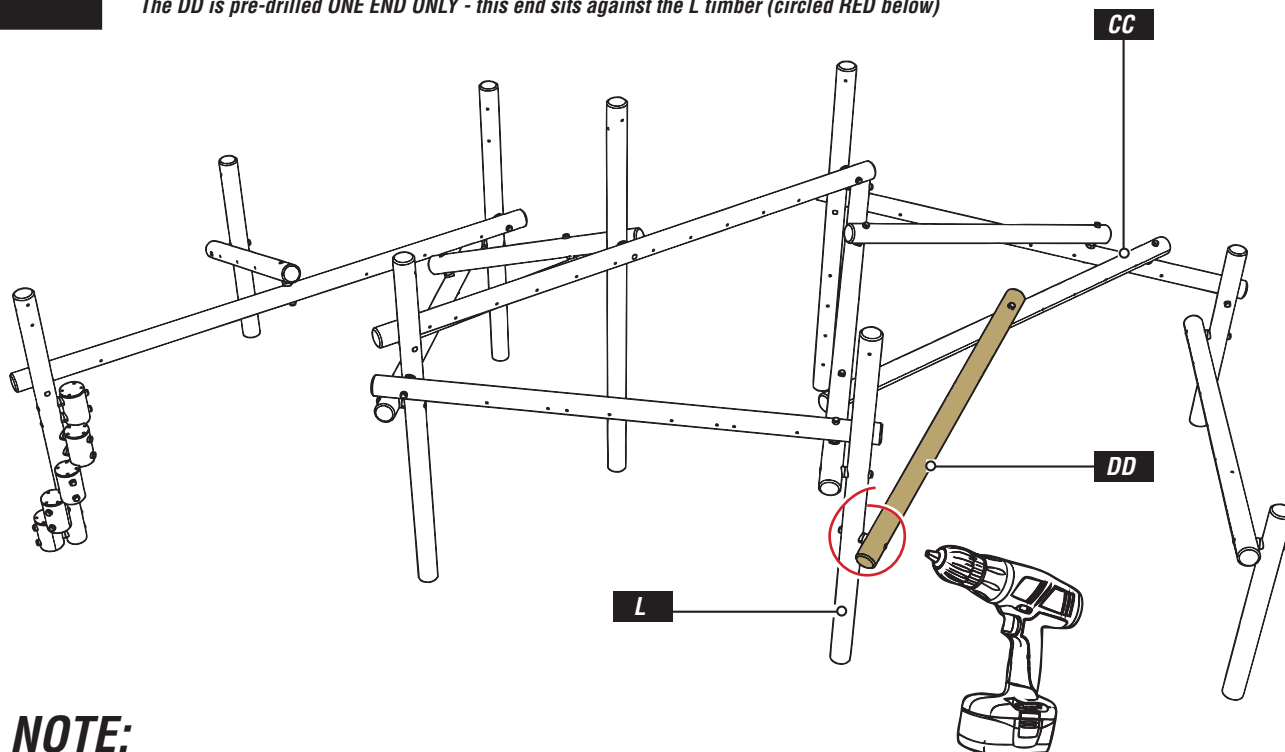

NOTE:

- Use the PRE-DRILLED hole in the DD timber as a guide to drill through the L timber
- Once drilled use 2 x M12 x 290* CUP SQUARE BOLTS / 2 x 'NYLOCS' M12 / 2 x Covered end cap R60 / 4 x 120 Distance pieces
- DRILL THE L - timber FIRST then DRILL through the DD / CC TIMBERS


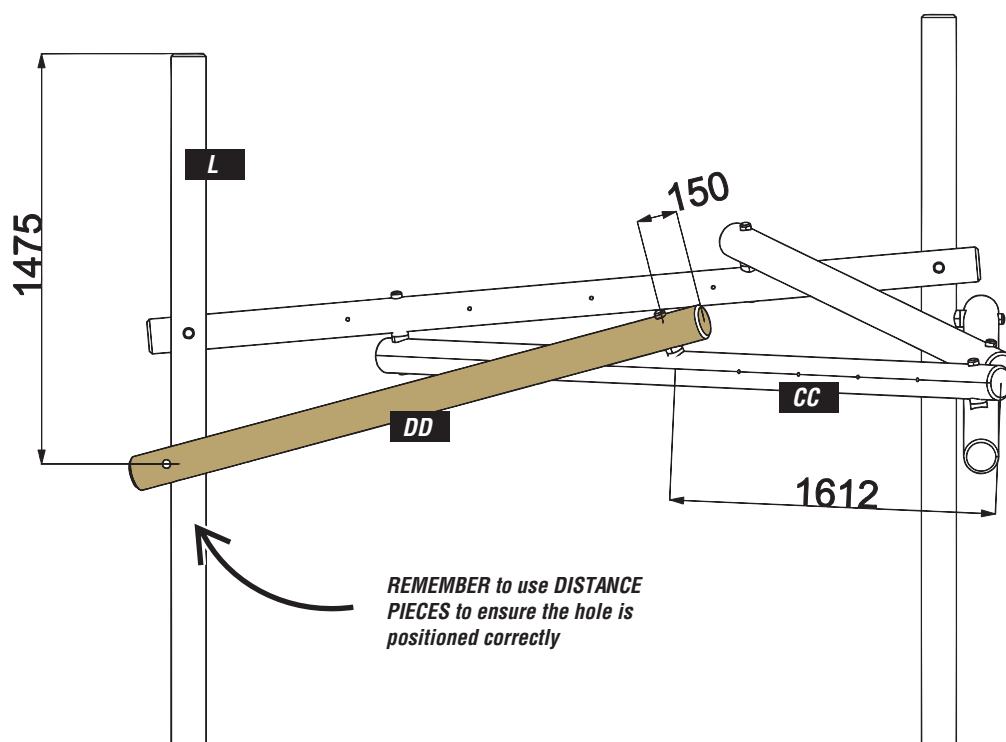


INSTALLATION INSTRUCTIONS

39

MARK / CLAMP / DRILL / ATTACH **EE**

The EE is pre-drilled ONE END ONLY - this end is bolted into the U (circled RED below)

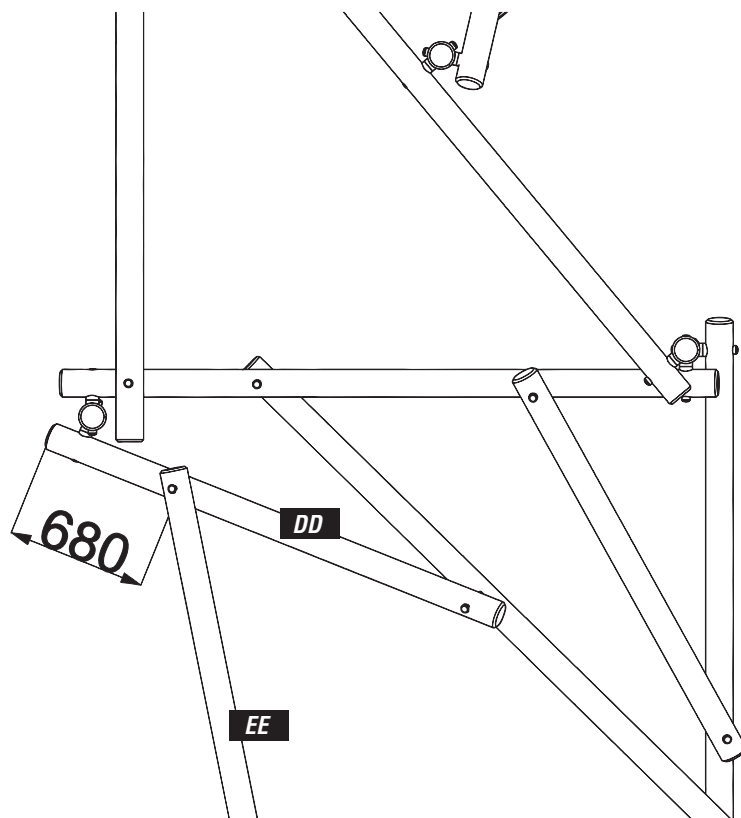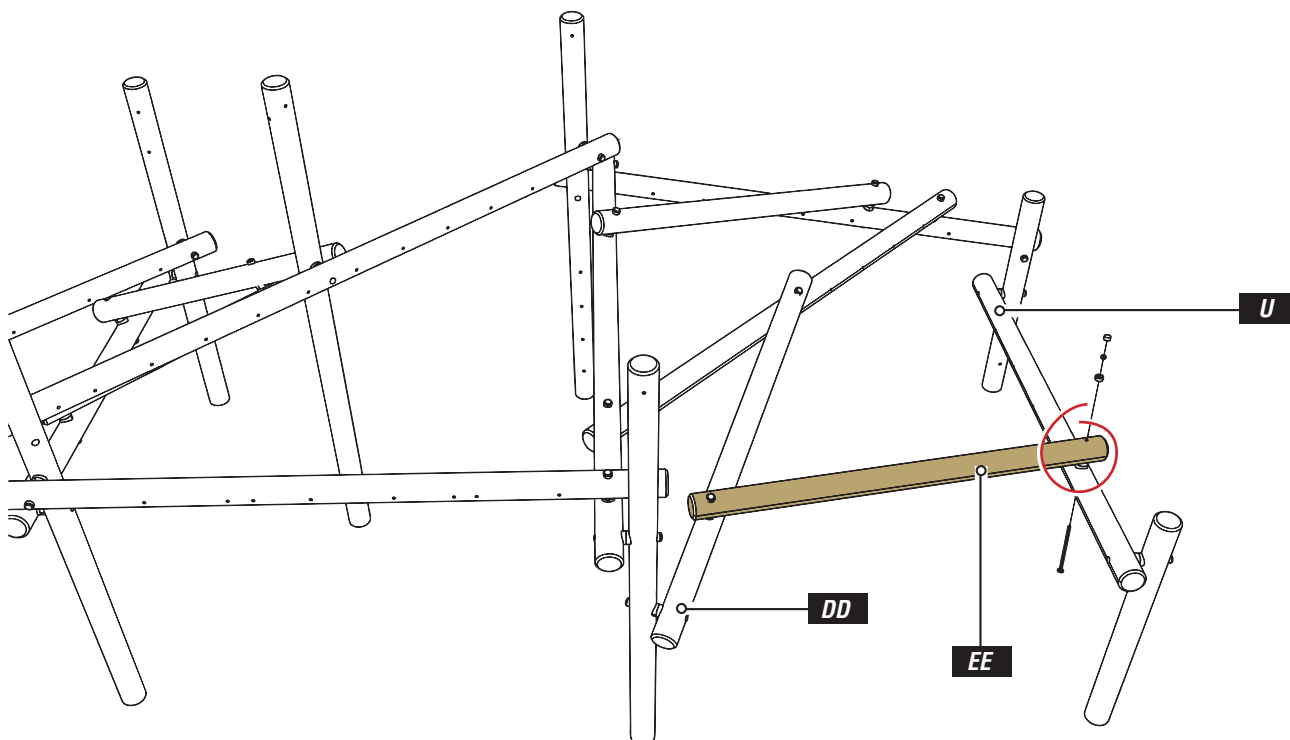

NOTE:

- Use 1 x M12 x 290* CUP SQUARE BOLTS / 1 x 'NYLOCS' M12 / 1 x Covered end cap R60 / 2 x 120 Distance pieces - TO ATTACH EE to the U - timber

- DRILL the EE & EE timbers


- Once drilled use 1 x M12 x 290* CUP SQUARE BOLTS / 1 x 'NYLOCS' M12 / 1 x Covered end cap R60 / 2 x 120 Distance pieces

INSTALLATION INSTRUCTIONS

40


MARK / CLAMP / DRILL / ATTACH **AA**

The AA is pre-drilled BOTH ENDS - use the PRE-DRILLED holes as a guide to drill the BB & CC timbers

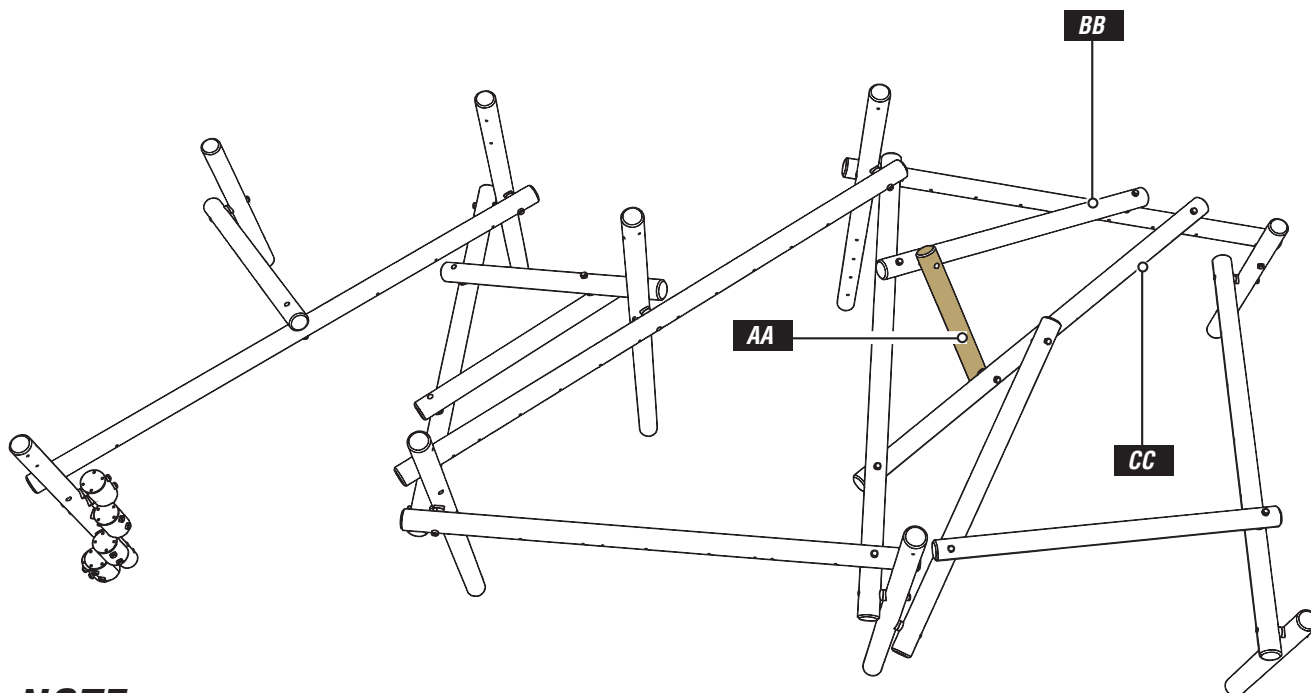

NOTE:

- DRILL the BB / CC timbers
- Once drilled use 2 x M12 x 290* CUP SQUARE BOLTS / 2 x 'NYLOCS' M12 / 2 x Covered end cap R60 / 4 x 120 Distance pieces

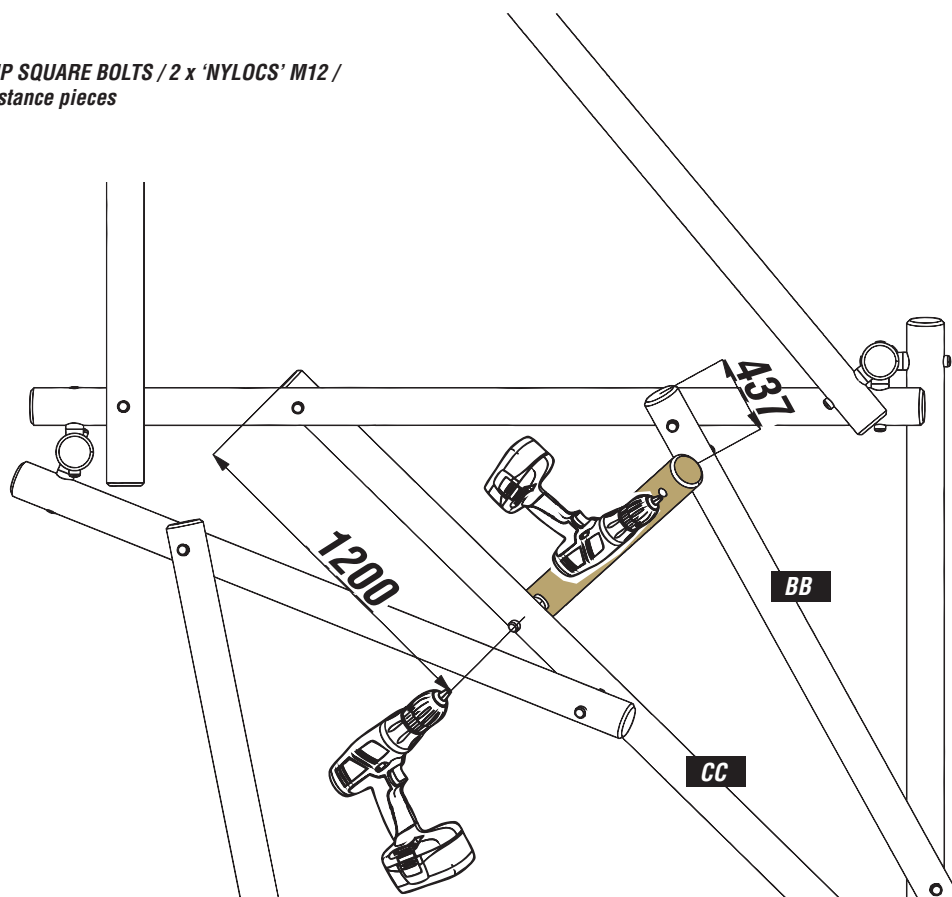

INSTALLATION INSTRUCTIONS



41

Attach the CARGO NET assembly

Using 20 x M10 'NYLOCS' and 20 x Covered end cap R60

NOTE:

- THE NET WILL ONLY FIT 'ONE'WAY
- The 10 EYEBOLTS (circled red) fit into the pre-drilled holes in the Q timber
- The 6 EYEBOLTS (circled black) fit into the pre-drilled holes in the R timber

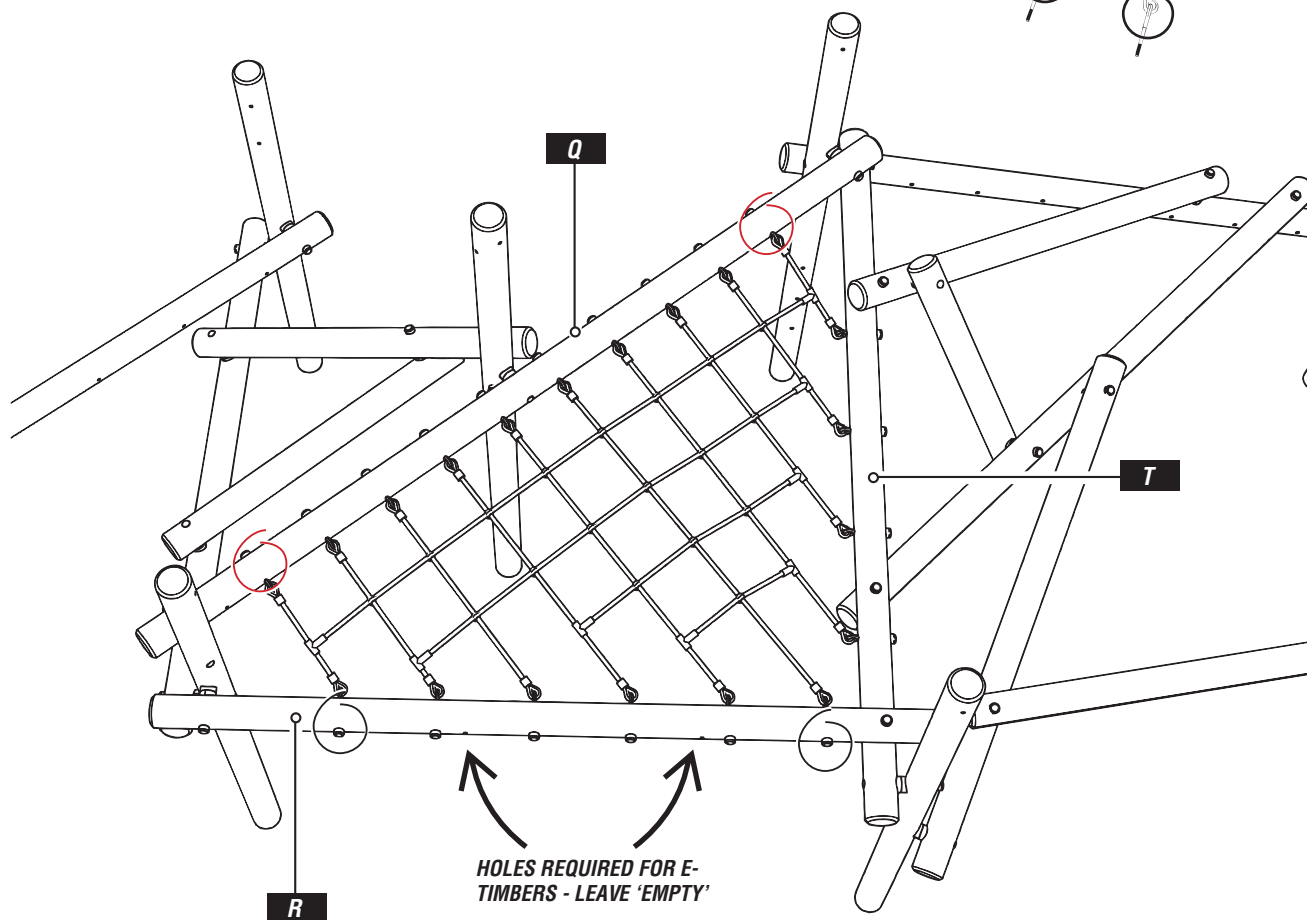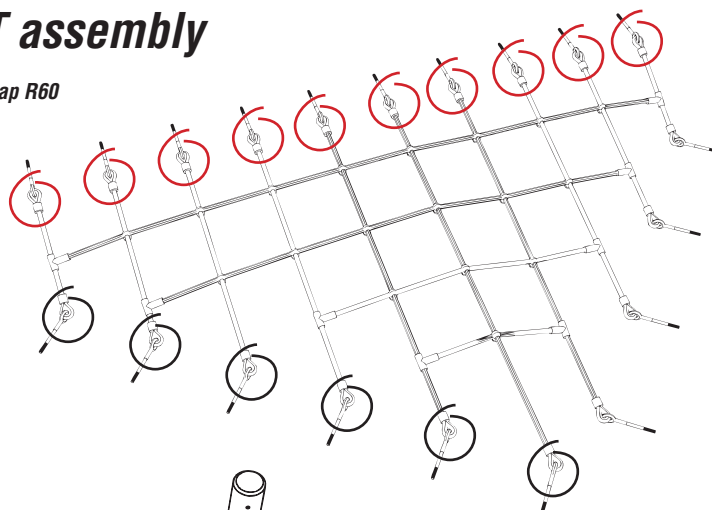


ENSURE THE NET IS ATTACHED AS SHOWN ABOVE:

- DO NOT TRY TO 'STRETCH' into different holes
- DO NOT DRILL ANY ADDITIONAL HOLES

The Net is a triangle - 10 EYEBOLTS side = INTO Q
6 EYEBOLTS side = INTO R
4 EYEBOLTS side = INTO T

EYEBOLTS

Eyebolts 'SHOULD' always be positioned so the 'EYE' is vertical - Shown SOLID BLACK

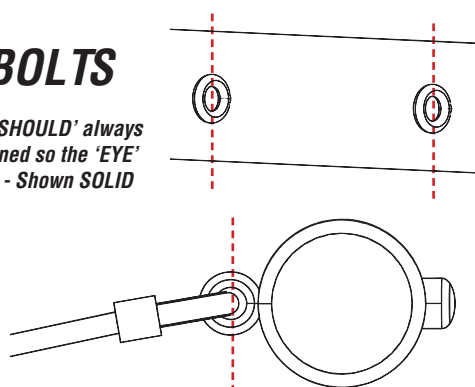

INSTALLATION INSTRUCTIONS

42




Attach the NET CLIMBER assembly

Using 6 x M10 'NYLOCS' and 6 x Covered end cap R60

NOTE:


- THE NET WILL ONLY FIT 'ONE'WAY

- LONG(ER) GAP (circled red) in the bottom rope will highlight which way round the NET should be attached

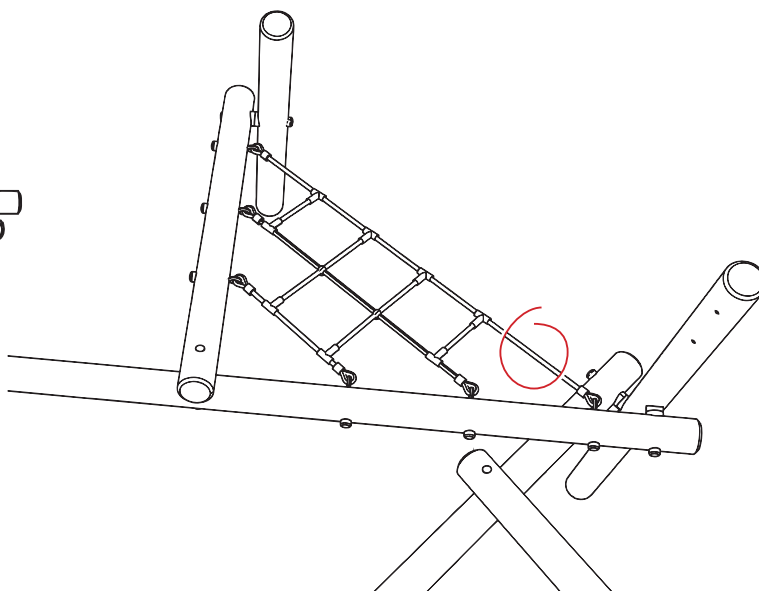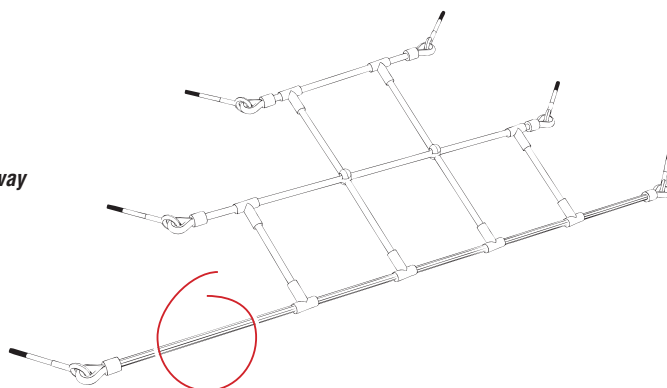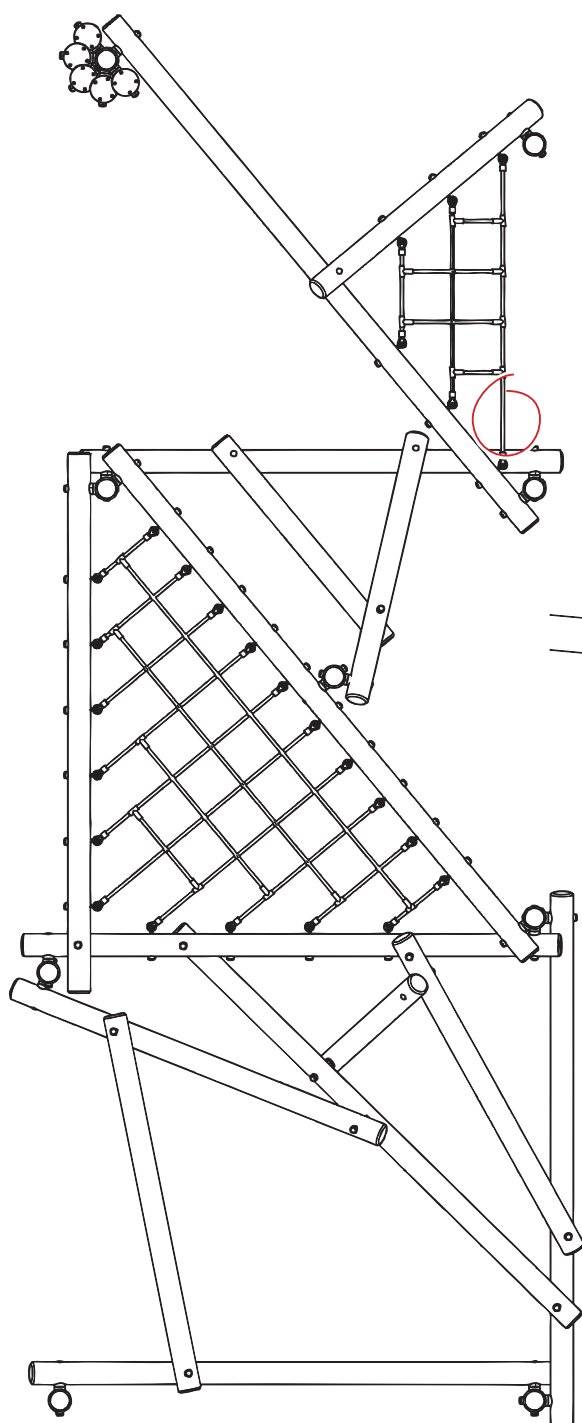

EYEBOLTS

Eyebolts 'SHOULD' always be positioned so the 'EYE' is vertical - Shown SOLID BLACK

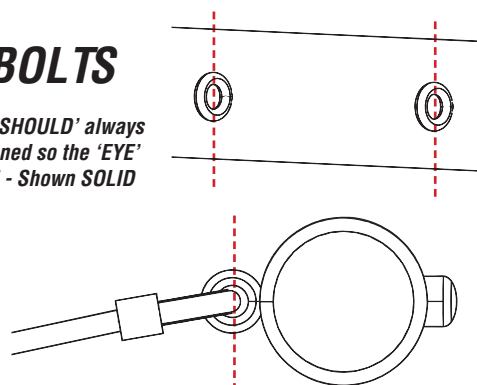



INSTALLATION INSTRUCTIONS

43

Attach the NET + BLOCKS (supplied loose)

Using 8 x M10 'NYLOCS' and 8 x Covered end cap R60

**Attach the ROPES FIRST -
R1 / R2 / R3 / R4**


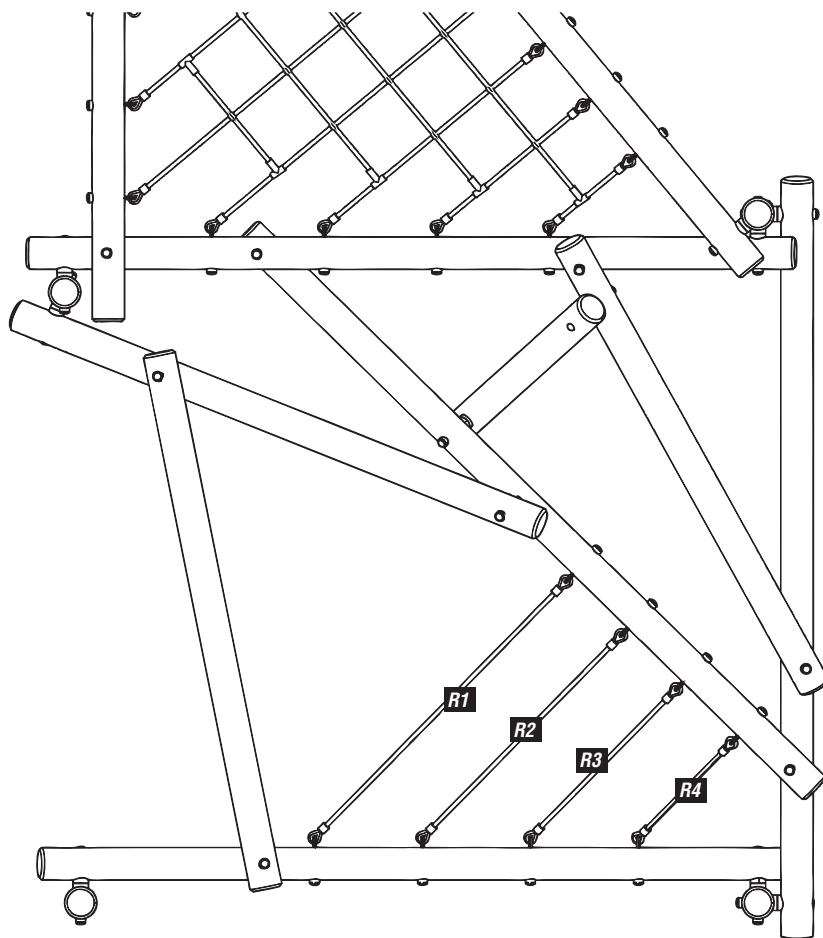
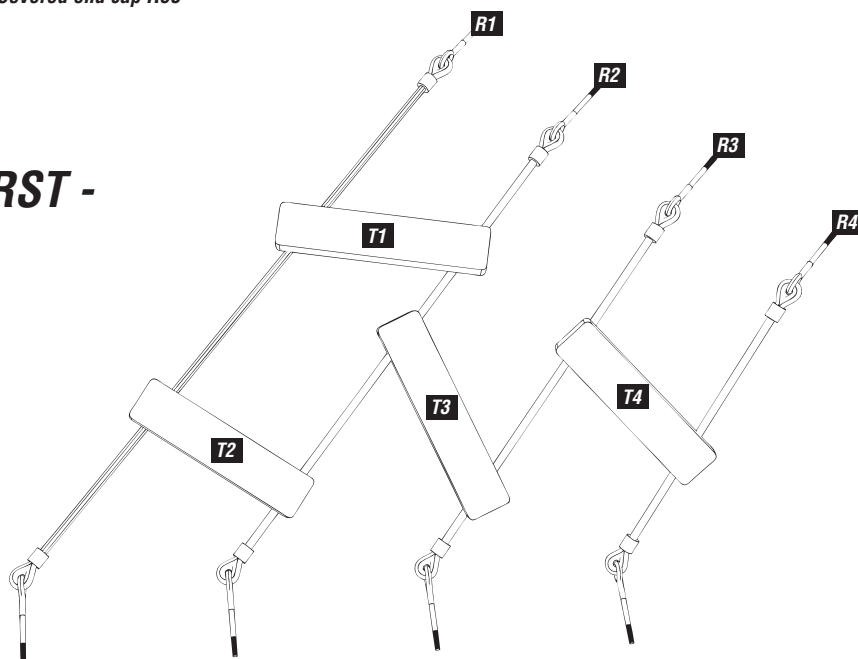


INSTALLATION INSTRUCTIONS

44

Mark the **BLOCK LOCATIONS** and **ATTACH THE BLOCKS**

Using **16 x POLYFIX HALVES** (supplied with screws)

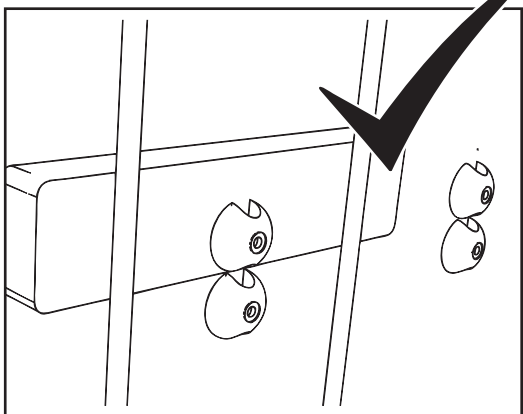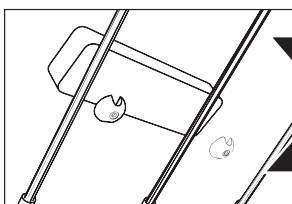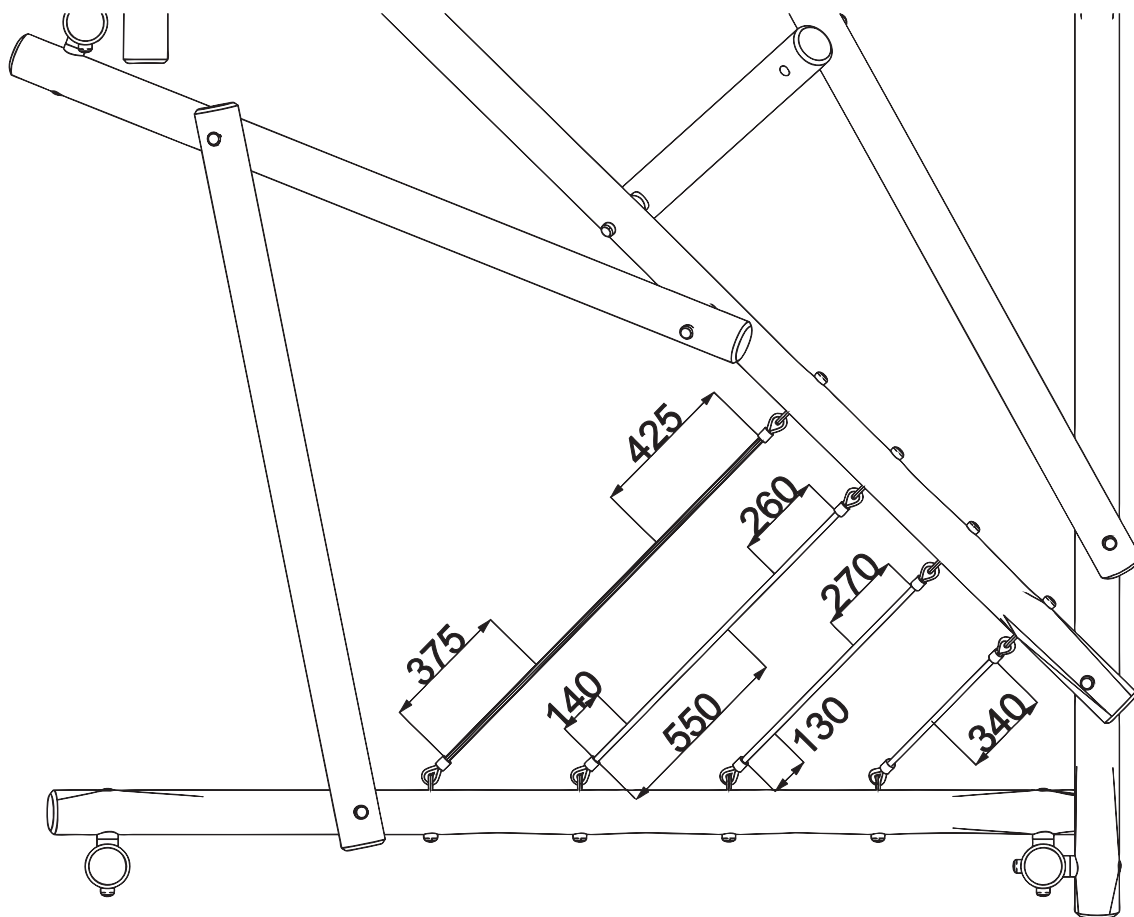


**SCREW FROM
'UNDERNEATH'**



EYEBOLTS

Eyebolts 'SHOULD' always be positioned so the 'EYE' is vertical - Shown **SOLID BLACK**

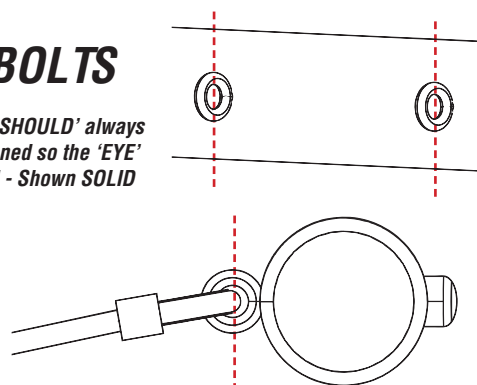

INSTALLATION INSTRUCTIONS




45

Attach NET WALL

Using 12 x M10 'NYLOCS' and 12 x Covered end cap R60

NOTE:

- EYEBOLTS ALONG 'TOP' - VERTICAL - FIG. 1
- EYEBOLTS ALONG SIDES - HORIZONTAL - FIG. 2

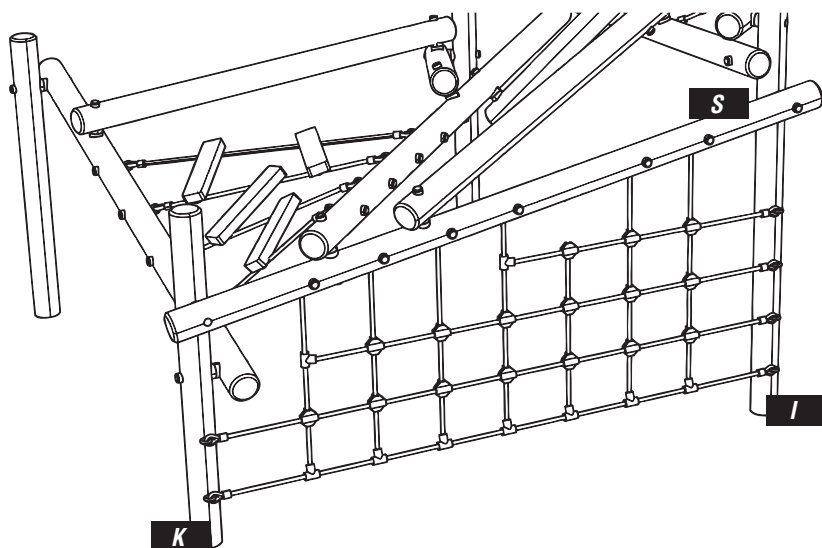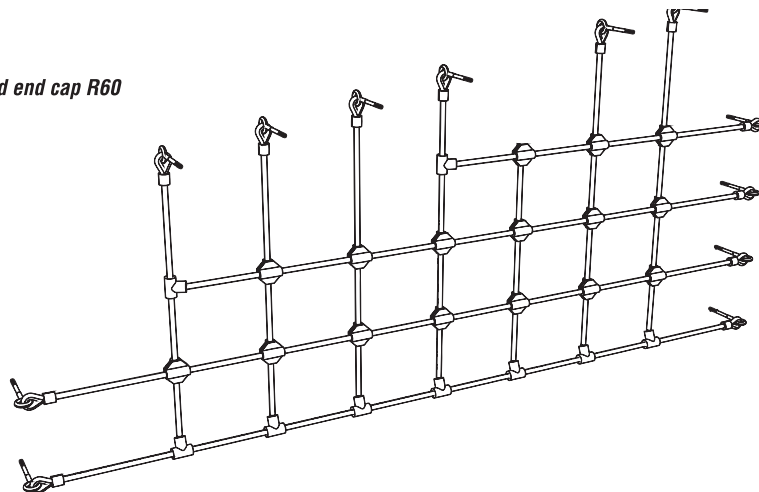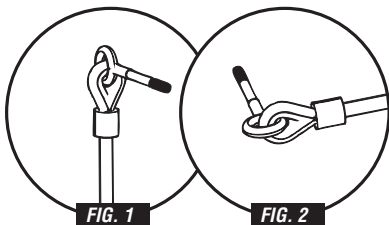


ENSURE:

Eyebolts are ATTACHED through the CORRECT SIDE of the timbers

- ALONG THE SIDES - BOLT THROUGH THE OUTSIDE

- ALONG THE TOP - BOLT THROUGH THE 'INSIDE'

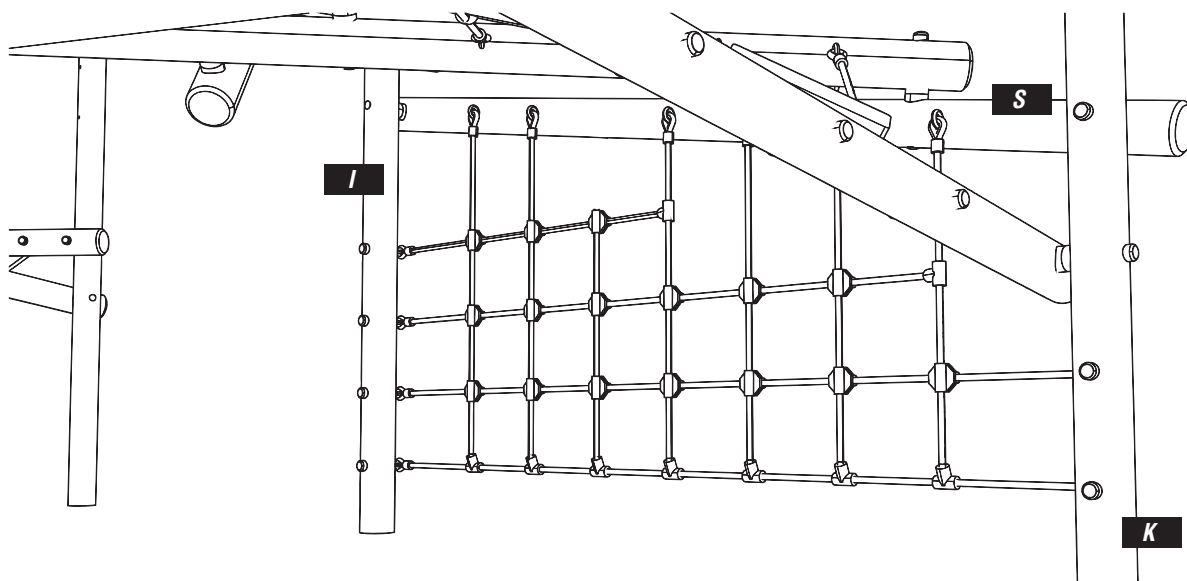


INSTALLATION INSTRUCTIONS

46

MARK / CLAMP / DRILL / ATTACH **M**

Once drilled attach using 2 x M12 x 320* CUP SQUARE BOLTS / 2 x 'NYLOCS' M12 / 2 x Covered end cap R60 / 2 x 120 Distance piece / 2 x 140 Distance piece

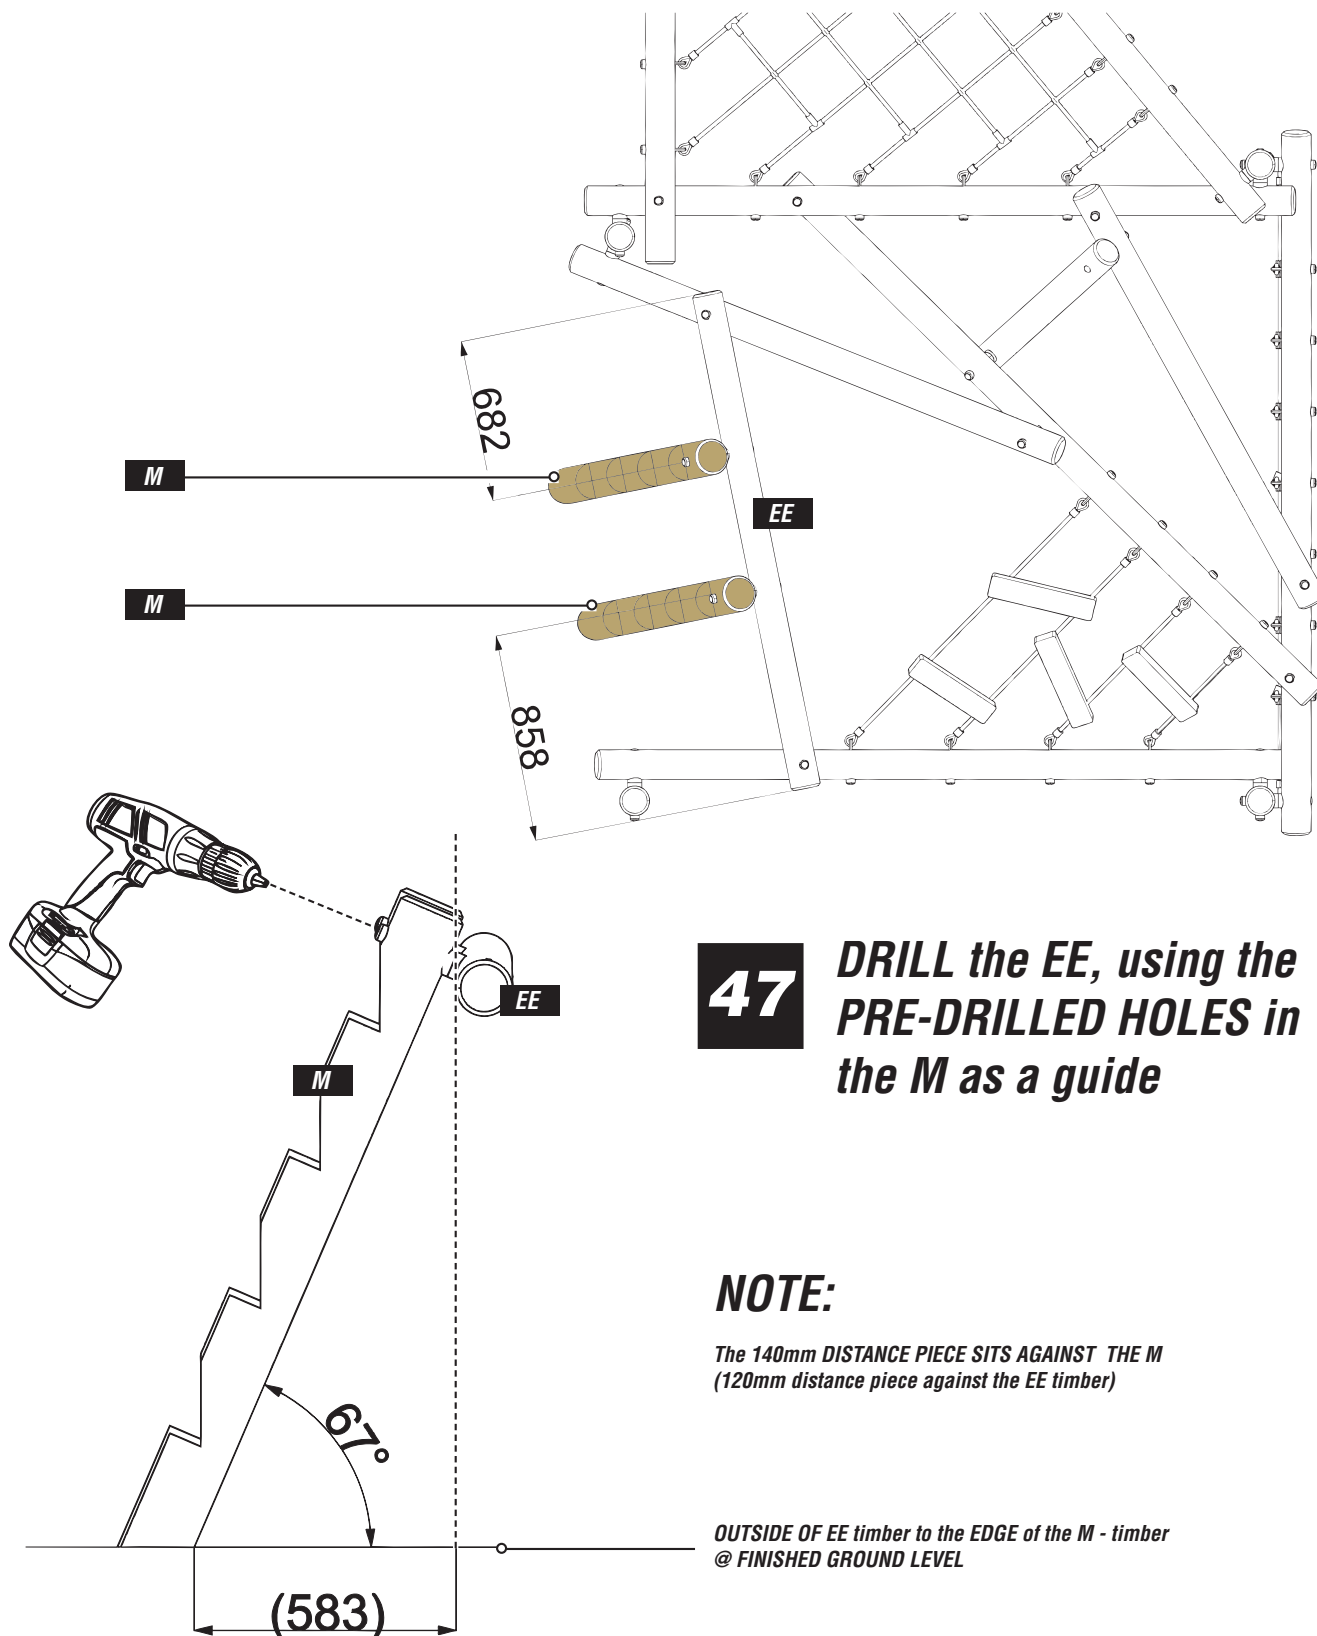

47

DRILL the EE, using the PRE-DRILLED HOLES in the M as a guide

NOTE:

The 140mm DISTANCE PIECE SITS AGAINST THE M
(120mm distance piece against the EE timber)


OUTSIDE OF EE timber to the EDGE of the M - timber
@ FINISHED GROUND LEVEL

INSTALLATION INSTRUCTIONS

47

Position E - timbers


These are positioned AGAINST timber R

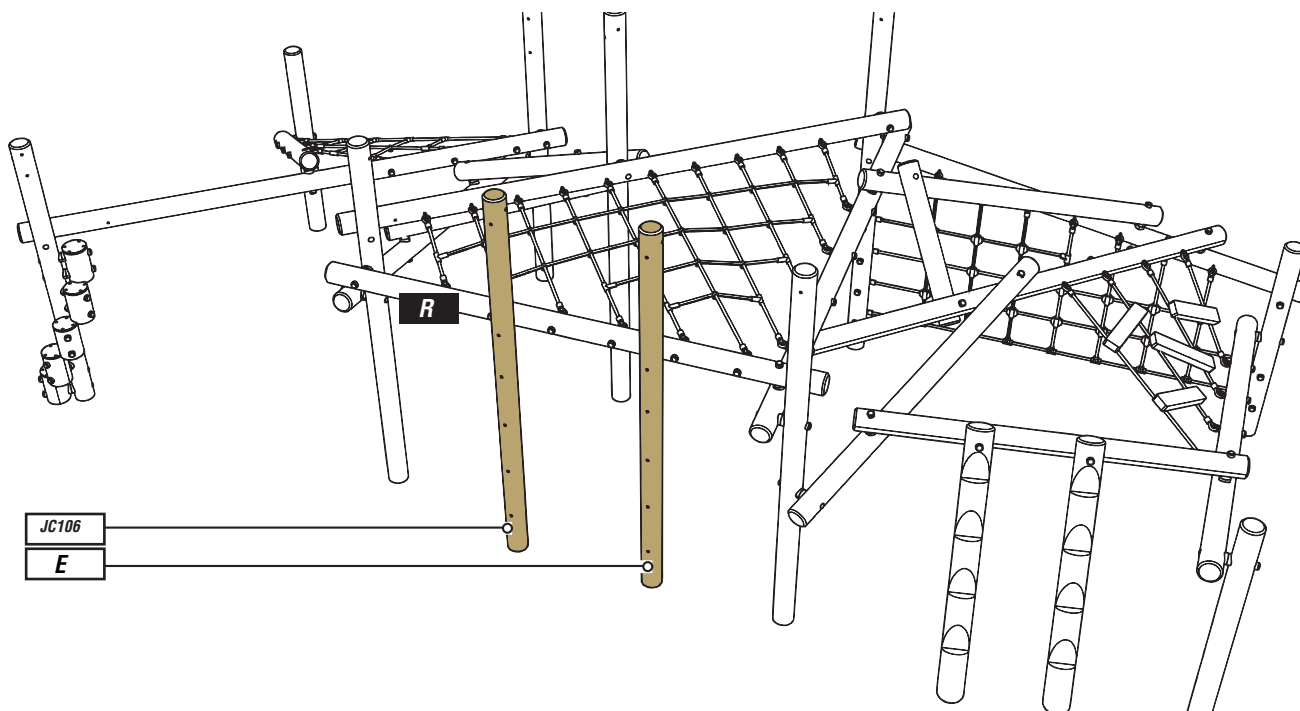

50

Attach FFa (floor support) to E / F / G / H timbers

Using 4 x M12 x 230 CUP SQUARE BOLTS / 4 x 'NYLOCS' M12 / 4 x Covered end cap (STANDARD)

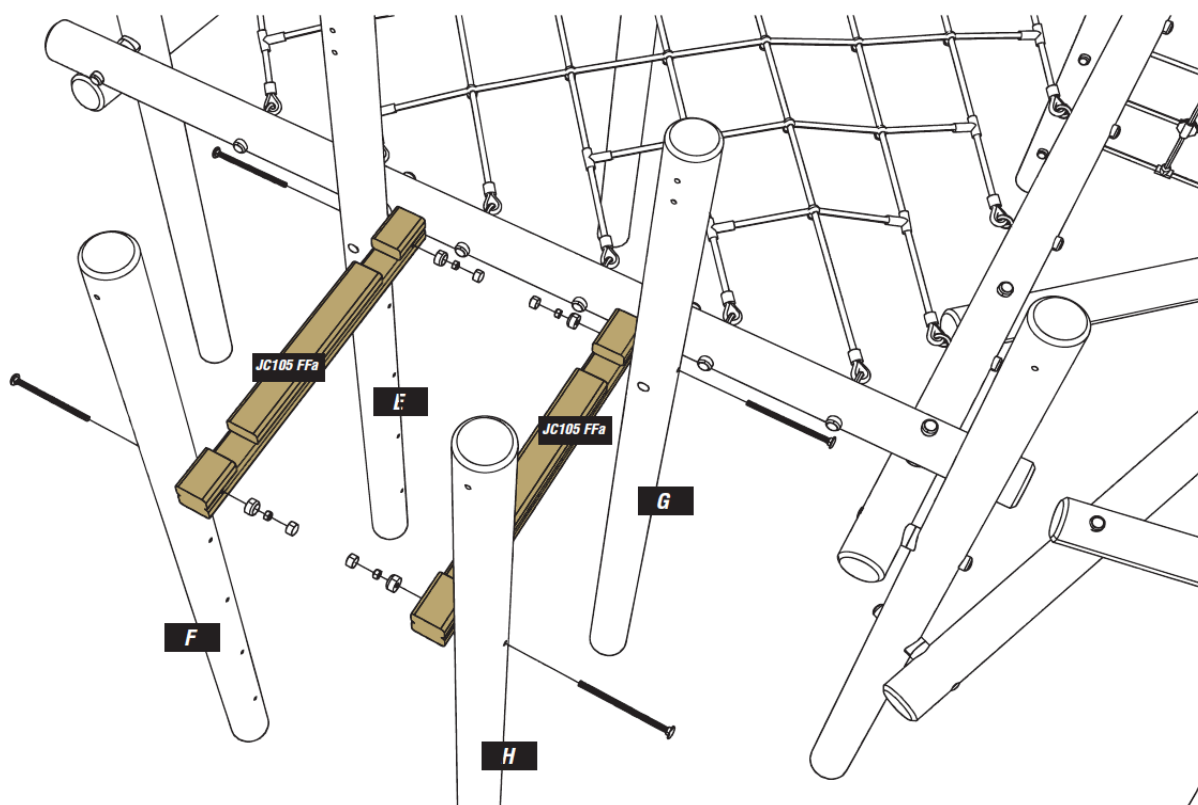


INSTALLATION INSTRUCTIONS

51

Position timbers FFb


The FFa / FFb timbers are HALF LAP JOINTED

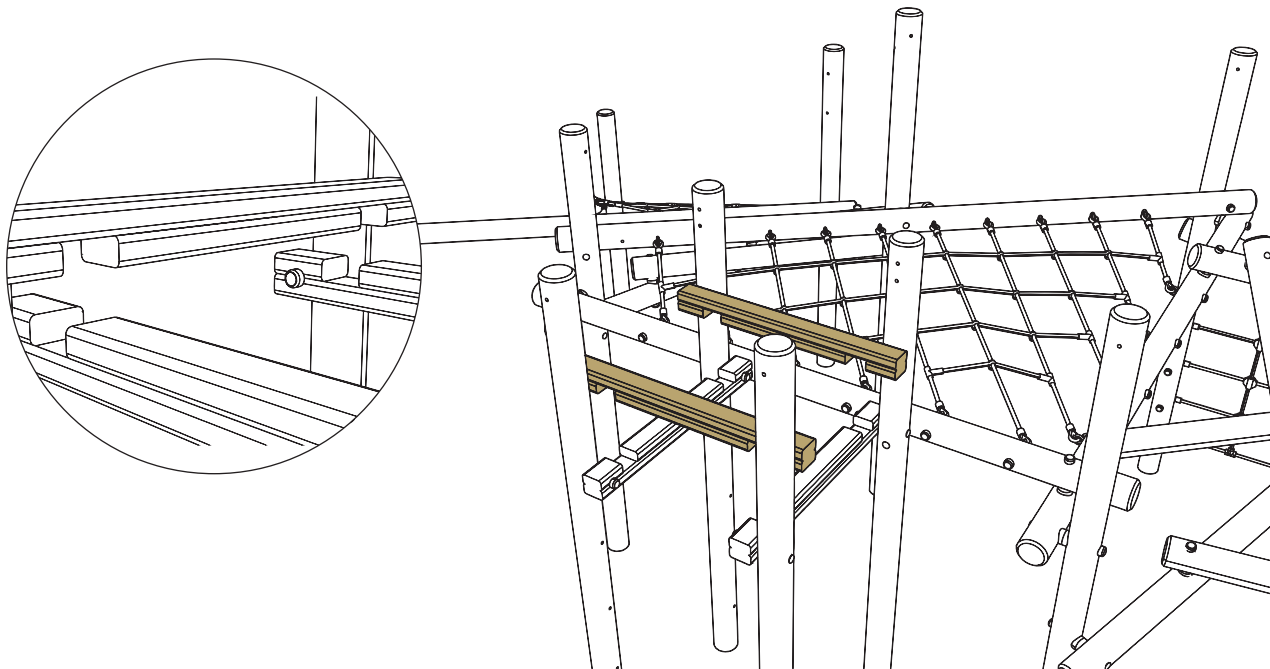

52

Attach X timbers to E / F - timbers

Using 8 x M12 x 290 CUP SQUARE BOLTS / 8 x 'NYLOCS' M12 / 8 x Covered end cap R60 / 16 x 120 Distance pieces*


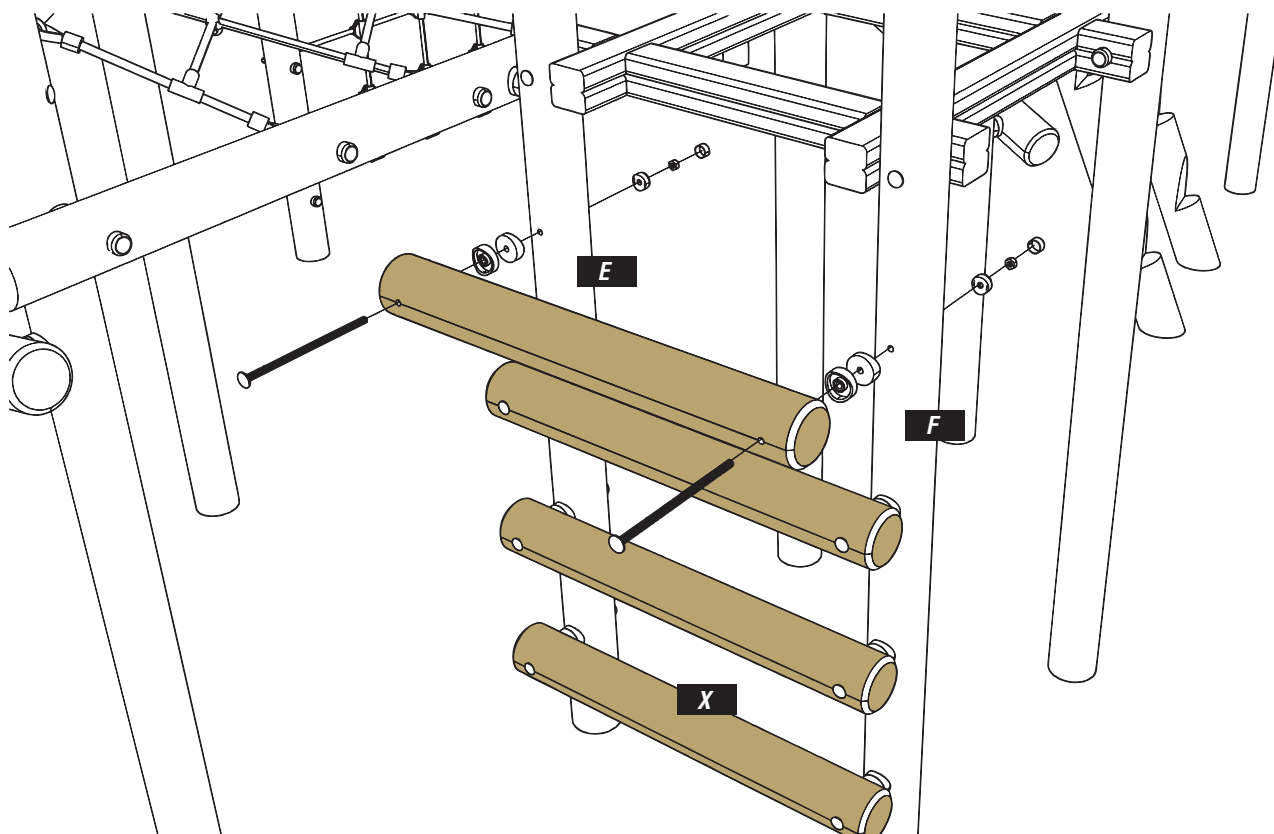


INSTALLATION INSTRUCTIONS

53

Attach the HEXA GRIP FLOOR

Using 8 x FM80 WOOD SCREWS / 3 x 120 Distance pieces / 3 x SQUARE distance pieces

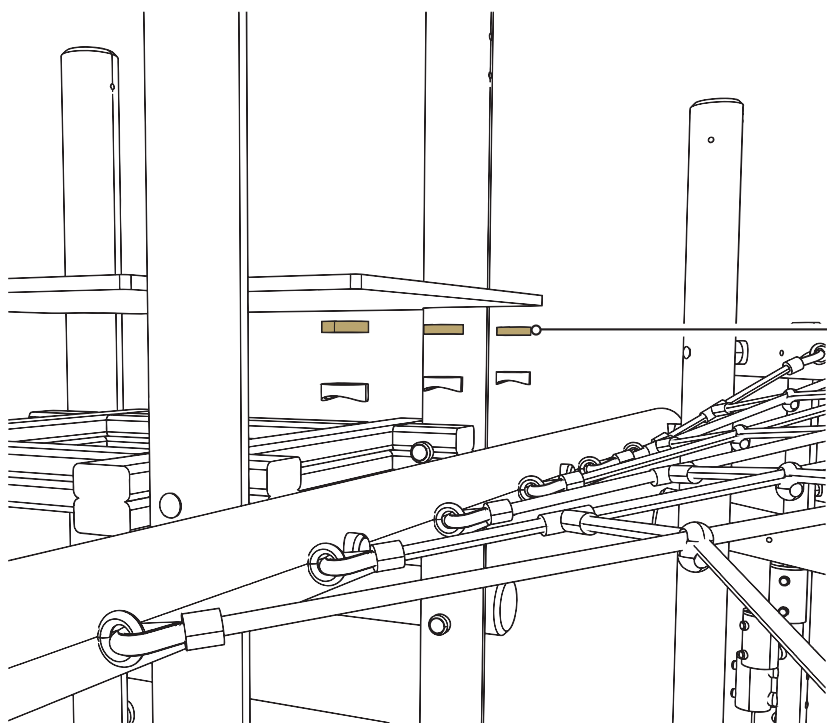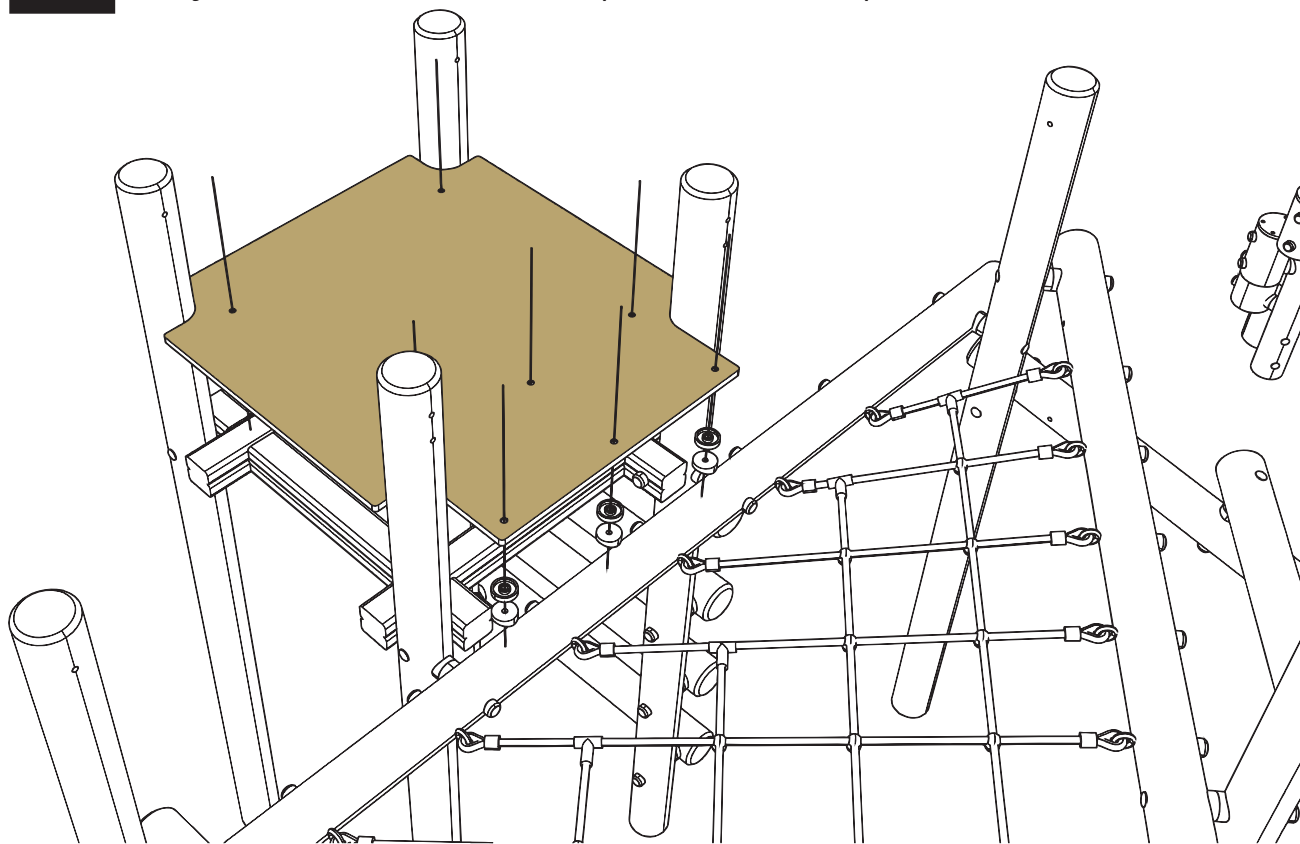

SQUARE DISTANCE PIECE

NOTES:


The square distance piece sits directly under the HEXA GRIP FLOOR
(120 distance piece against the R timber)

INSTALLATION INSTRUCTIONS

54

Ensure the FLOOR is attached correctly

The COUNTERSUNK holes in the HEXA GRIP are positioned so that the WOOD SCREWS will also attach the FFa / FFb timbers together

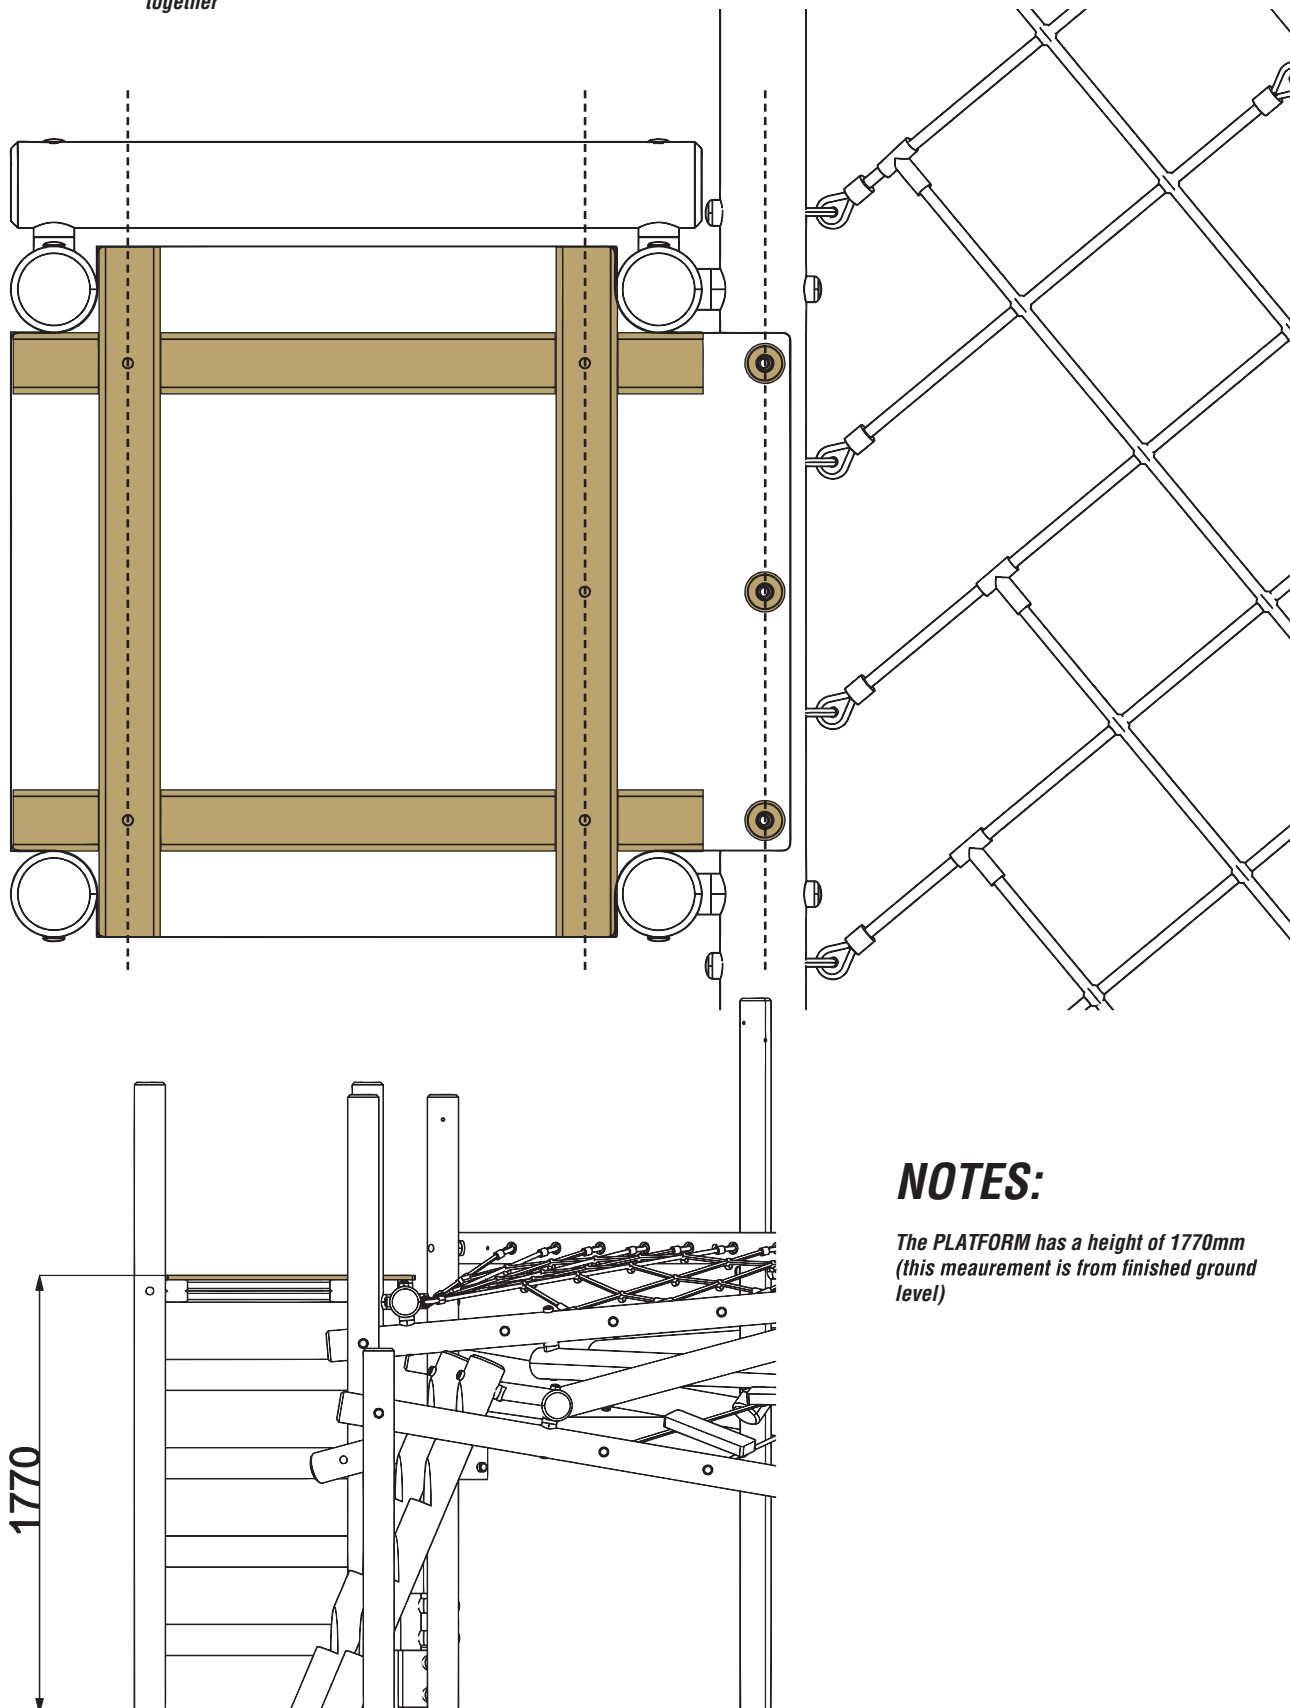

NOTES:


The PLATFORM has a height of 1770mm
(this measurement is from finished ground level)

INSTALLATION INSTRUCTIONS

55

Attach the SLIDE to the PLATFORM

Using 3 x 7.5 x 60 MULTI SCREWS

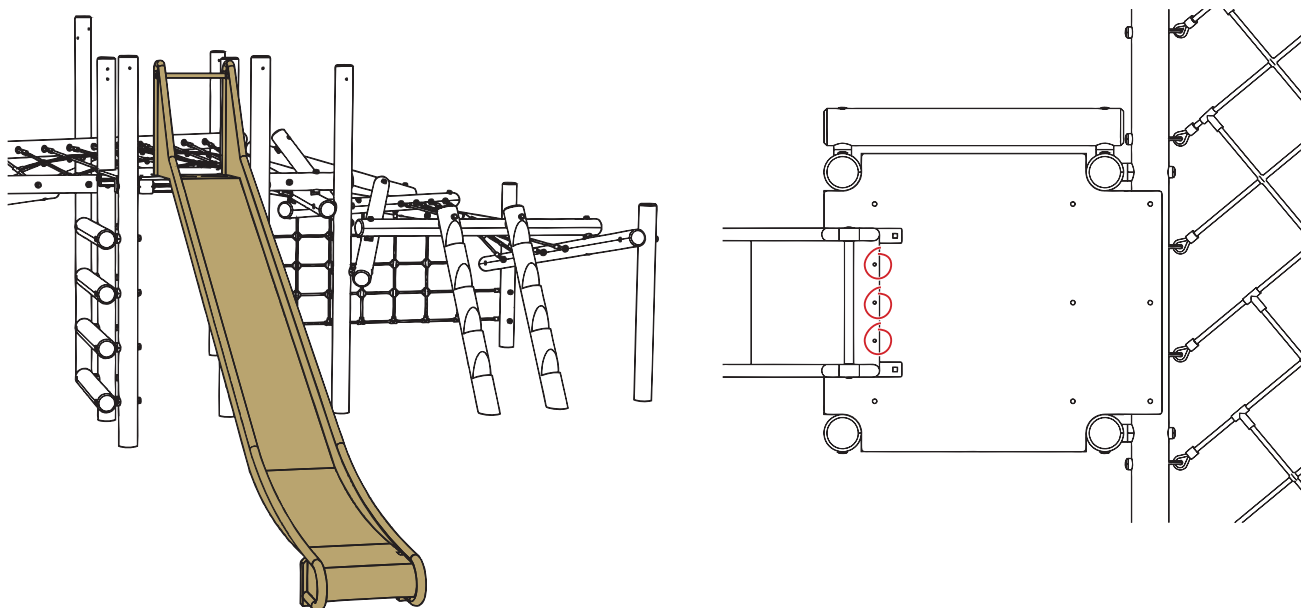


56

DRILL & ATTACH the 'BACK' slide brackets

Using TORKTAINERS (2 x 4B / 2 x N3) and HEX BOARD 'FLOOR' SPACERS

NOTES:

Use the HOLES in the slide brackets as a guide

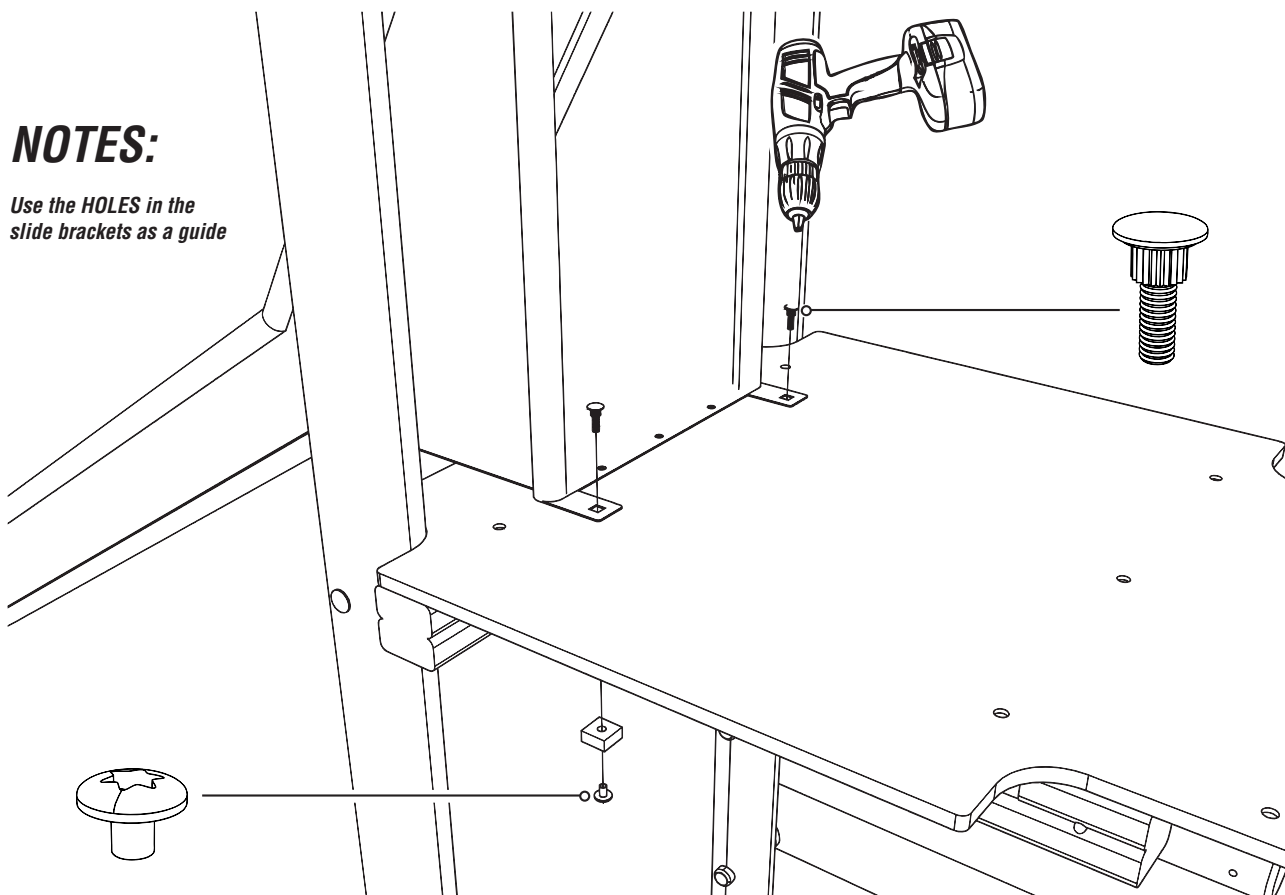


INSTALLATION INSTRUCTIONS

57

Attach the 2 x SLIDE BARRIERS to G / H - timbers

Using 6 x FM80 WOOD SCREWS

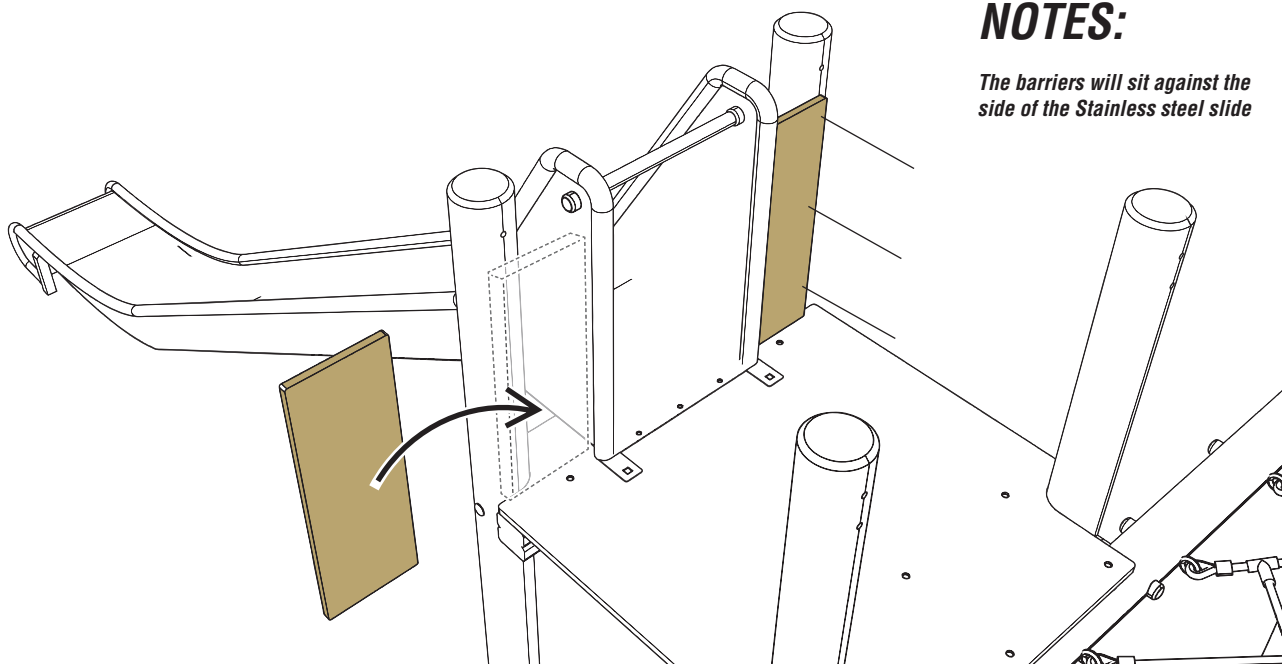


NOTES:

The barriers will sit against the side of the Stainless steel slide

58

Attach the IR ROPES (individual ropes)


Using 20 x M10 'NYLOCS' and 20 x Covered end cap R60

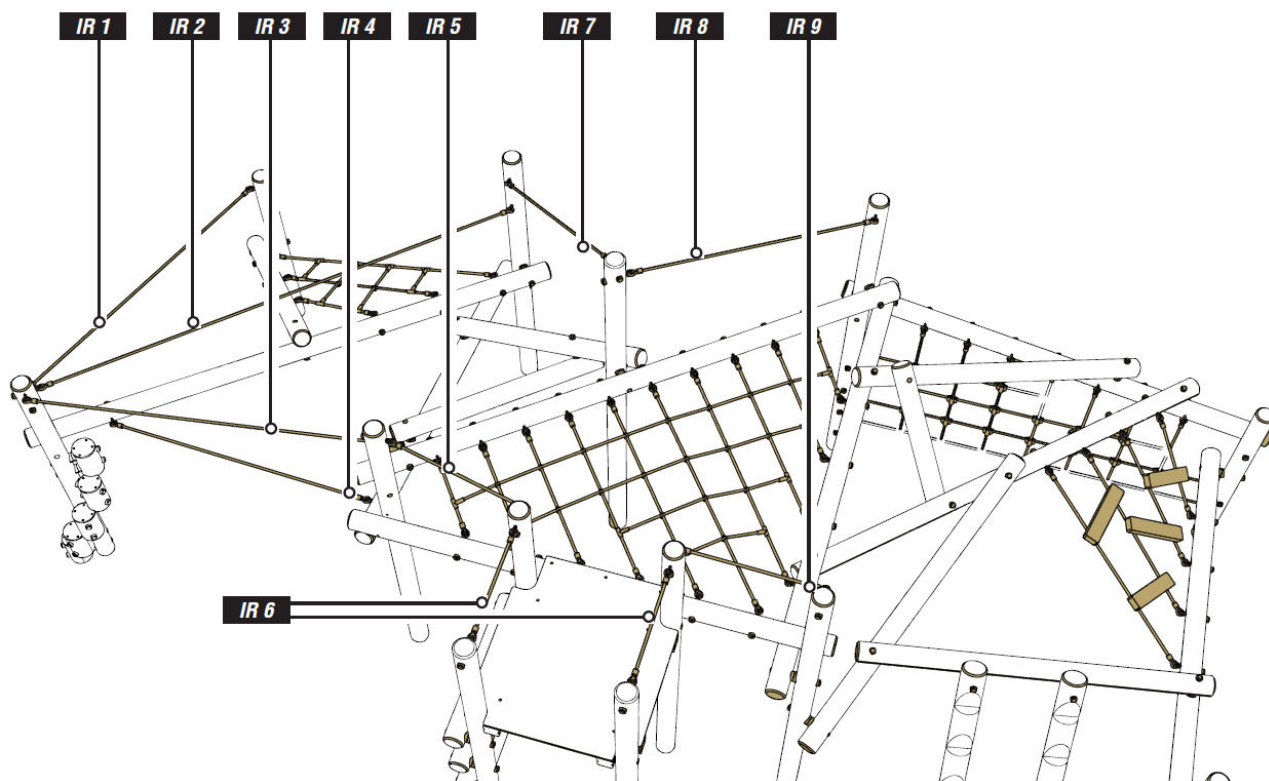

INSTALLATION INSTRUCTIONS


Attach ROPE **IR1**

3rd HOLE down on C - timber / 1st HOLE on A - timber

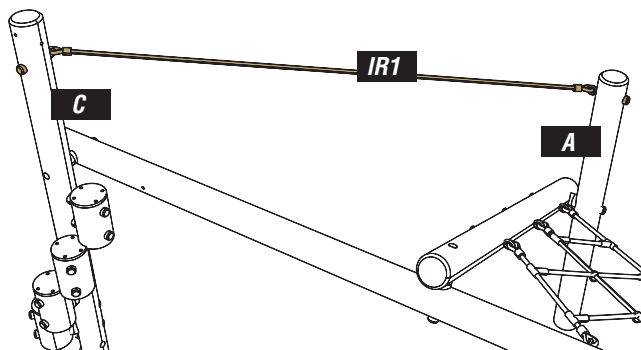


Attach ROPE **IR2**

2nd HOLE down on C - timber / 2nd HOLE down on B - timber

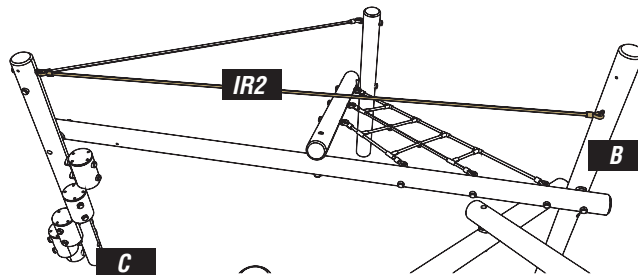


Attach ROPE **IR3**

top HOLE on C - timber / 2nd HOLE on Q - timber

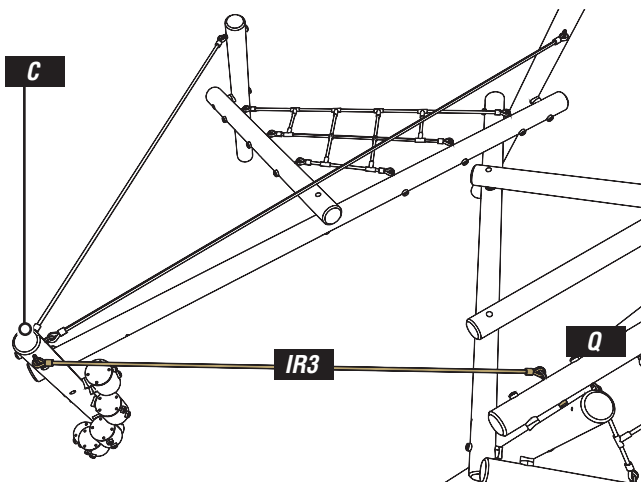


Attach ROPE **IR4**

2nd HOLE on O - timber / 2nd HOLE on P - timber

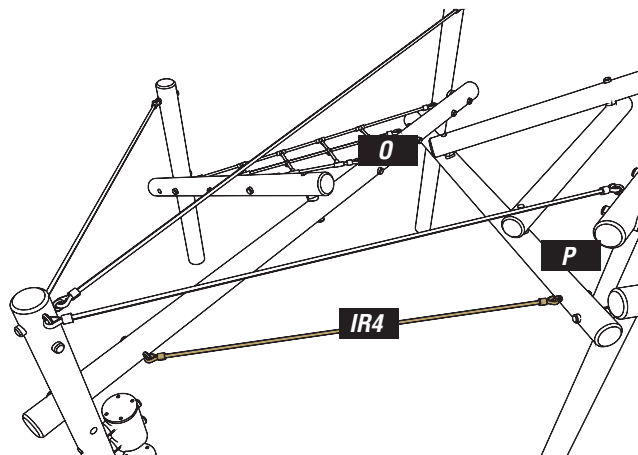


Attach ROPE **IR7**

top HOLE on B - timber / top HOLE on J - timber

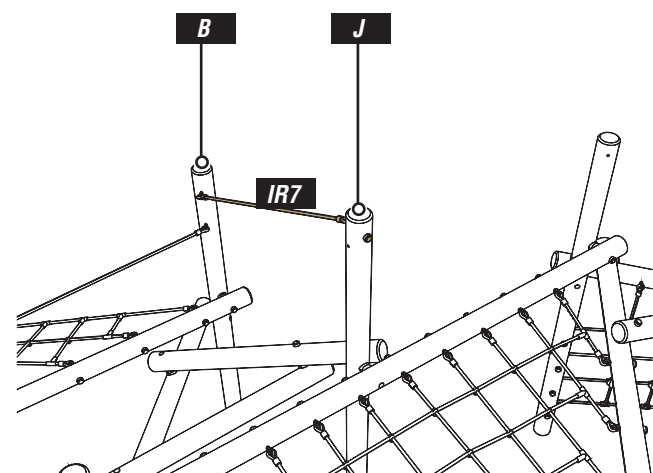

Attach ROPE **IR8**

2nd HOLE on J - timber / top HOLE I - timber

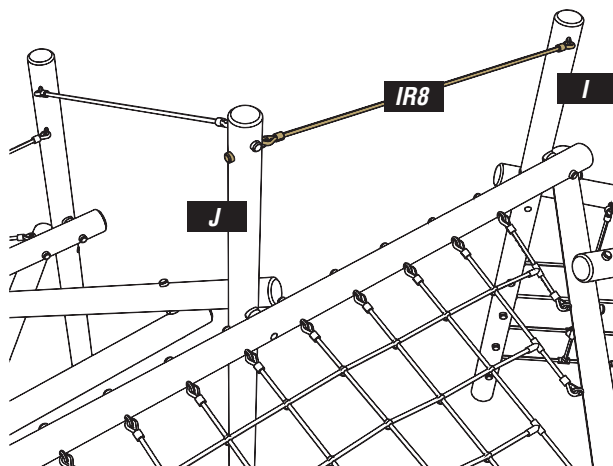

INSTALLATION INSTRUCTIONS



Attach remaining **INDIVIDUAL ROPES**

IR5

IR6


IR6

IR9

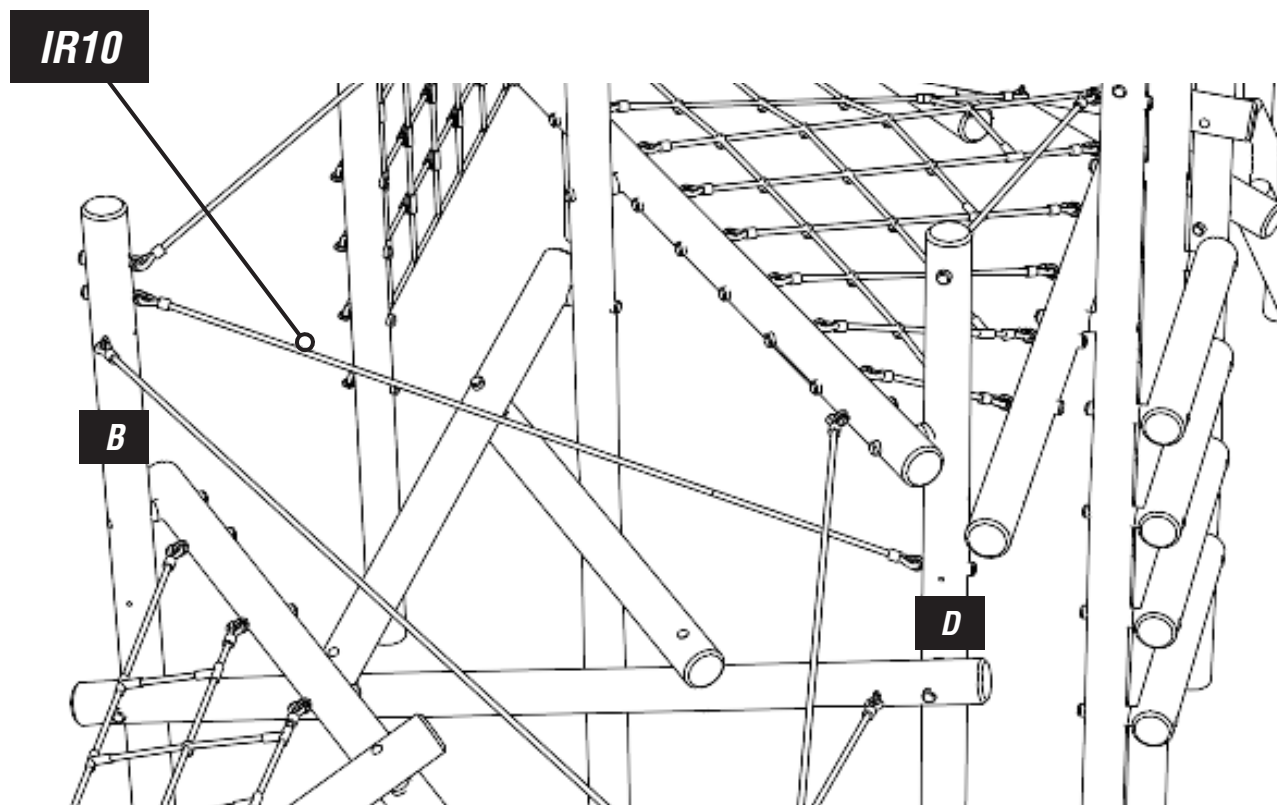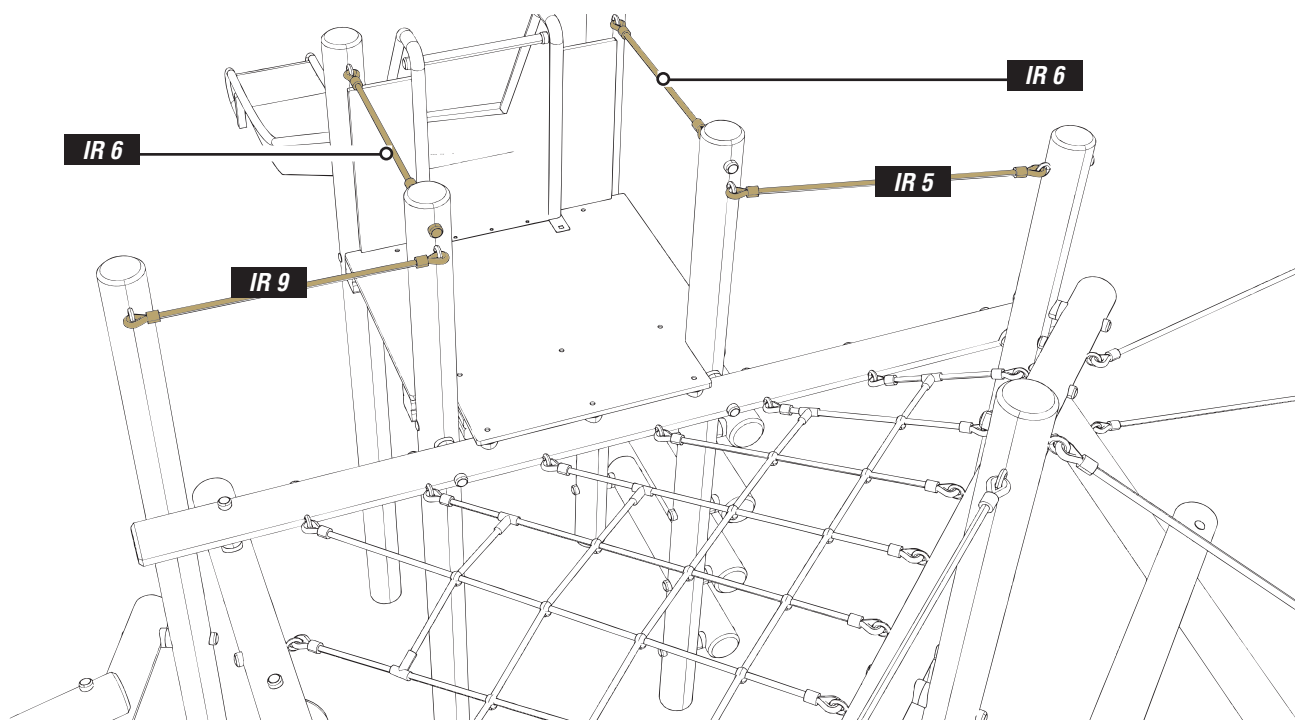

INSTALLATION INSTRUCTIONS

Use M8X80 screws to attach handles to E timbers.

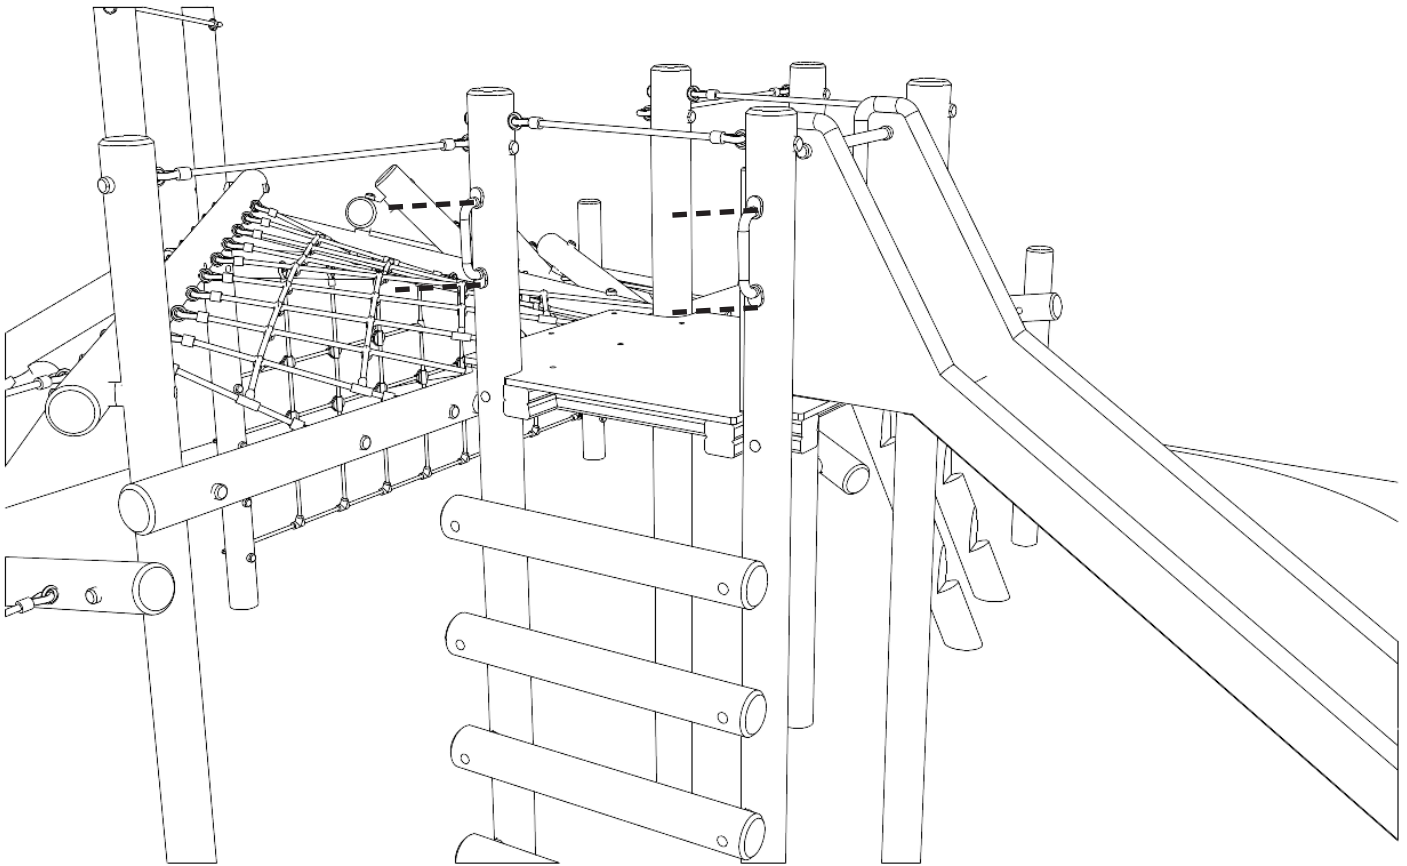


INSTALLATION COMPLETE - Please check

- a** All COVERED ENDS have been capped (insert any missing caps)
- b** Ensure all BOLTS are tight - tighten if / where required
- c** Posts are securely attached to each other (check the distance pieces are positioned correctly)
- d** MOVEMENT in the upright posts - ensure all posts are securely concreted
- e** SPLITS / CRACKS IN TIMBERS - check for any splits / cracks in timbers (they should not exceed 10mm)


ADDITIONAL DRAWINGS

PLAN VIEW

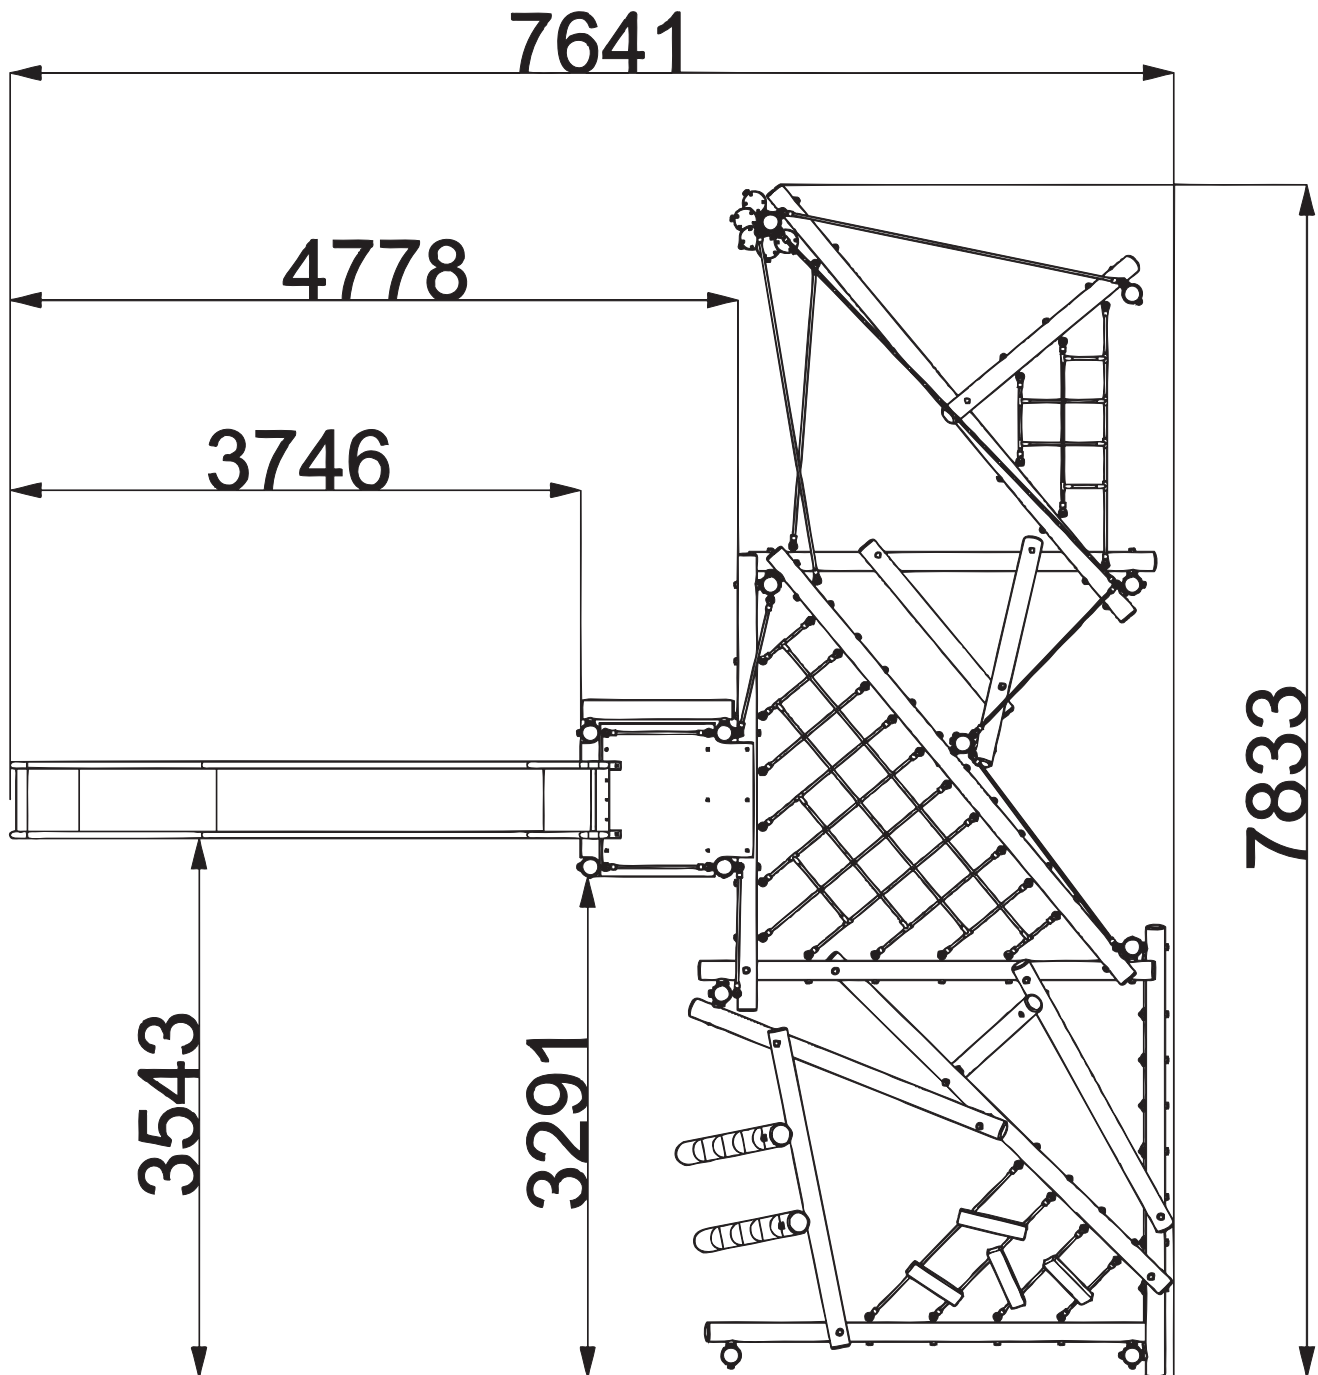

ADDITIONAL DRAWINGS

SIDE VIEW

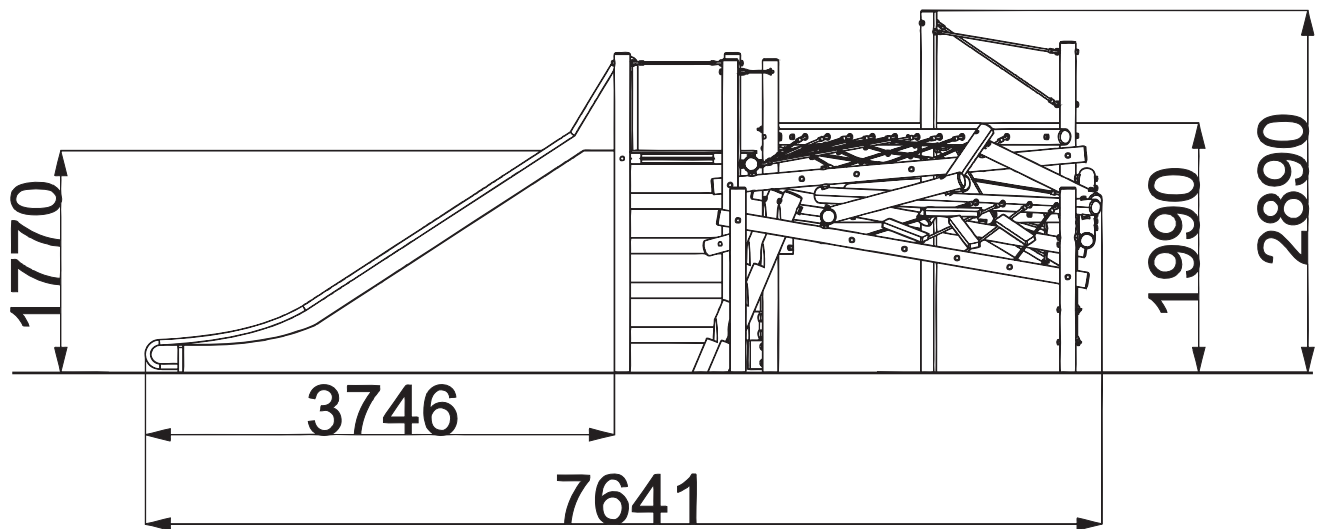

FRONT VIEW

