



COMBI GOAL (TIMBER)

Installation Instructions


**creative
play**

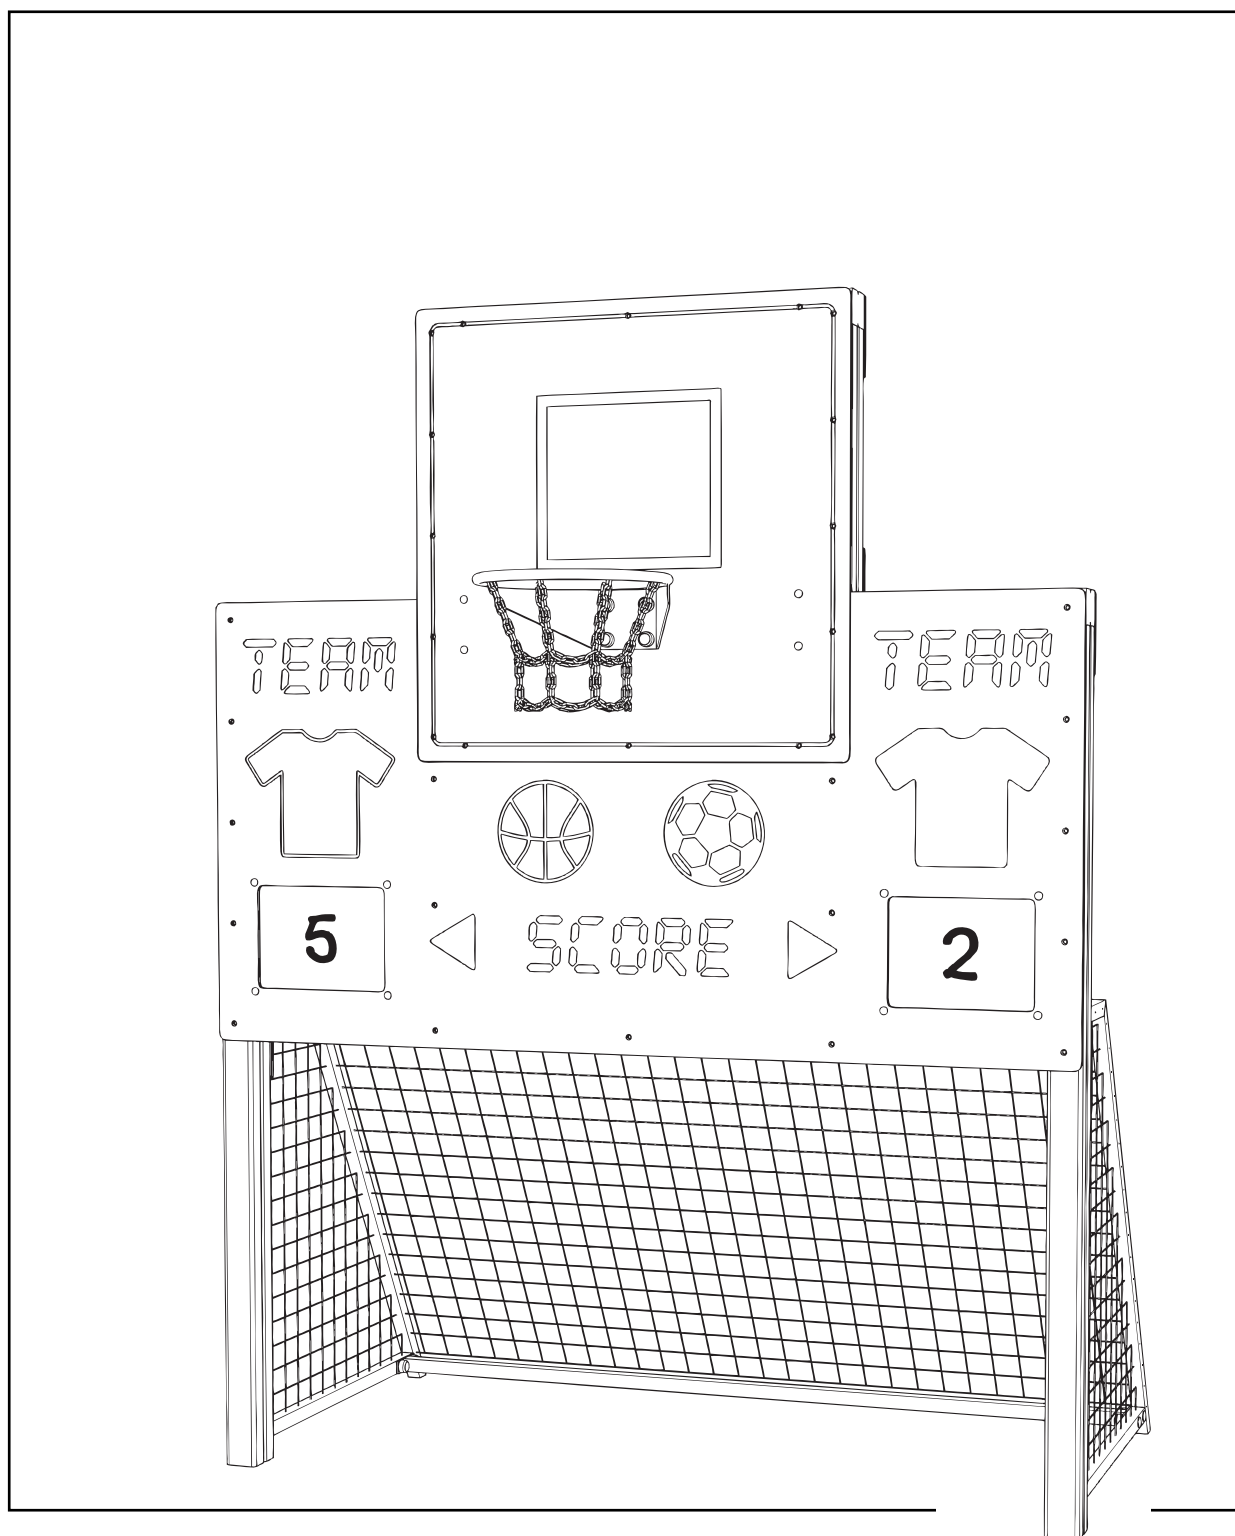


PARTS required

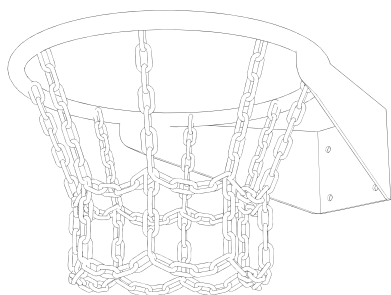


x1 (Basket Hoop)

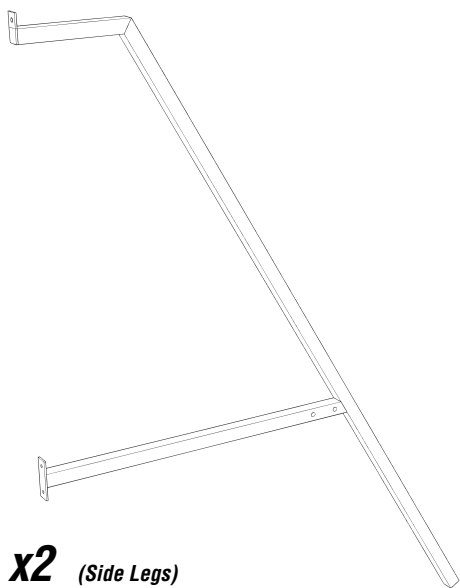

x2 (Side Legs)

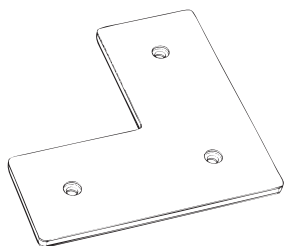


x8 (PLAYTEC L)

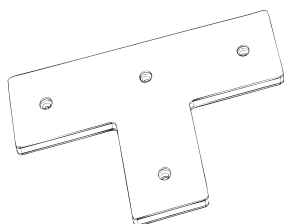


x4 (PLAYTEC T)




x1 (Support)

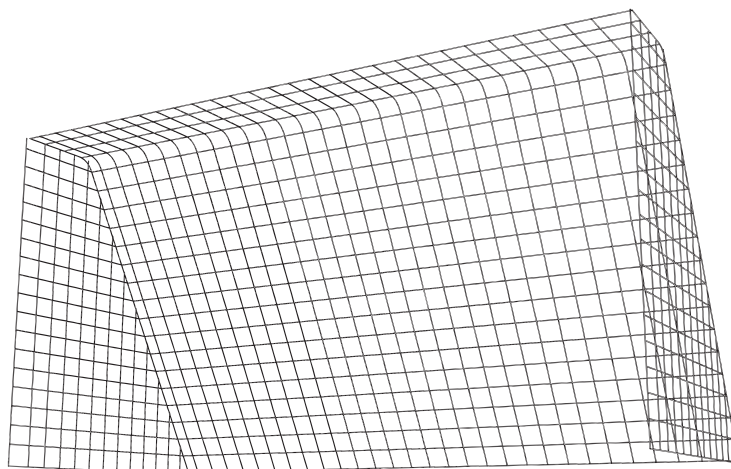


x1 (5-a-side net)



x11 (NET clips)

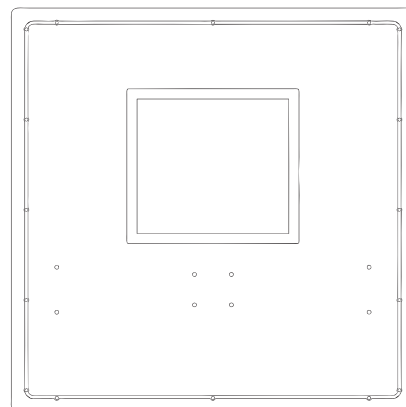

x1 (TOP Playtec)

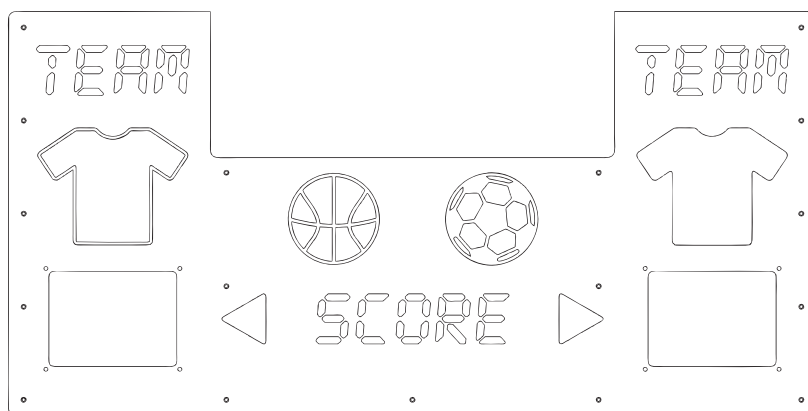


x1 (Pre-Assembly)

TIMBERS required


CODE	TYPE	SIZE	QTY
MU104a	120x90	3000	2
MU104b	120x90	1785	2
MU104c	120x90	2220	1
MU104d	120x90	600	2
MU104e	120x90	1016	1
MU104f	120x90	1196	1
MU104g	223x43	1015.8	1

FIXINGS required

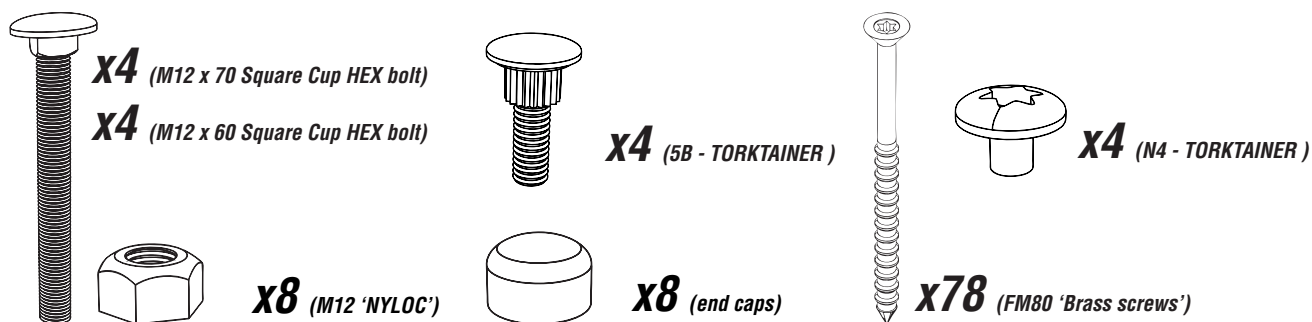


TOOLS required

x5 (small end caps)

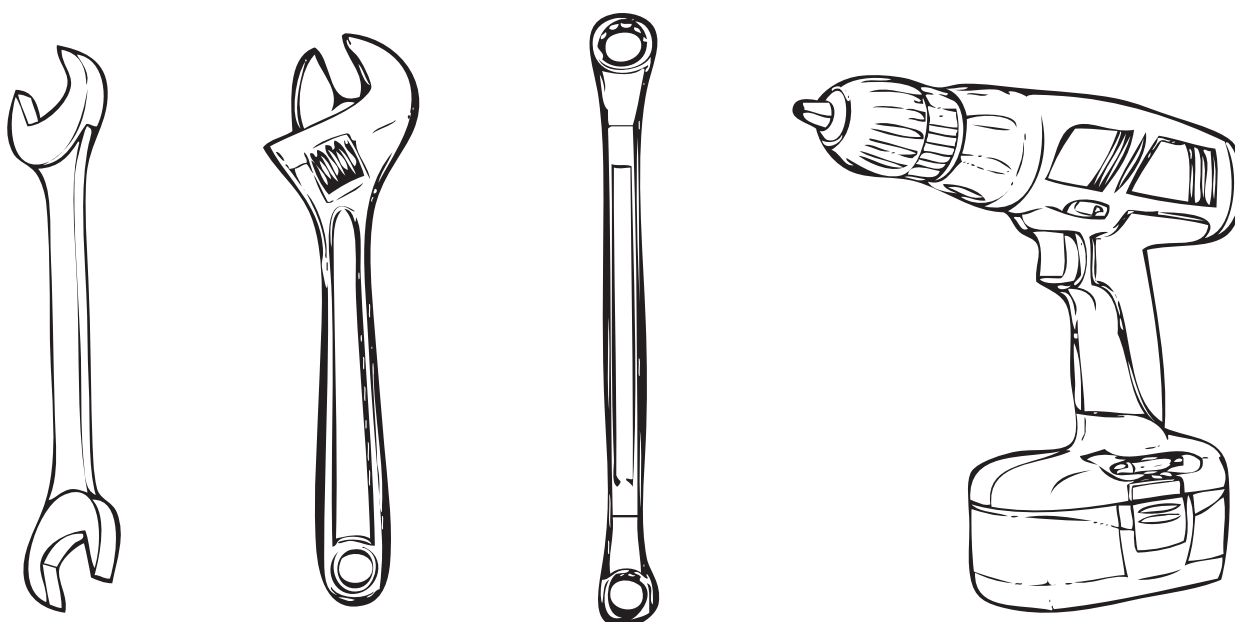

Foundation Details


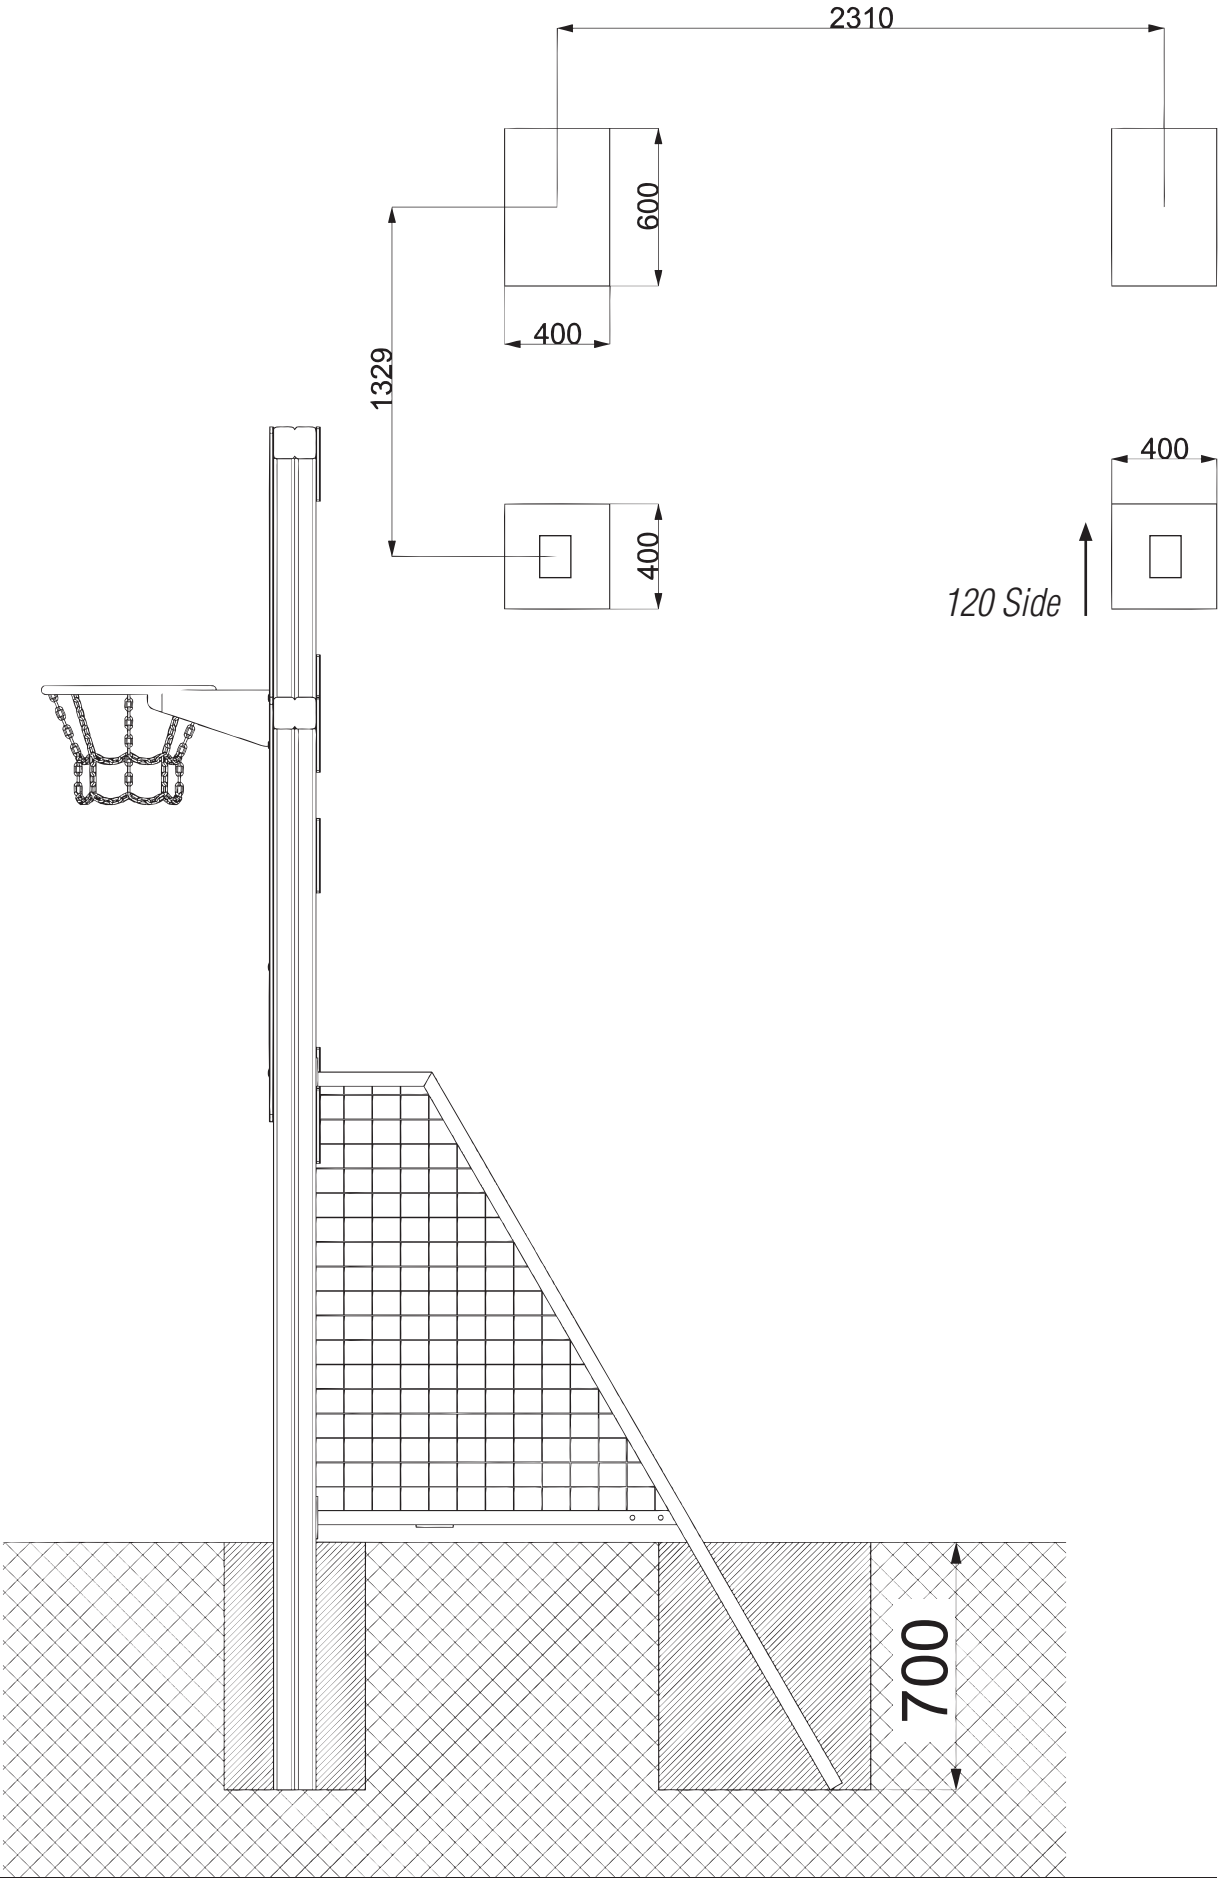


Installation Instructions

1

Attach the **TIMBER STRUCTURE**


Using 40x FM80 'Brass Screws', 8x Playtec L's, 4x Playtec T's

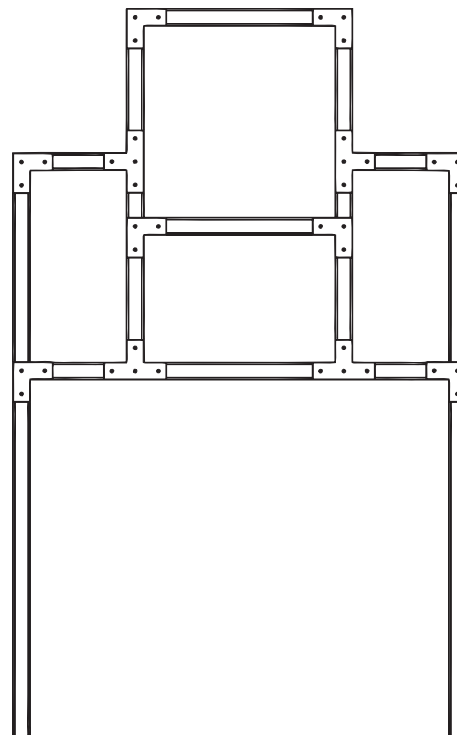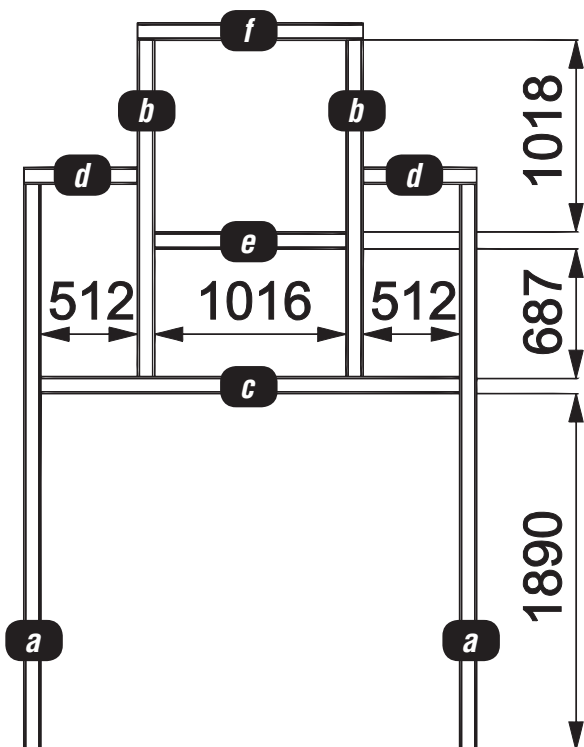

2

Attach Playtec Pre-Assembly to the **TIMBERS MU104a/b/c/d**

Using 17x FM80 'Brass Screws'

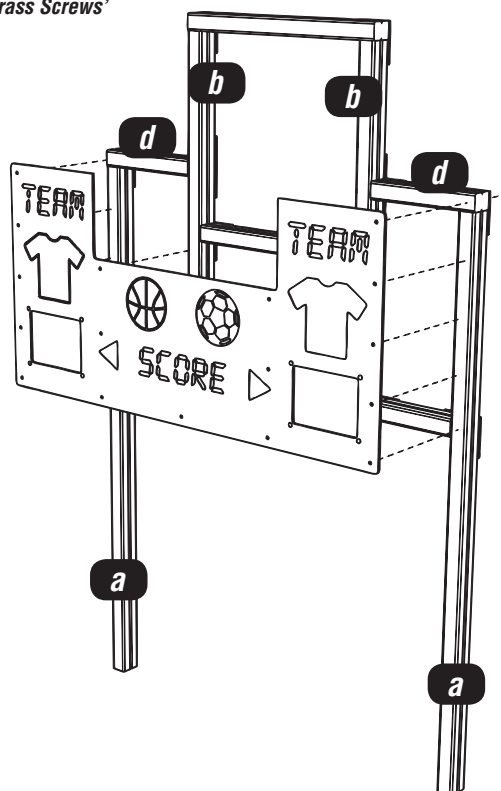


Installation Instructions

3

Attach the Top Playtec

Using 16x FM80 'Brass Screws',


*Do not Screw
Selected Holes*

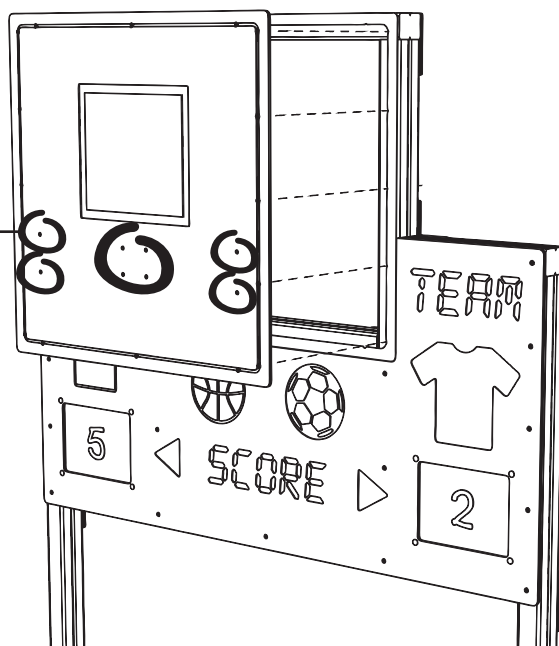

4

Attach the back TIMBER MU104g

Using 4X 5B / N4 TORKTAINERS

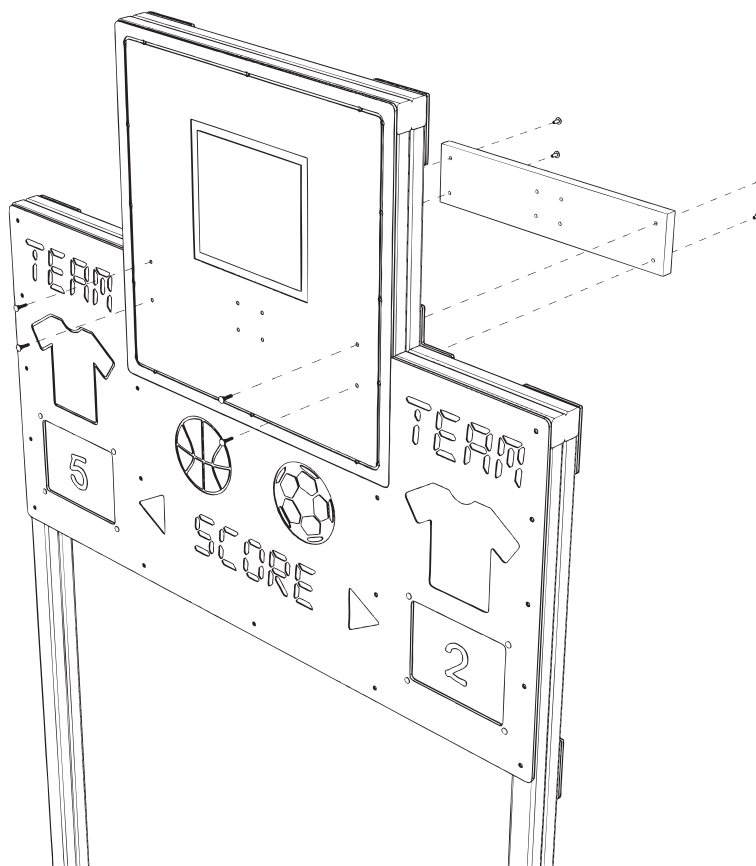


Installation Instructions

5

Install Assemblies and Attach Side Metal Legs


Using Foundation Details and 16x FM80 'Brass Screws'

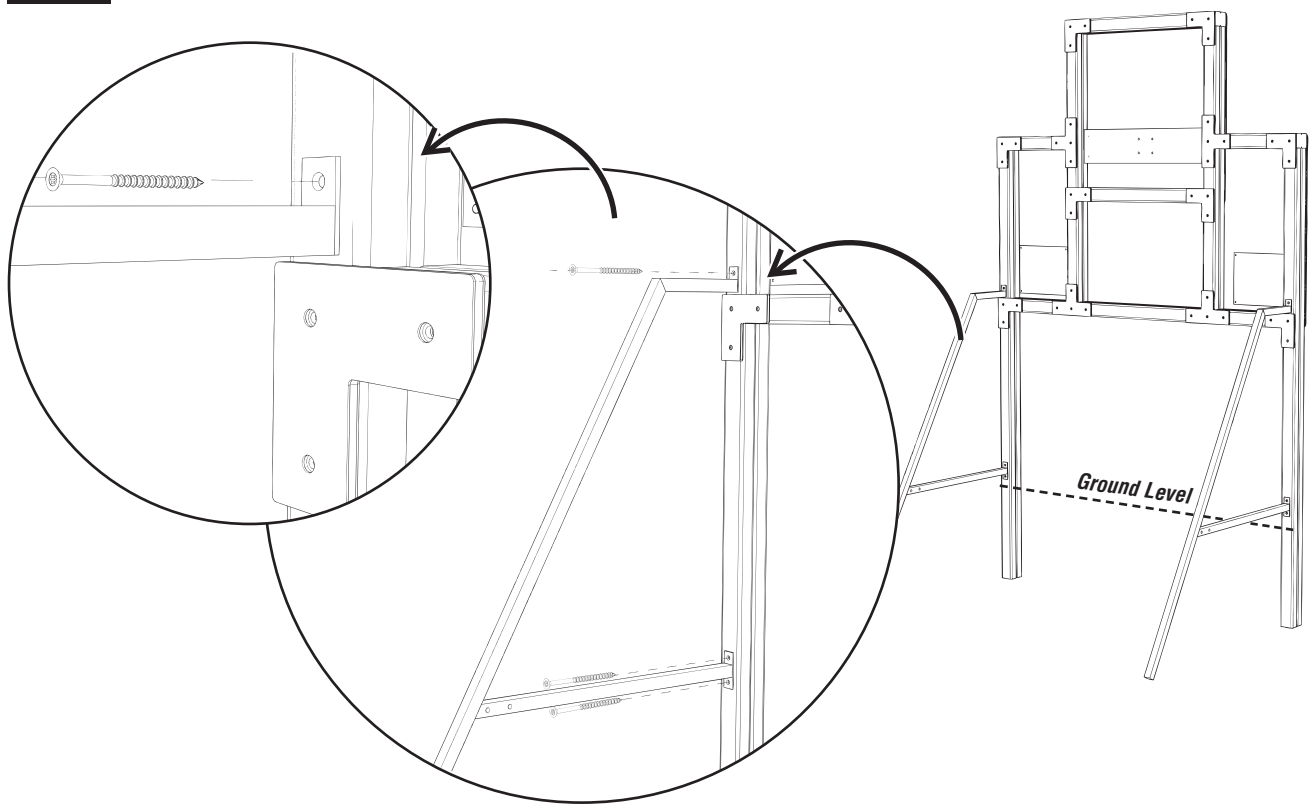

6

Attach Metal Support

Using (4x 60mm) M12 - square cup bolt / 4x NYLOCS / 4x Covered end cap

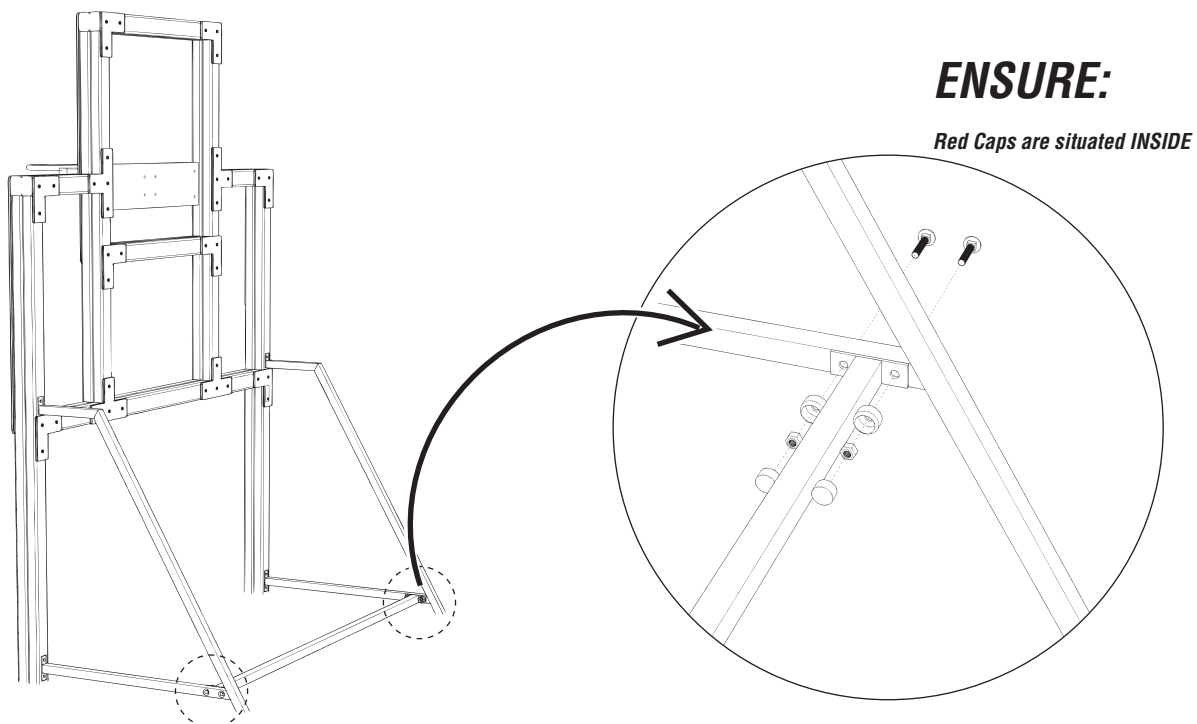


Installation Instructions

7

Attach Basket Hoop to Top Playtect and MU104g Timber


Using (4x 70mm) M12 - square cup bolt / 4x NYLOCS / 4x Covered end cap

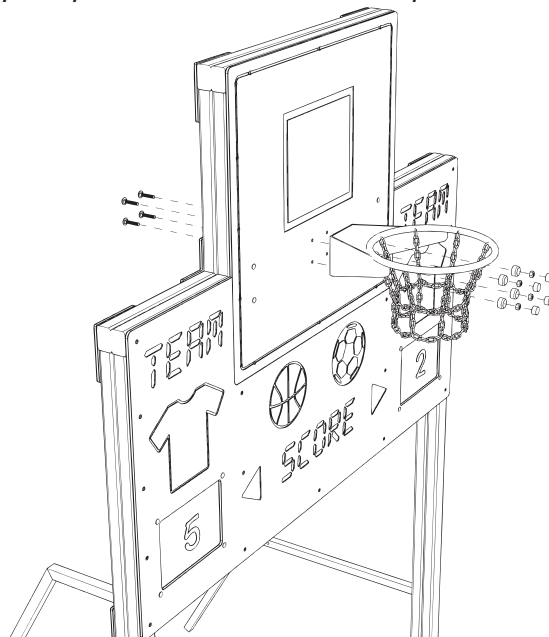

8

Attach the WHITE ROPE to the metal legs

Using (4x 70mm) M12 - square cup bolt / 4x NYLOCS / 4x Covered end cap

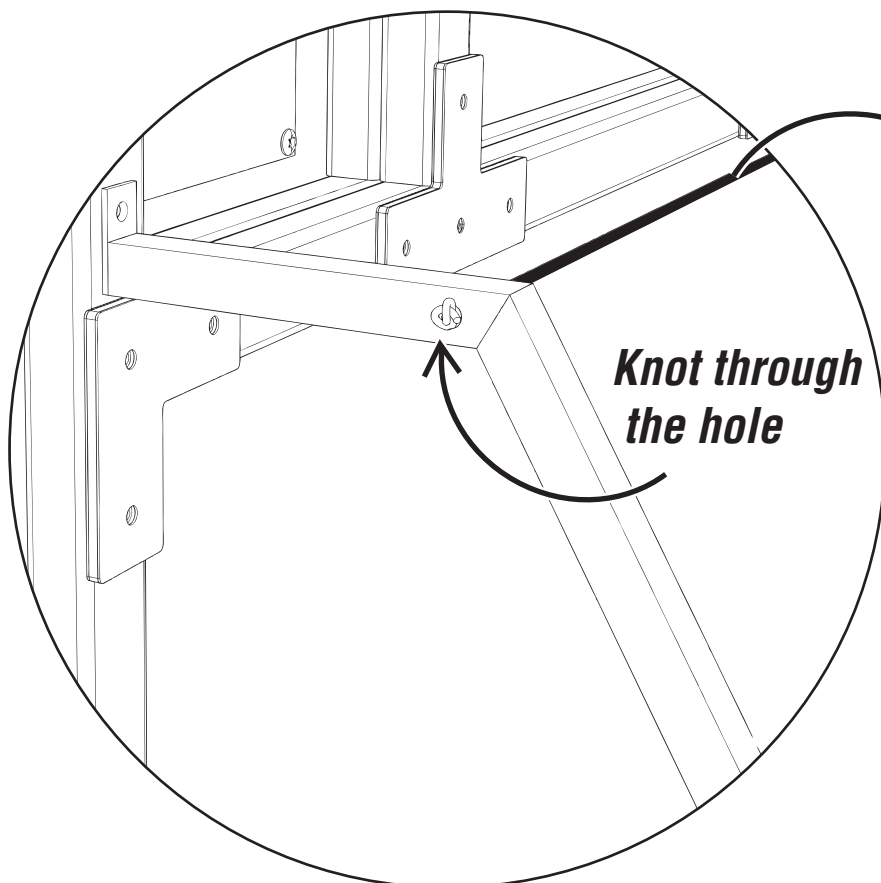

NOTES:


Tie the length of rope supplied, Between the side frames to give the net extra support.

Installation Instructions

7

Attach the Net

Using 5x Small Covered end cap
16x FM80 'Brass Screws'

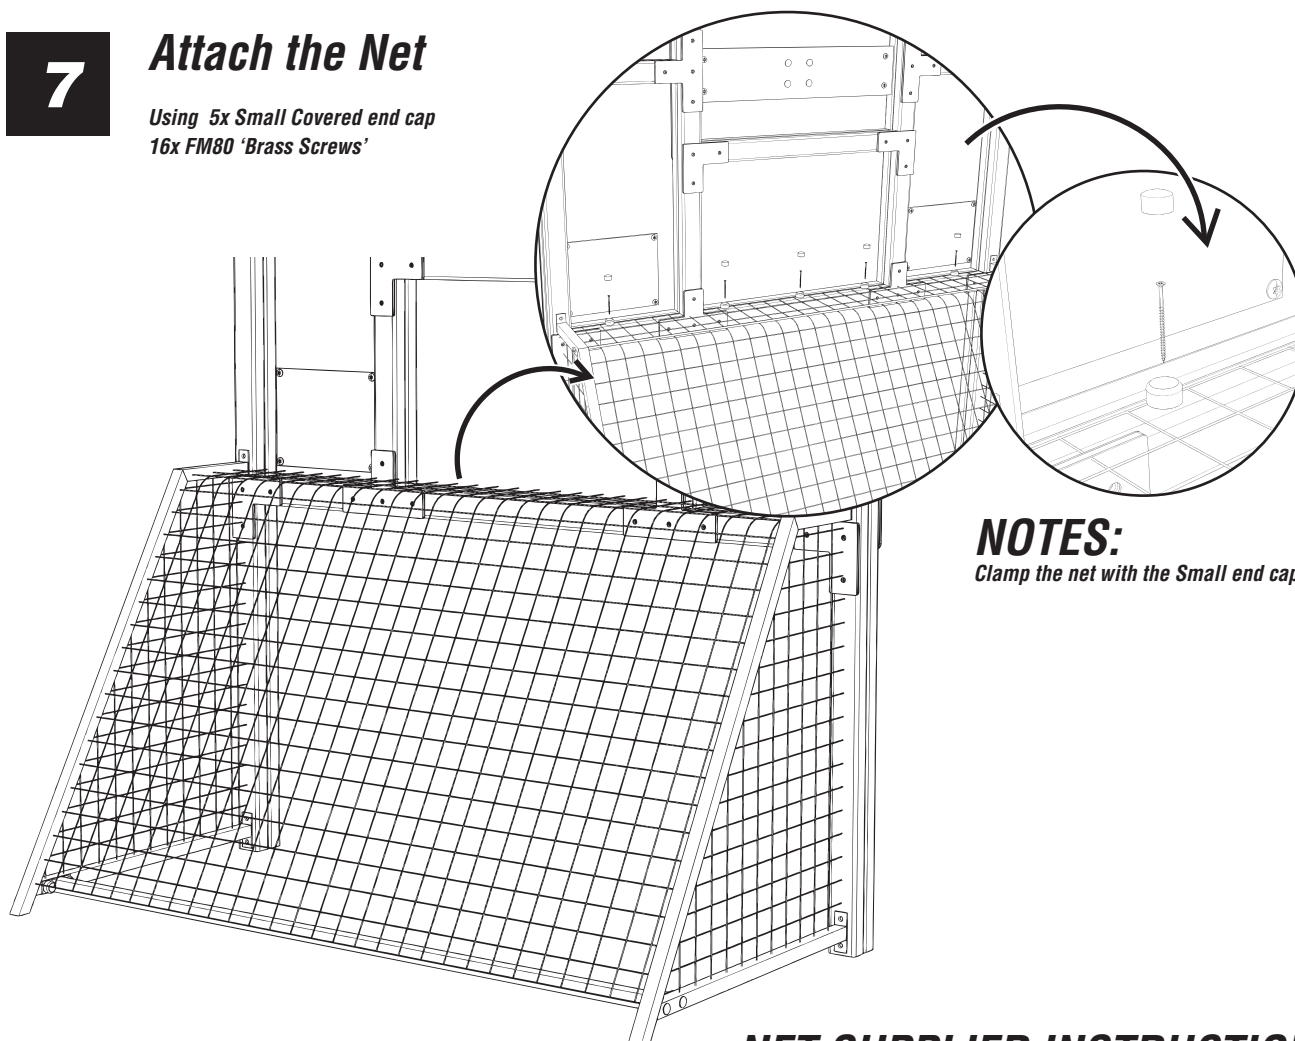

NOTES:

Clamp the net with the Small end cap

NET SUPPLIER INSTRUCTIONS

View of Product

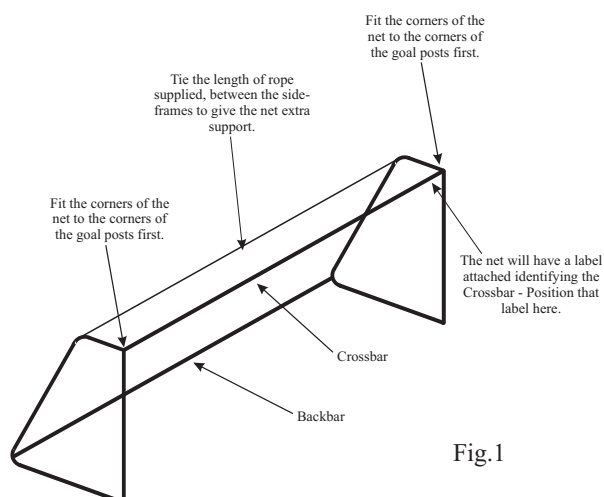


Fig.1

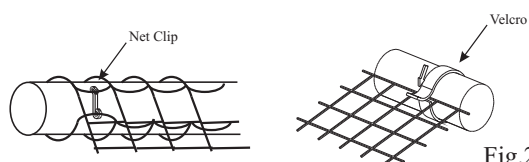


Fig.2

Assembly Instructions

Please Note: The type of goal you have will determine the most suitable method of attaching the net. **Please contact our sales team for further advice.**

Some goals will come complete with arrow style hooks that screw into the crossbar and Aluminium goals will usually have bespoke net clips that fit into the extruded recess in the back of the goal post section.

Other goals will require some form of Clip, Tie, Velcro or Cable Tie to attach the net. Examples of Net Clips and Velcro fitting methods are shown in Fig.2.

General Fitting Instructions:

1 Unfold the net, attach the length of rope between the side-frames and locate the crossbar label. Follow this straight edge both ways and position each corner of the net as shown in Fig.1.

2 Now that you have fitted each corner, drape the rest of the net over the frame of the goal (like a tent over a tent frame) and attach the corners with the ties/clips. With the two corners fixed, follow the edge of the net around the frame fixing the remaining corners. Fix the remainder of the net in place using the ties/clips, evenly spreading them around the frame as shown Fig.2.

Additional Dimensions

