NUR141 -SLEEPER PLANTER

Installation Instructions

creative play

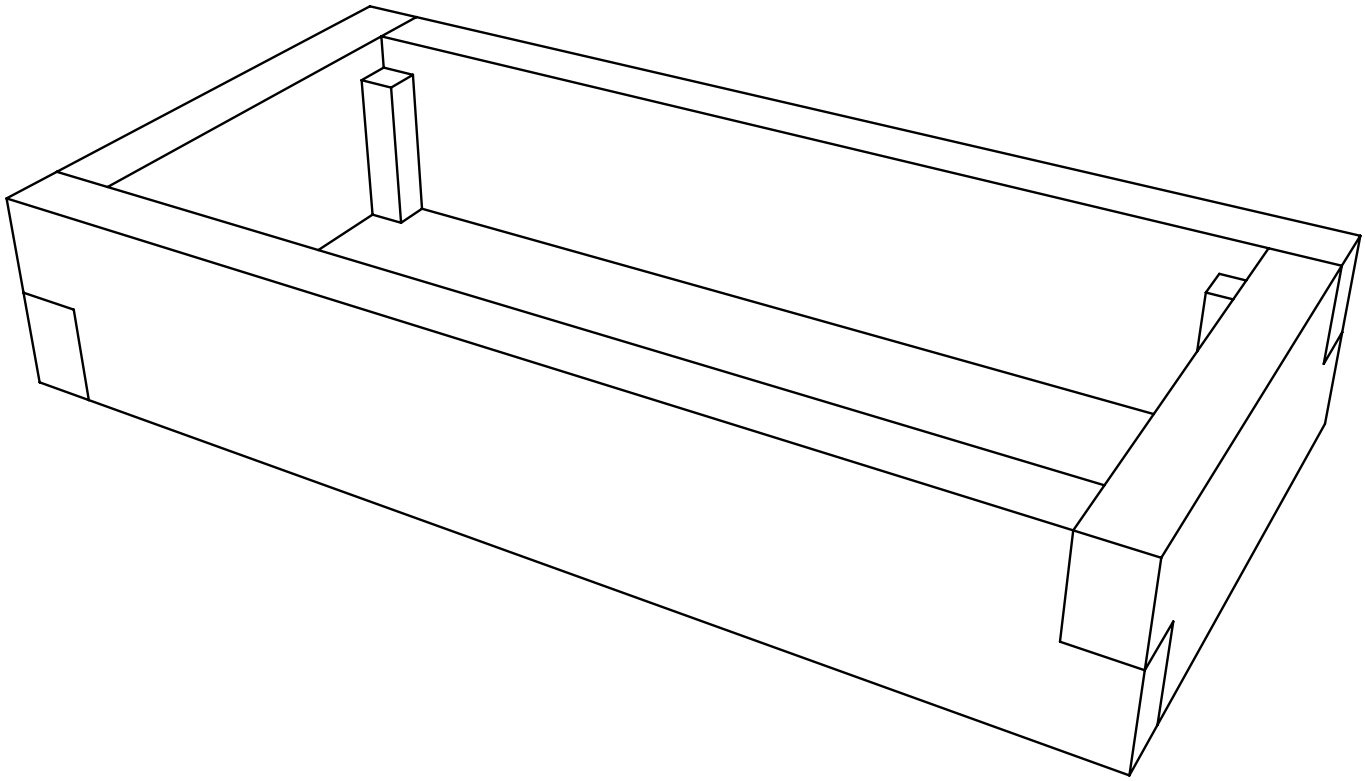

REF: NUR141 - SLEEPER PLANTER

PARTS REQUIRED



141A

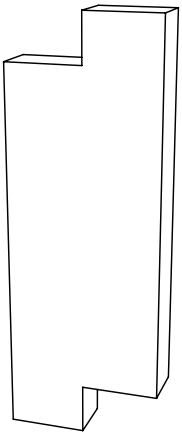

141B

141C

M8X180 [X16]



M8X80 [X16]

TOOLS REQUIRED

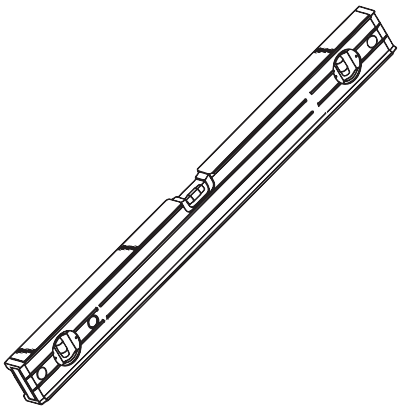

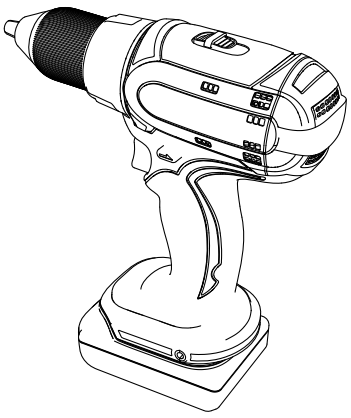

FOUNDATION DETAIL

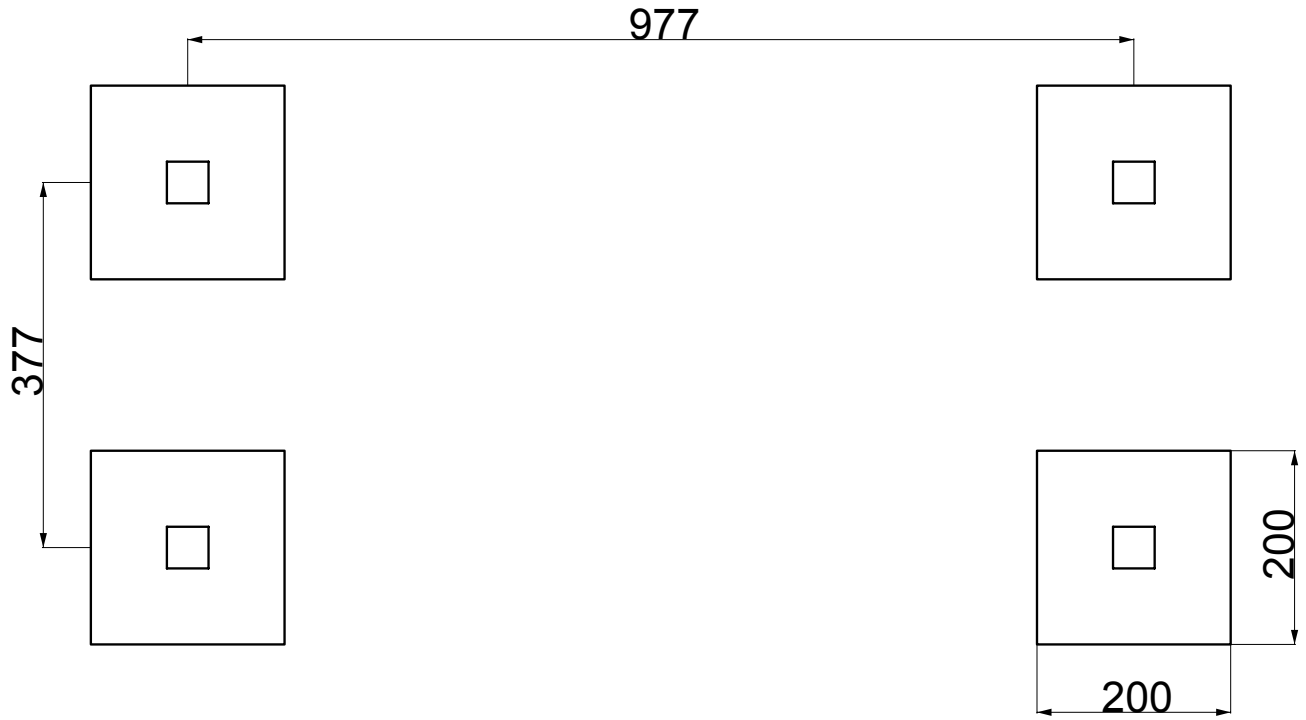

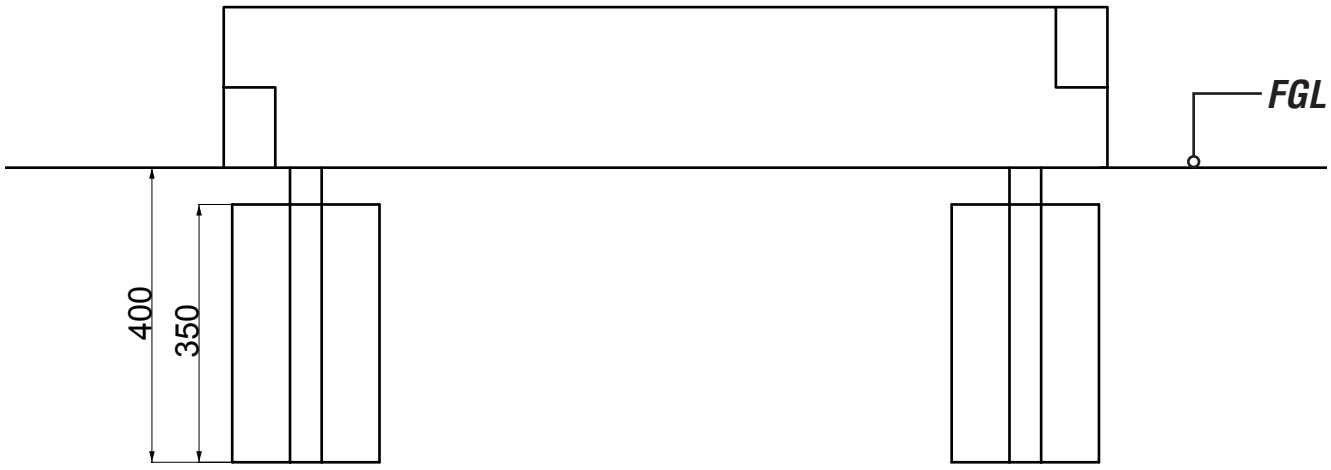

INSTALLATION INSTRUCTIONS

1 FIX 141A & 141B TIMBERS TOGETHER

USING M8X180 SCREWS

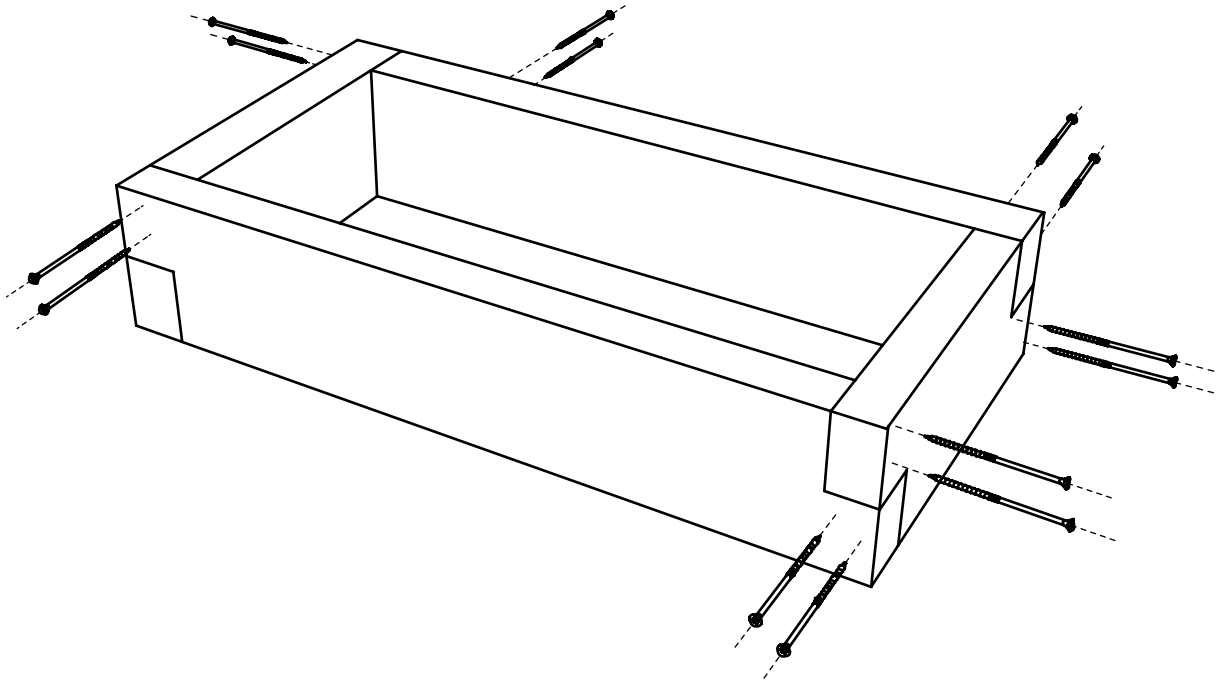

2 FIX 141C IN EACH CORNER OF PLANTER - 40MM BELOW TOP EDGE

USING M8X80 SCREWS

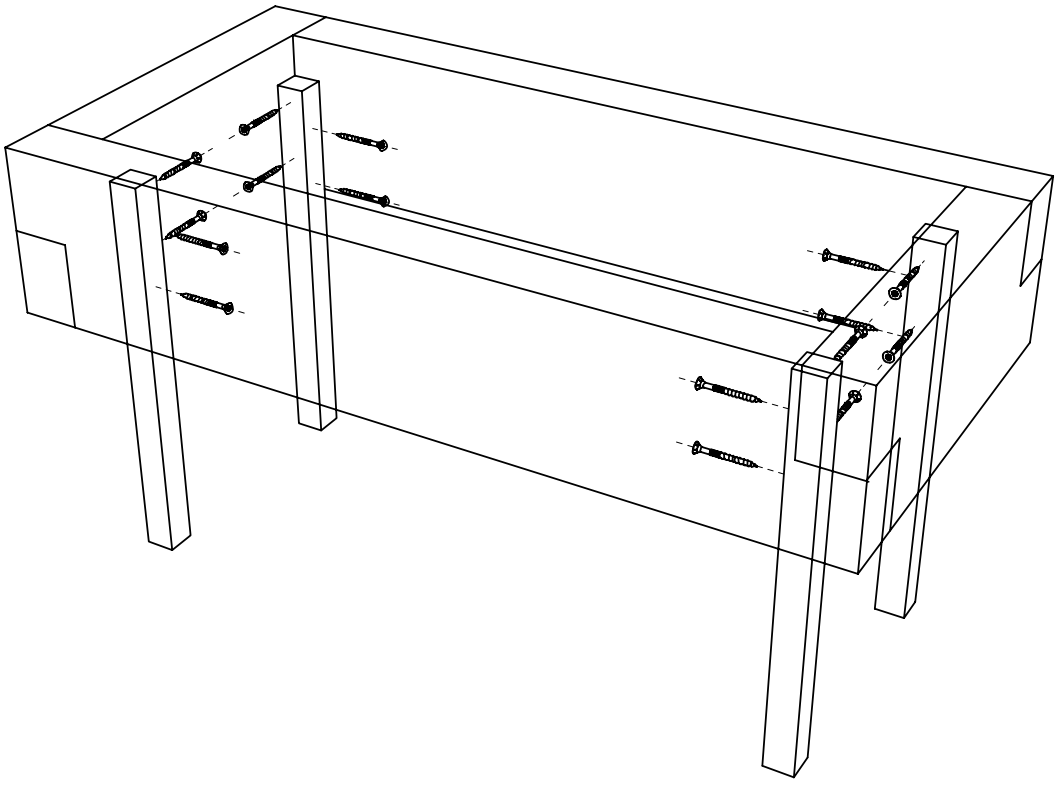

INSTALLATION INSTRUCTIONS

3 INSTALL NUR141 INTO THE GROUND

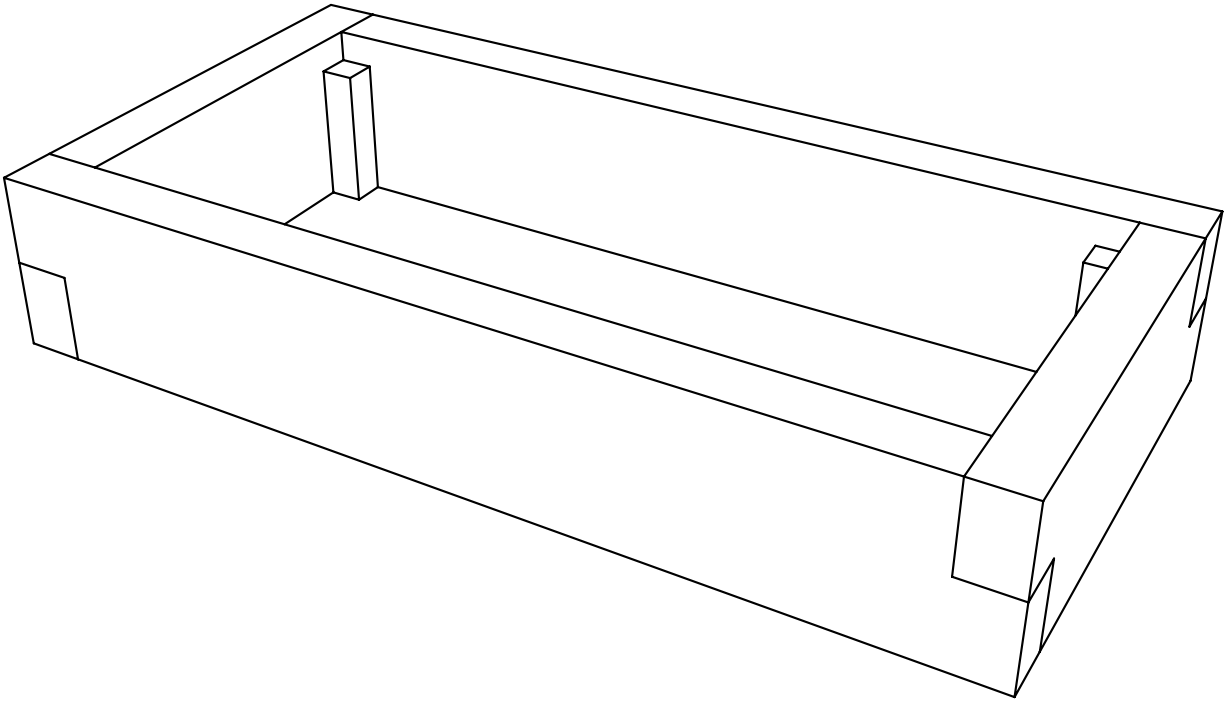
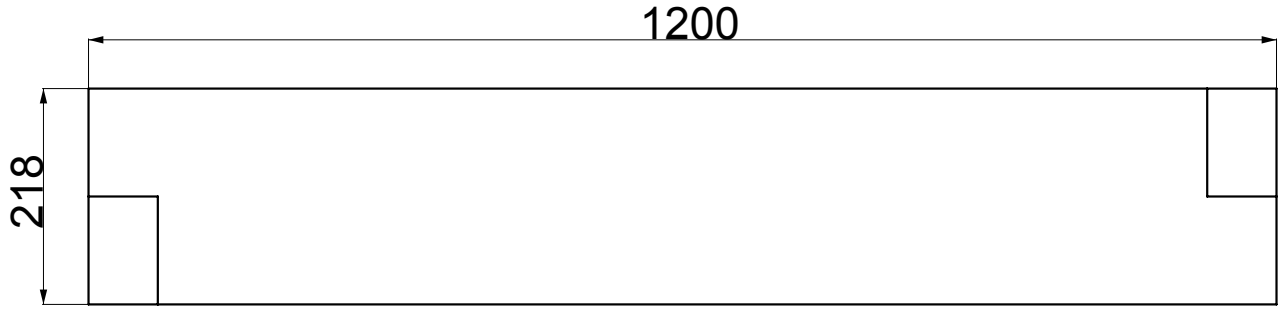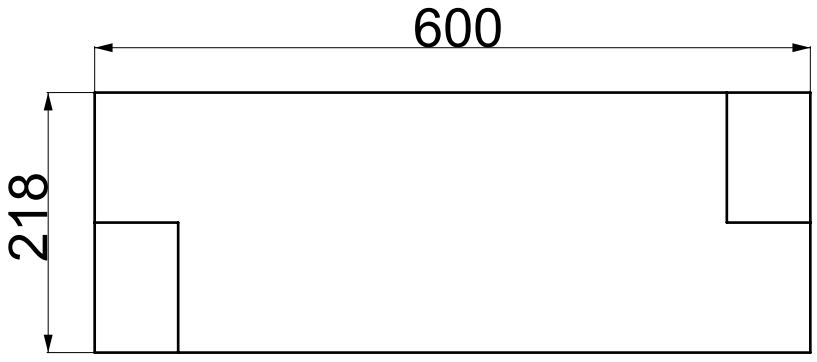
ADDITIONAL DIMENSIONS