



NUR151 - NURSERY CONSTRUCTION ZONE

Installation Instructions


**creative
play**

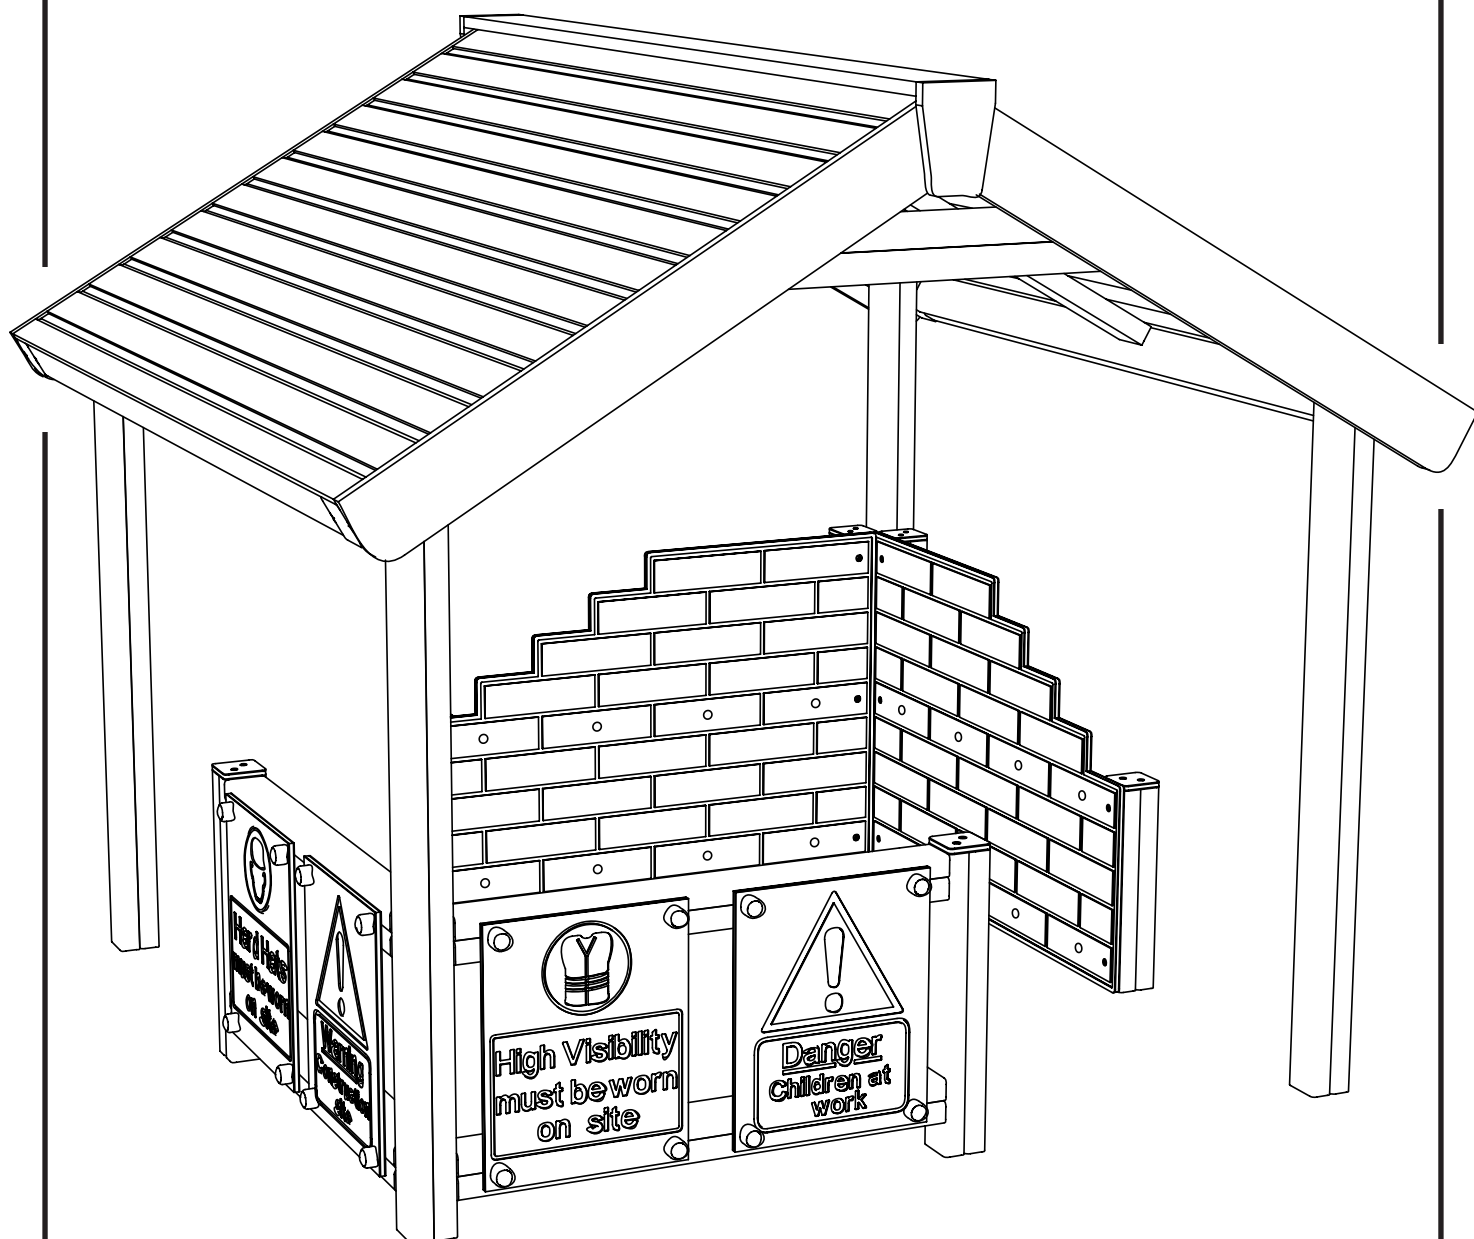


PARTS REQUIRED

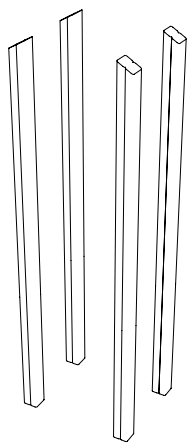


151A [X4]

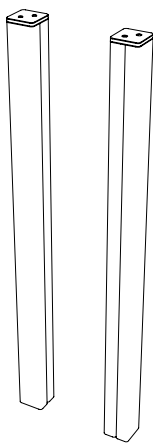

151C [X2]

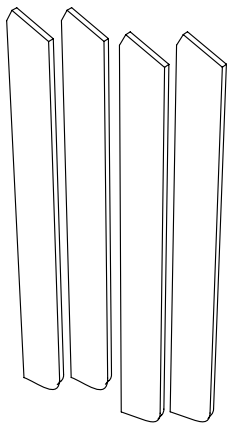

151K [X4]

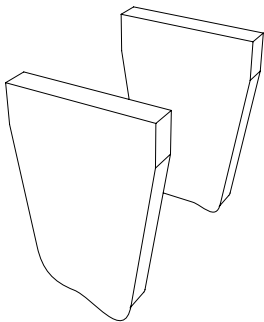


151L [X2]




151M




151N

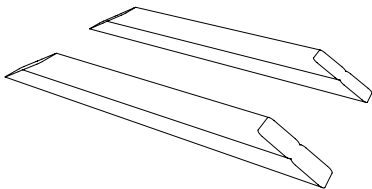


151P [X2]

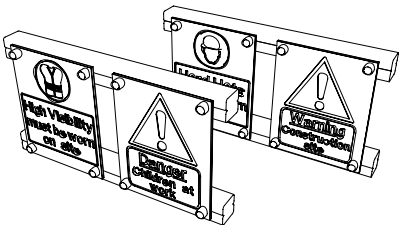


SIGN PANEL ASSEMBLY [X2]

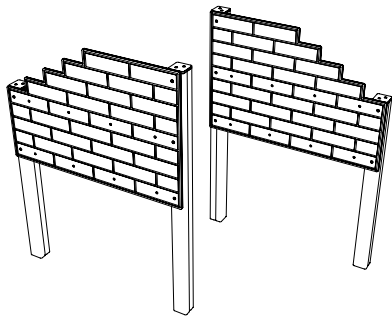


WALL PANEL ASSEMBLY [X2]

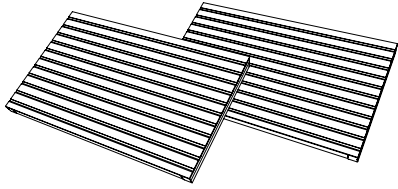

ROOF PANEL ASSEMBLY [X2]





M8X180 [X20]





M8X120 [X43]

TOOLS REQUIRED

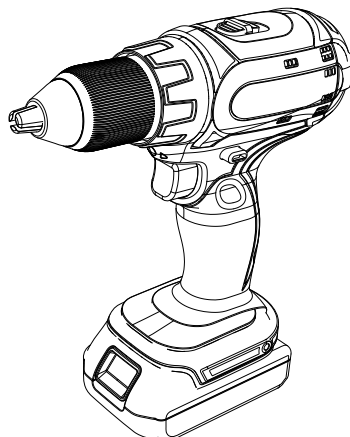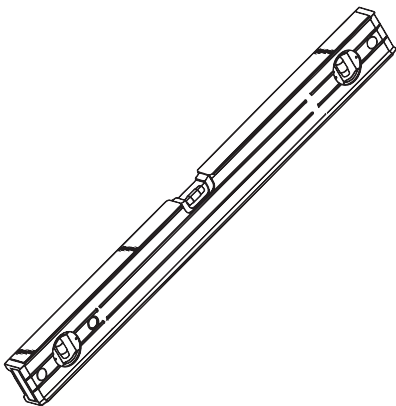


FOUNDATION DETAIL

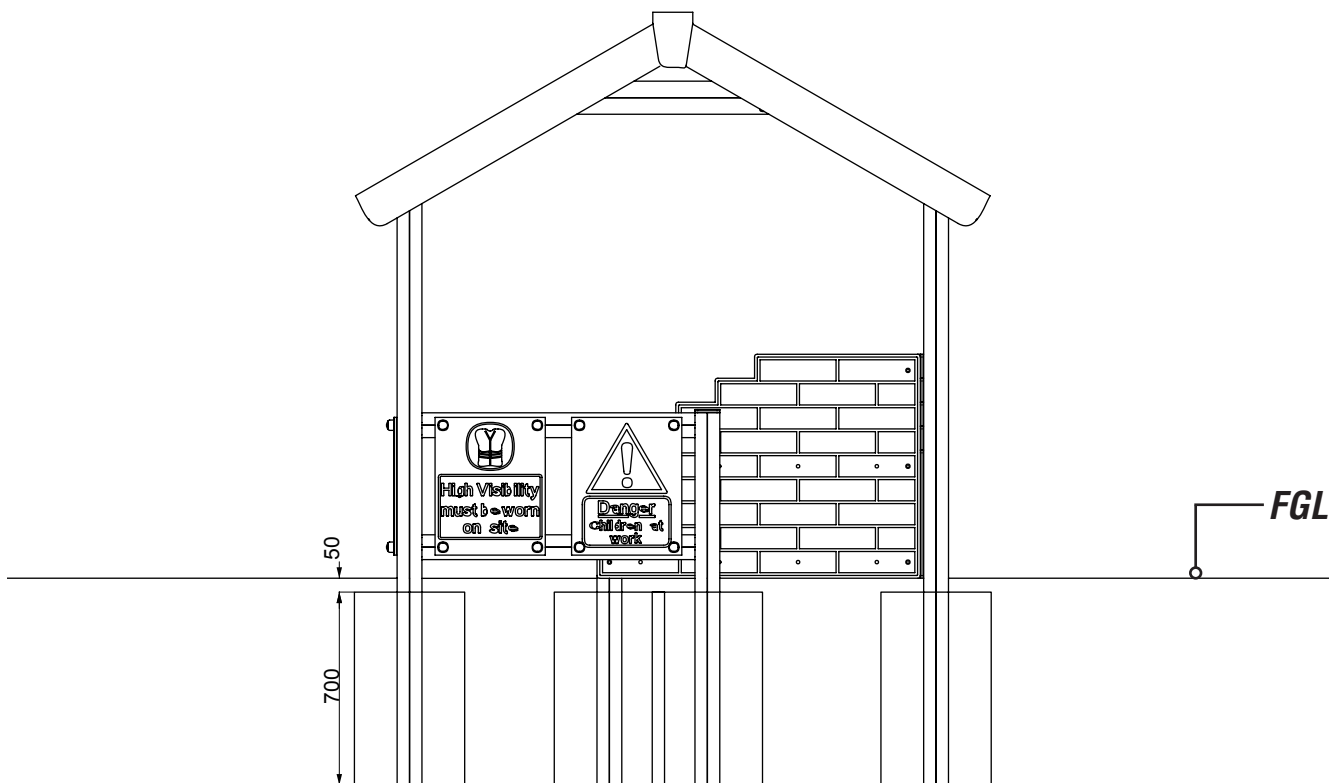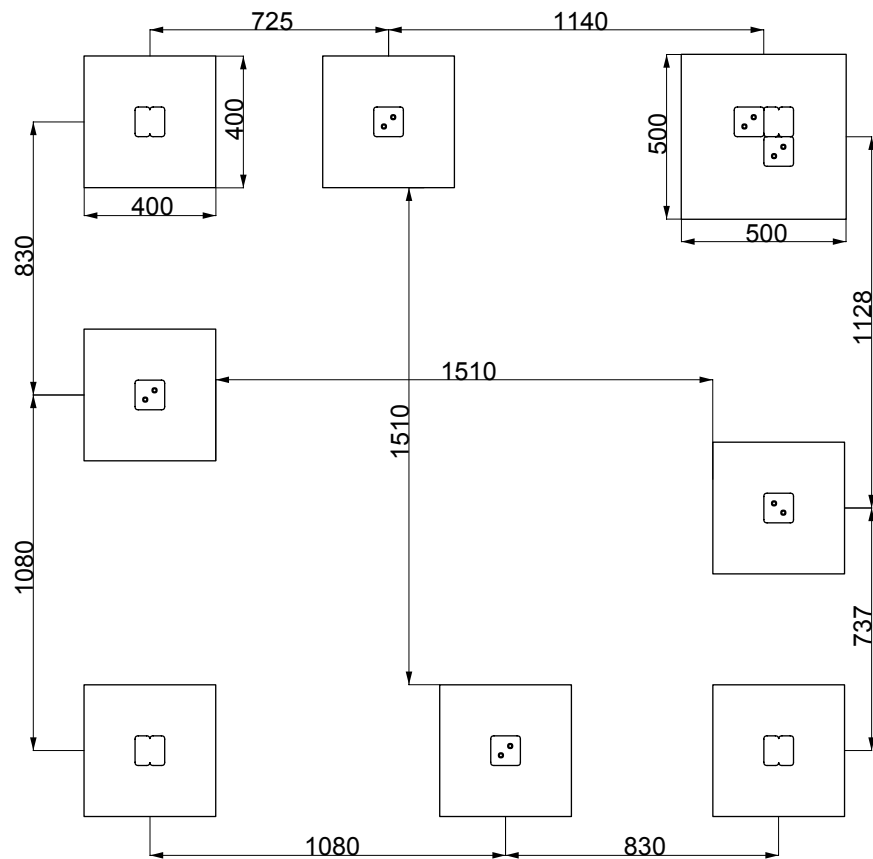


INSTALLATION INSTRUCTIONS

1 INSTALL 151A, 151C AND WALL PANEL ASSEMBLIES INTO THE GROUND

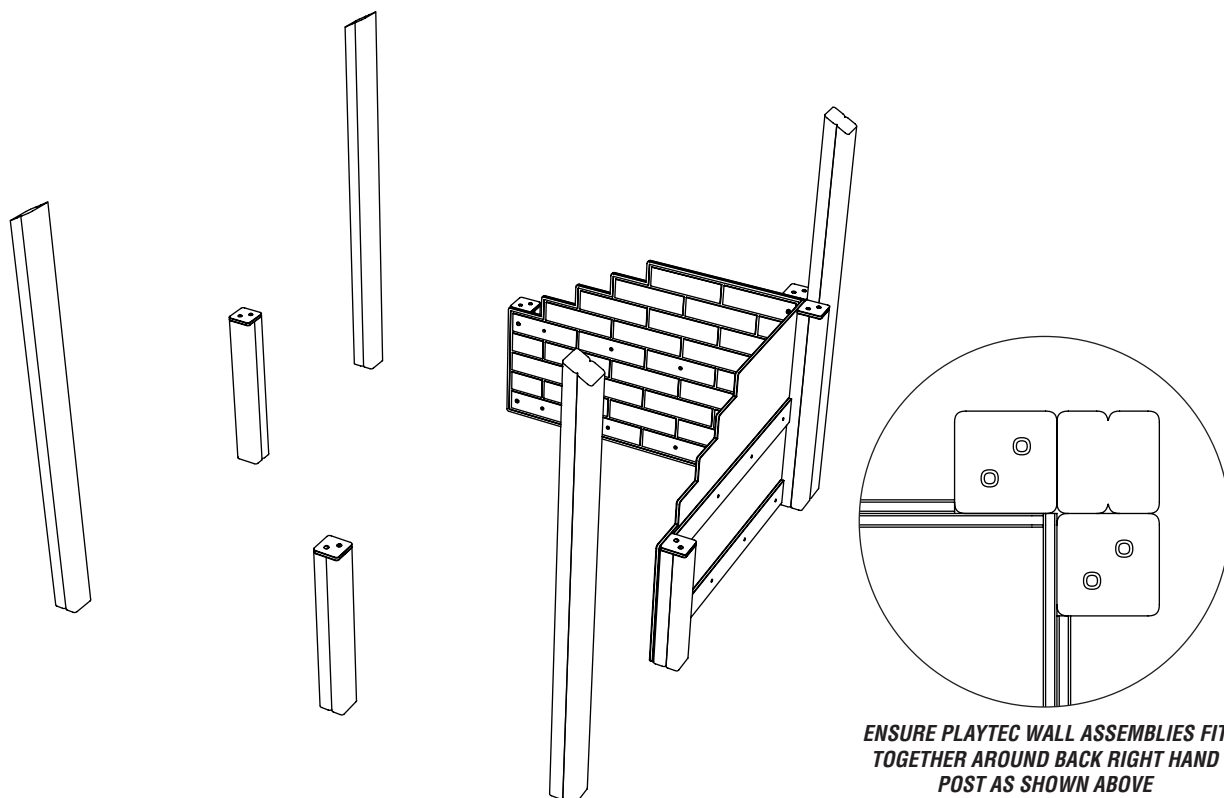


2 SCREW SIDE PANEL ASSEMBLY TO 151A AND 151C USING M8X120 WOOD SCREW

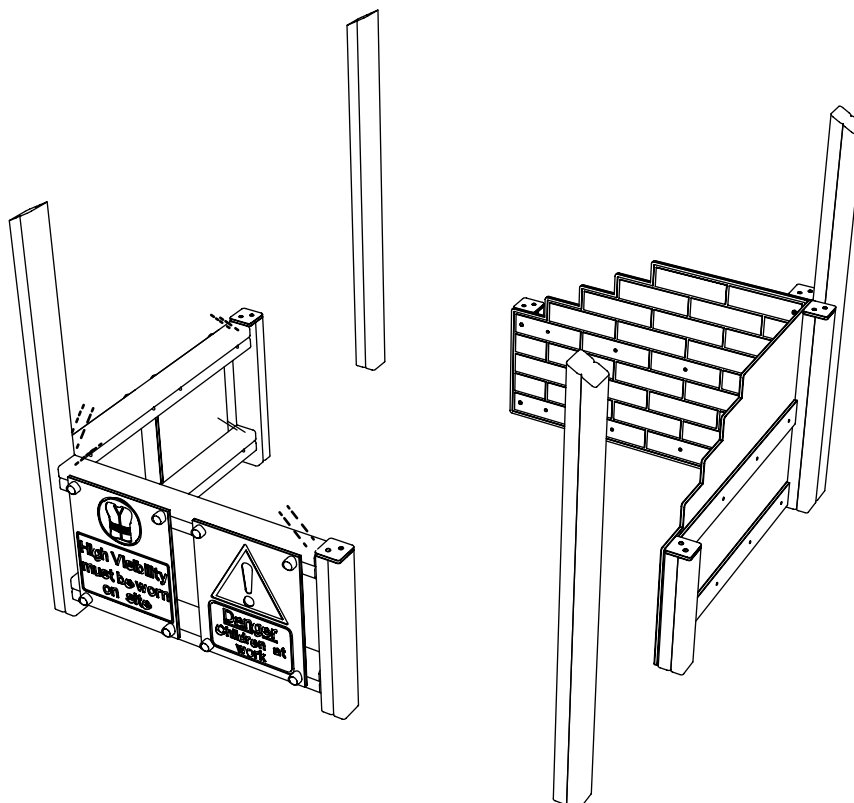

INSTALLATION INSTRUCTIONS


3

ATTACH ROOF ASSEMBLIES TO 151N
USING M8X120 WOOD SCREW

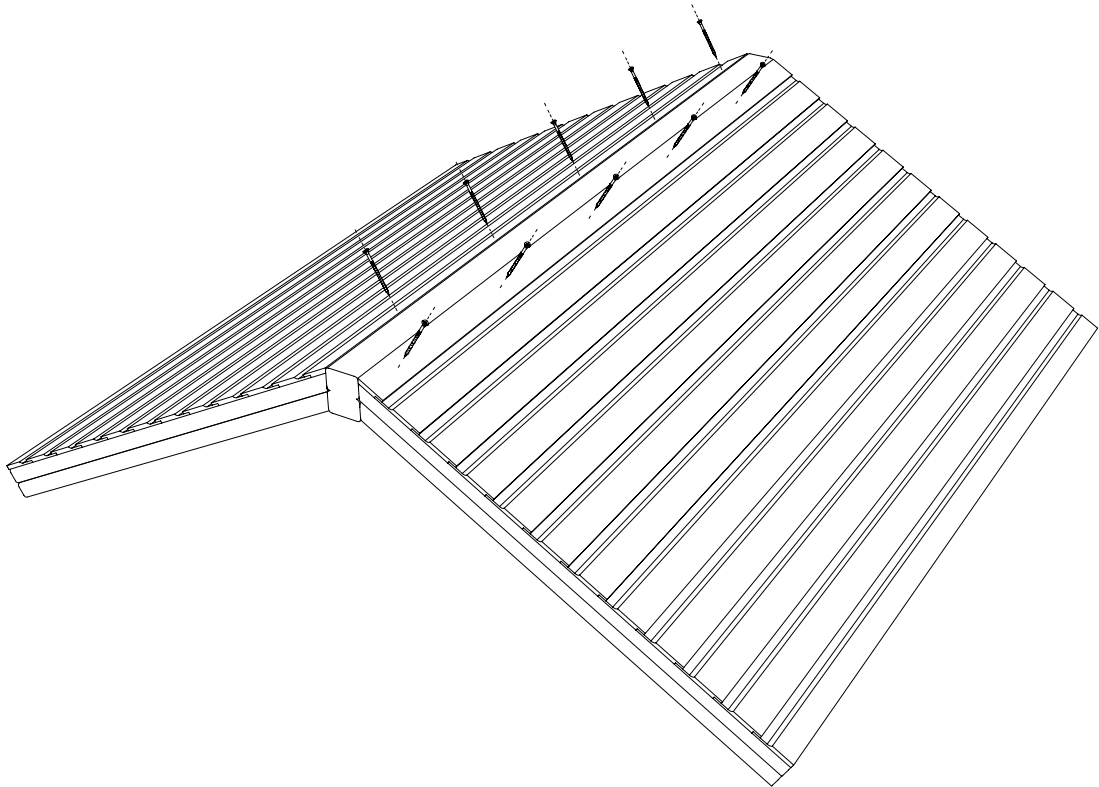

4

POSITION ROOF AND FIX TO UPRIGHTS
USING M8X180 WOOD SCREWS

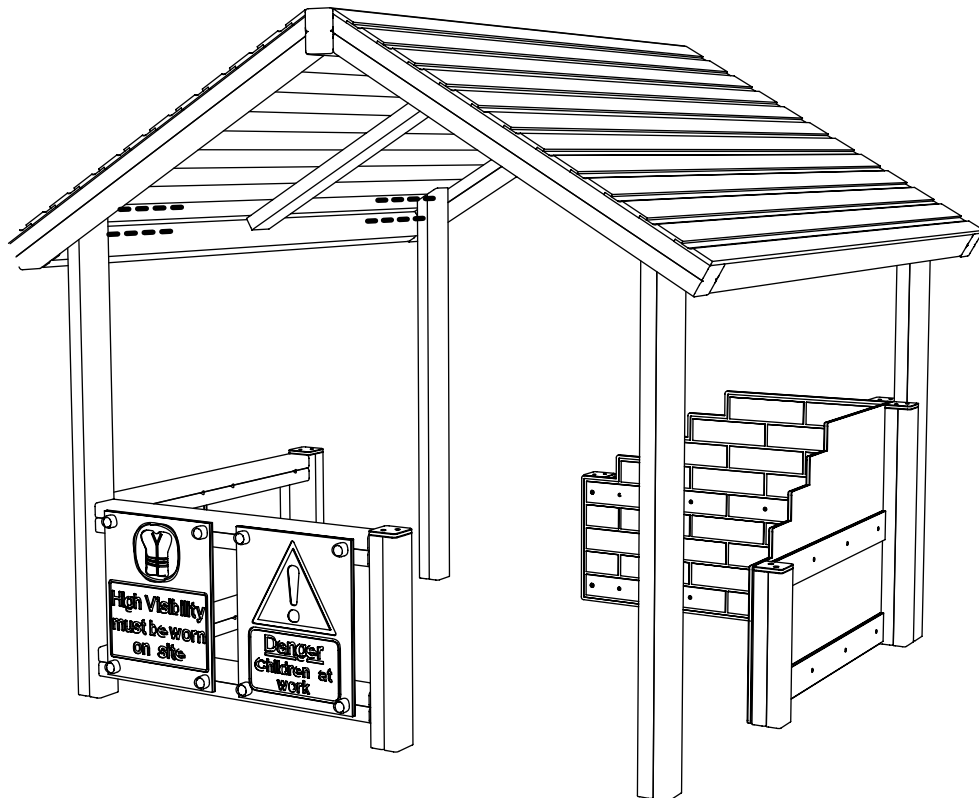


INSTALLATION INSTRUCTIONS

5

ATTACH 151P TO THE ROOF ASSEMBLIES


USING M8X180 WOOD SCREW FROM THE INSIDE

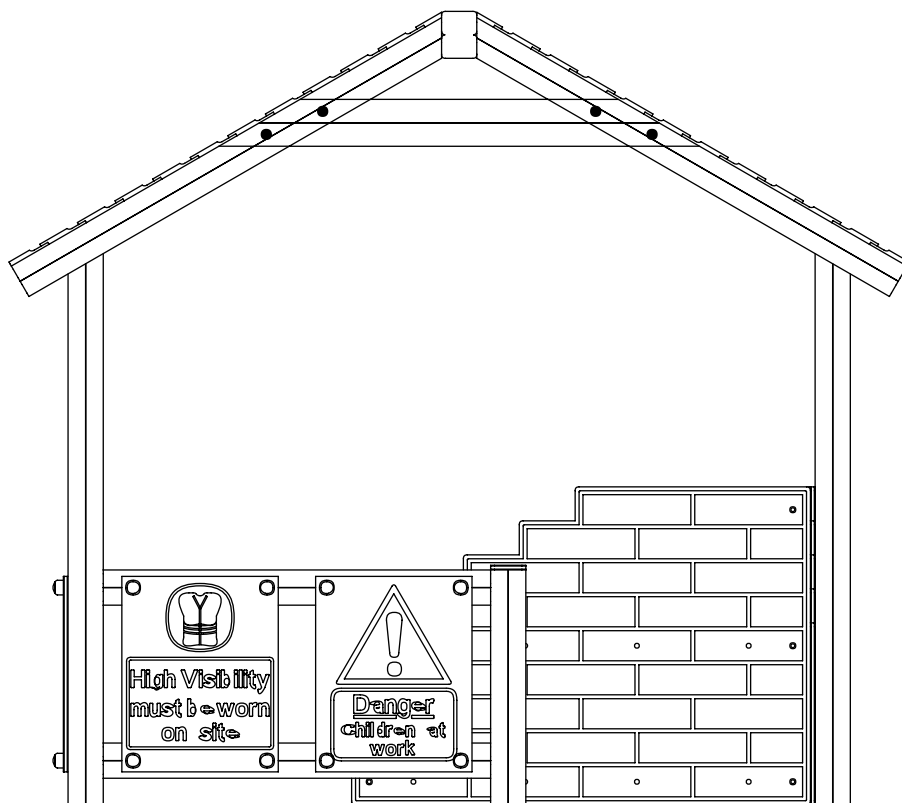

6

ATTACH 151K TO 151N AND ROOF ASSEMBLY TIMBERS


USING M8X120 WOOD SCREW - ENSURE TIMBERS ARE FLUSH WITH TOP OF 151N

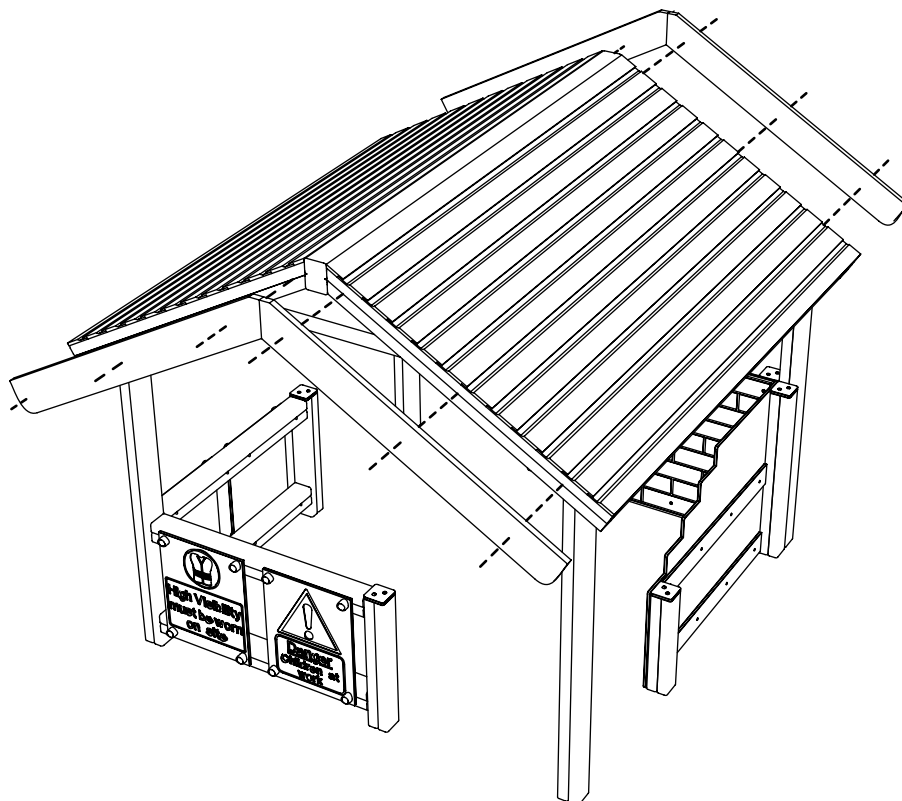

INSTALLATION INSTRUCTIONS


7

ATTACH 151M TO 151N
USING M8X120 WOOD SCREW

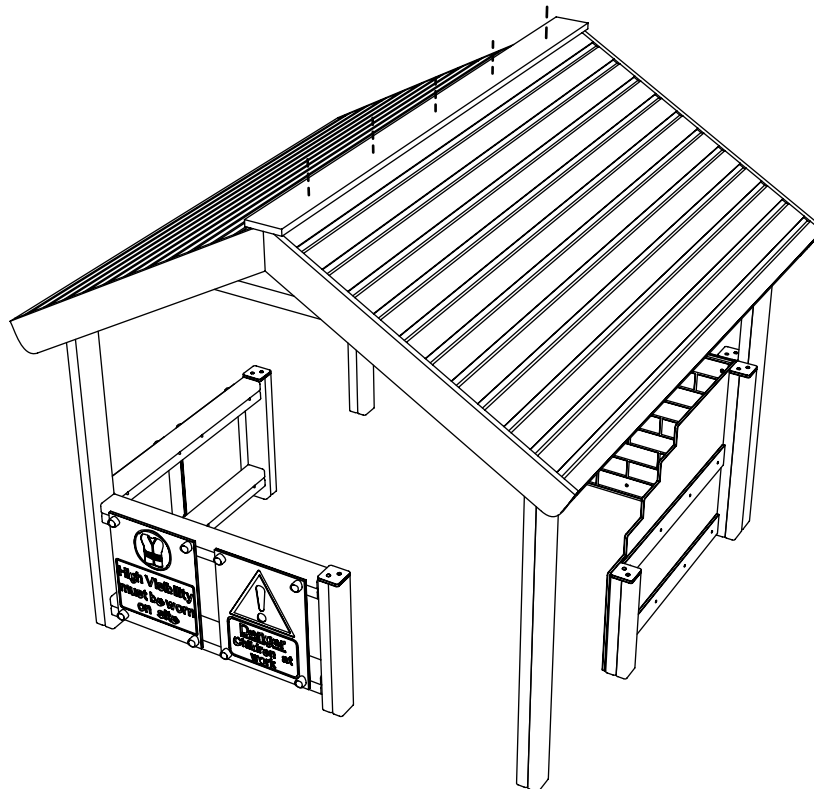

8

ATTACH 151L TO 151K
USING M8X180 WOOD SCREWS

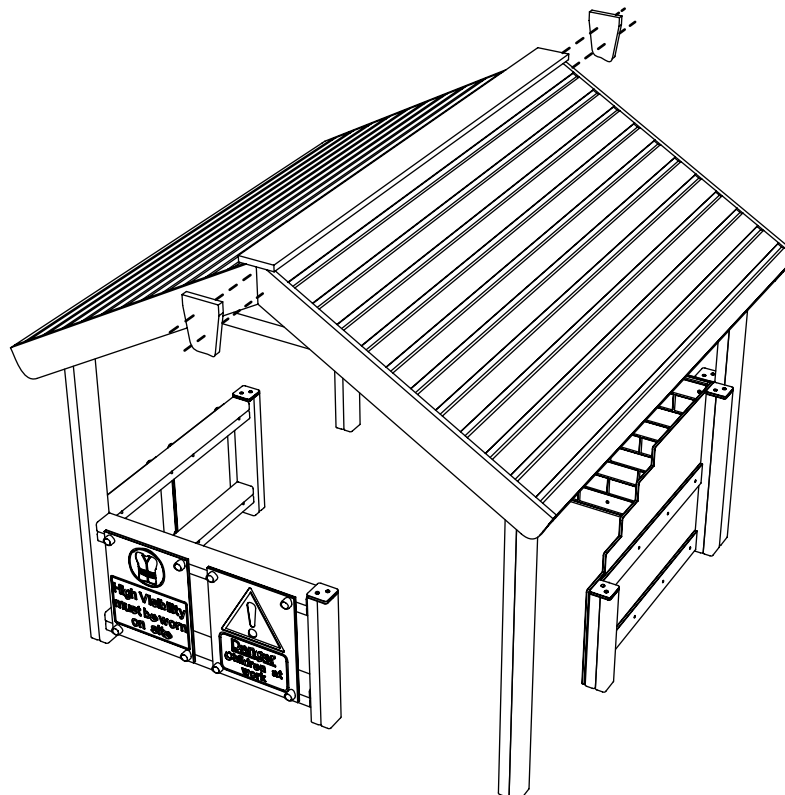

ADDITIONAL DIMENSIONS

