PB148 - DRUM KIT PLAYBOARD
Installation Instructions

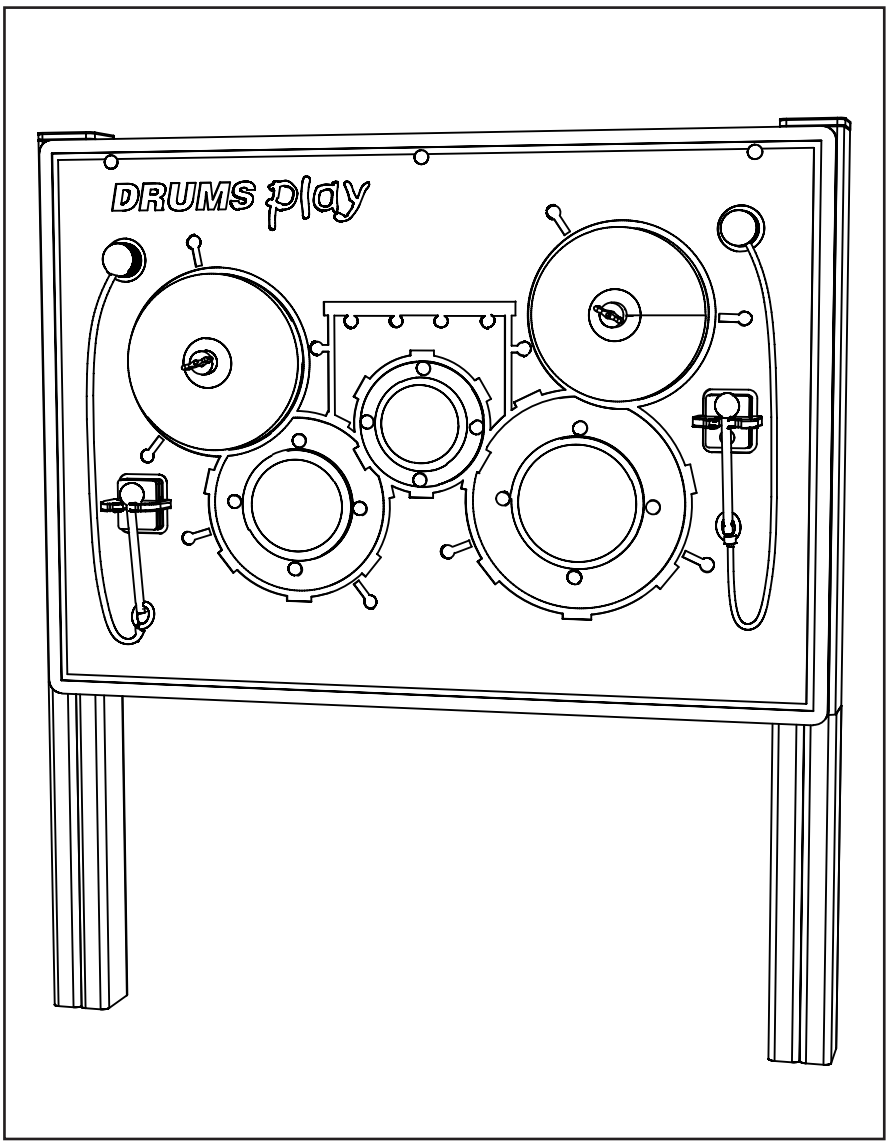



x4

97.M8X80CSK



x2

TIMBER POST

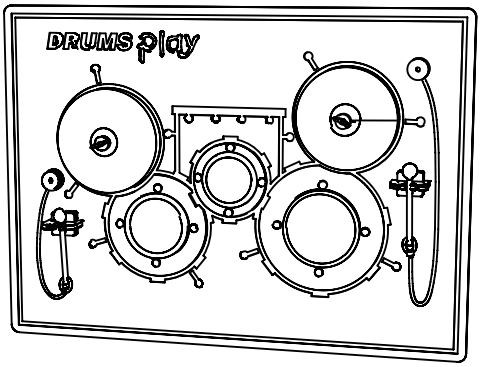

x1

JIGPB112 - DRUM KIT PLAYBOARD

INSTALLATION INSTRUCTIONS

1 ATTACH PLAYBOARD TO THE PLATFORM UPRIGHT TIMBERS

USING M12X150,M12 NUT & ENDCAP [X4]. (BLANK BOARD SHOWN FOR ILLUSTRATION ONLY)

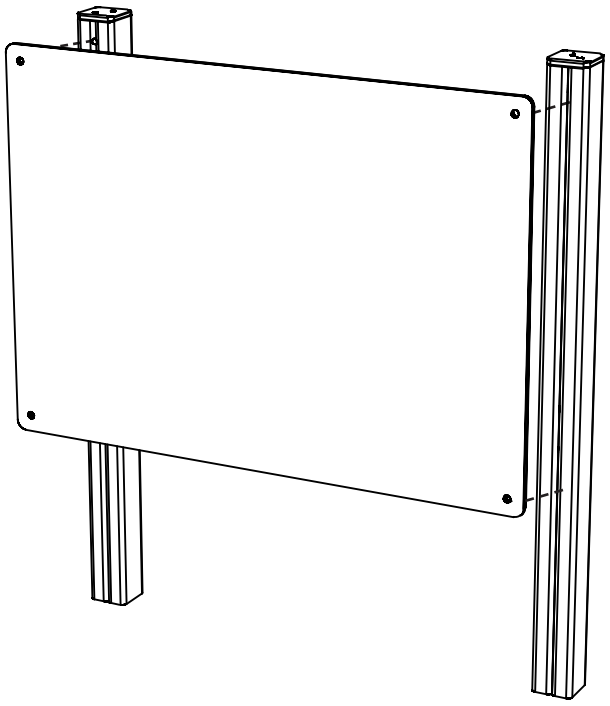

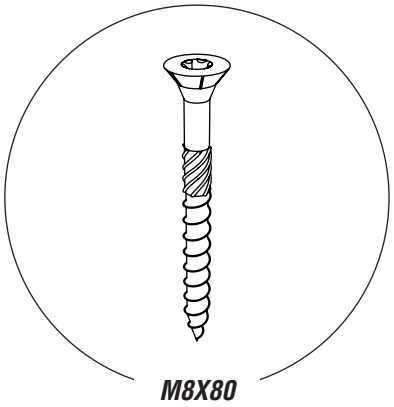

M8X80

2 PLEASE NOTE
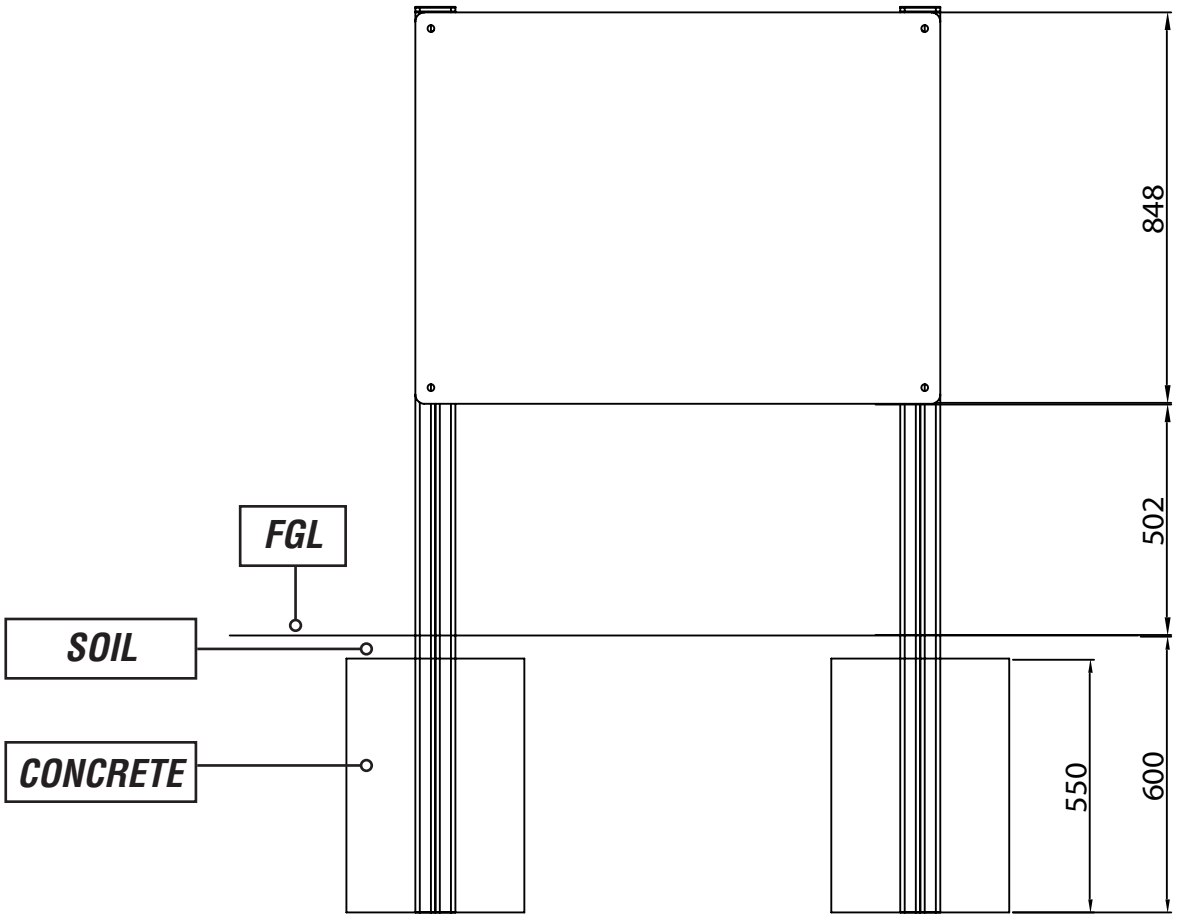
POSITION THE PLAYBOARD AS SHOWN BELOW (BLANK BOARD SHOWN FOR ILLUSTRATION ONLY)