



S111 - BASKET SWING

Installation Instructions

**creative
play**

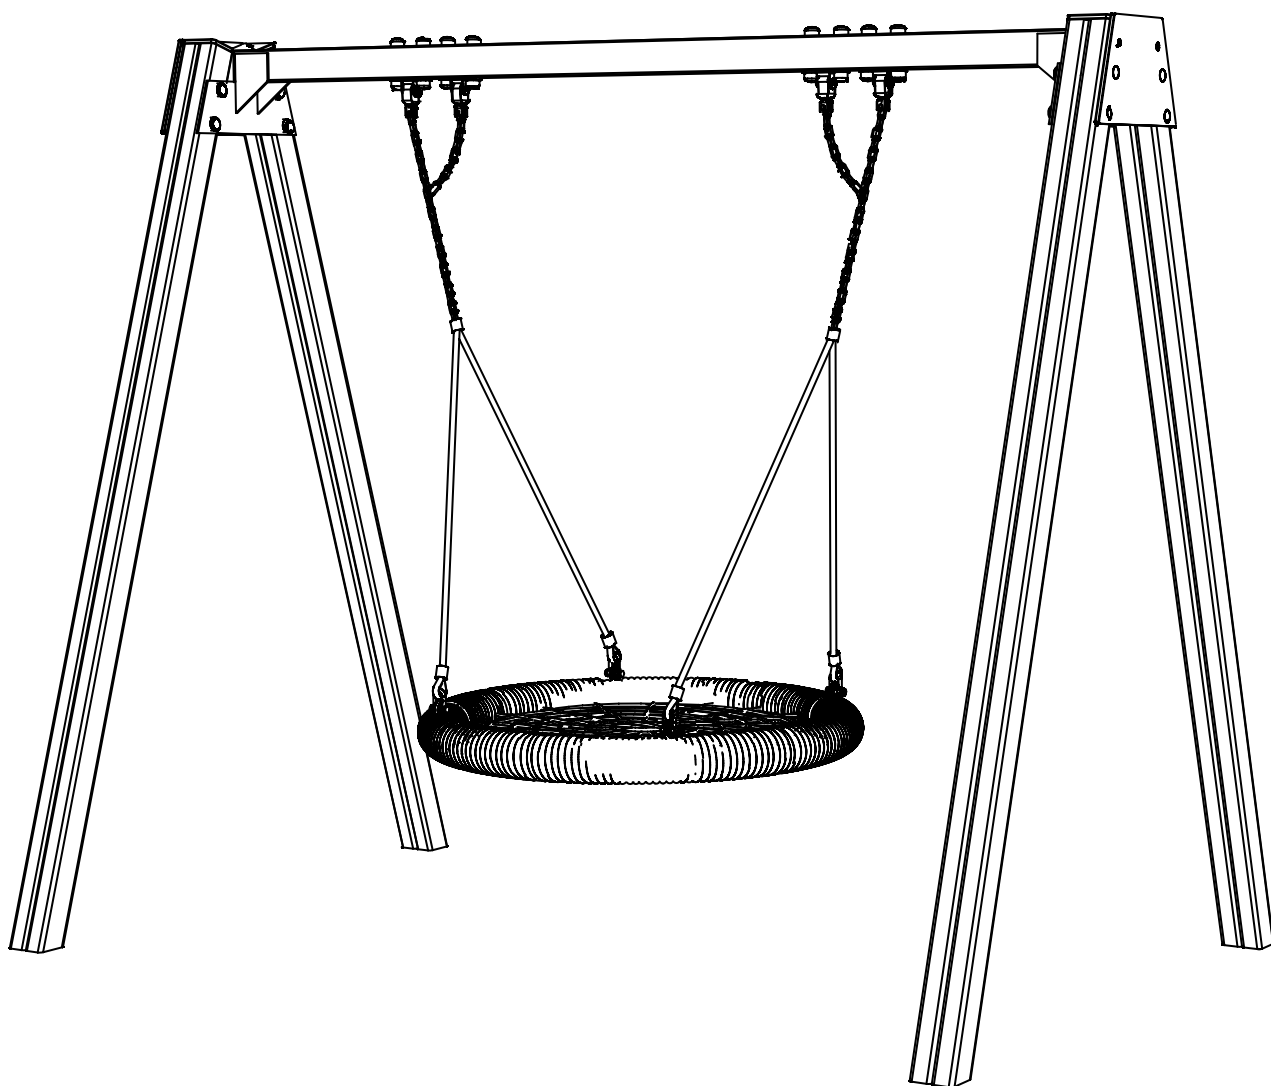

PARTS REQUIRED

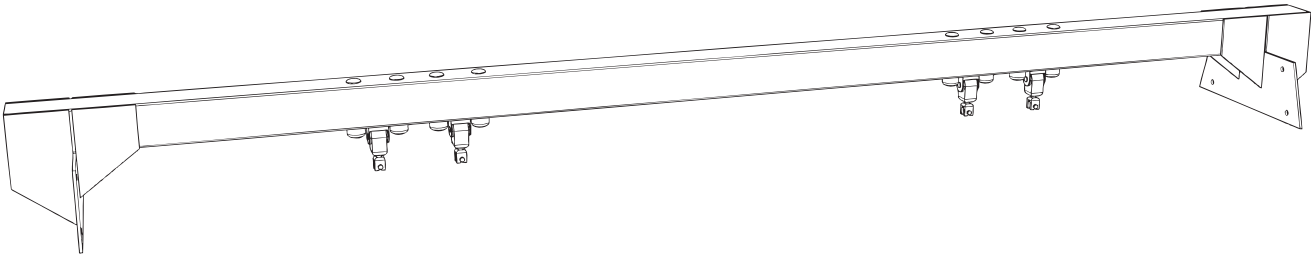


X1

BASKET SUPPORT BEAM



X4

M8X80 WOODSCREWS




X8

M12X160 BOLT




X8

M12 END CAP

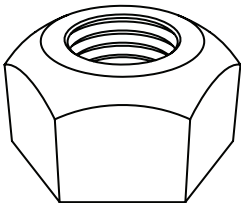


X8

M12 NYLOCS

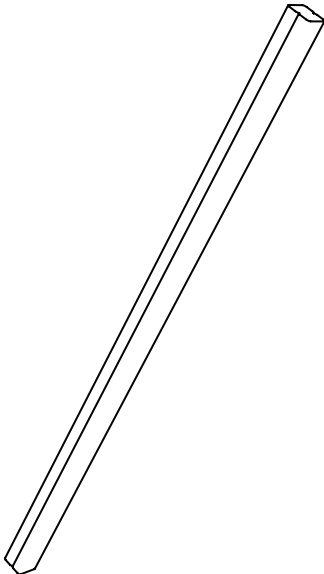

X4


S1 TIMBERS

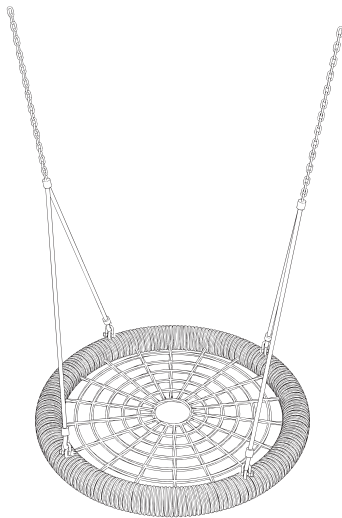

X1


BASET SEAT INC CHAINS

PARTS REQUIRED

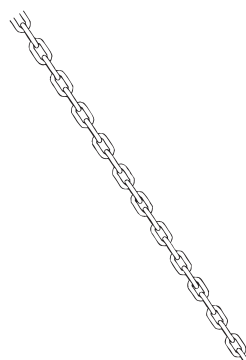


X2

300MM CHAIN

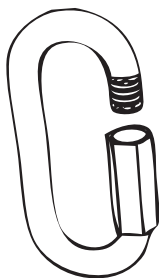

X2

QUICKLINK

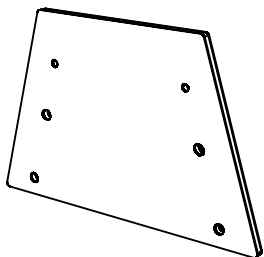

X2



PLAYTEC COVER



X8


M8 NUT CAP

FOUNDATION DETAILS

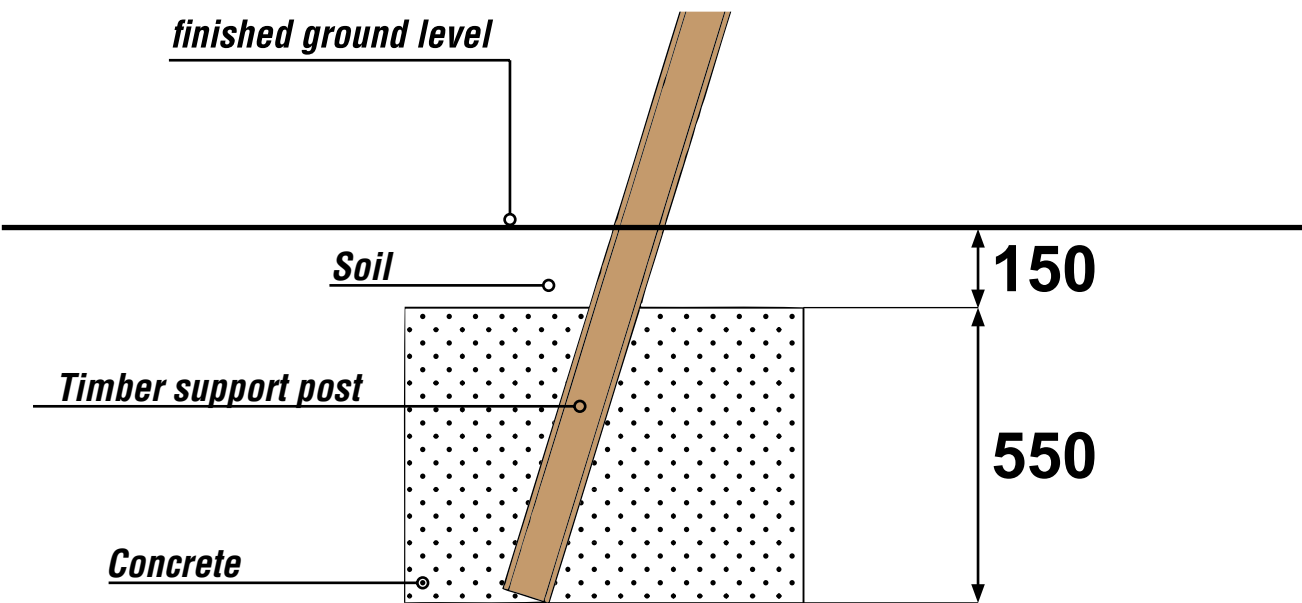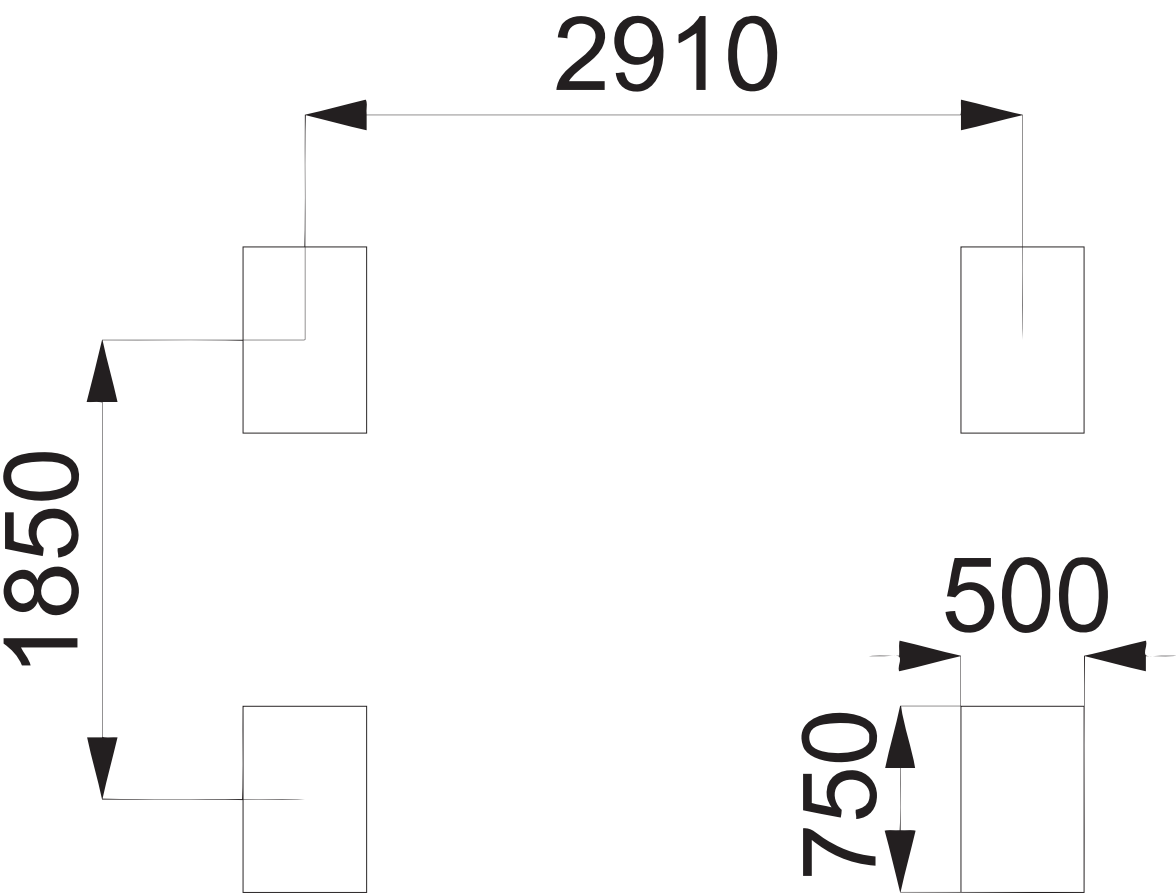


SURFACING DETAILS

-  = **SYNTHETIC**
-  = **LOOSE FILL**
-  = **AREA REQUIRED**

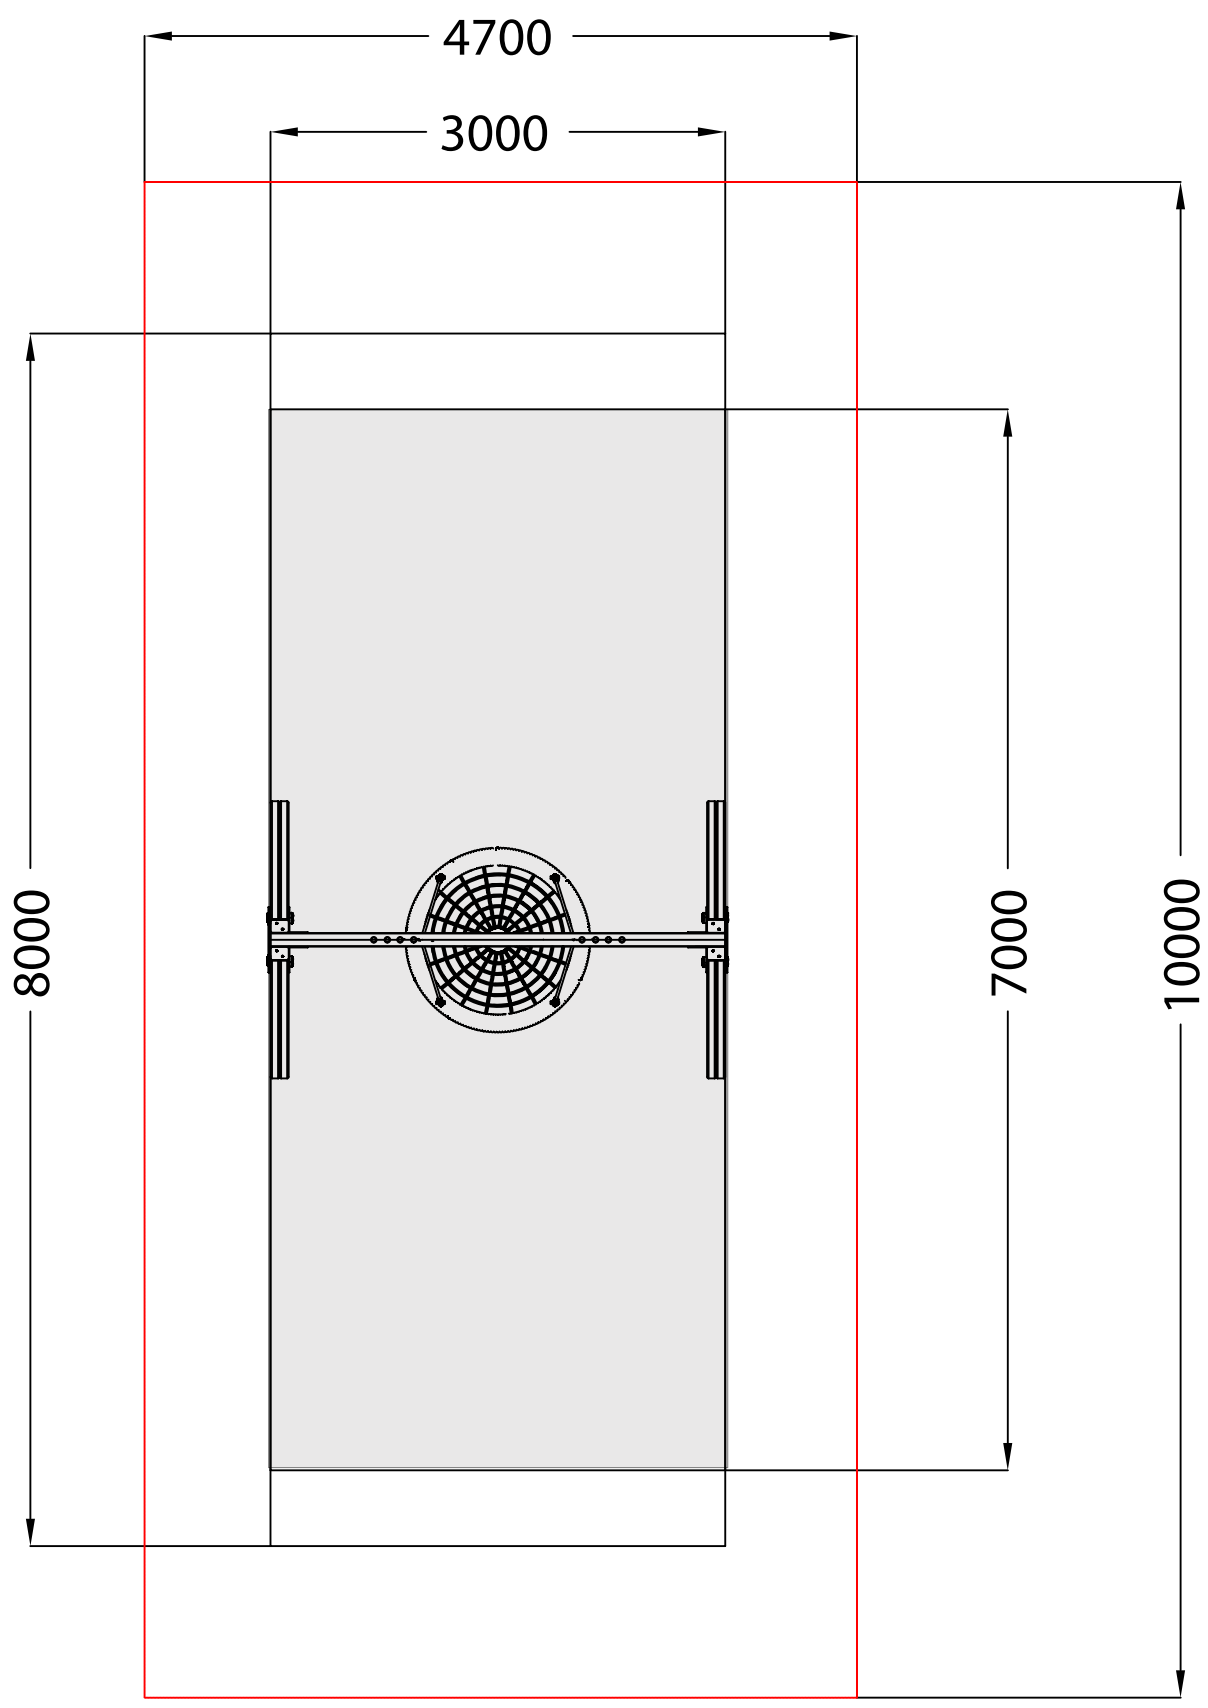


INSTALLATION INSTRUCTIONS

- 1** ATTACH PLAYTEC COVER AND S1 TIMBERS TO SUPPORT THE BEAM
USING M12X160 BOLTS [X8], M12 NYLOCS [X8] AND END CAPS [X8]

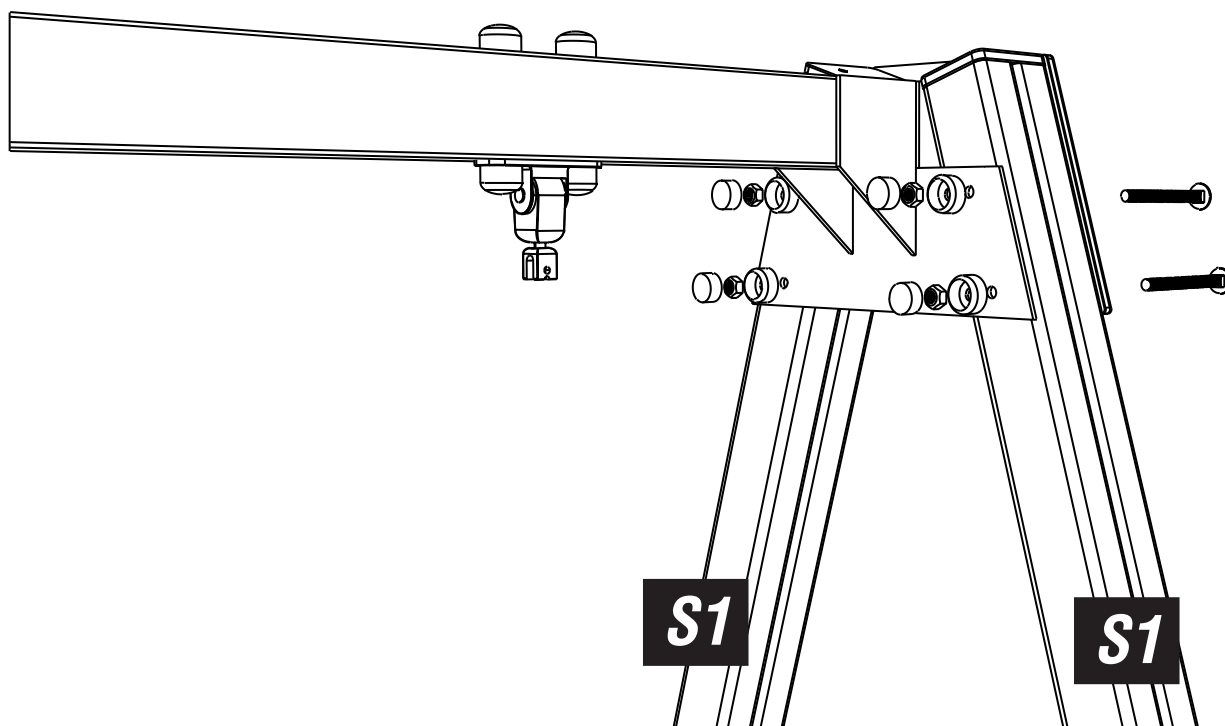


- 2** ATTACH PLAYTEC COVER TO TIMBERS S1
USING M8X80 WOODSCREWS [X4]

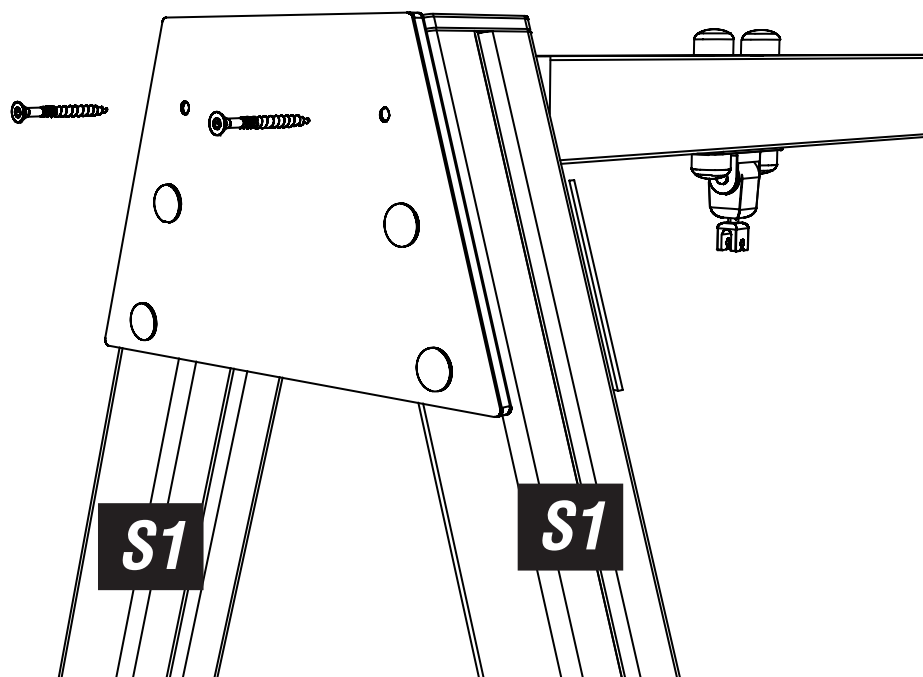

INSTALLATION INSTRUCTIONS


3

INSTALL THE ASSEMBLY FOLLOW FOUNDATION DETAILS

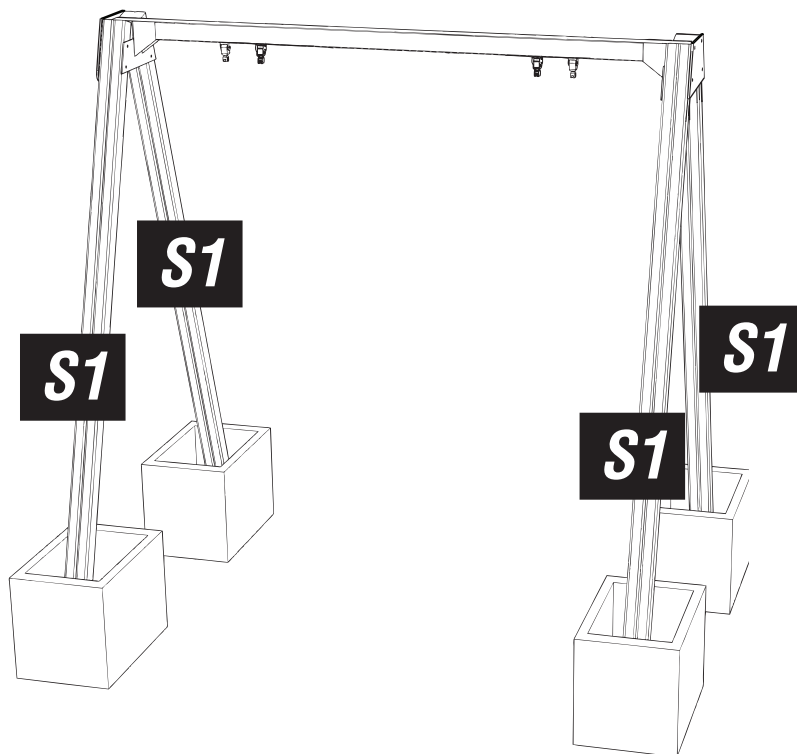

4

ATTACH SEATS TO BEAM FOLLOW DIMENSION DETAILS ON NEXT PAGE

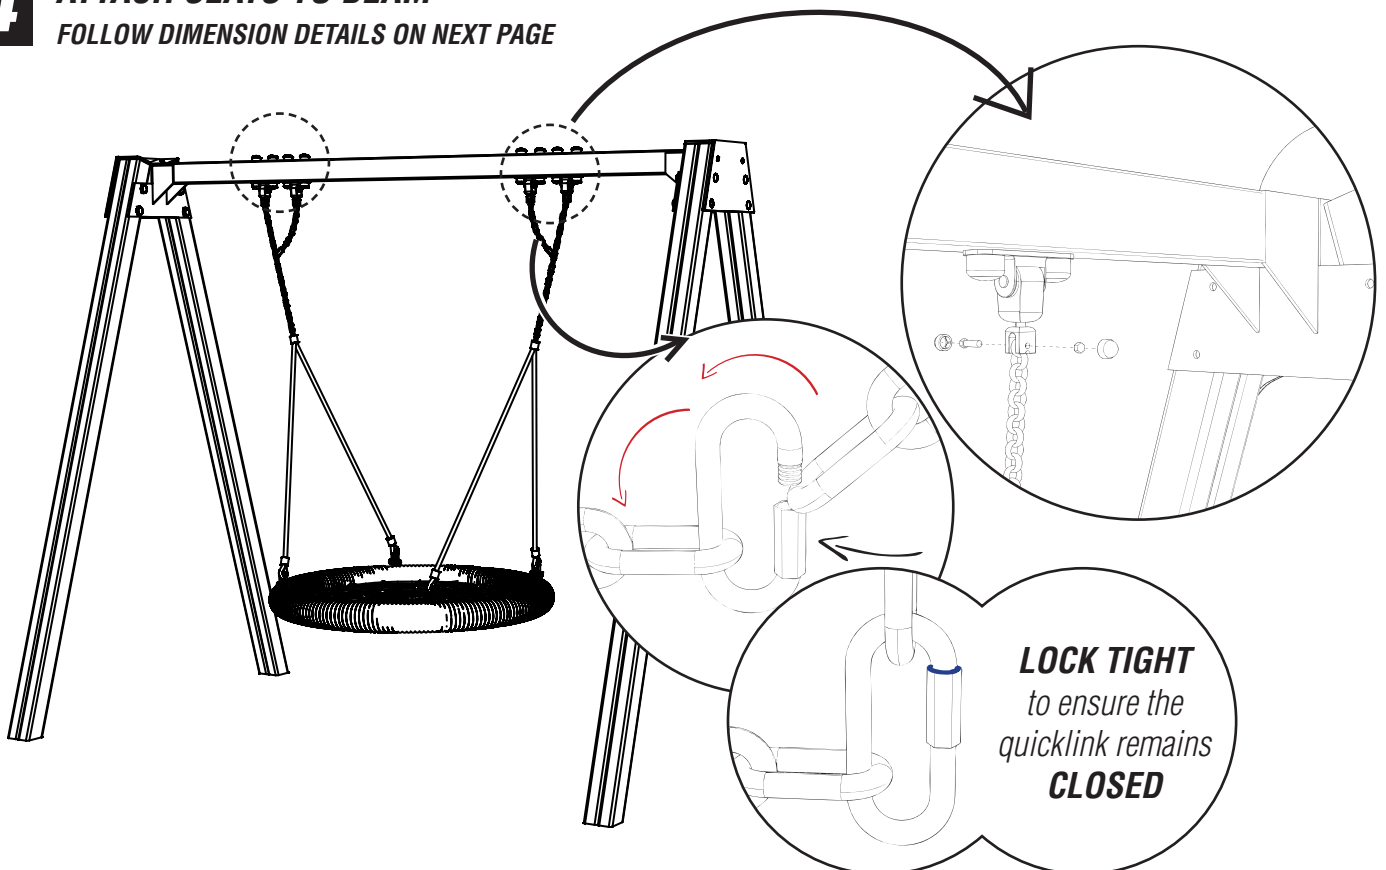

ADDITIONAL DIMENSIONS

