



S111-R - BASKET SWING ROUND

Installation Instructions

**creative
play**

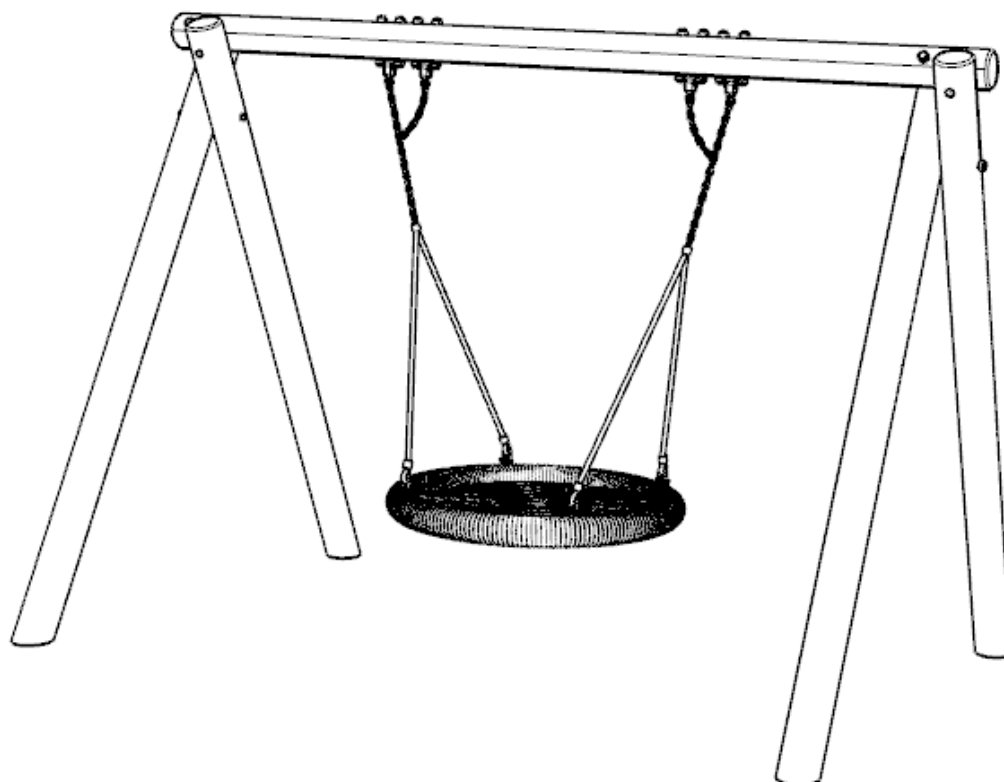


PARTS REQUIRED

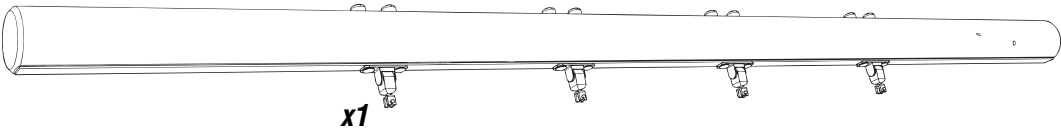

TOP BEAM - DOUBLE SWING




UPRIGHTS S101R1

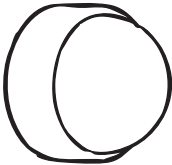


BLACK M8 NUT CUP




BASET SEAT INC CHAINS

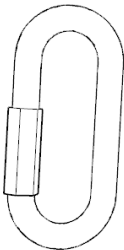


QUICKLINK

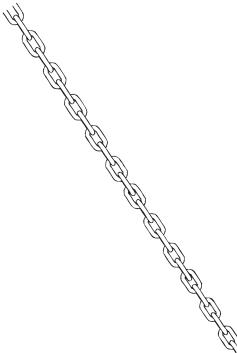


300MM CHAIN

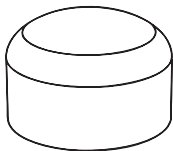

END CAPS

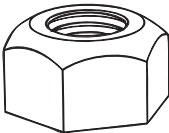


M12 NYLOC NUT



M12 x 320 SQUARE CUP BOLT

FOUNDATION DETAILS

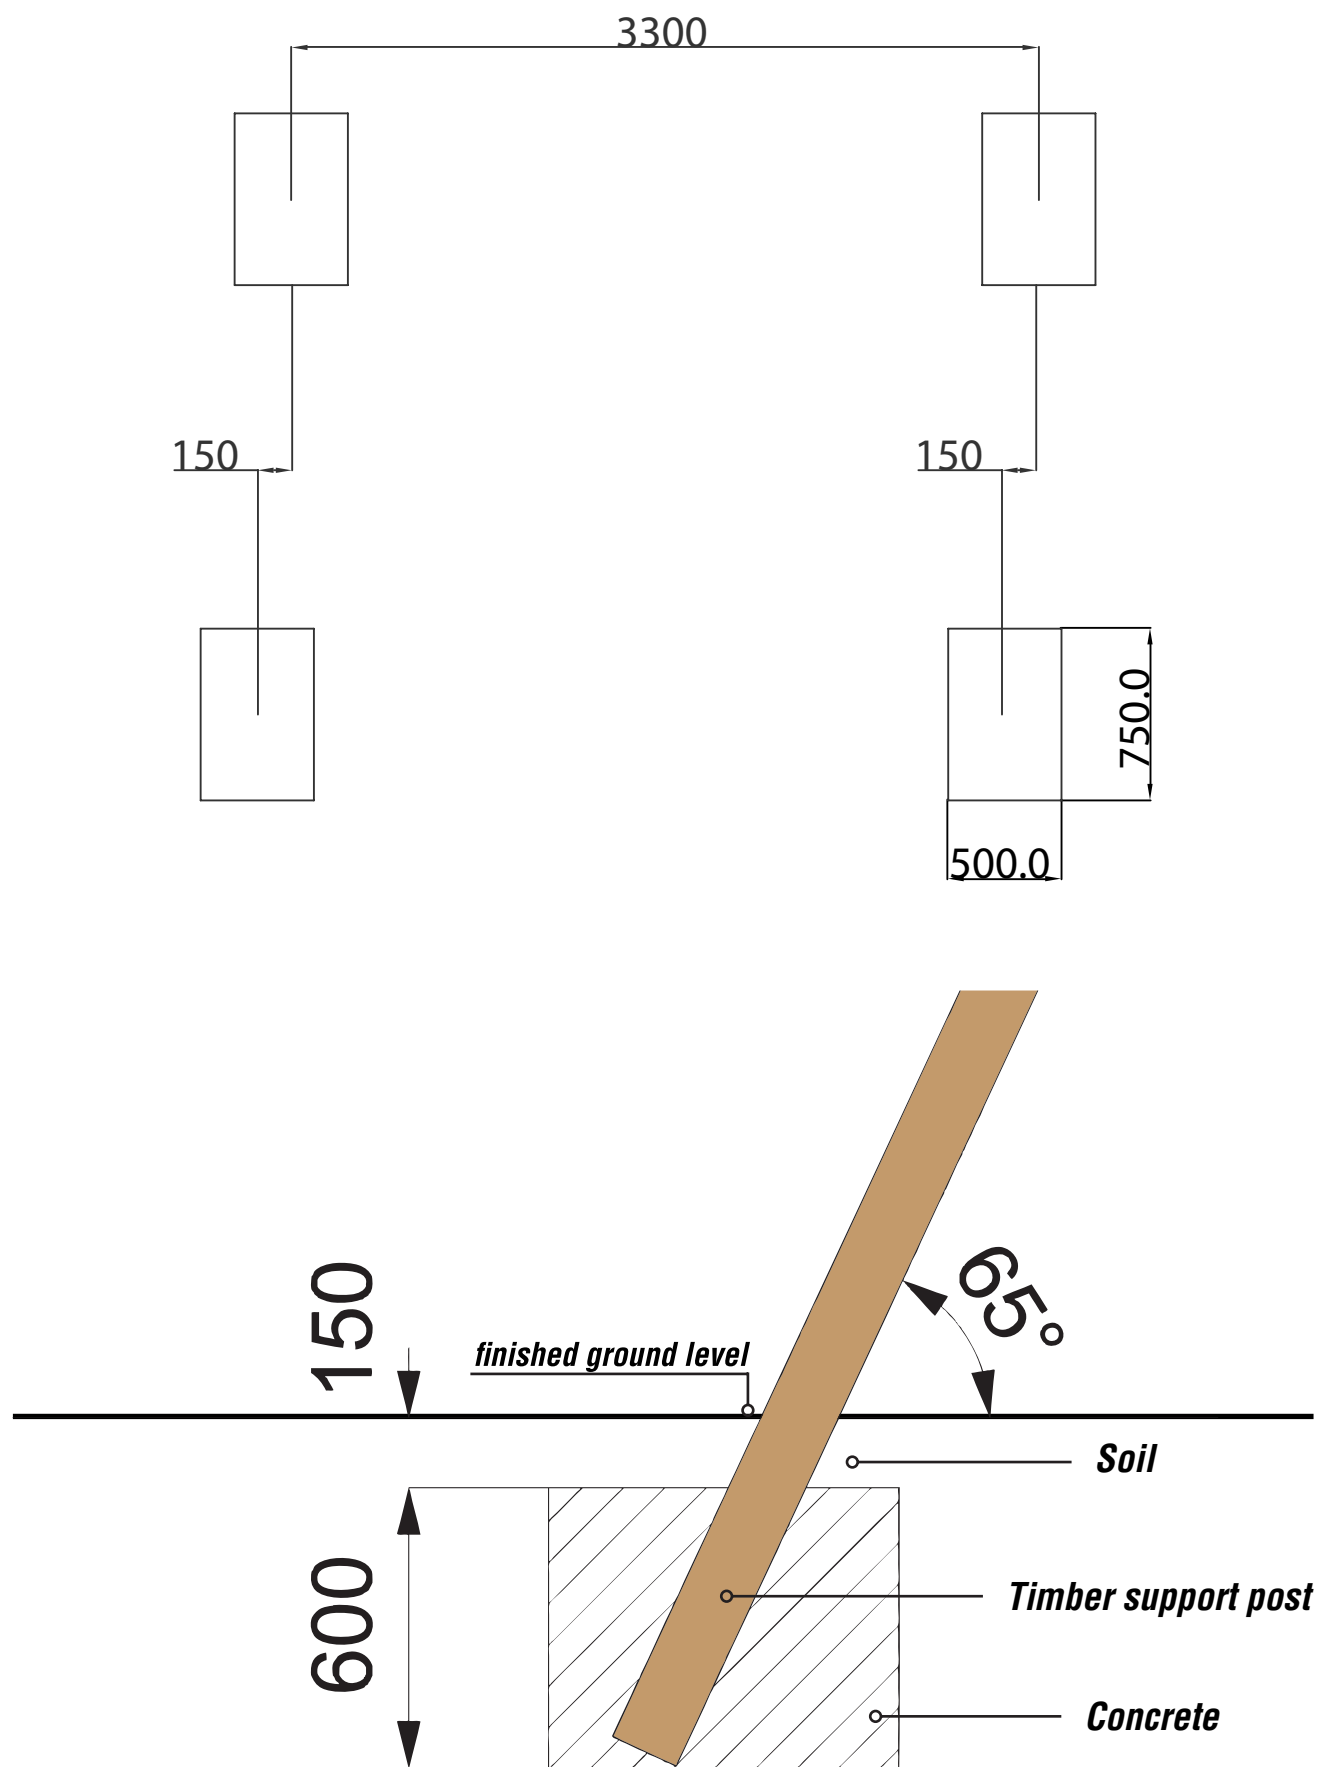


SURFACING DETAILS

- - - - - = MINIMUM SPACE

———— = SURFACE AREA

■ = SYNTHETIC

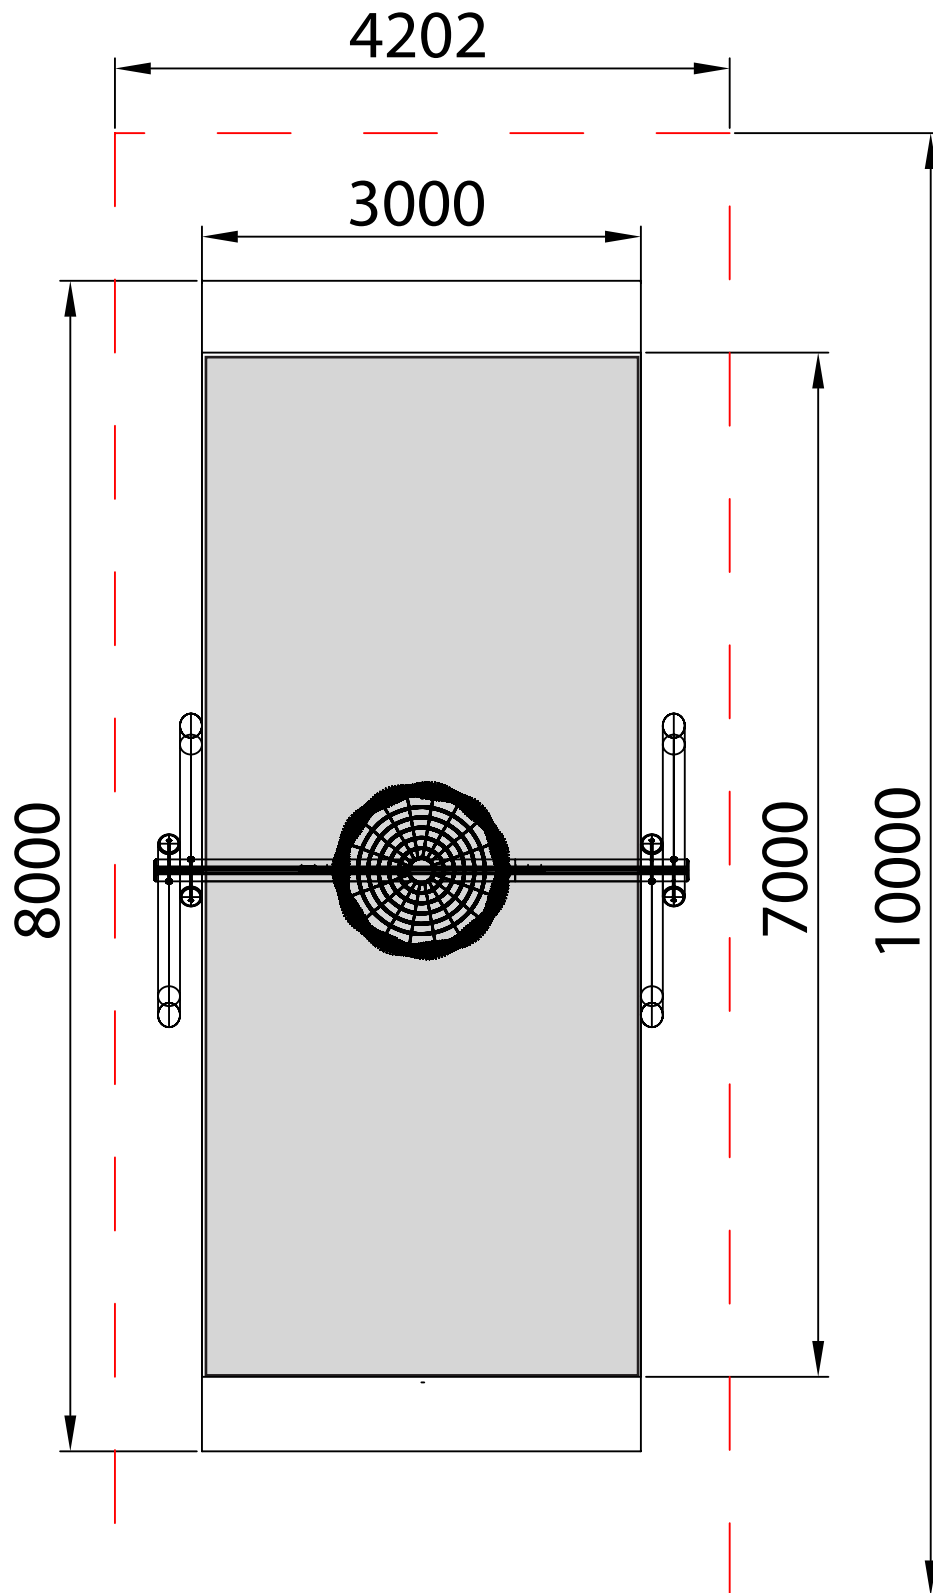


INSTALLATION INSTRUCTIONS

1

BUILD THE DOUBLE SWING FRAME

USING M12X310 X 6 / NYLOCS X 6 / END CAPS X 6

OUTSIDE TIMBERS

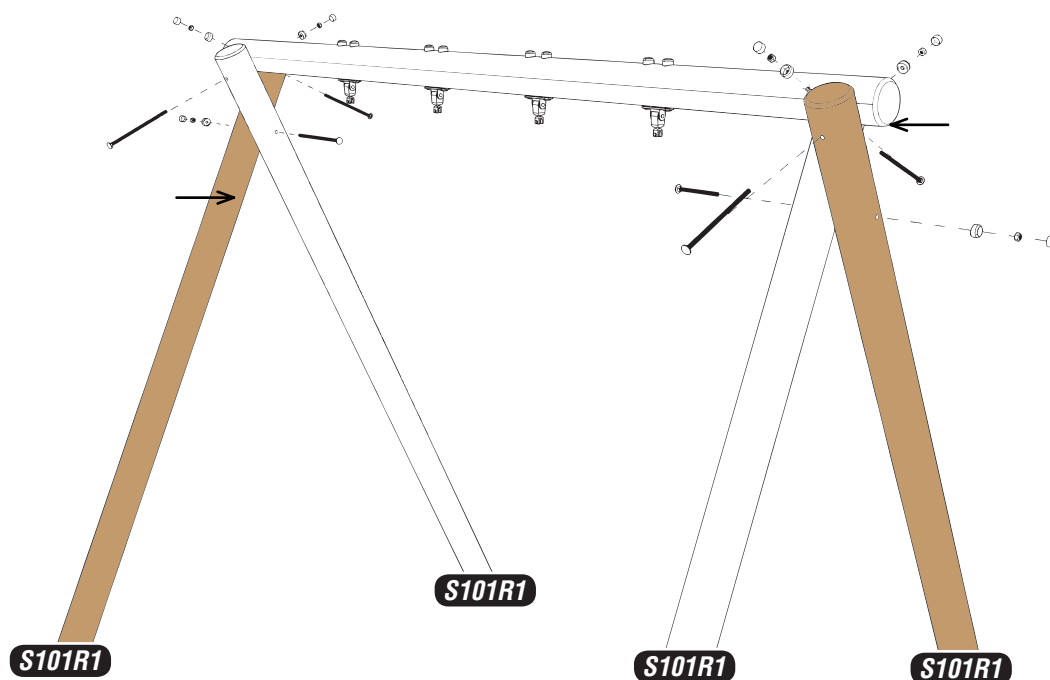


2

BUILD THE 2ND DOUBLE SWING FRAME

USING M12X310 X 6 / NYLOCS X 6 / END CAPS X 6

OUTSIDE TIMBERS

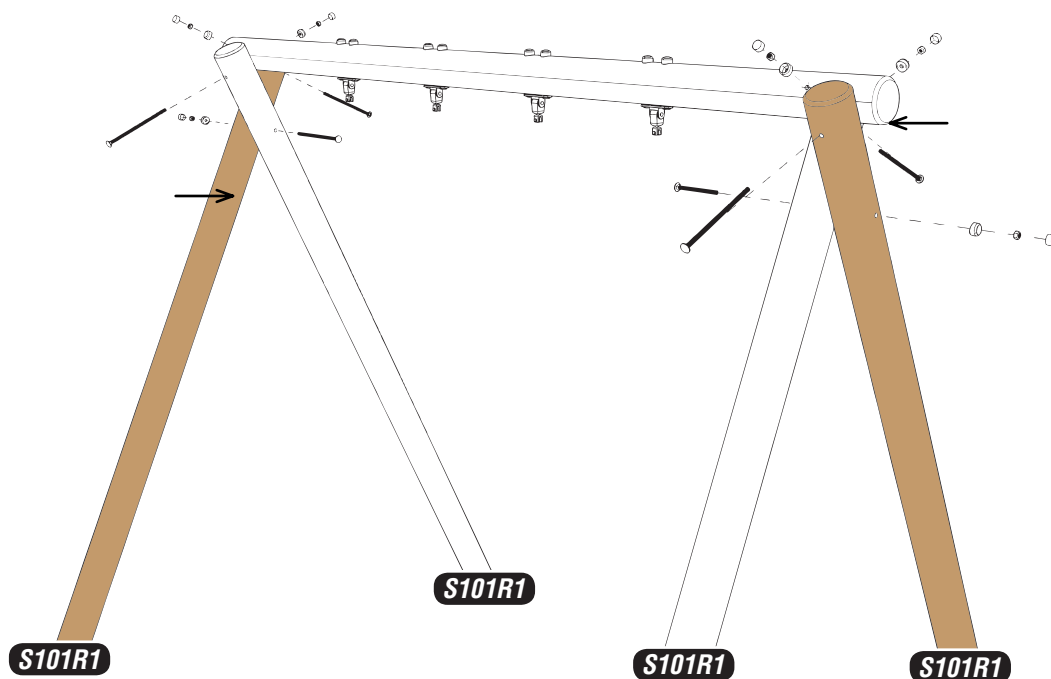


INSTALLATION INSTRUCTIONS

3

INSTALL ASSEMBLY


FOLLOW FOUNDATION DETAILS

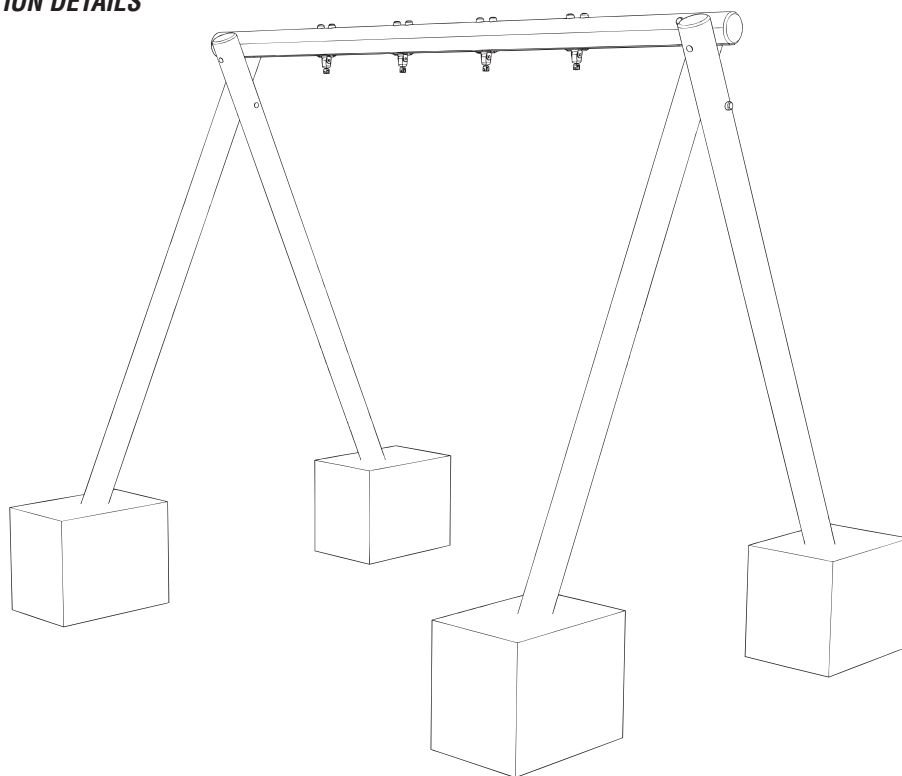

4

INSTALL SEATS ACCORDING TO HEIGHT SPECIFIED IN ADDITIONAL DIMENSIONS

USING M8 NUT CUP X8 . ADDITIONAL DIMENSIONS FOR SEAT HEIGHT

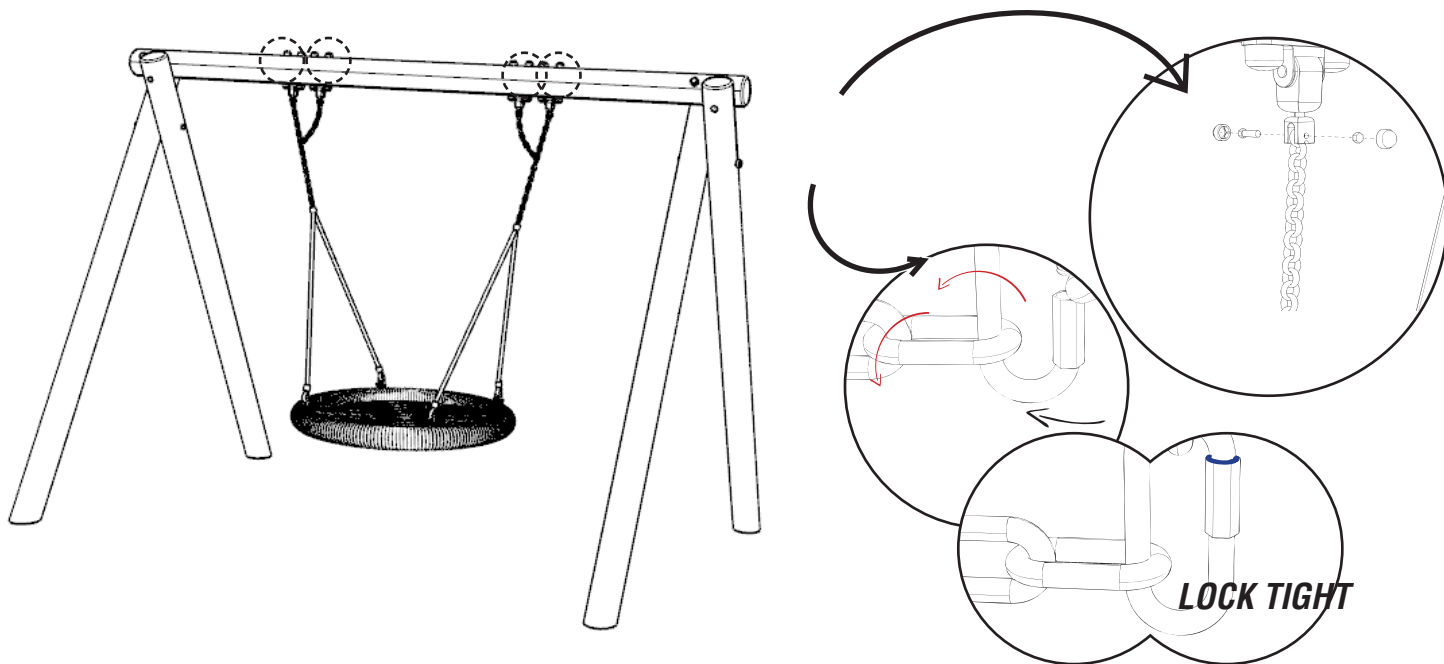

ADDITIONAL DIMENSIONS

SEAT HEIGHT BELOW

