



TRELLIS PANEL

Installation Instructions


**creative
play**

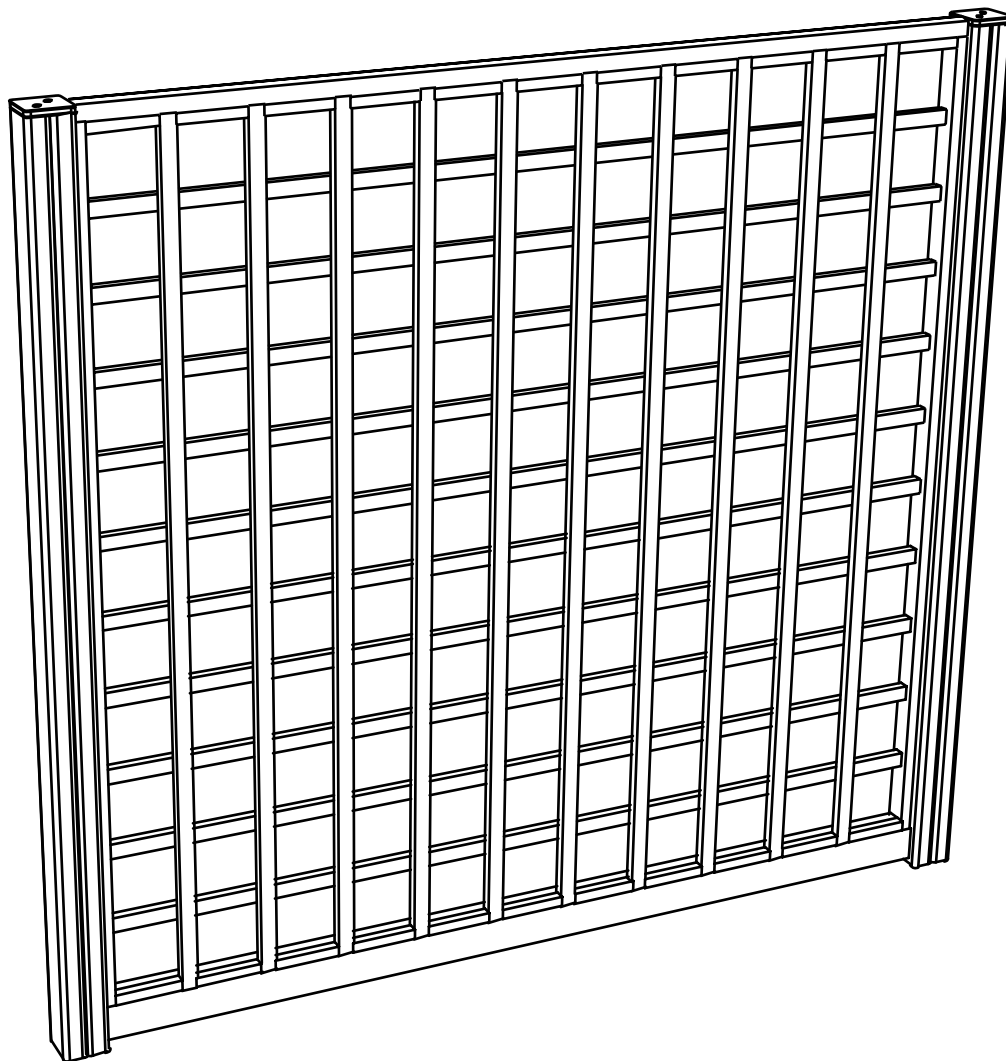

PARTS required



x2 (SG005a TIMBERS)


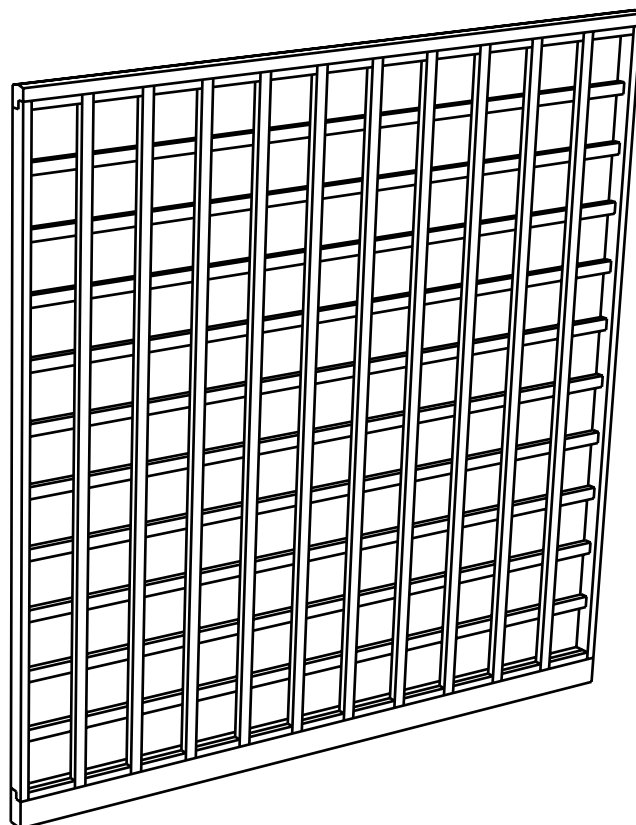


x1 (PRE-ASSEMBLED TRELLIS PANEL)





x12 (FM80 'WOOD SCREWS')

TOOLS required

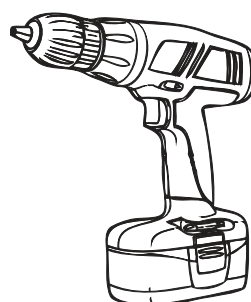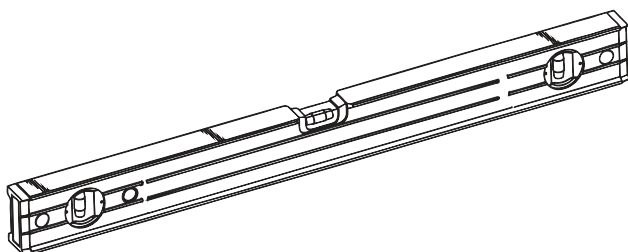

Foundation Details

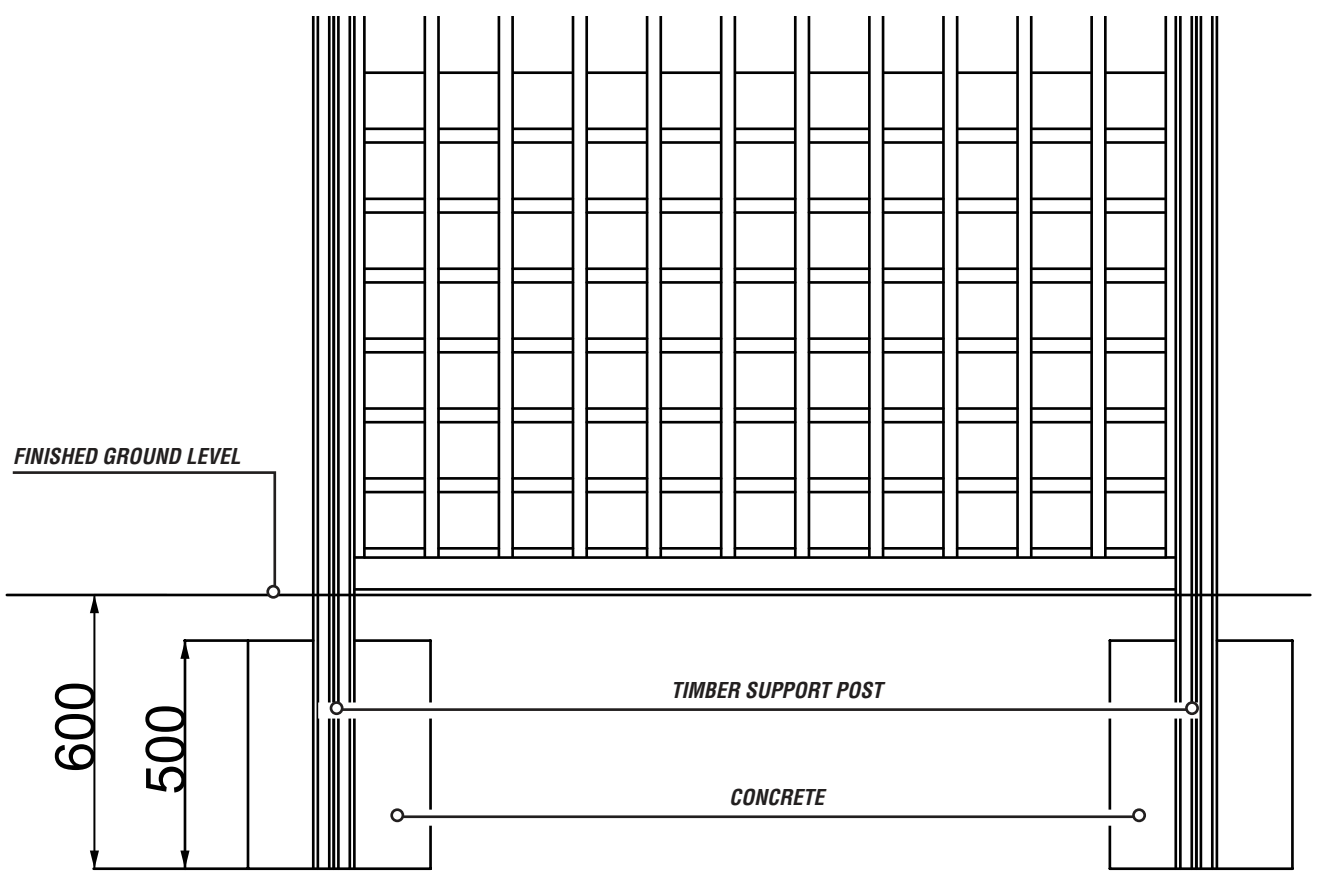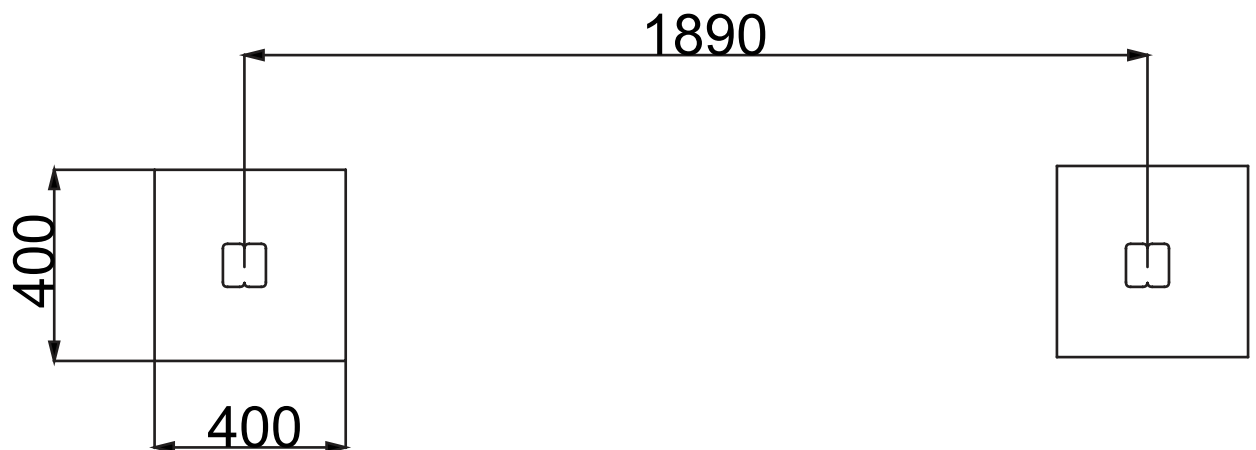

Installation Instructions

1

Position the SG005a TIMBERS

As shown on the FOUNDATION INSTRUCTIONS (1800mm between timbers)



SG005a




SG005a


2

Attach the TRELLIS PANEL to the UPRIGHT TIMBERS

Using 12 x FM80 WOOD SCREWS - (6 each side)

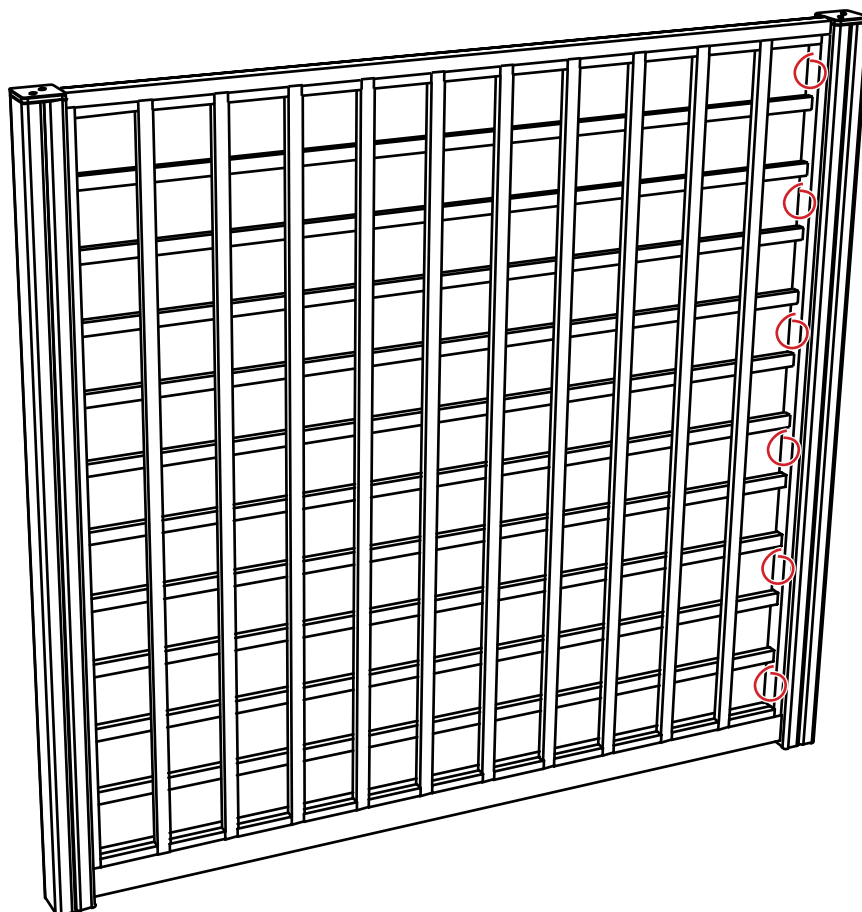

Additional Dimensions

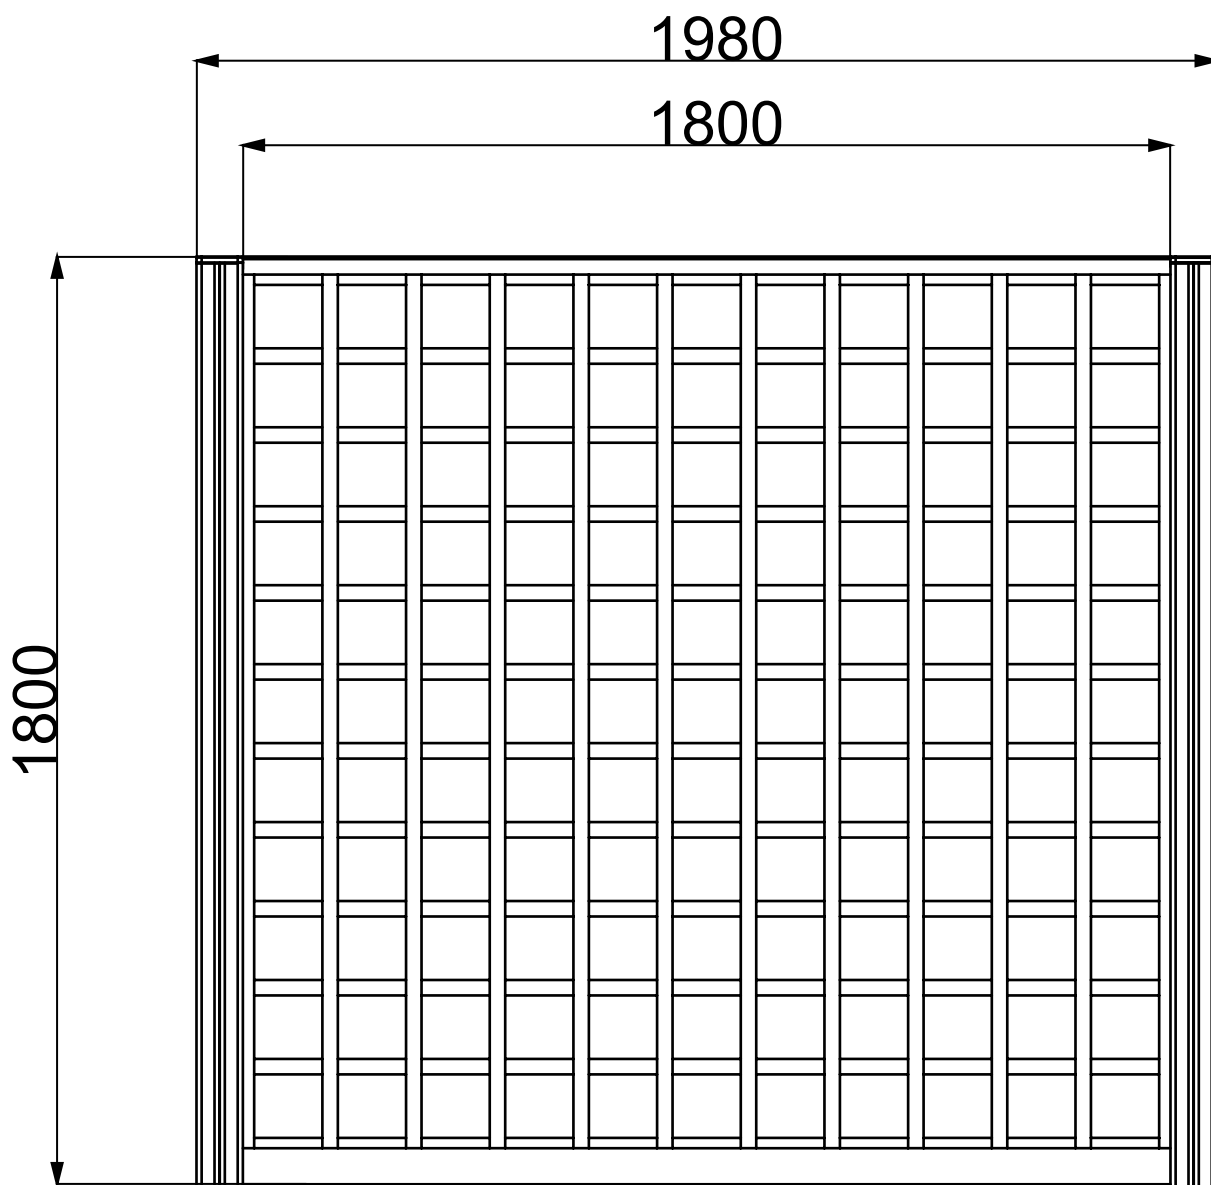

NOTES:

- 1) THE TRELLIS 'PANEL' measures 1800mm x 1800mm
- 2) THE OVERALL SIZE including the UPRIGHTS TIMBERS is 1980mm WIDTH