



# SR108 - DOG SPRING RIDER (SINGLE)

## Installation Instructions

creative  
play

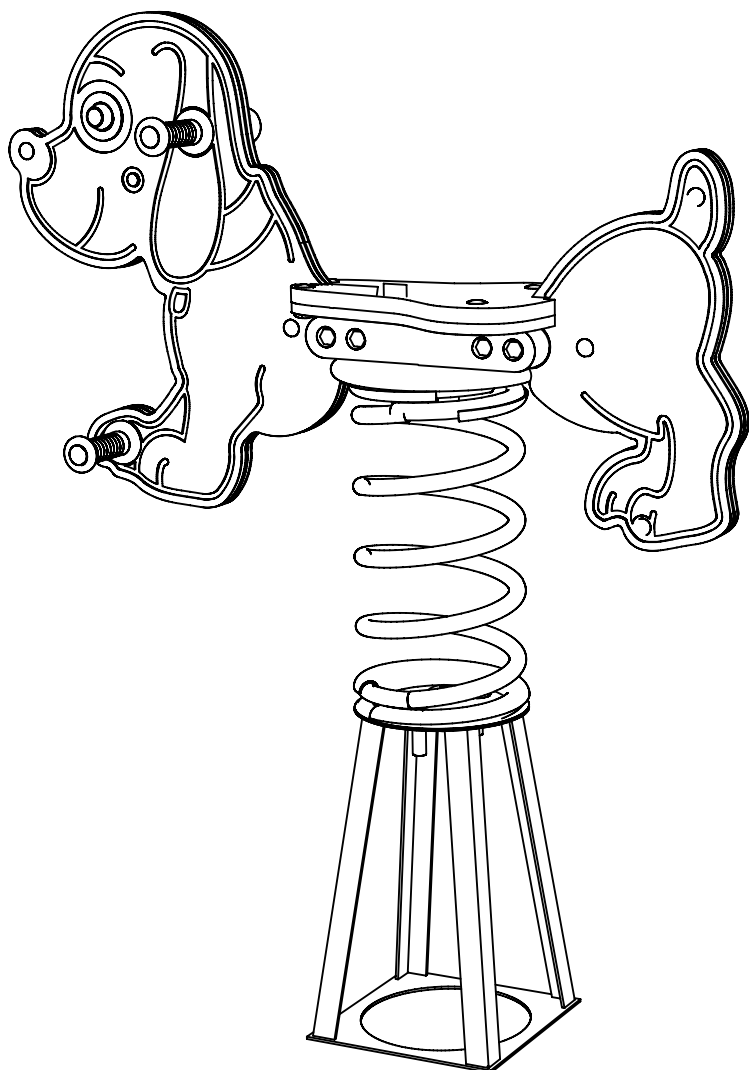


SR108 - DOG SPRING RIDER

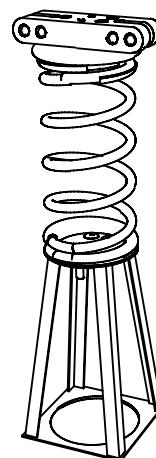

x1

SPRING ASSEMBLY SET

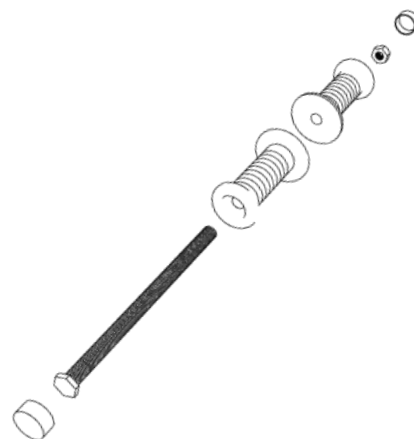


x2

HANDLE ASSEMBLY (SETS)




x1

EYE ASSEMBLY (SETS)

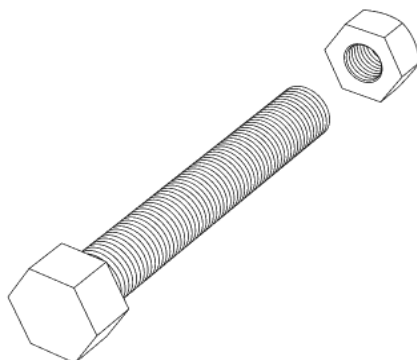

x4

M10 BOLT (INC NUT)

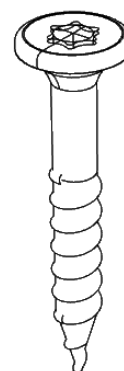


x2

M6 PLAYTEC SEAT SCREW

ABOVE PARTS SUPPLIED WITH SPRING ASSEMBLY

# ADDITIONAL PARTS

---

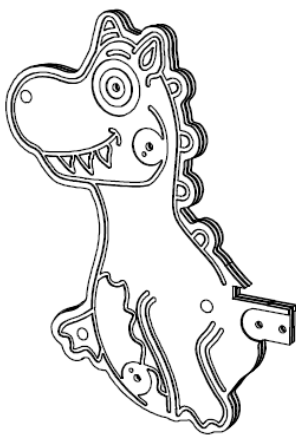

**x1**

**FRONT**



**x1**

**BACK**




**x1**

**SEAT (EKO GRIP)**




**x1**

**SEAT (PLAYTEC)**

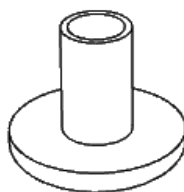

**x4**

**TORKTAINER - 3B**


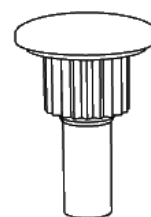


**x4**

**TORKTAINER - N3**


**DRAGON SPRINGER SHOWN, THIS HAS BEEN USED FOR VISUALS ONLY**

# FOUNDATION DETAILS

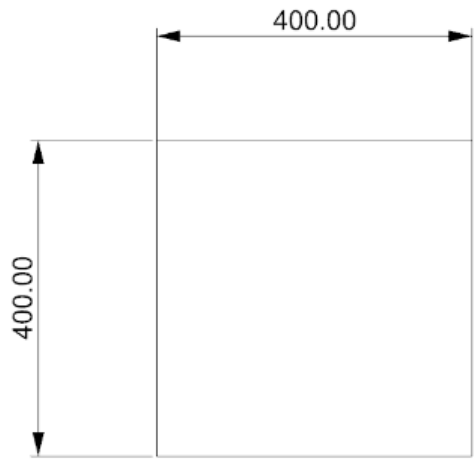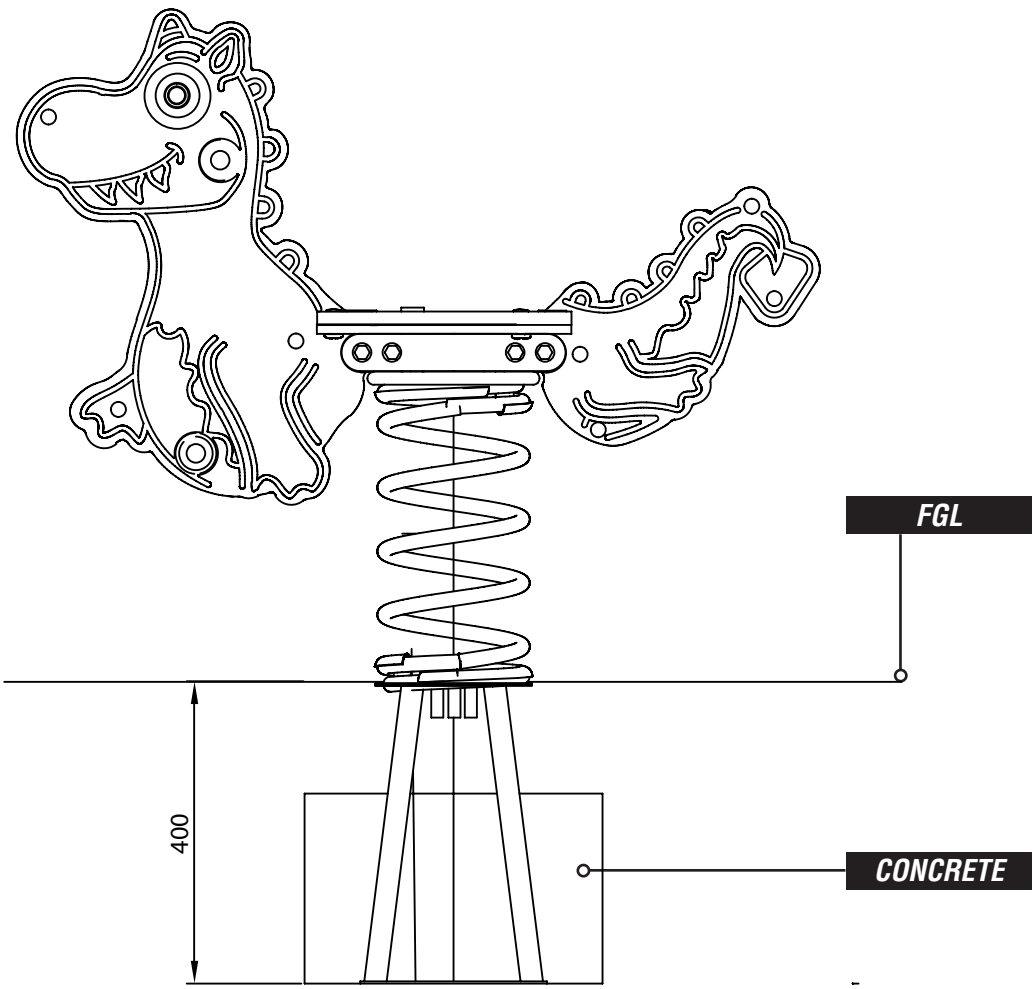

***SURFACING DETAILS***


---

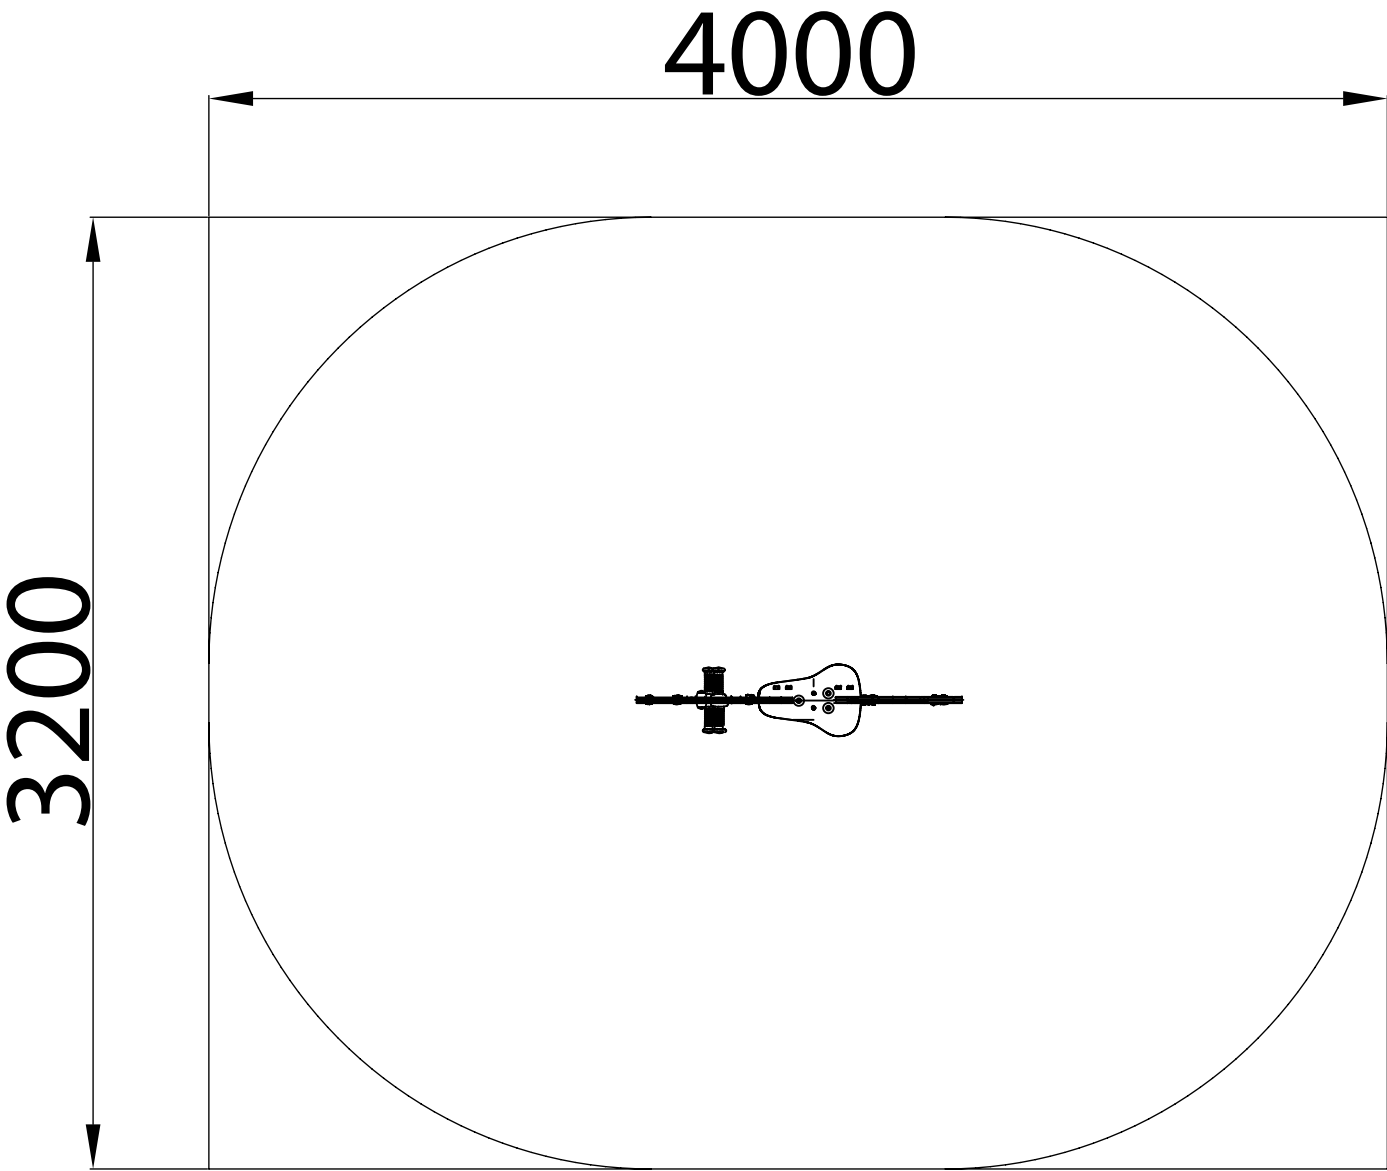


# INSTALLATION INSTRUCTIONS

---

## **1** SCREW SEAT ON SPRING ASSEMBLY USING - SEAT (PLAYTEC) & SCREWS

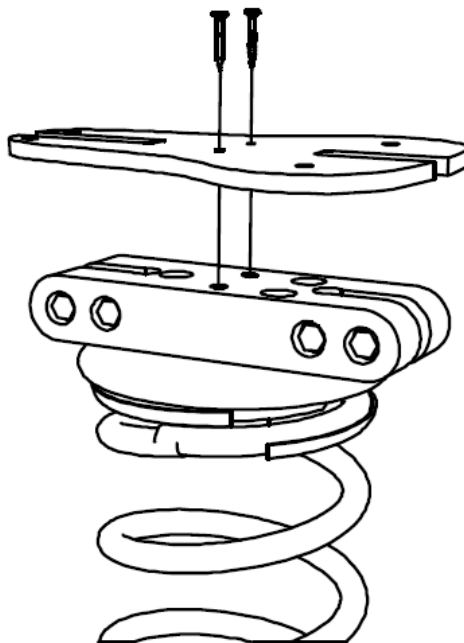

## **2** ATTATCH THE SEAT (EKO GRIP) USING TORKTAINERS 3B-N3

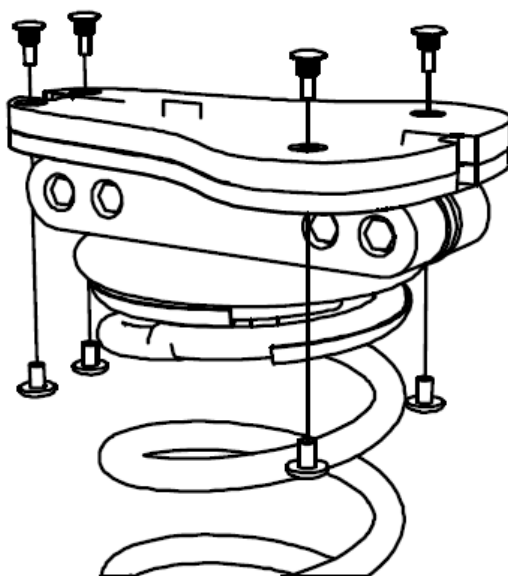


# INSTALLATION INSTRUCTIONS

**3**

## ATTATCH HANDLE / EYE SETS TO PLAYTEC


USING HANDLE ASSEMBLY (SETS) / EYE ASSEMBLY (SETS)

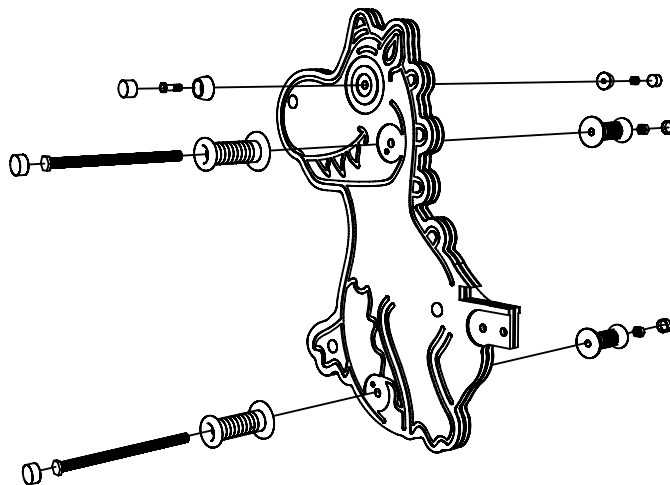

**4**

## ATTATCH FRONT AND BACK PLAYTEC TO SPRING ASSEMBLY

USING - BOLT (SET) - QUANTITY X 4

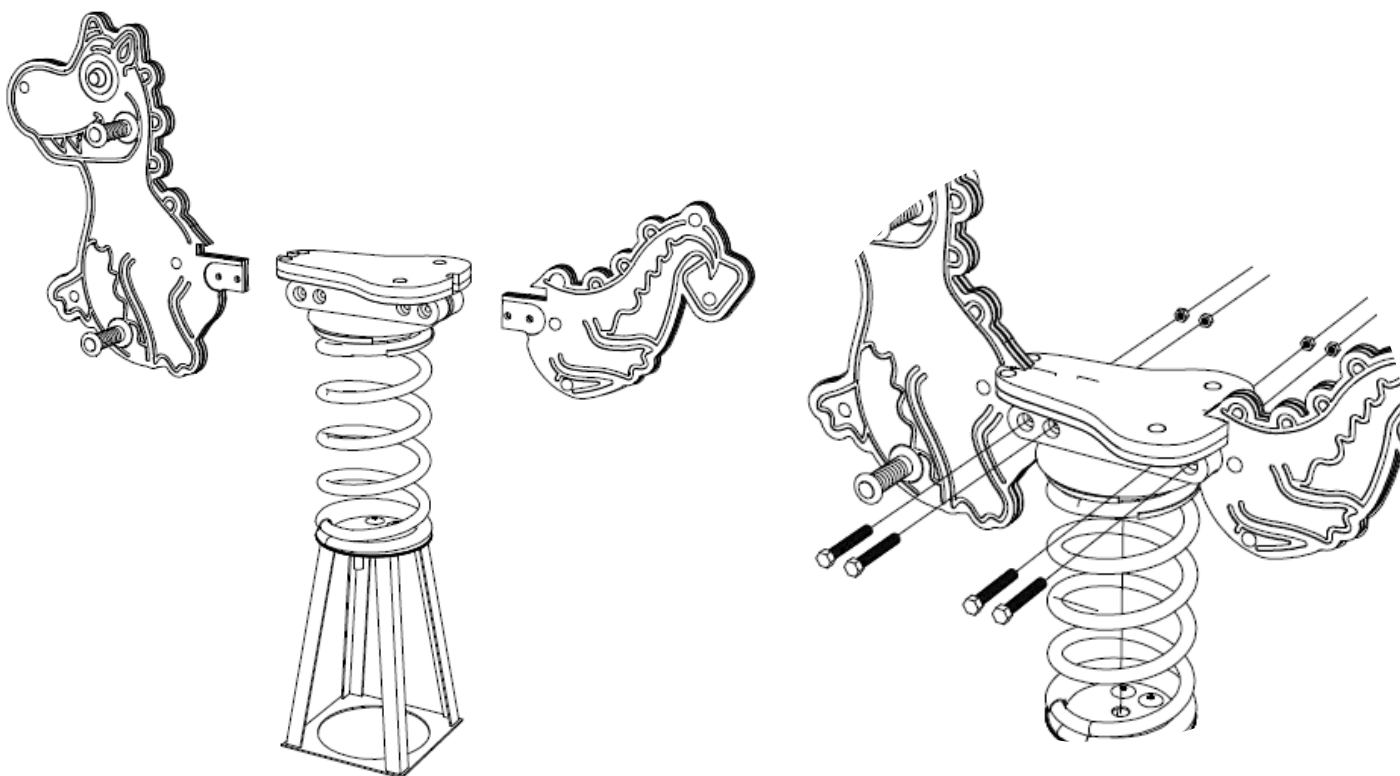


### NOTES:

- SAME ASSEMBLY PROCESS FOR ALL SPRING RIDER ANIMALS (SINGLE)

## ***ADDITIONAL DIMENSIONS***

---

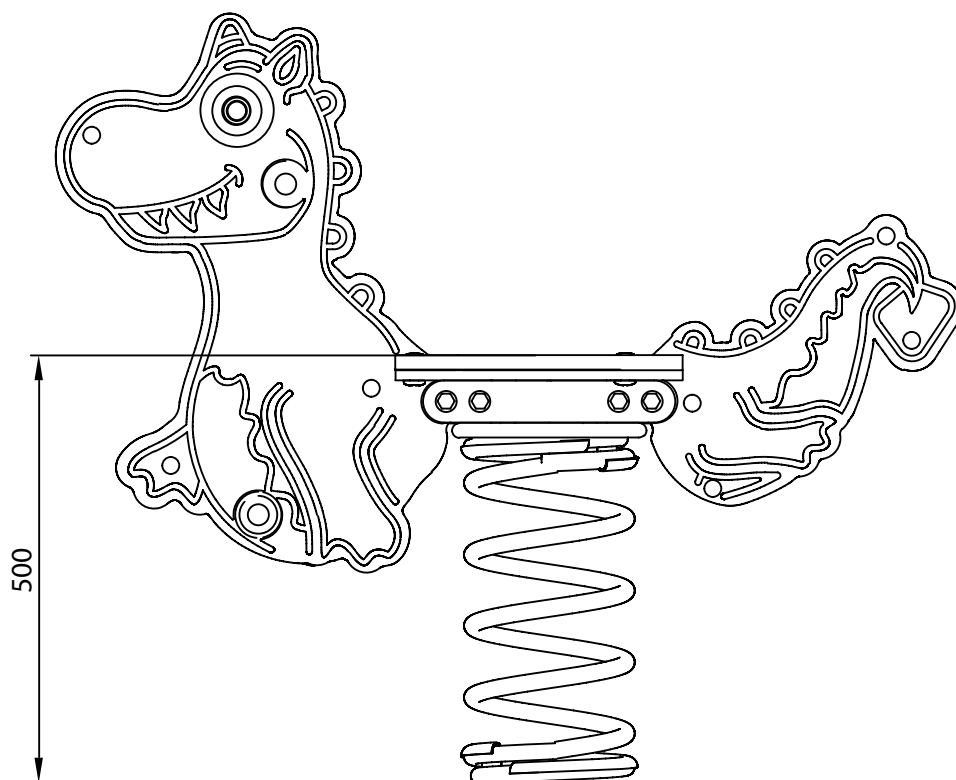

***SEAT HEIGHT - 500MM***